


Instruction Book

For specification: 78cm(L)x50cm(W)x175cm(H)

91052 instruction manual

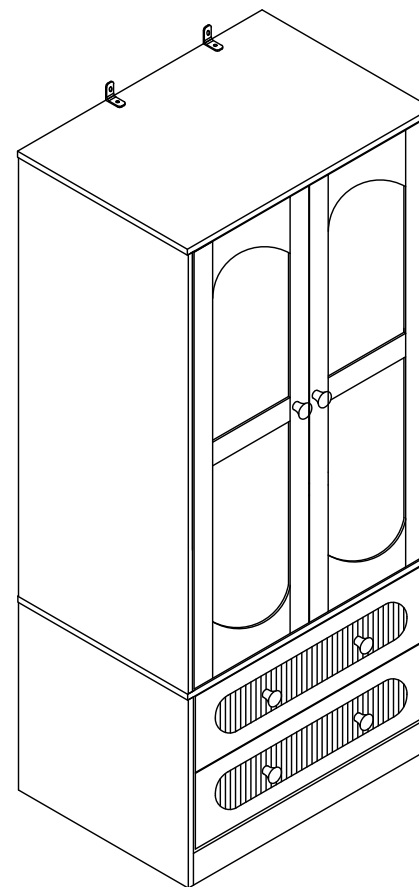

Recommend two
people to install
it together



Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If you have any question, please feel free to contact us by email

Foreword:

Thank you for choosing our product! We hope you have a good shopping experience! We aim to provide a 100% satisfaction product and customer service. If the received product has missing parts or components, arrived damaged, dissatisfaction with the order, or has questions about the assemble, please do not hesitate to contact us. Our customer service will reply within 12 hours.

Specifications:

Product name: Bedroom Armoire

Model: WC-91052

Package

Dimension: 51.5*22.8*8.7in/131*58*22cm


Product Size: 30.7x19.7x68.8in/78*50*175cm

Weight; 108b/49kg


STEP 18

WARNING CHILDREN HAVE DIED DUE TO FURNITURE TIP-OVERS. To reduce the risk of furniture tip-overs: -ALWAYS install the provided anti-tip device.




-NEVER allow children to stand, climb or hang on drawers, doors, or shelves. -NEVER open more than one drawer at a time. -Place the heaviest items in the lowest drawers.

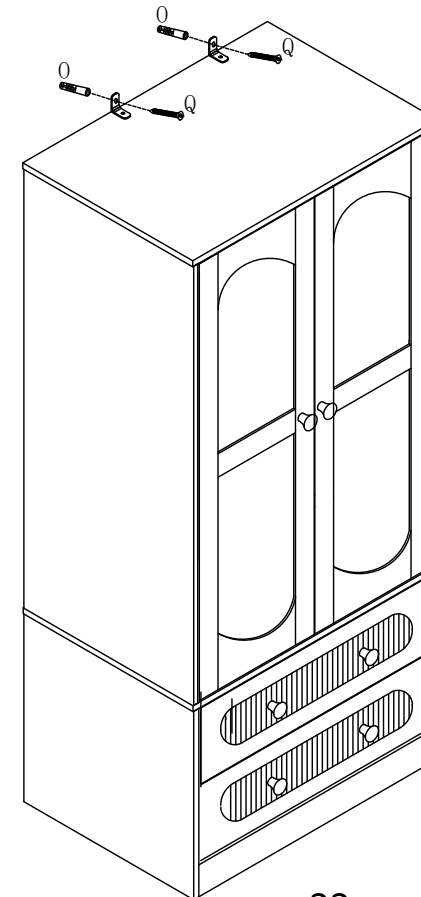


22



STEP 17

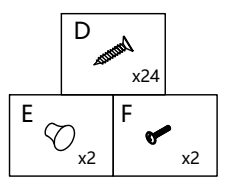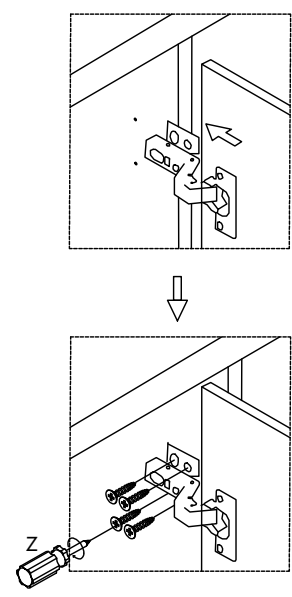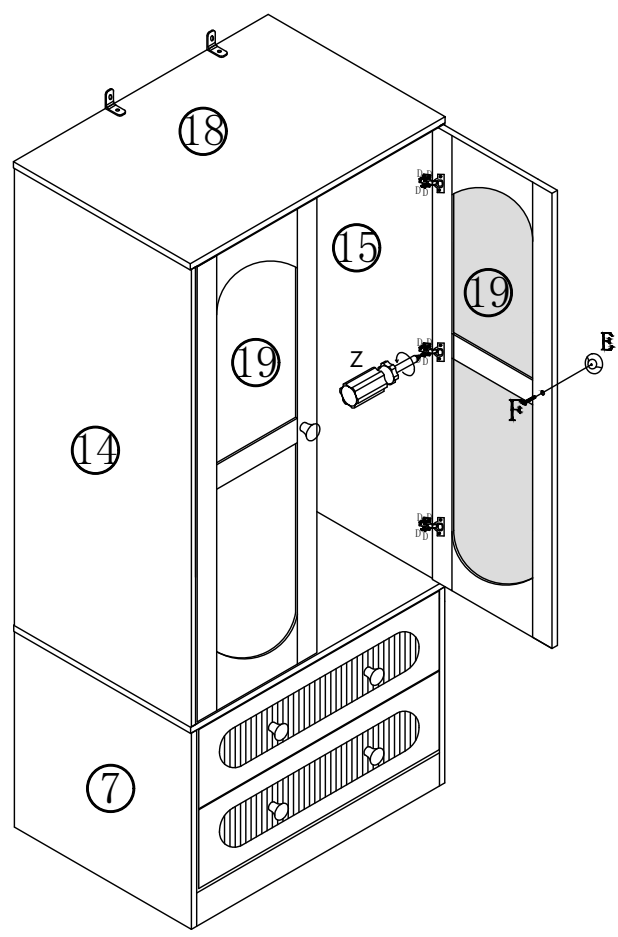

WC-91052 Left cabinet
A, B, G, H, C, D installation guide

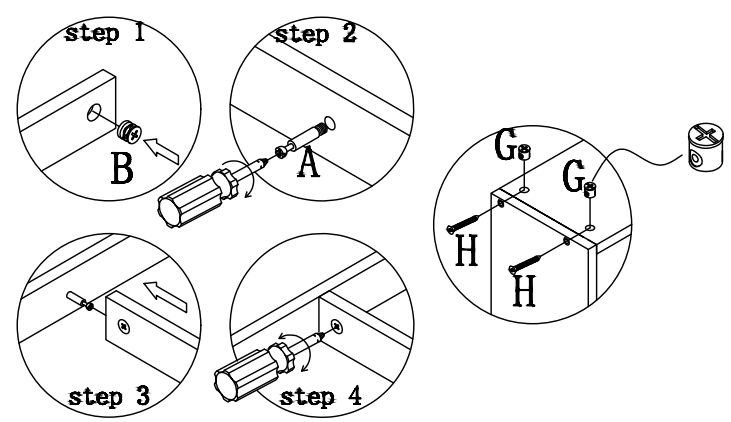


Accessories


Three-in-one screw A*50	Three-in-one nut B*50	drawer Track CR*2	drawer Track DR*2	drawer Track CL*2	drawer Track DL*2
Small Screw D*68	Handle E*6	Handle Screw F*6	Small Screw X*10	Two-in-one screw H*4	Two-in-one nut G*4
Anti dumping device L*2	Clothes hook U*2	Setscrew O*2	Small Screw Q*2	Clothes rail I*1	Door hinges K*6
Magnetic collision T*2	Stool foot nail M*8	screwdriver Z*1			

WC-91052

STEP 16

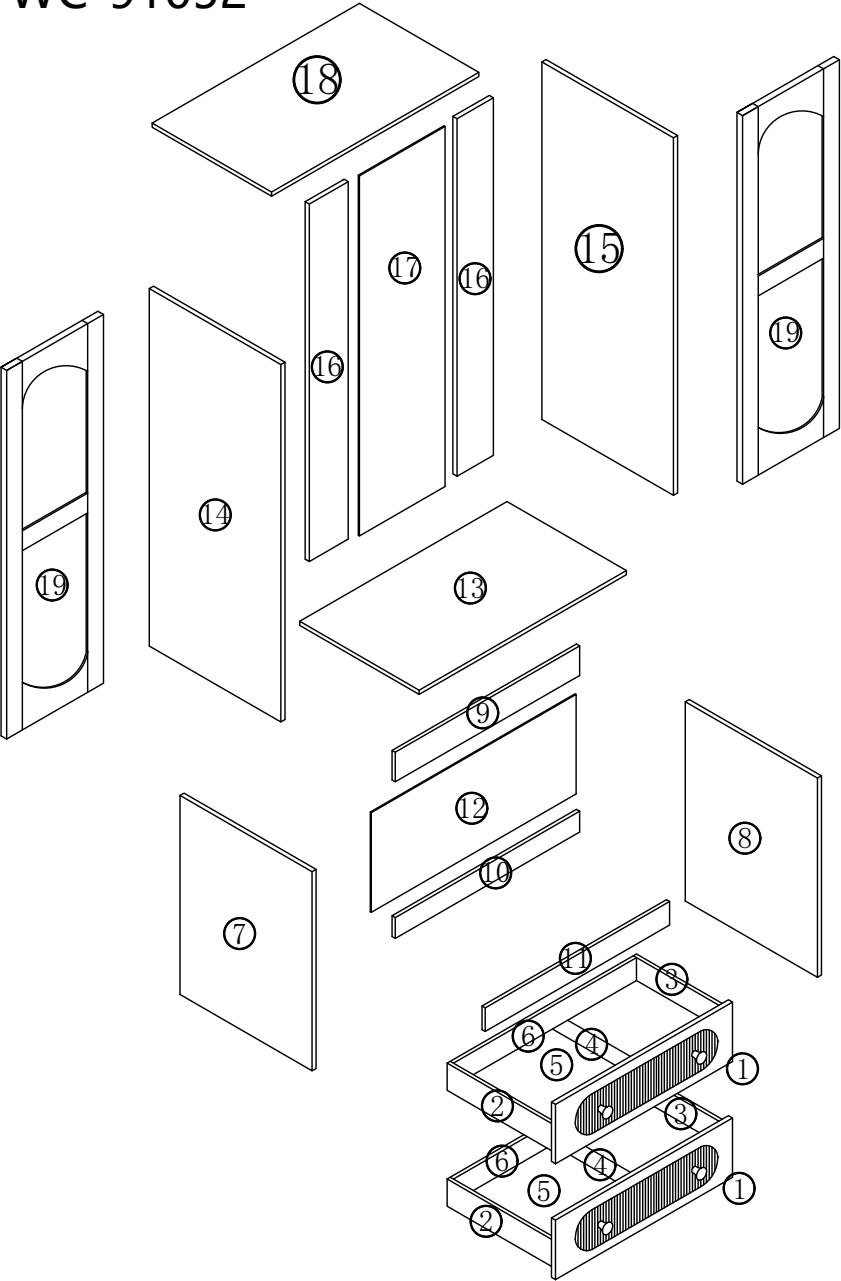



3

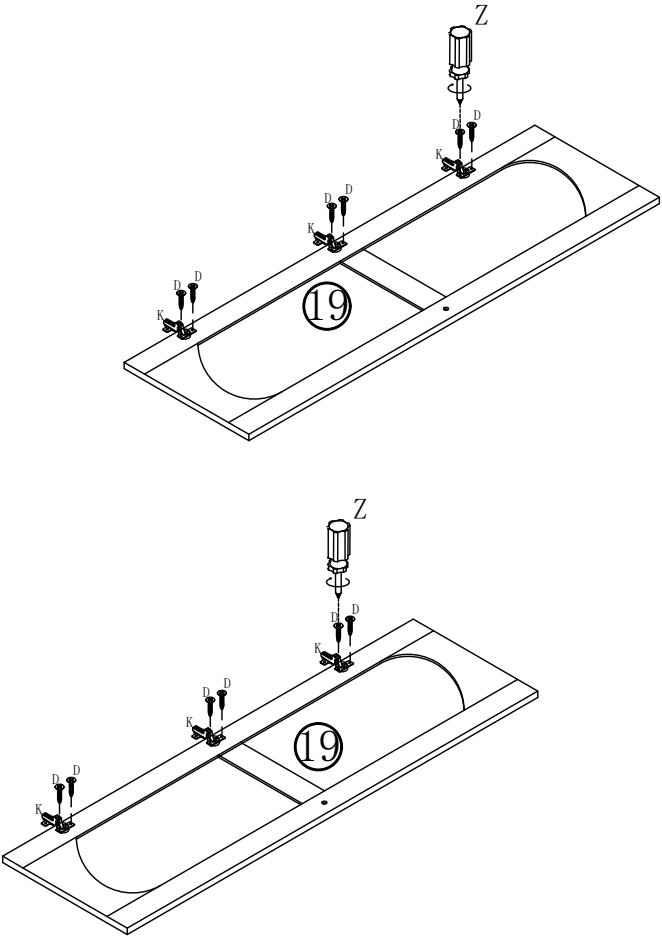

20

K	D
	
x6	x12

STEP 15


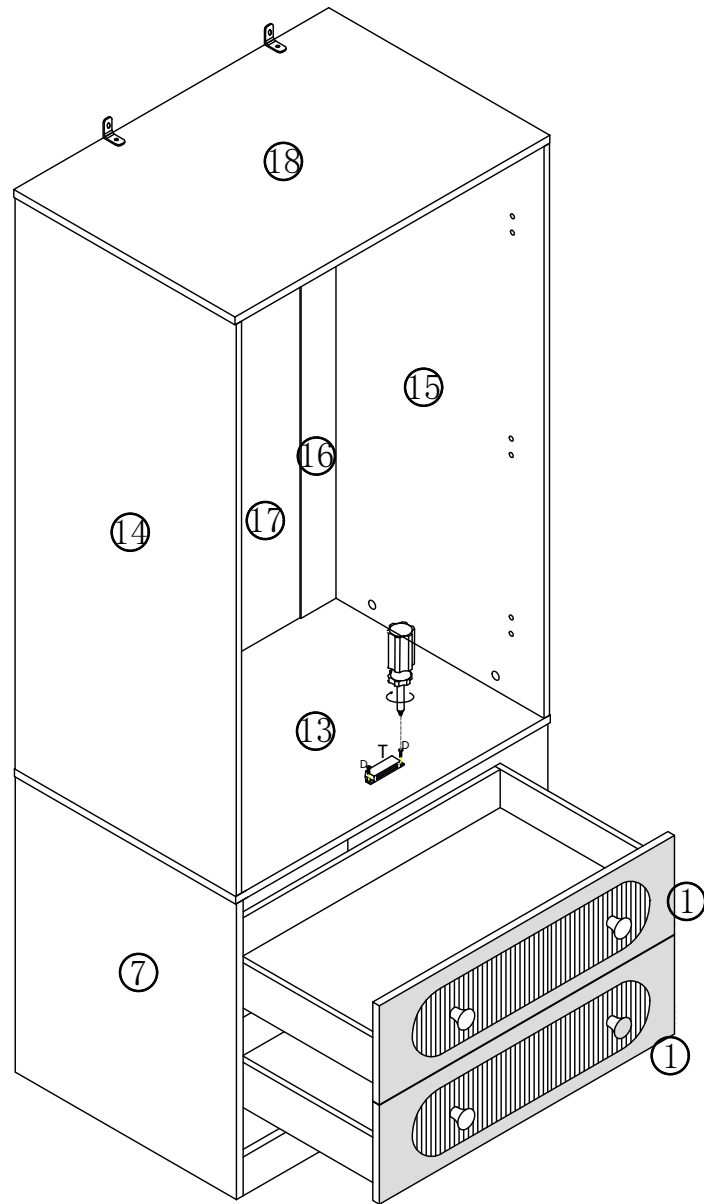


Guidelines for the use of 3-in-1 connecting rods:
The blue screw cap at the bottom of the 3-in-1 connecting rod is twist-able, and it can be twisted clockwise or counterclockwise to fit the size of the reserved holes in the wooden board.


When you use this 3-in-1 connecting rod, if you find that it can't be inserted into the reserved holes on the wooden board, just loosen the blue screw cap a bit until it fits into the holes of the board. Then use a screwdriver to tighten the screws. Note: If the bottom blue screw cap is not stretched apart by the three-in-one connecting rod in the reserved hole, the connected part will appear unstable .

STEP 1




Place all the blue rubber sleeves into the reserved holes to ensure they are flush with the board surface, and then tighten the screws.

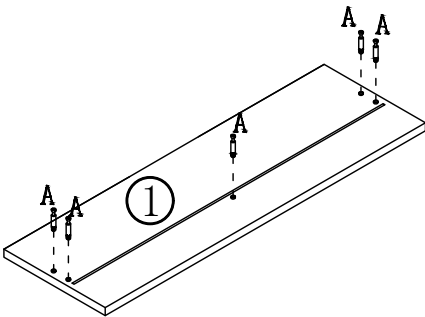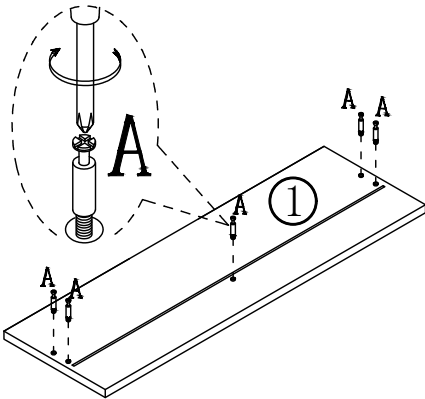


5




STEP 14

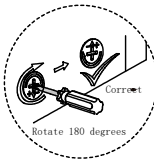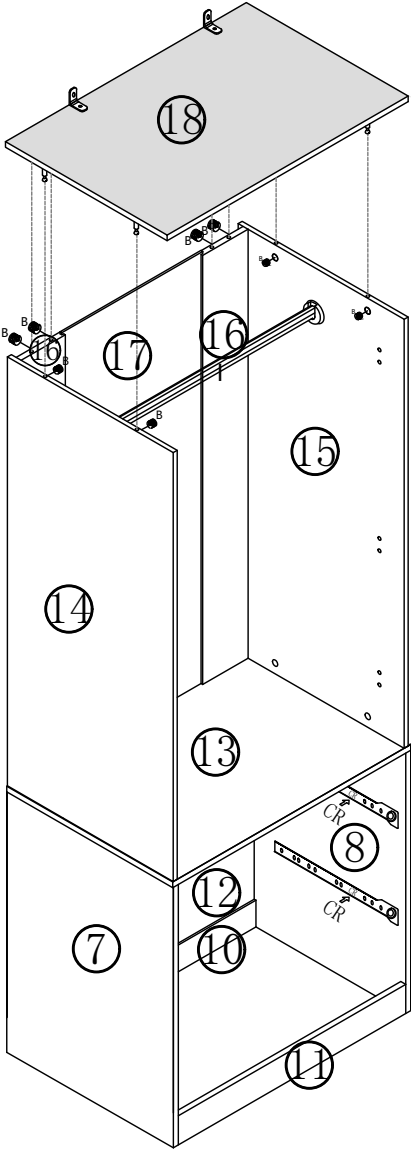

18





STEP 13

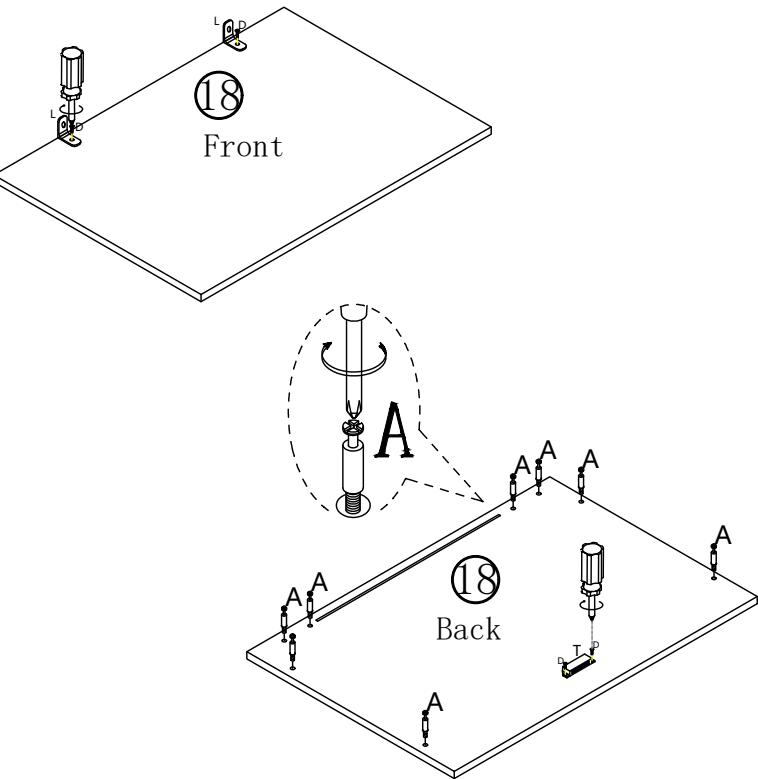


T x1	D x6
L x2	A x8

STEP 2

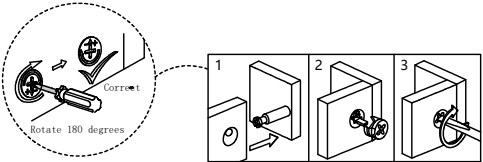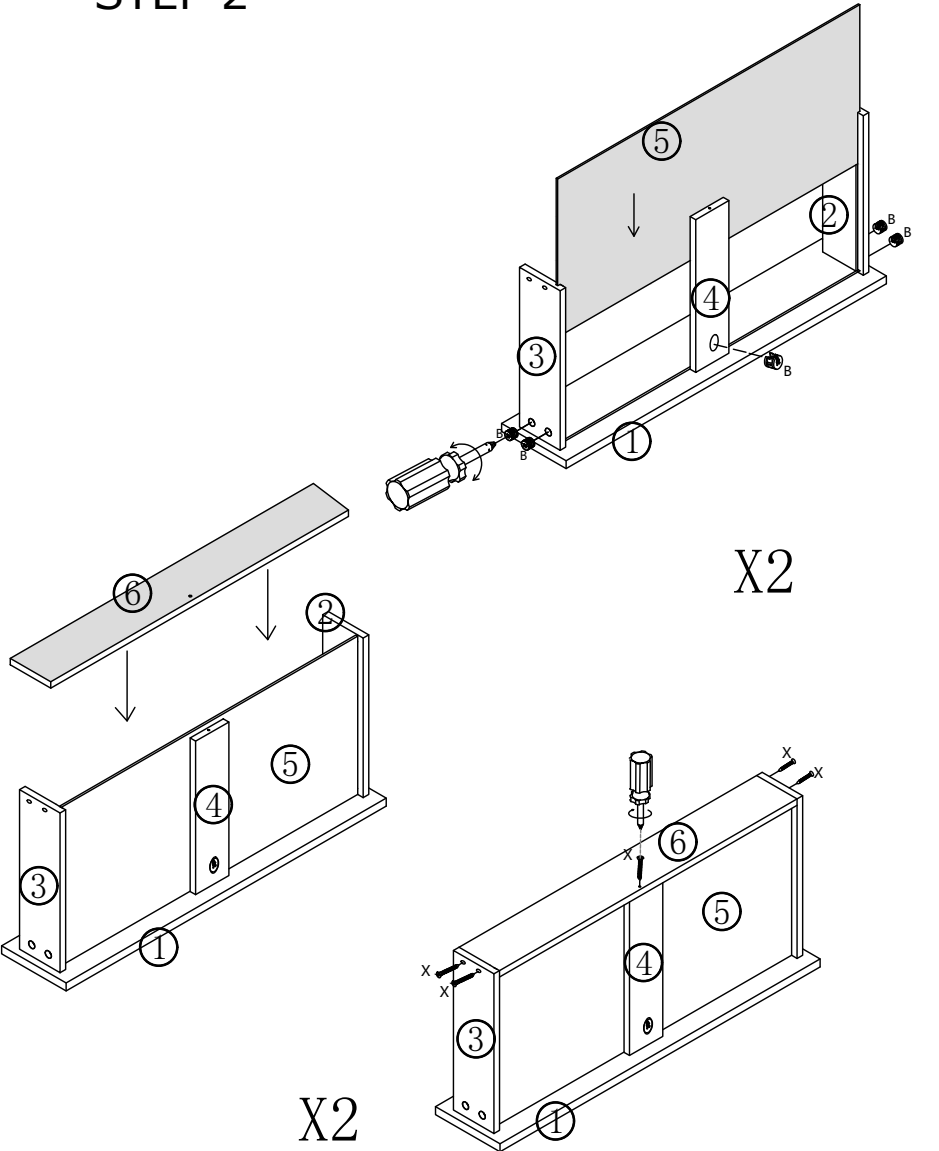


X x10	B x10
----------	----------


STEP 3

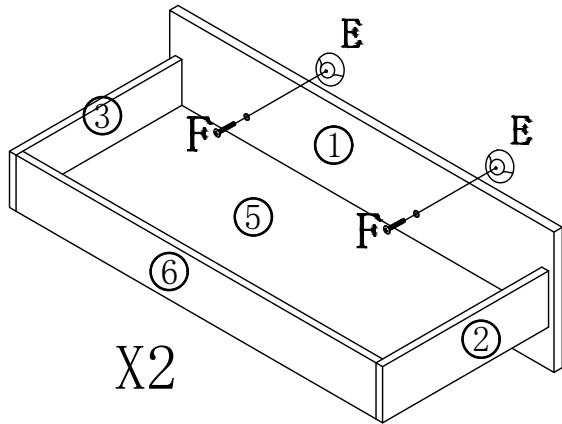


Note: All part DR and part DL should be installed at the BOTTOM of the drawers (As shown in the pic).

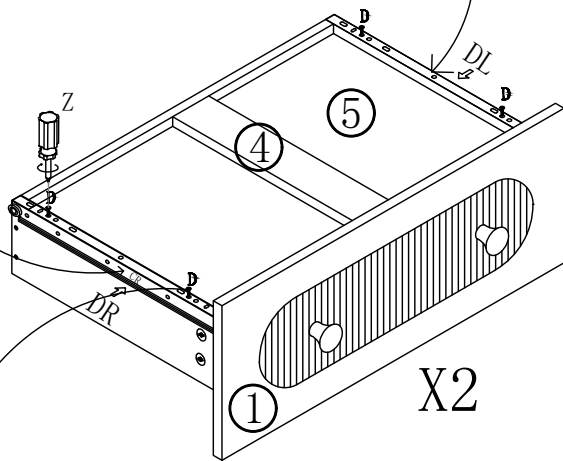



No pre-drilled holes for mounting screws; just install with self-tapping screws D

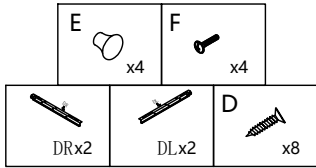


STEP 12

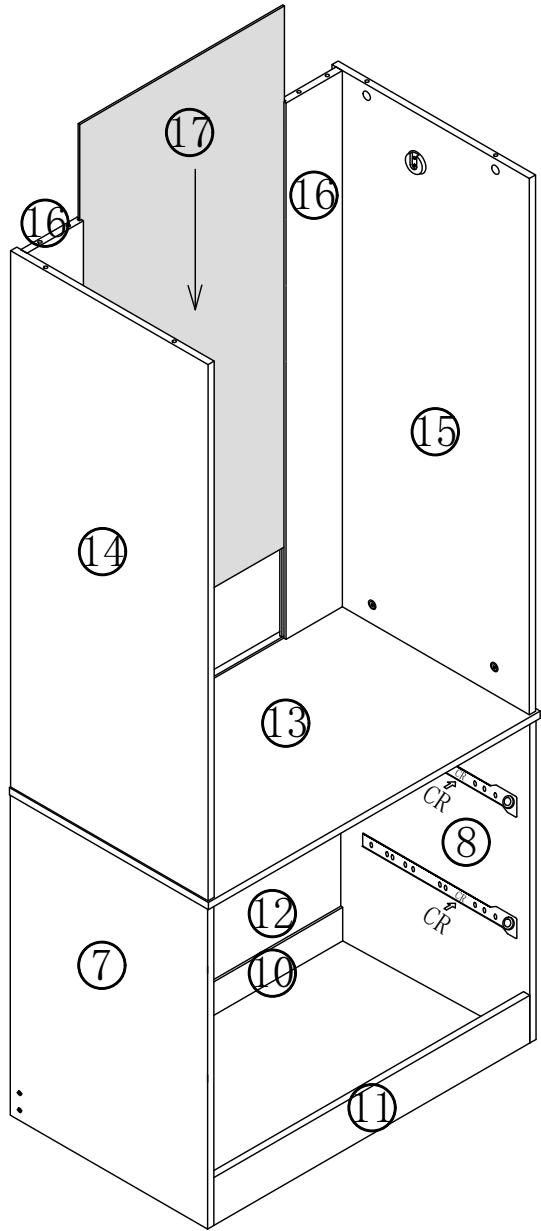


STEP 11

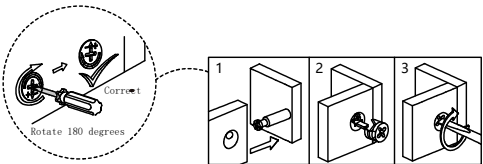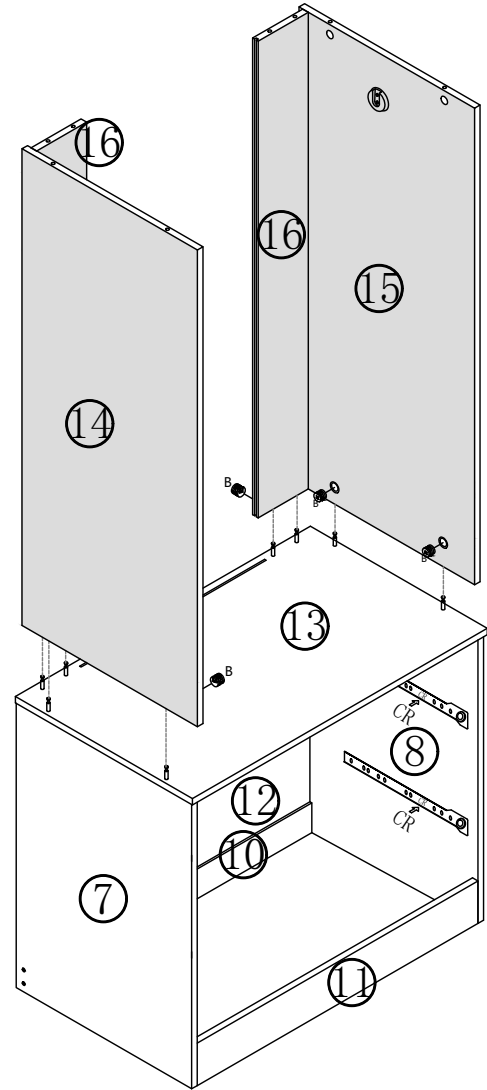








15



STEP 4




These 4 pre-drilled holes should be installed with part H and G. not part A (check step 5)

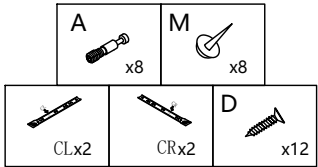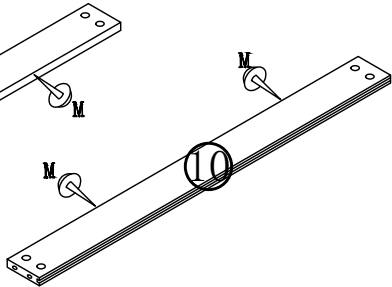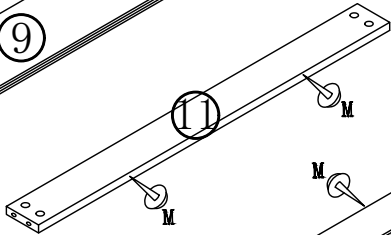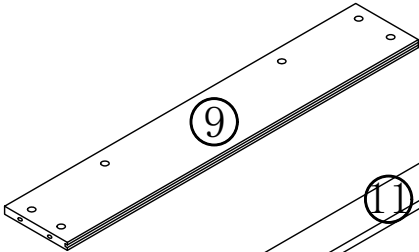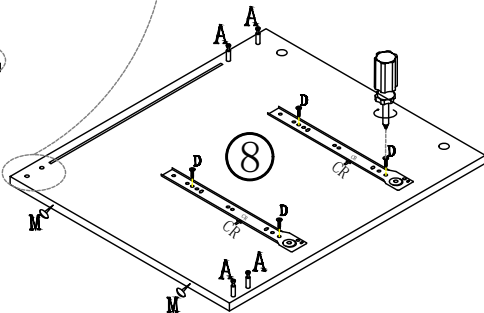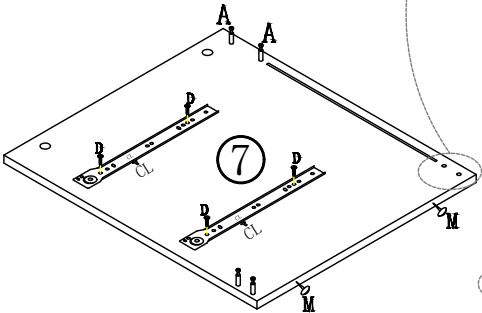


8


STEP 5

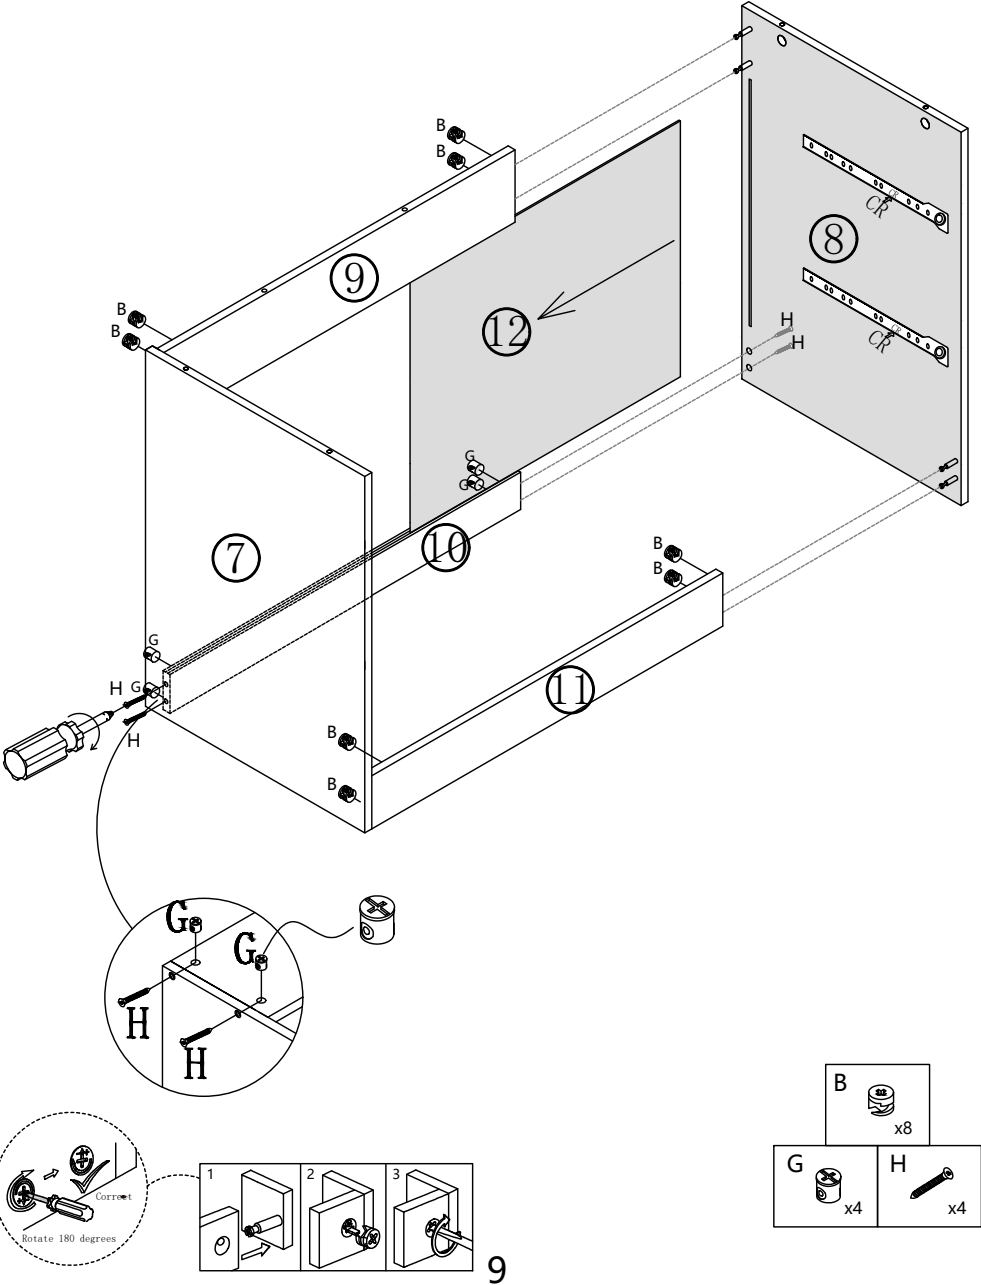


STEP 10

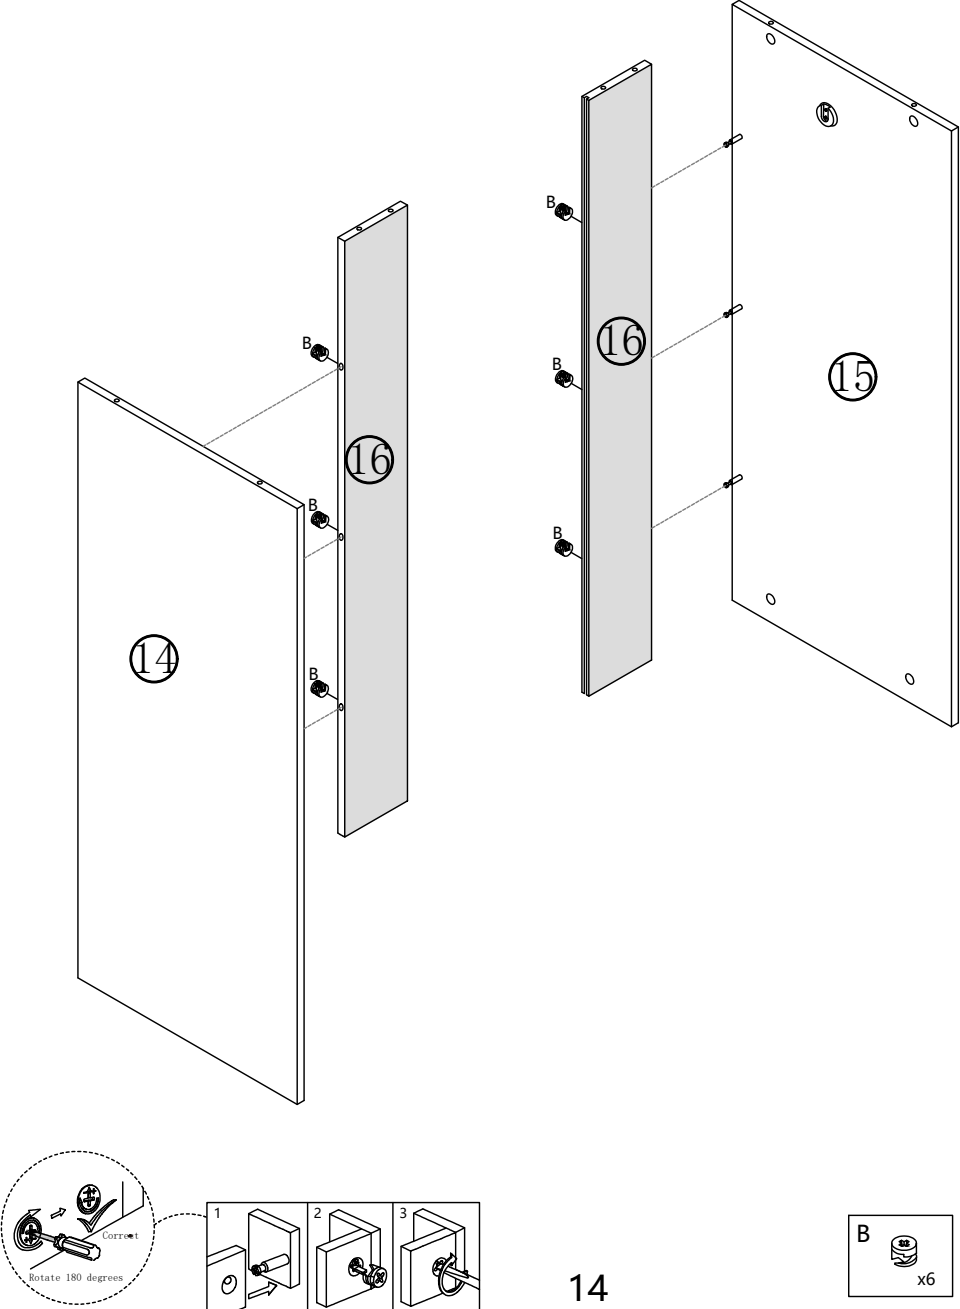



STEP 9

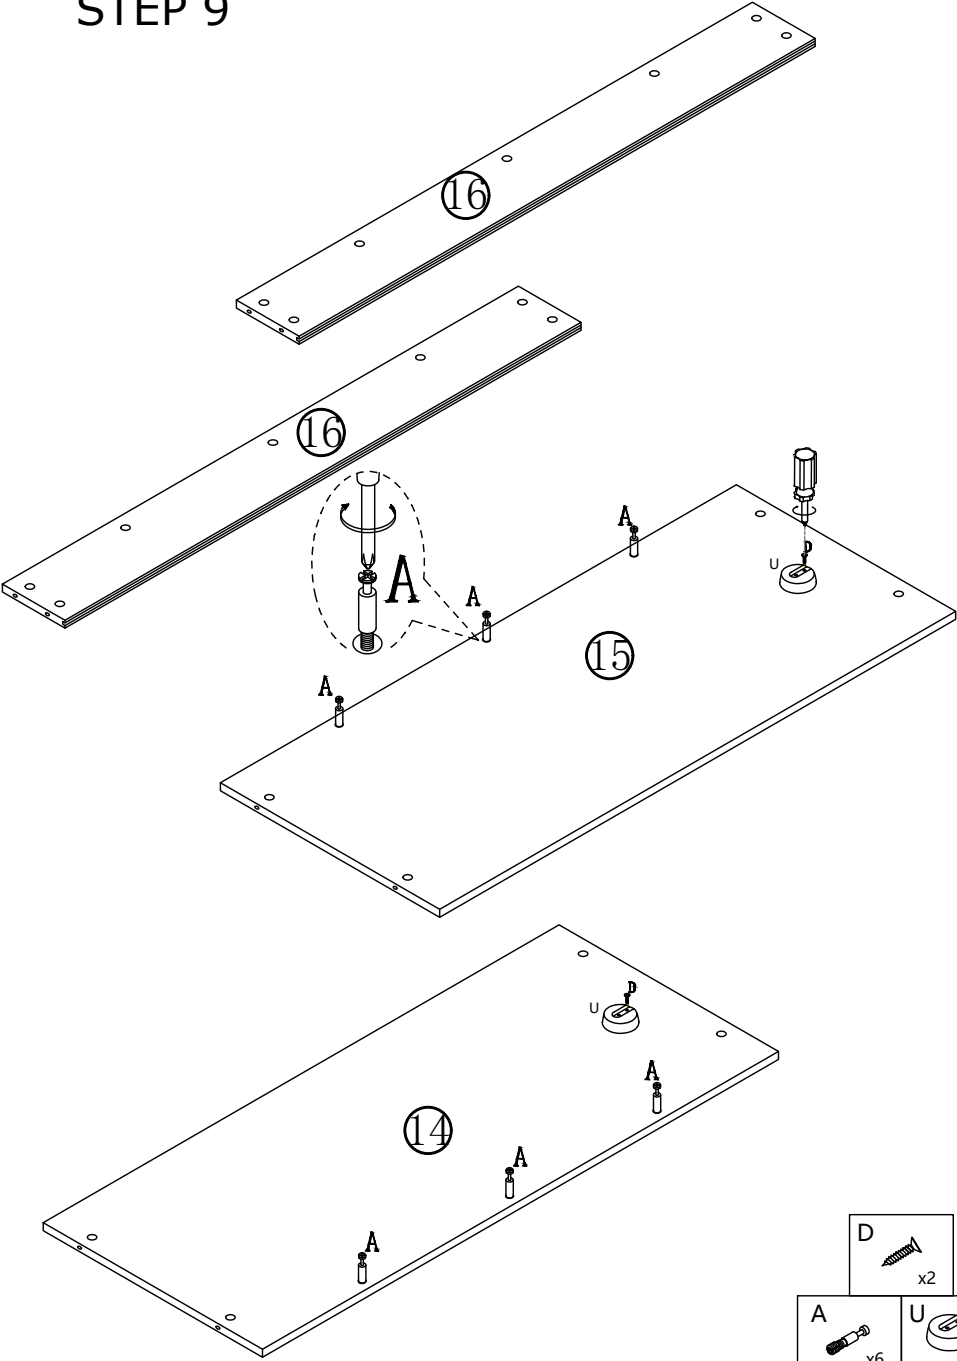


13

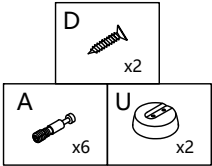



STEP 6

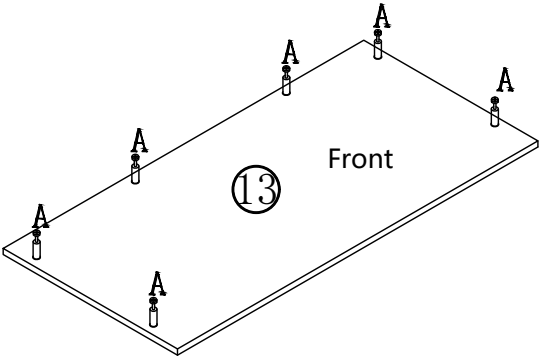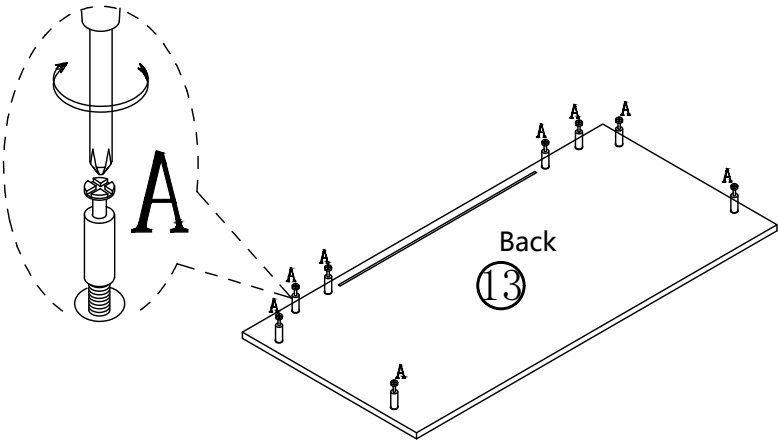

10




STEP 7

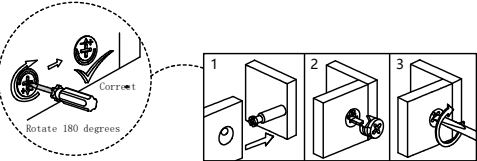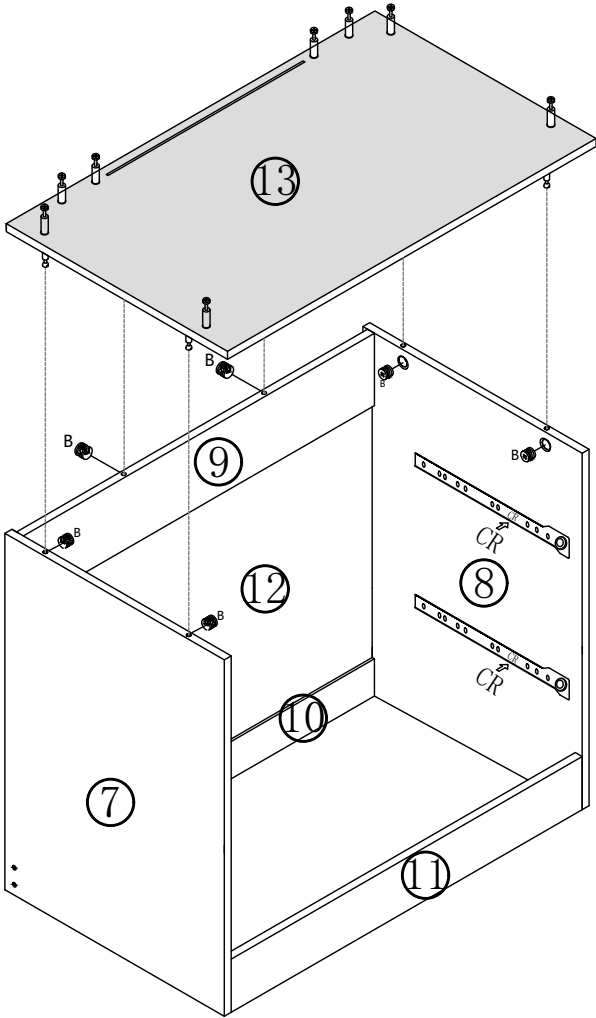

11

STEP 8

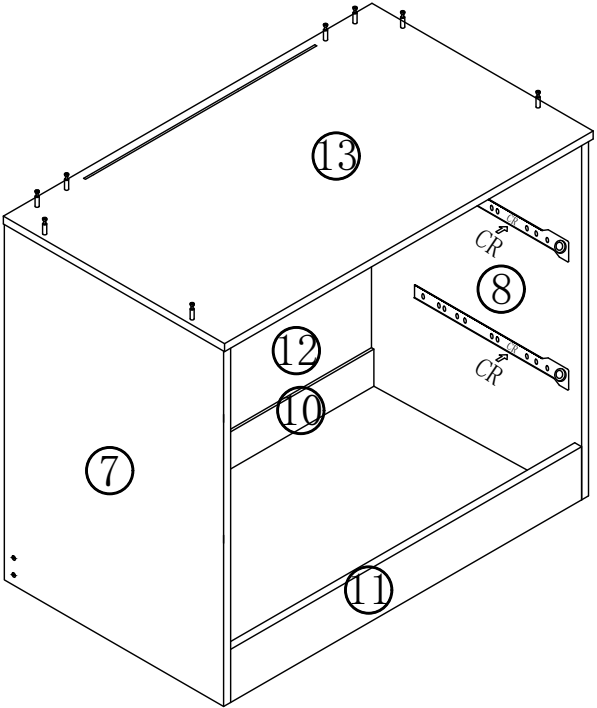

12