

Ok, let's get rolling

This should be easy, just follow our instructions and you will be back to Netflix in no time.

Estimated time for assembly



30:00

What you need


- Some of your favourite bubbly or your preferred relaxant
- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver (not included)
- Drill (not included)
- 1/4" Drill bit (not included)

Toll-free at 1-866-619-1004
Help@nathanjames.com
Nathanjames.com/help

What's included

Description		Qty
A	Metal Rail	1
B	Strap	2
C	Headboard	1
1	Anchor	6
2	M4*35mm Screw	6
3	44*15*2mm Metal Piece	2

The goods

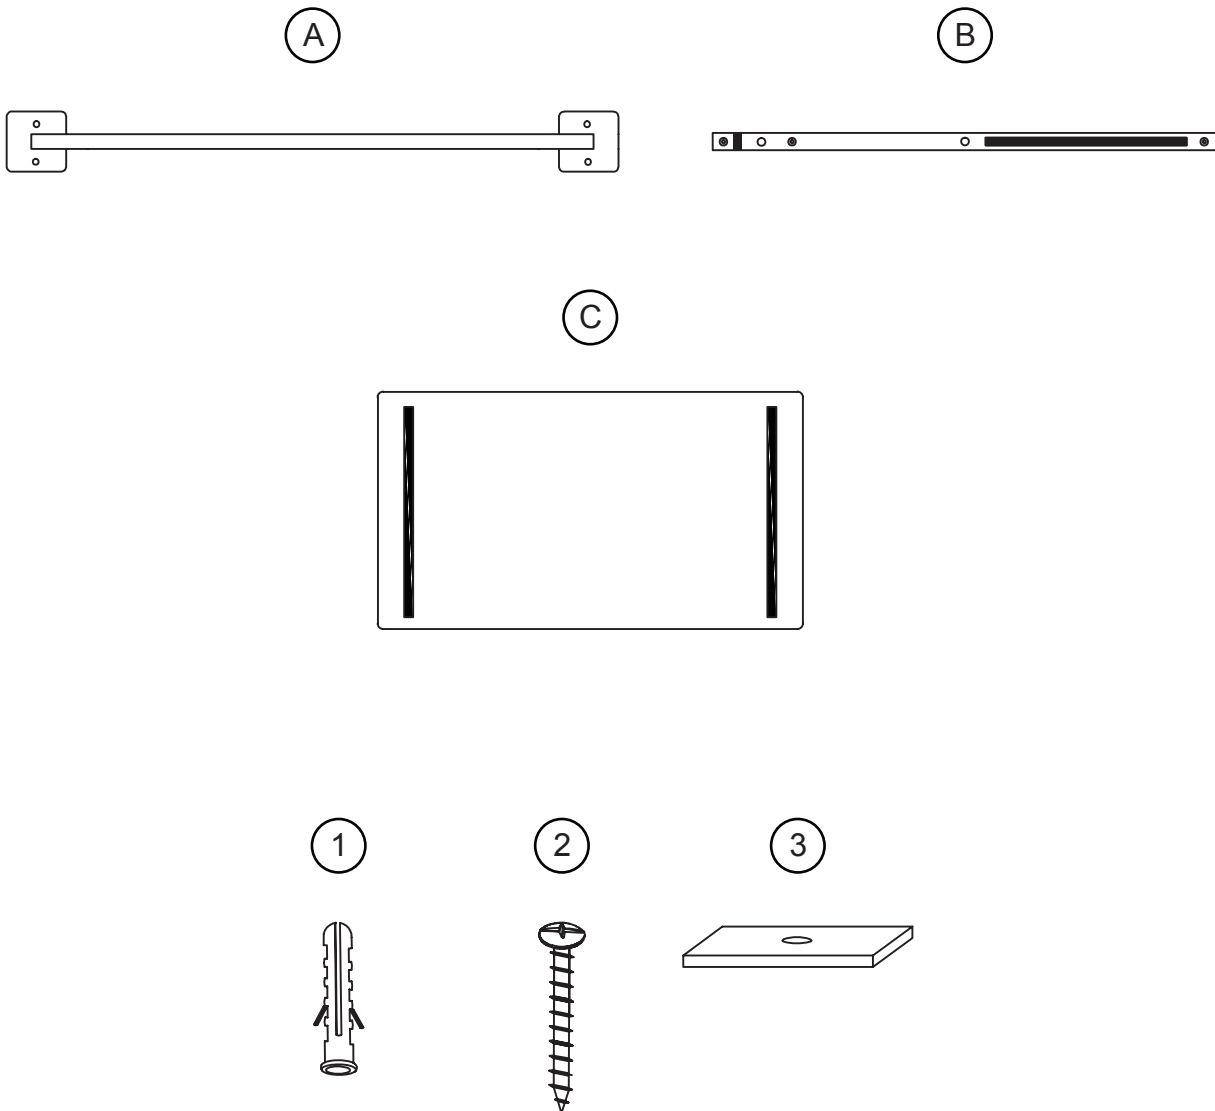


IMPORTANT

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.


Installation option 1: with rails

Psst. Peek over to Page 9 for
instructions on how to install the
headboard without the railing!

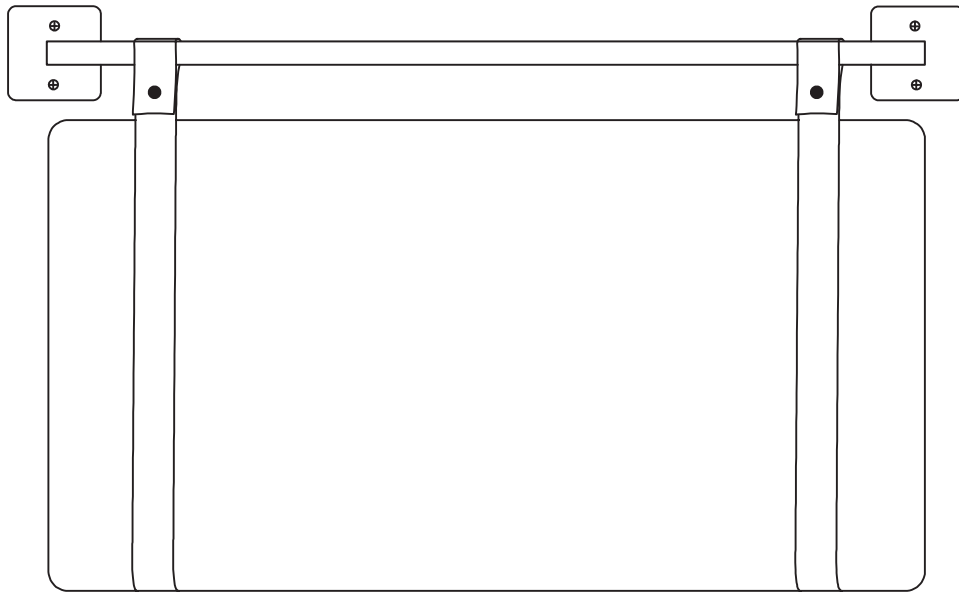


Step 1

Let's get this thing fired up! Mount metal rail where you want your headboard to go using wall anchors.

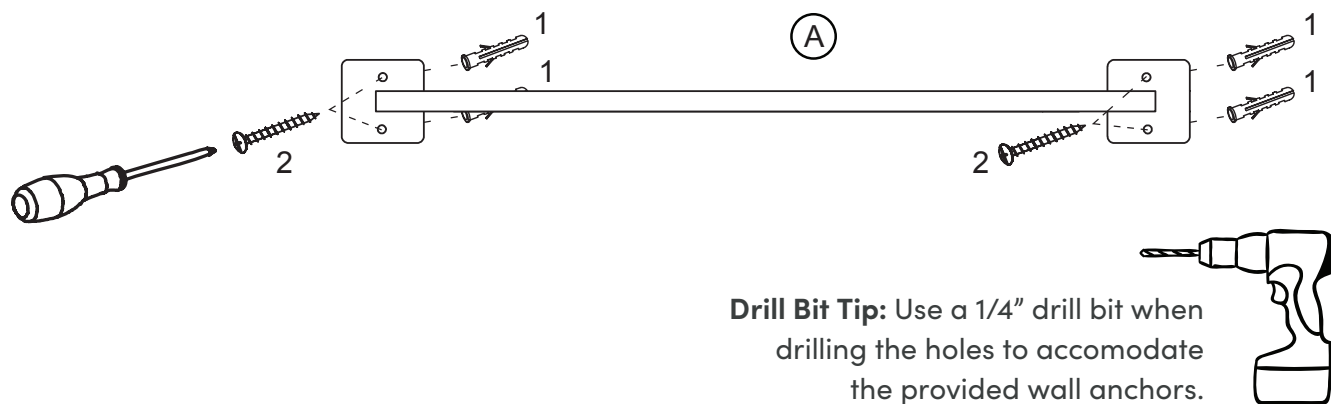


Step 2

Hang straps from metal rail by snapping top buttons.

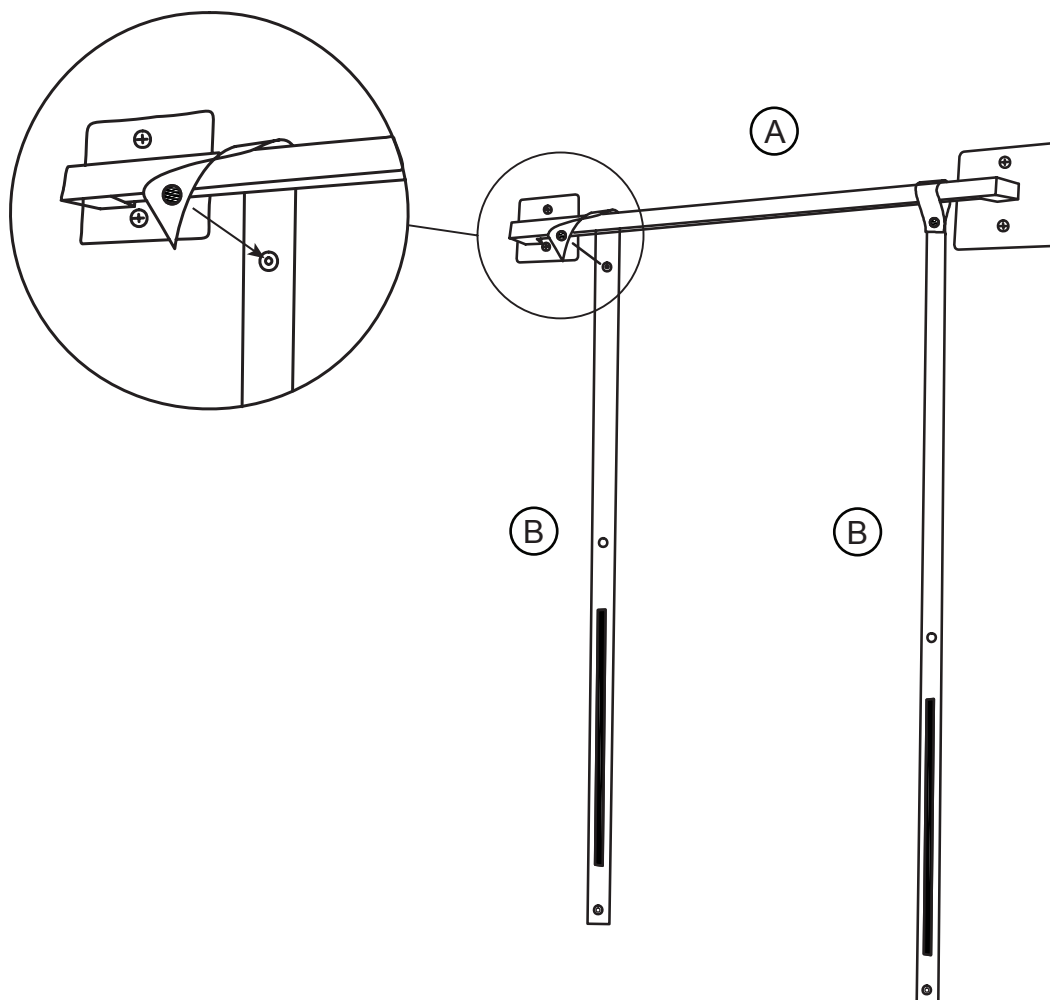



Step 3

Match up the Velcro straps between headboard panel (C) and straps. Can you believe you're already halfway there?

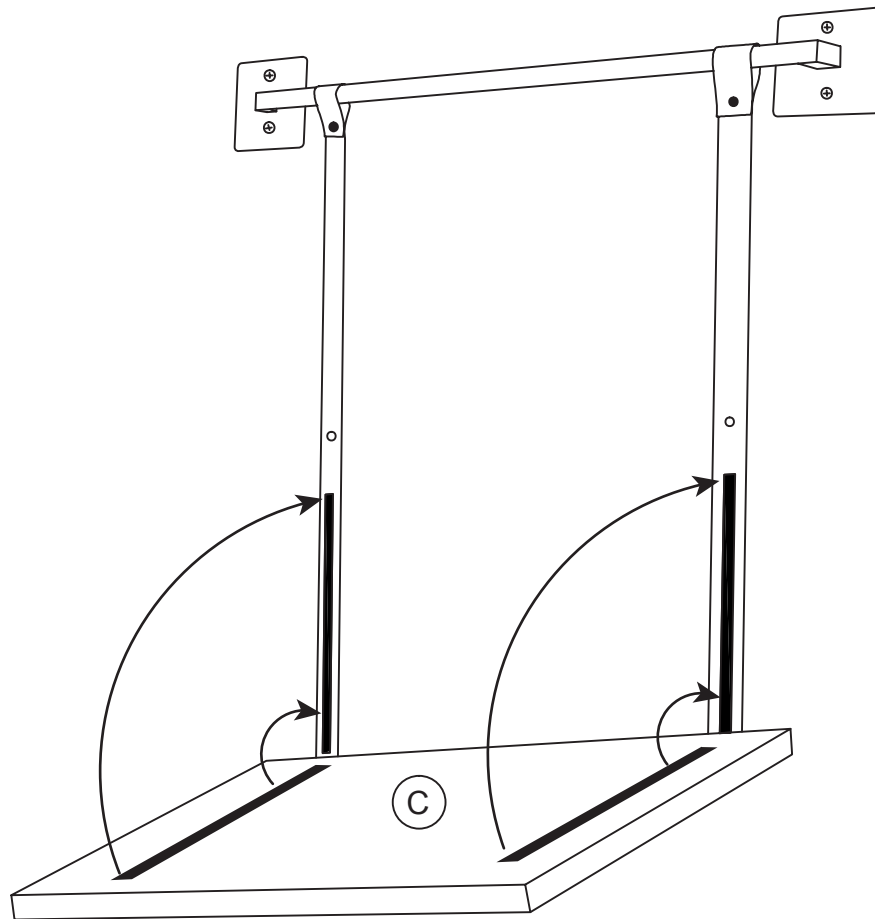


Step 4

Align the bottom holes in the straps to be 715 mm apart and mark the holes on the wall. Then, insert wall anchors and screws through the strap holes.

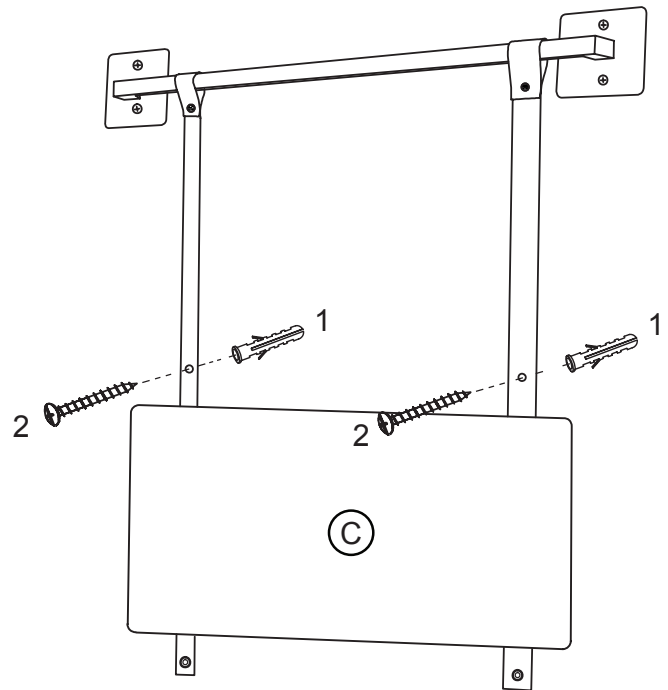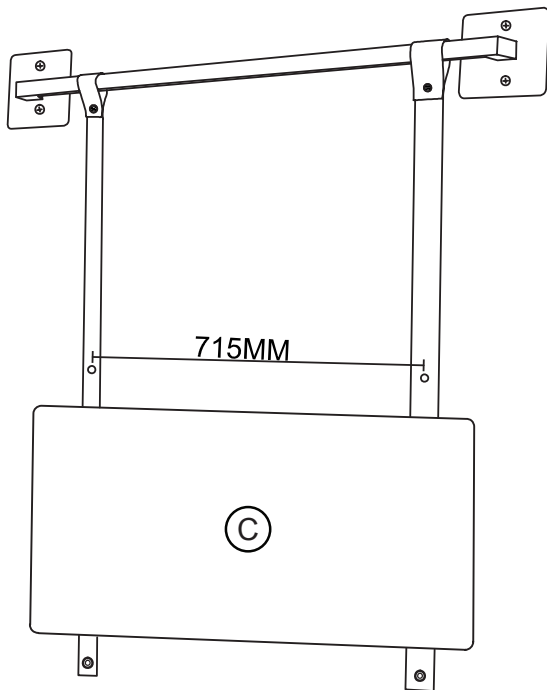


Drill Bit Tip: Use a 1/4" drill bit when drilling the holes to accommodate the provided wall anchors.

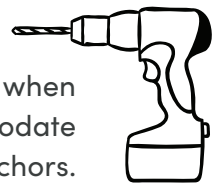


Step 5


Flip headboard panel up, undo top button then fasten Velcro and the top button of the front of the panel.

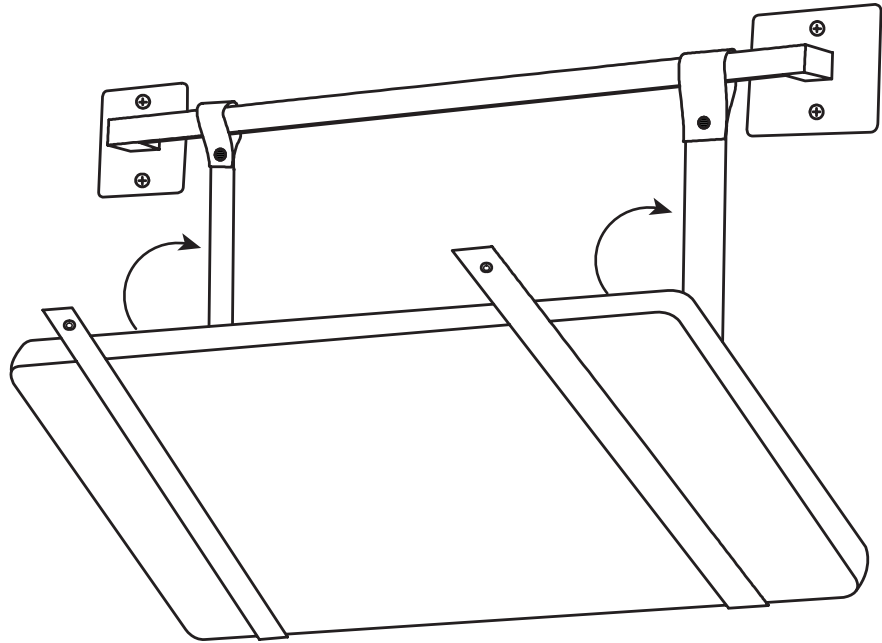

You did it! Time to celebrate with some bubbly and pizza? The answer to that is always yes.

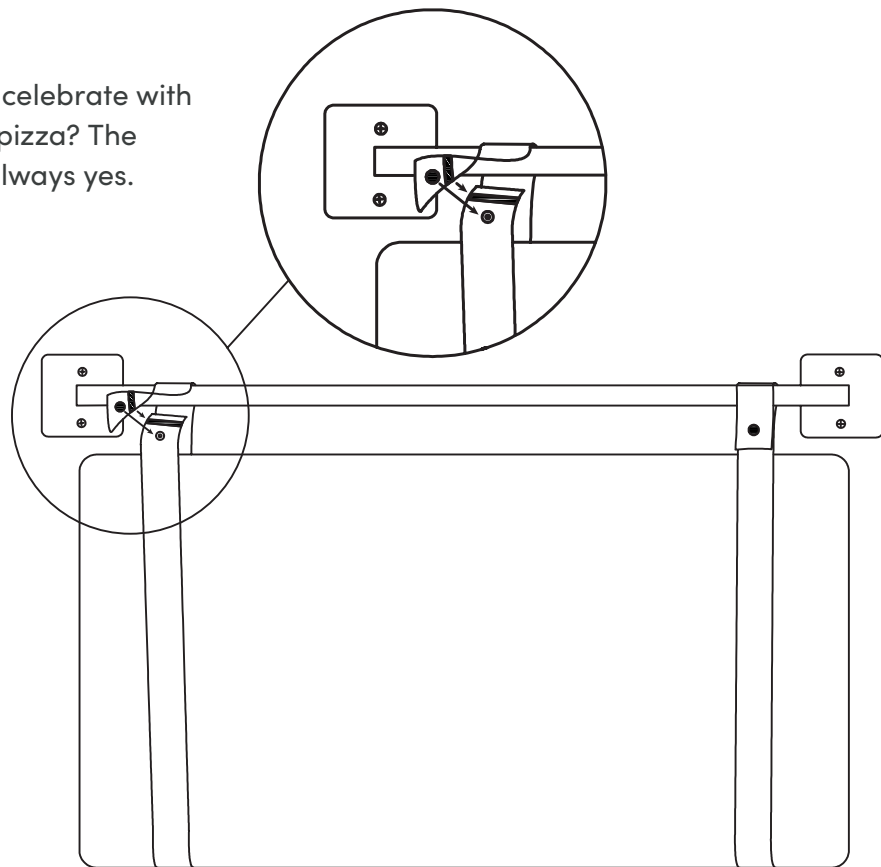


Installation option 2: without rails

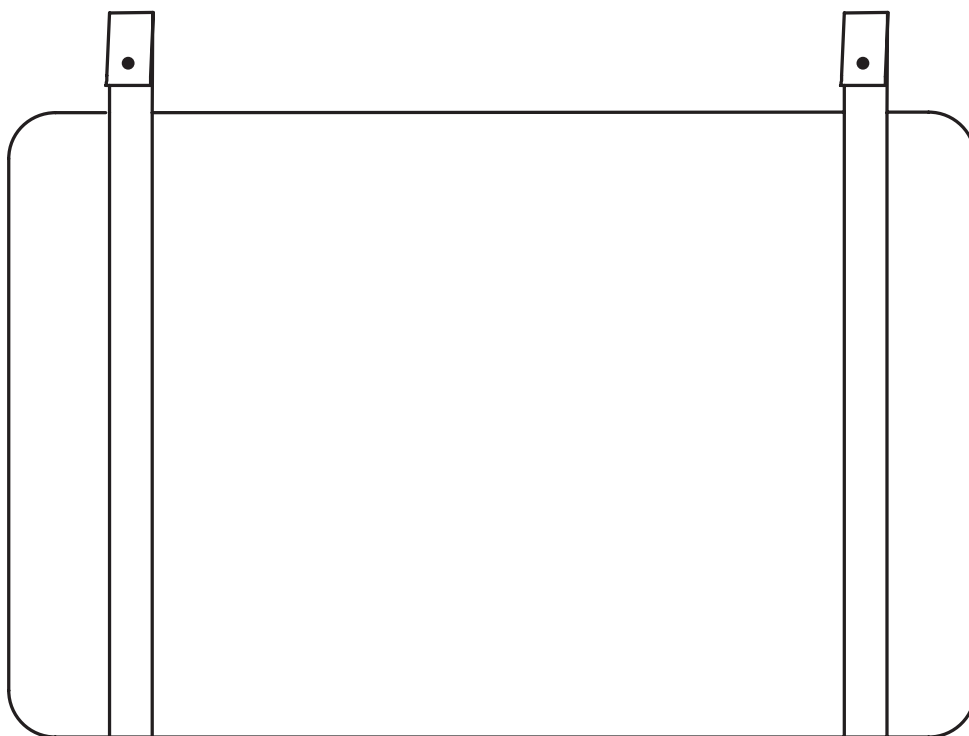

Step 1

Let's get this thing fired up! Arrange the straps (B) on the wall where you want your headboard to go, making sure the straps are 715 mm apart from each other. Then, secure the wall anchors (1) and metal piece (3) using the M4*35mm Screw (2).

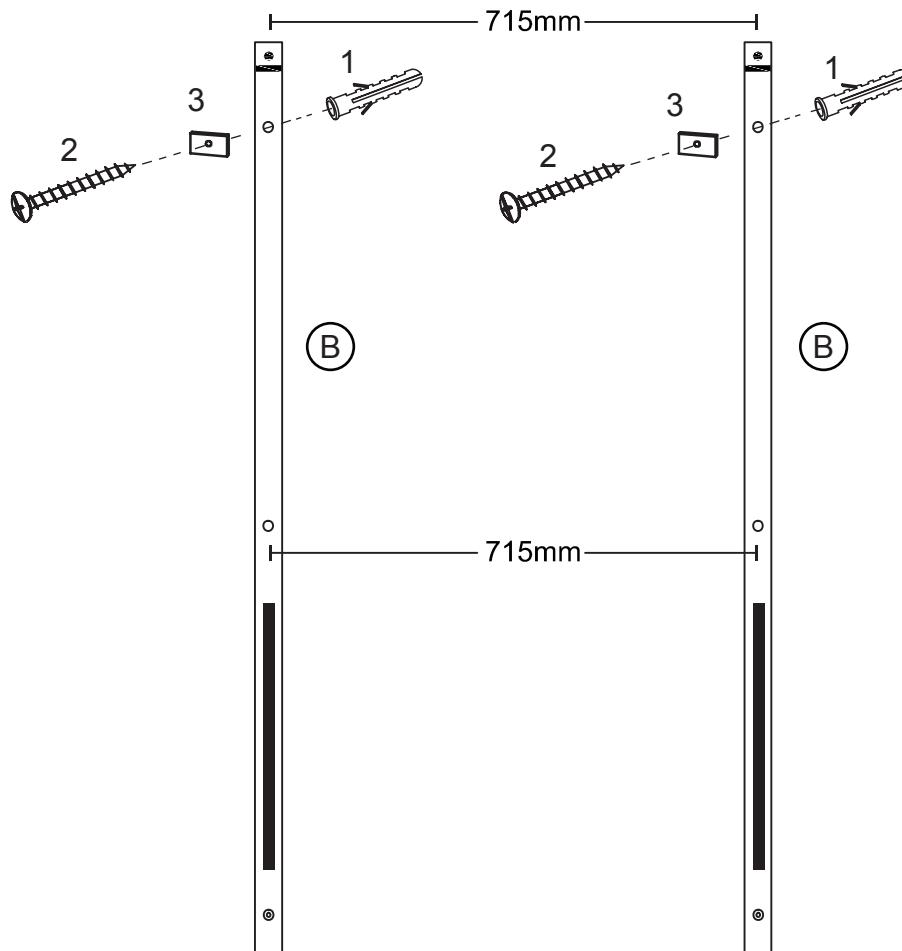


Drill Bit Tip: Use a 1/4" drill bit when drilling the holes to accommodate the provided wall anchors.



Step 2

Screw on the rest of the wall anchors (1) through the straps. You're doing great!

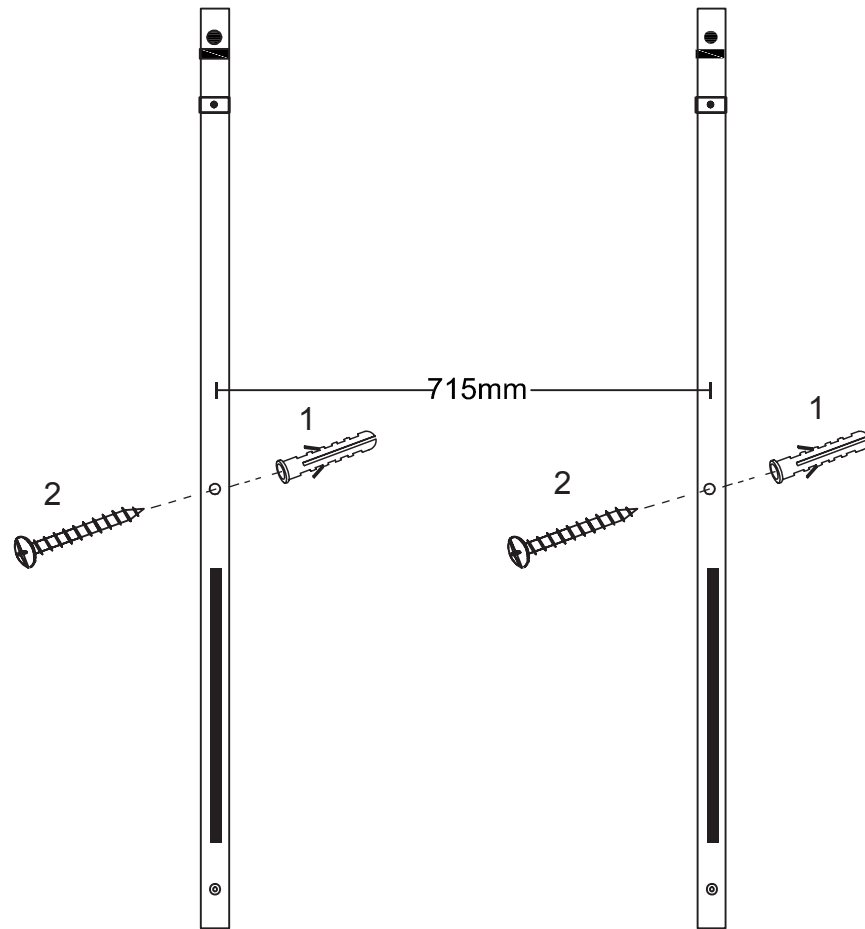


Drill Bit Tip: Use a 1/4" drill bit when drilling the holes to accommodate the provided wall anchors.





Step 3

Match the Velcro straps between the headboard panel and straps and press the headboard piece (C) to the straps (B). Until now, we didn't think it was possible to use the word "straps" this many times in one sentence.

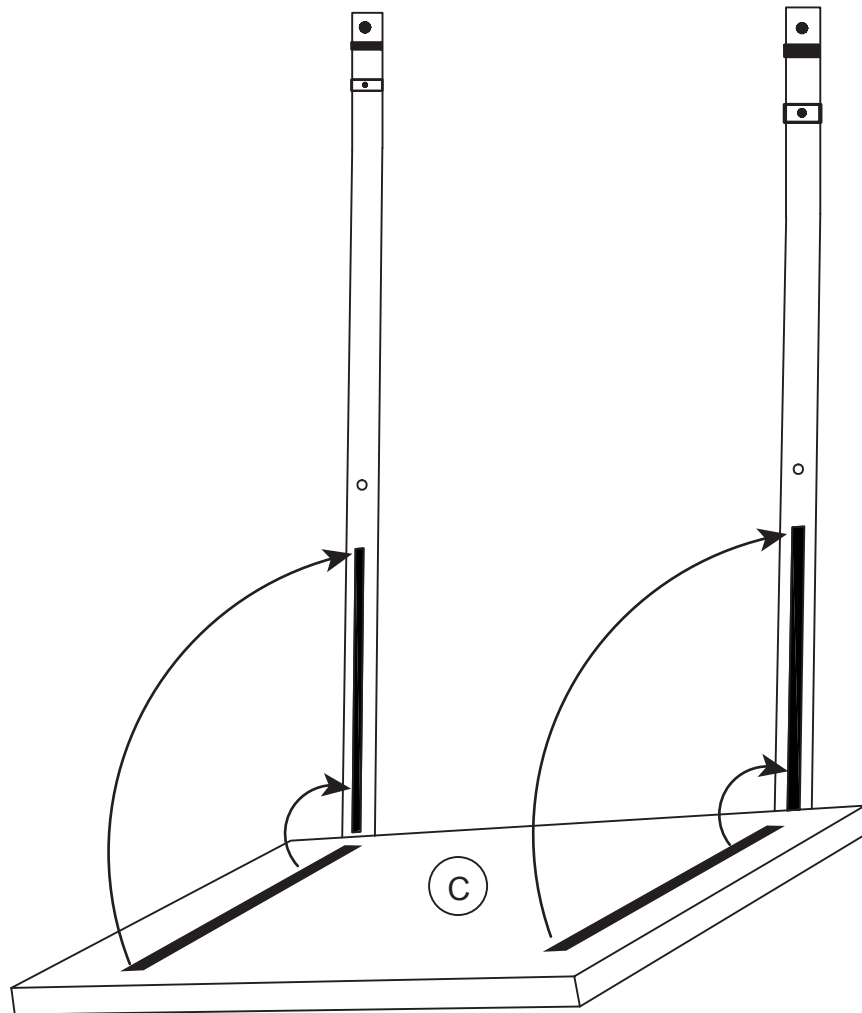


Step 4

Flip panels up, undo top button, and then fasten Velcro and top button of top panel.

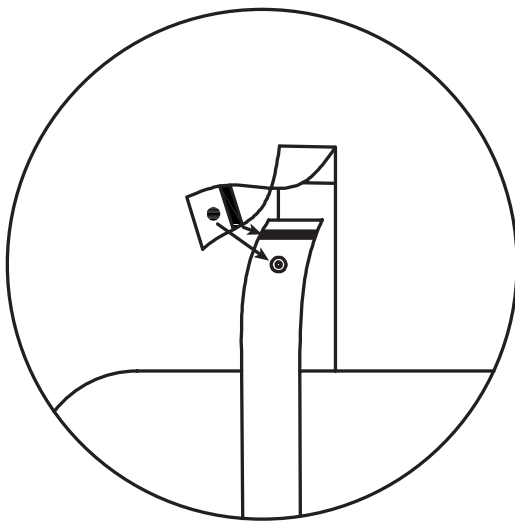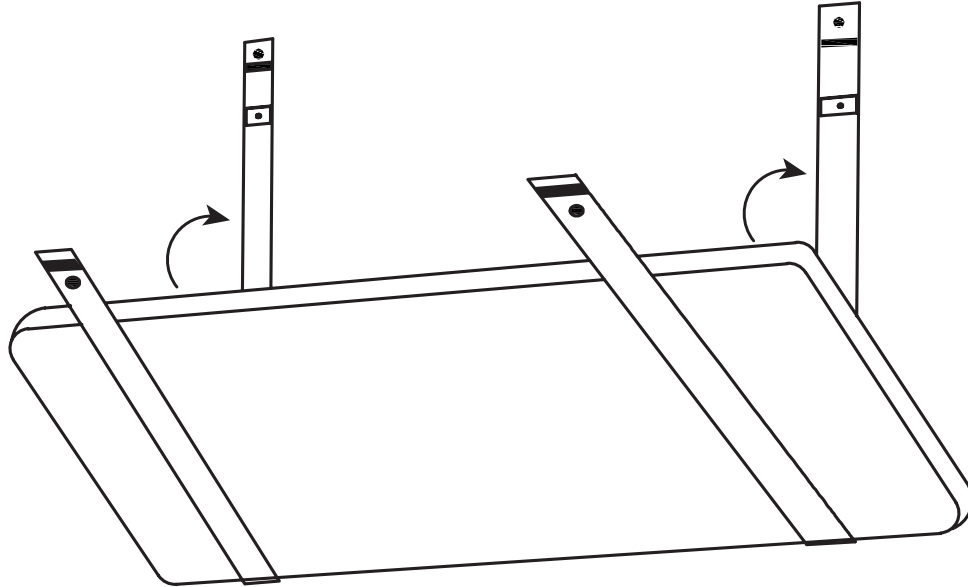

You did it! Time to celebrate with delivery pizza? We think yes.

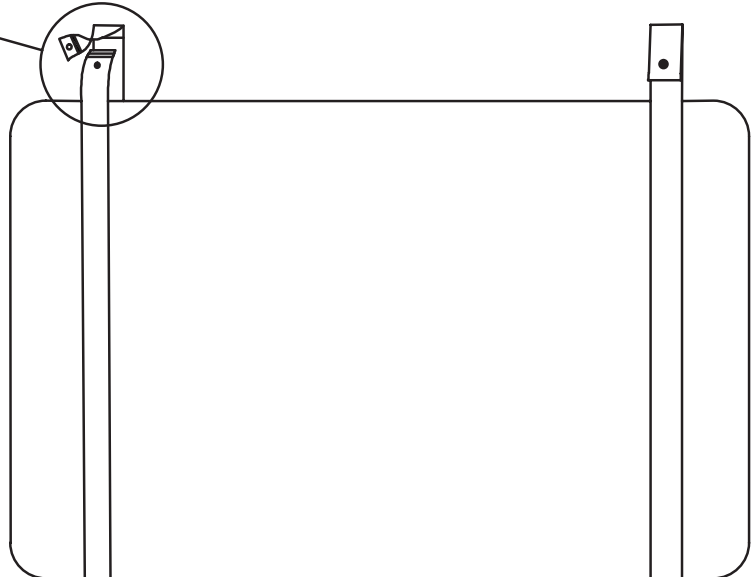

Safety first, fun later

We want your headboard to last as long as possible, so we recommend that you tighten the screws 2 weeks after assembly and for added safety check the tightness of all screws every 2 months.

Safe use of this product starts with you.

Use this headboard responsibly with the primary concern for your safety. Follow assembly instructions carefully and inspect product upon receipt and each use.

its parent companies cannot be held legally responsible for any injuries or death resulted from failure to follow instructions or improper use of this product.

Do not modify the structure of this product in any way.

Our products have been tested to meet specific safety measures as they were originally intended to be sold. Any modifications will present the risk of creating significant safety issues which will not be responsible for.

Proper use

- | | |
|---------------|--|
| DO NOT | use for commercial purposes |
| DO NOT | put on uneven surface |
| DO NOT | put hot serving liquid directly on headboard |
| DO NOT | use headboard if broken or damaged |
| DO NOT | make temporary repairs |
| DO NOT | use outdoors |