


# HG-MLLY-6688-1

## Clear Podium Installation Steps

1. Prepare the screwdriver, screws, gloves, first fixed the bottom plate and a side plate, as shown in the following figure



2. Then fix the left side of the side plate, as shown in the figure below.

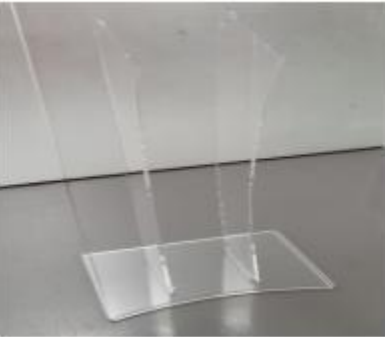

3. Install the center plate for reinforcement, as shown in the following figure.



4. Then install the top tray, as shown below.



5. Finally install the podium baffle as shown below.

