




# ASSEMBLY INSTRUCTION





## DESCRIPTION : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

### PART LIST#


NO	DRAWING	DESCRIPTION	QTY
A		Dresser	1pc
B		Bun Foot	4pcs
C		Metal Leg	2pcs

### HARDWARE LIST#




NO	NAME	PART	QTY
1	Allen Key		1pc
2	JCBC / Boulon - M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs

Bun Foot cover /  
Couverture des  
pieds


Remove Bun Foot cover  
before assemble.

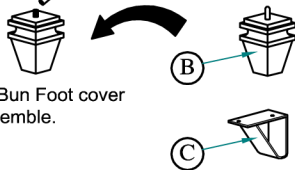


Remove Bun Foot carton  
located in the drawer of the  
casegood. Remove and  
unwrap each foot.

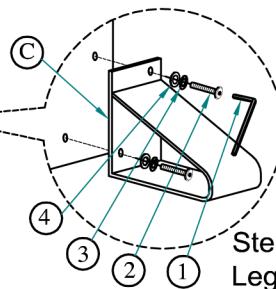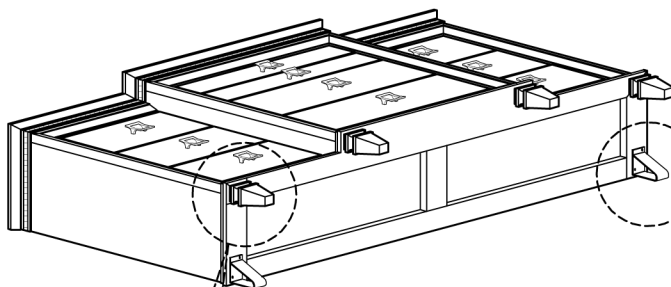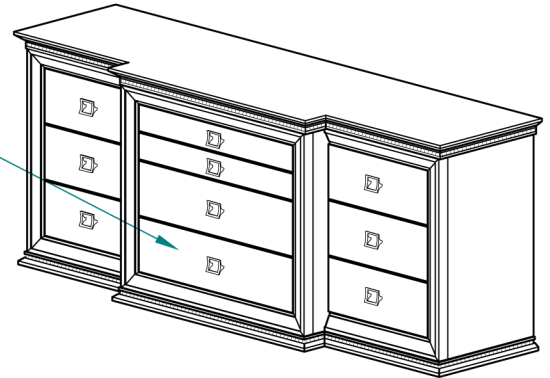

Step 2 : Secure the (C) Metal  
Leg to the bottom of (A) Dresser  
as a diagram shown.

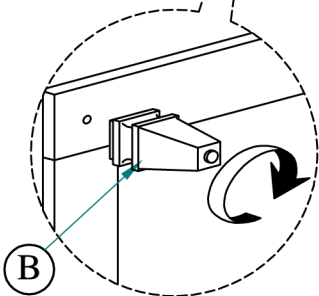


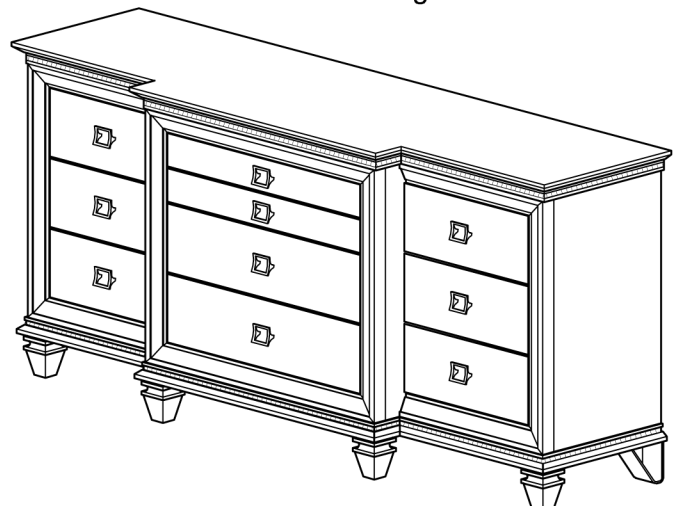



Step 1 : Secure the (B) Bun Foot  
to the bottom of (A) Dresser  
as a diagram shown.



Assembly completed

**HARDWARE LIST**

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

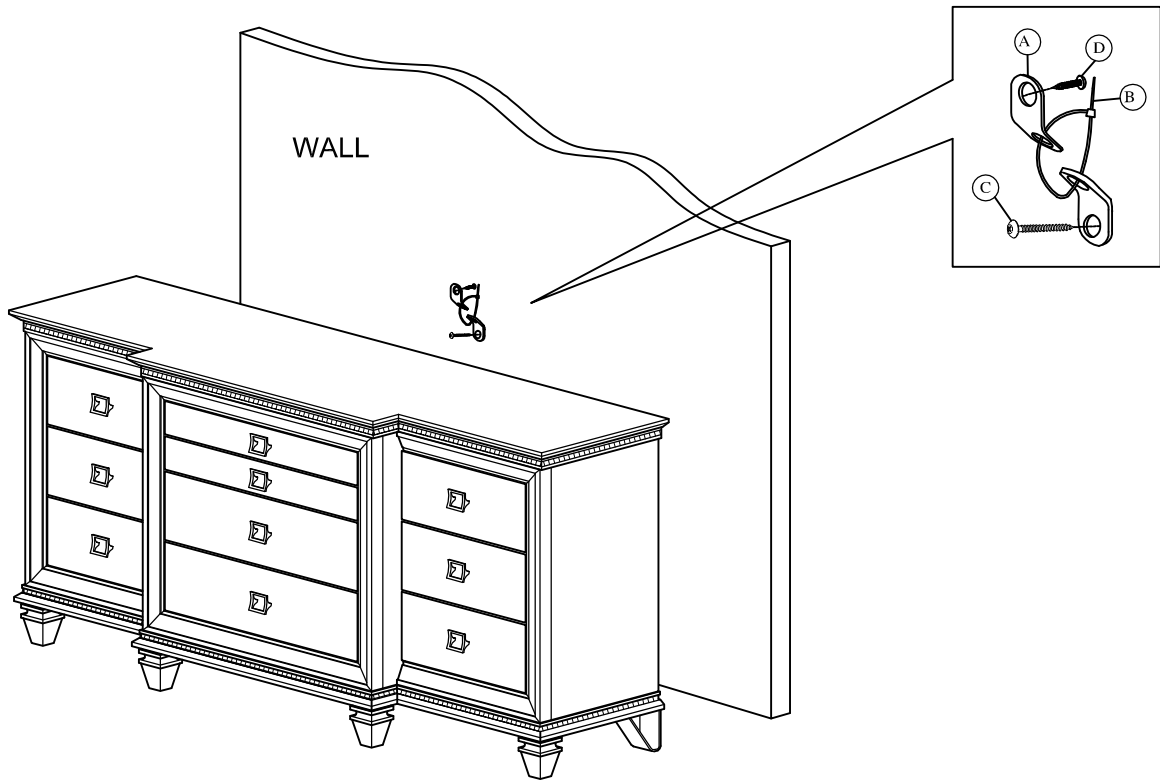

**Assembly completed**