

CHIC HOUSE

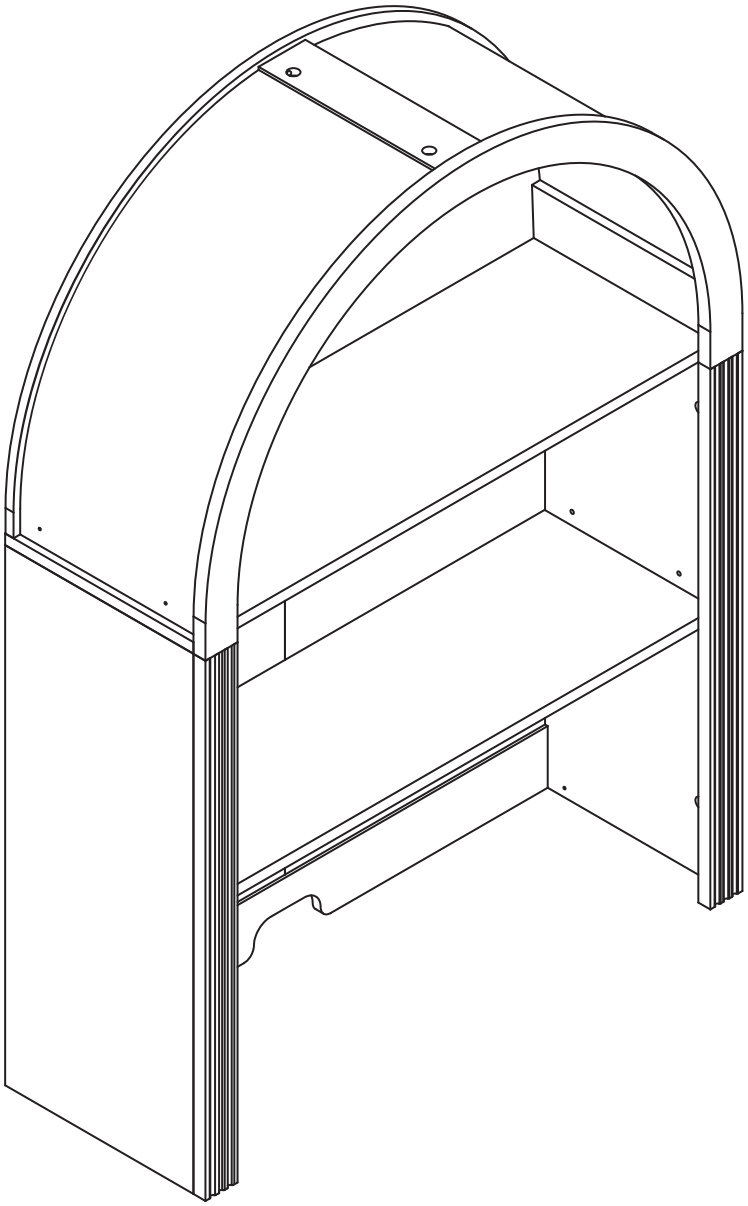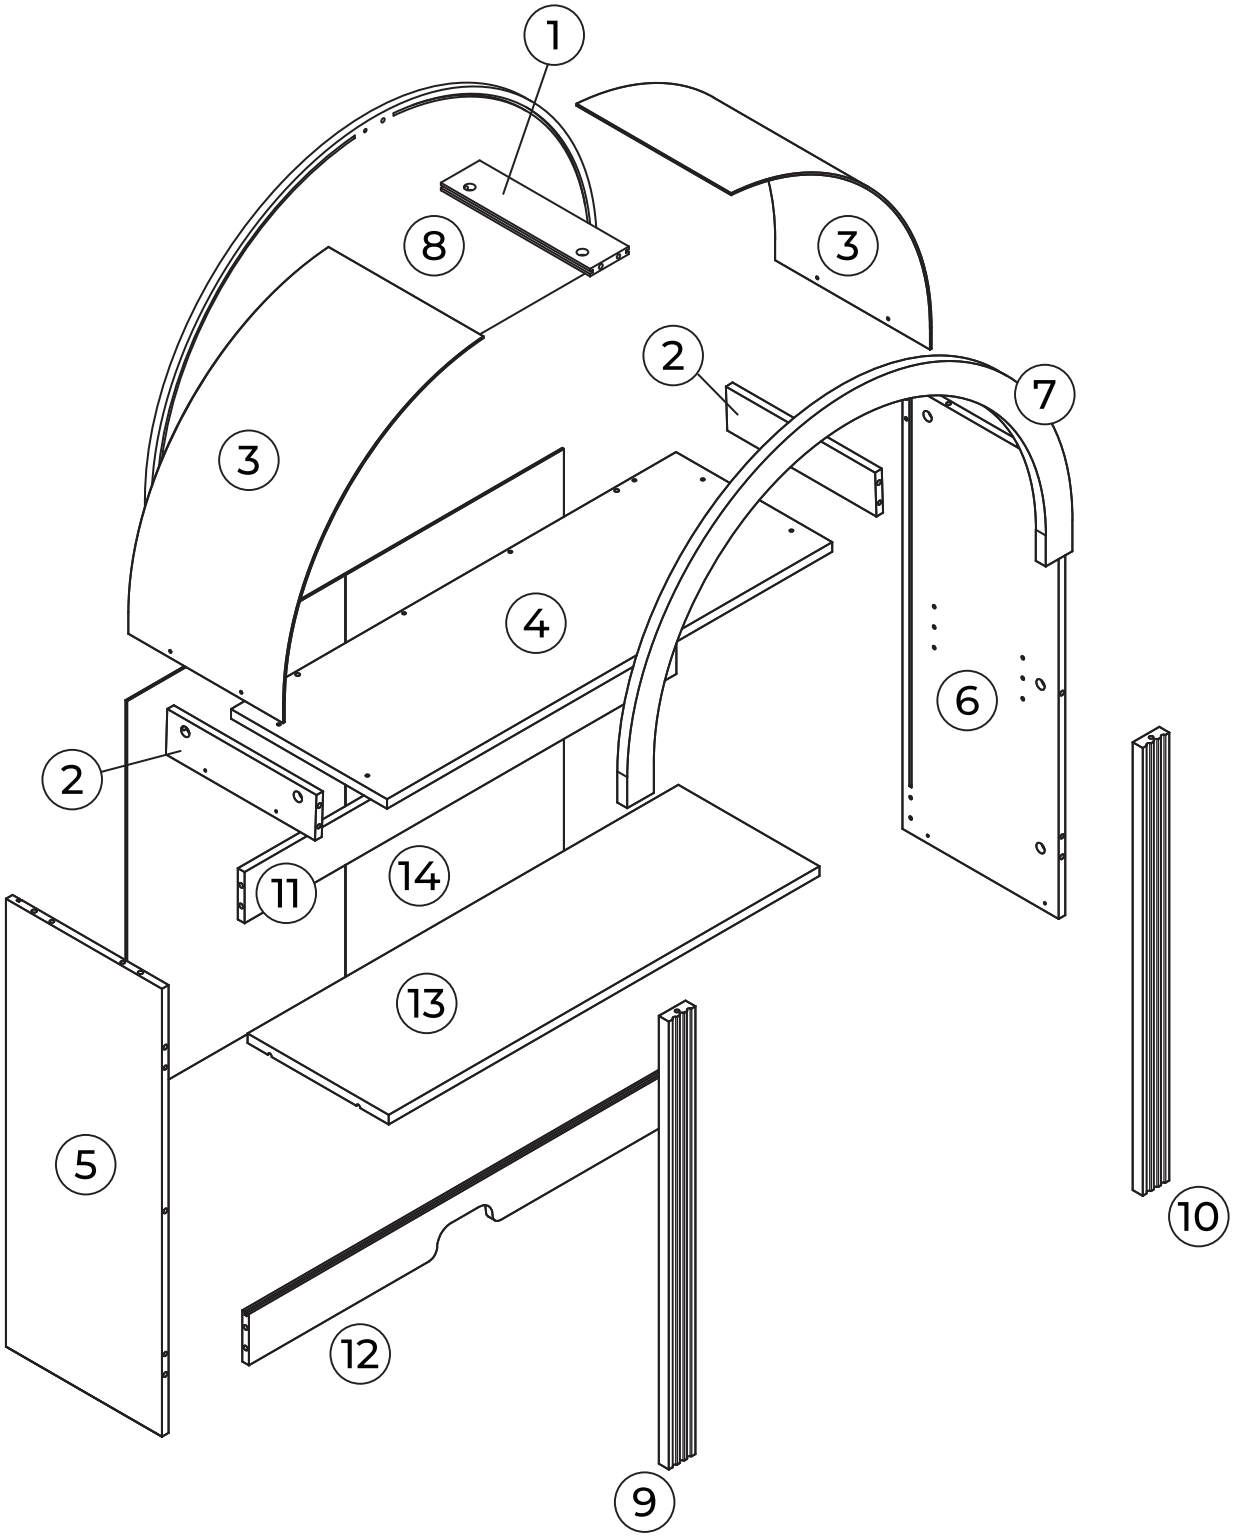

Monos















Arched-Top Tall Cabinet

Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly
Customer Support - support@chichouse.cn


1
8
3
2
7
3
4
6
2
11
14
13
5
10
12
9











Components

Please check if all the pieces listed below are received.

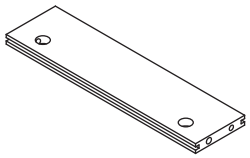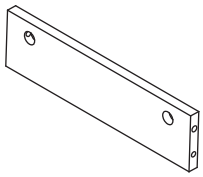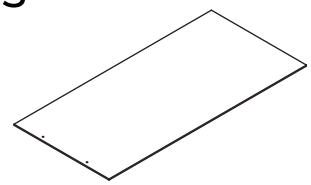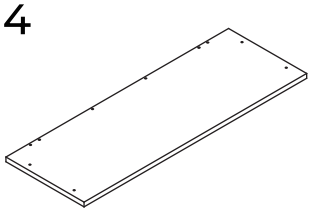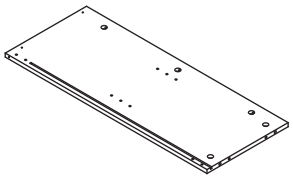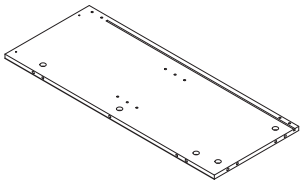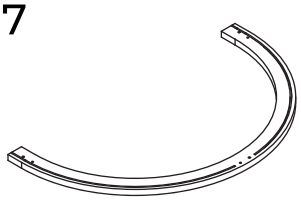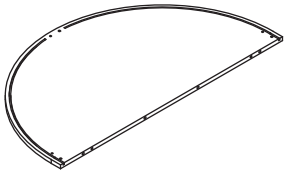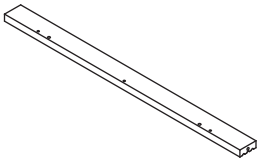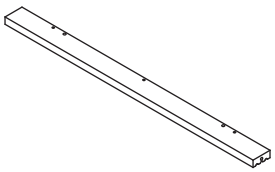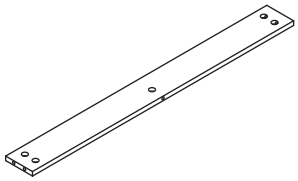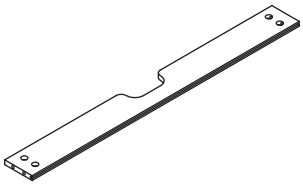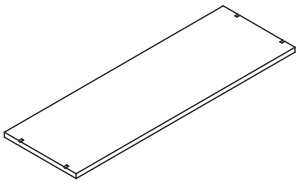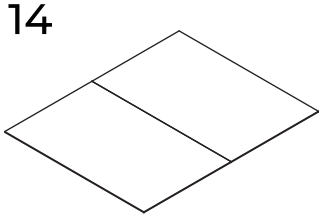
1  x1	2  x2	3  x2	4  x1
5  x1	6  x1	7  x1	8  x1
9  x1	10  x1	11  x1	12  x1
13  x1	14  x1		


Components

Please check if all the pieces listed below are received.

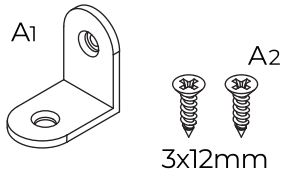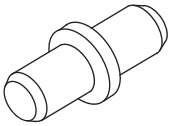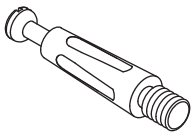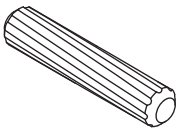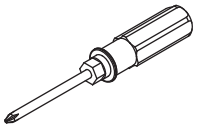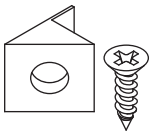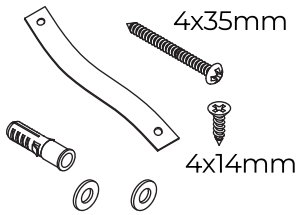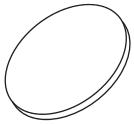A A1 4PCS A2 8+2PCS  3x12mm	B B1 2PCS B2 4+1PCS  3x12mm	C 4PCS 	D 29+2PCS  40mm
E 29+2PCS  ϕ 15x9mm	F 18+2PCS  6x30mm	G 1PCS 	H 4PCS  3.5x14mm
I 1PCS  	J 4+1PCS  4x25mm	K 4+1PCS  3x12mm	L 33+2PCS  ϕ 20mm


Step 1

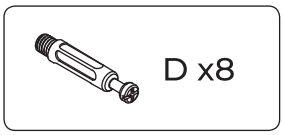

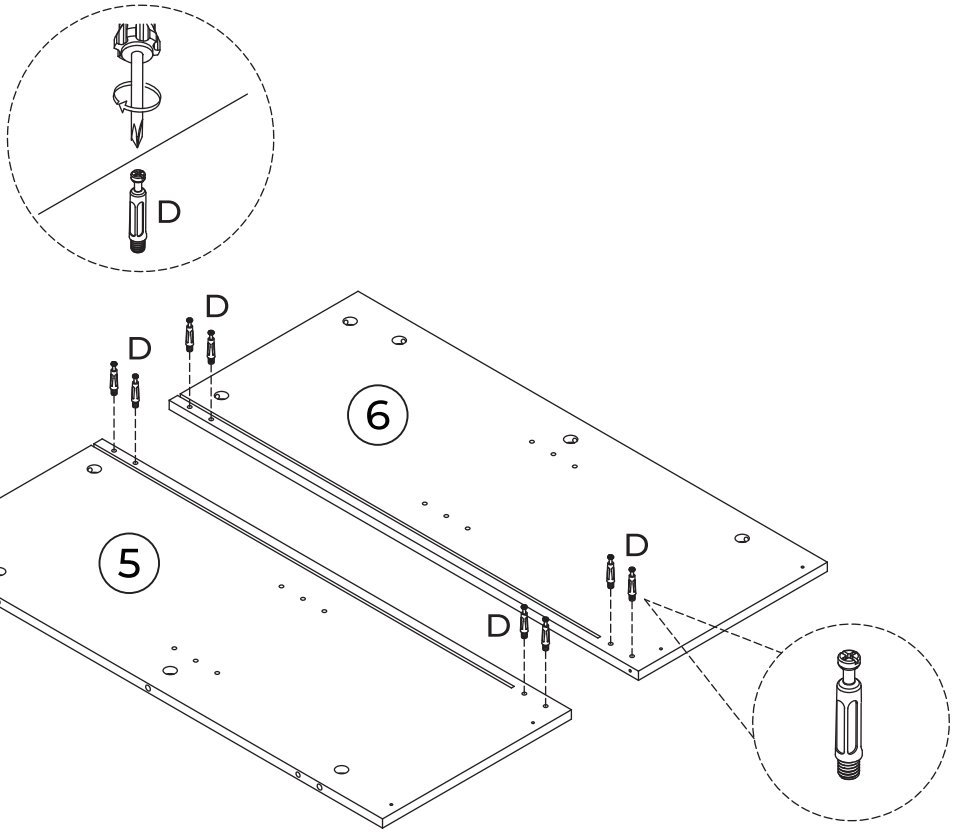


Step 2



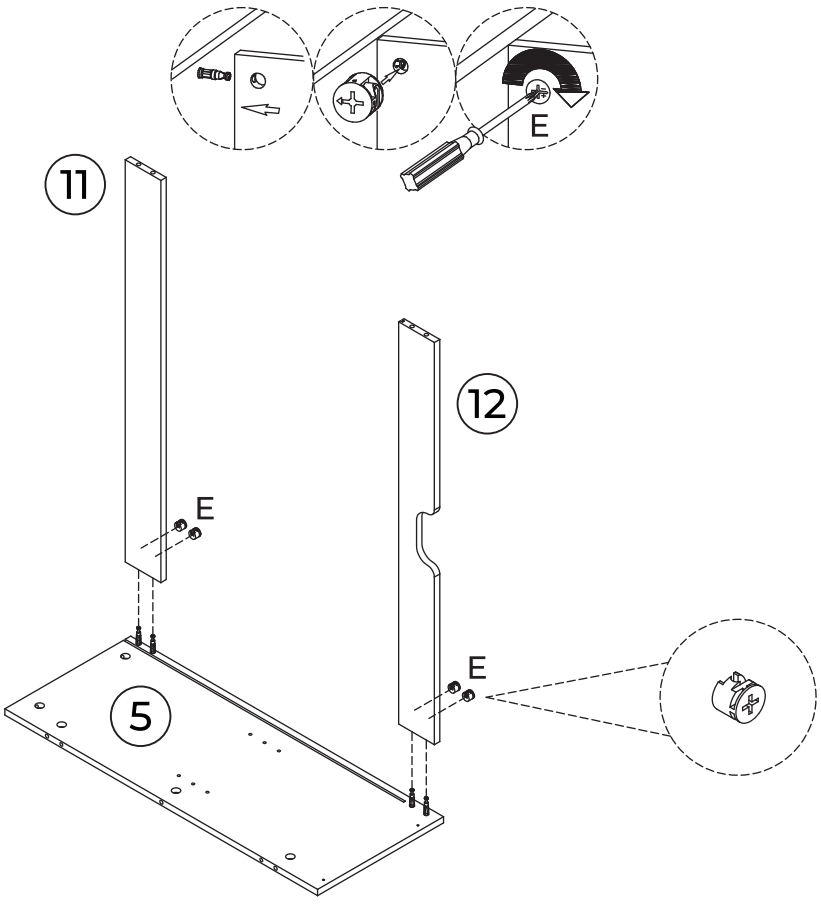



Step 3



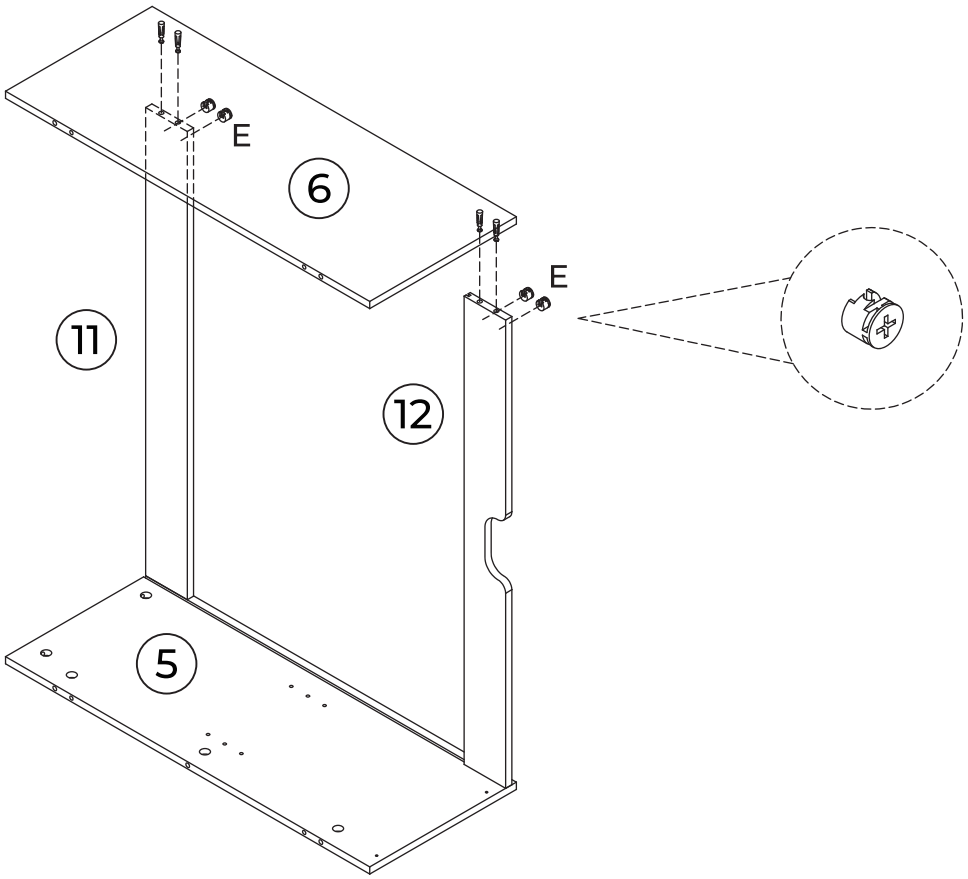


Step 4

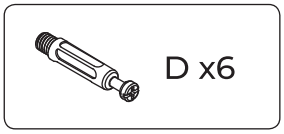


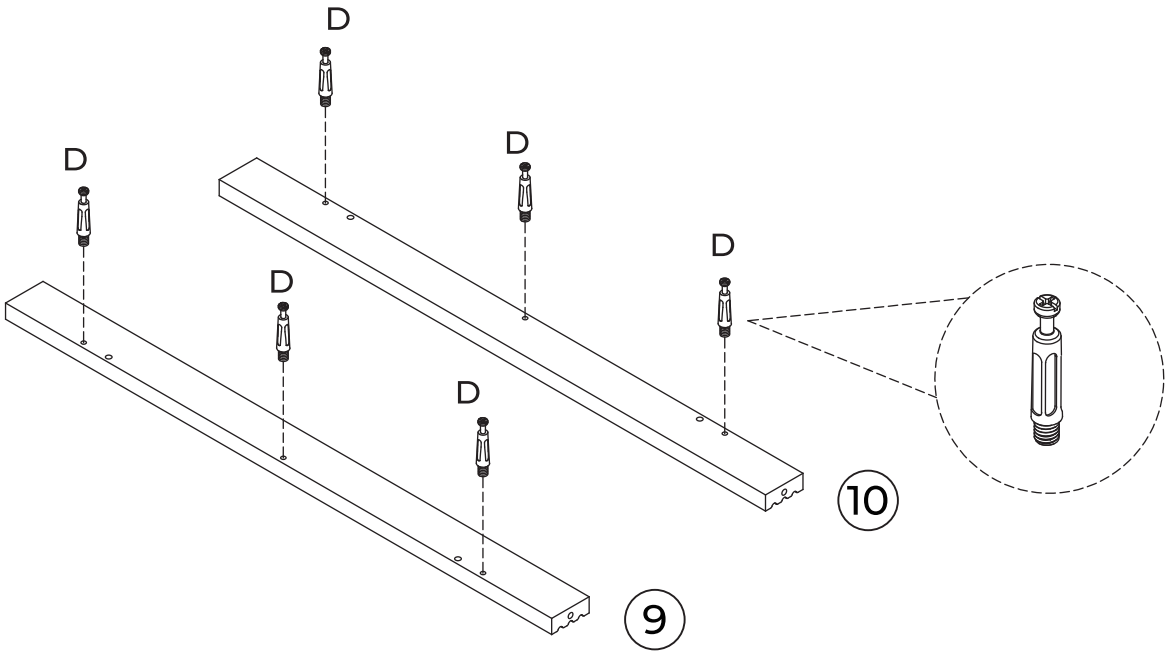


Step 5

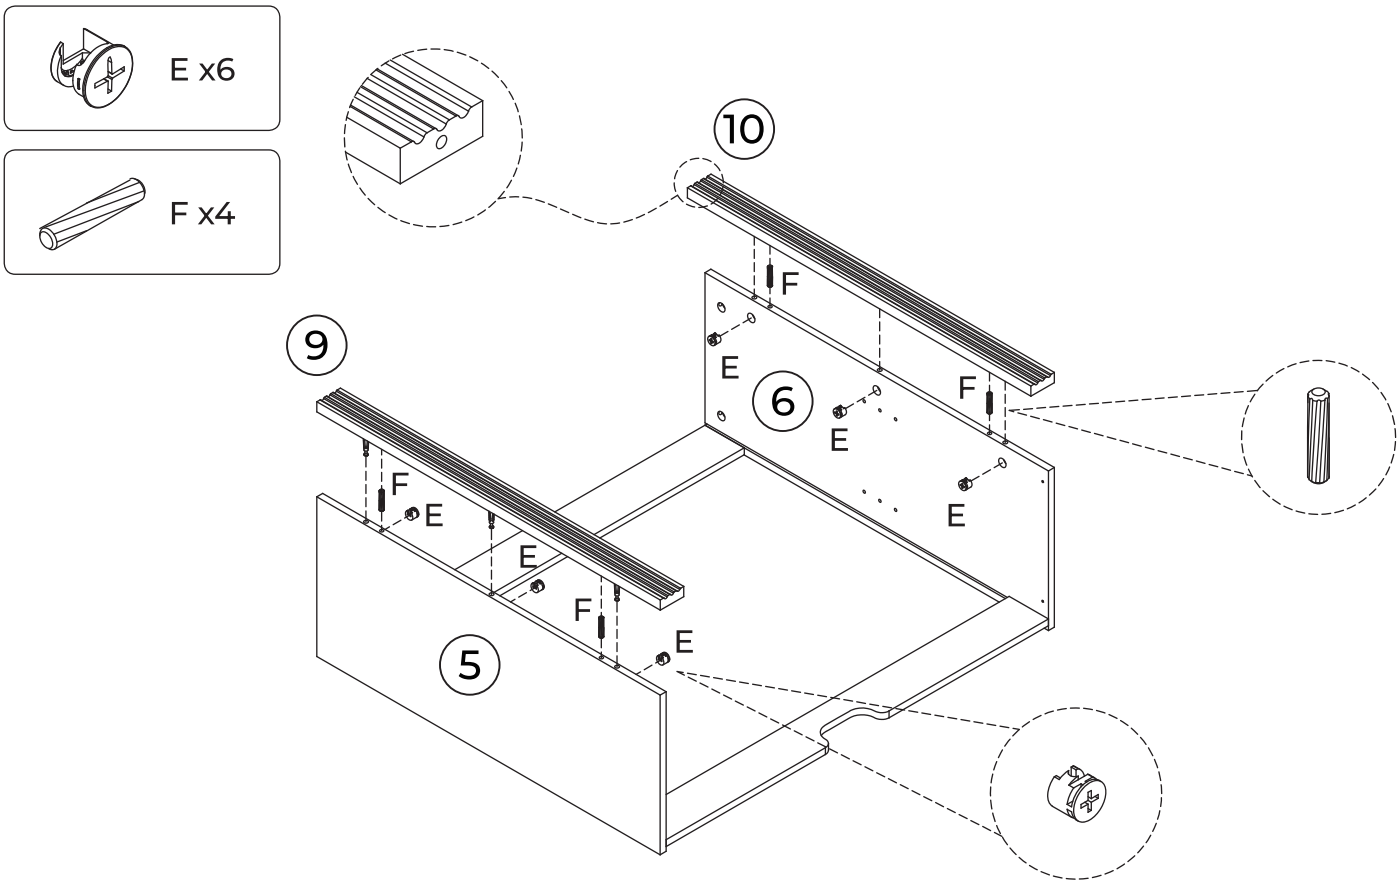


Step 6

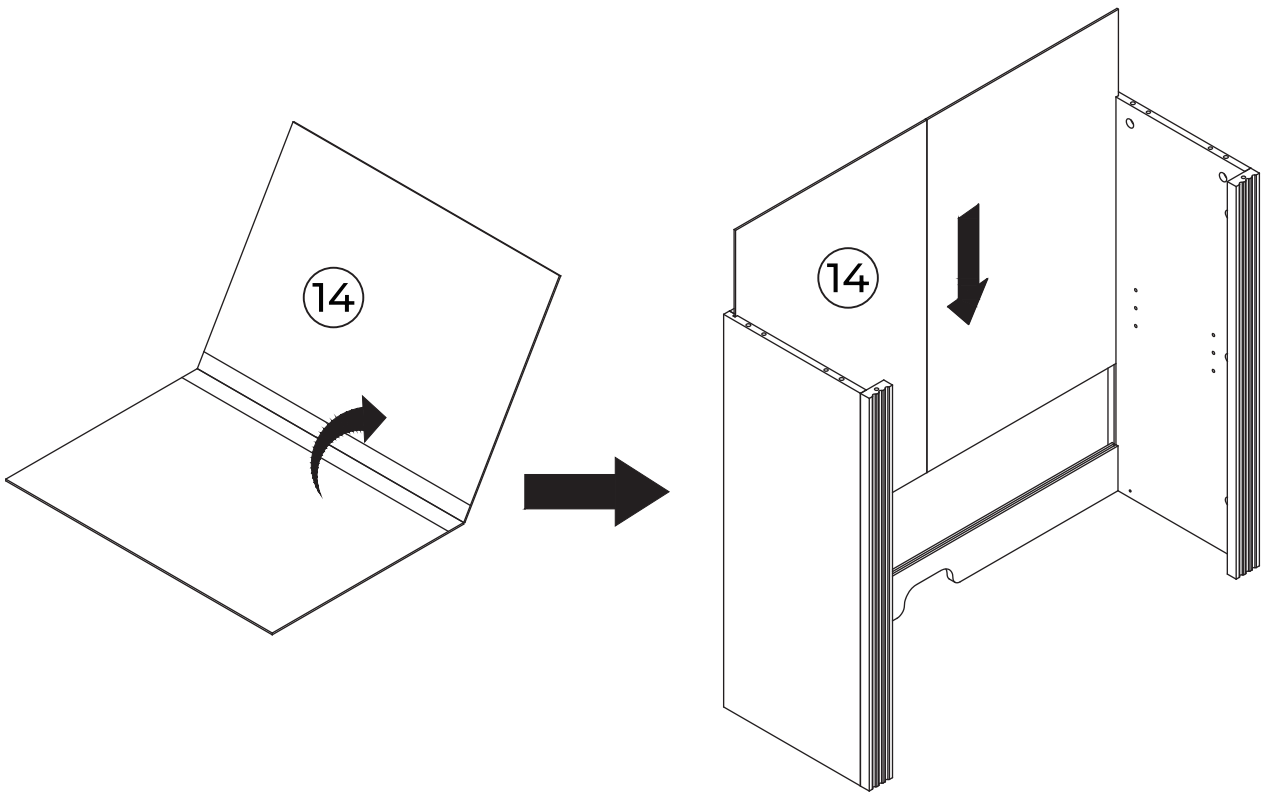

Step 7

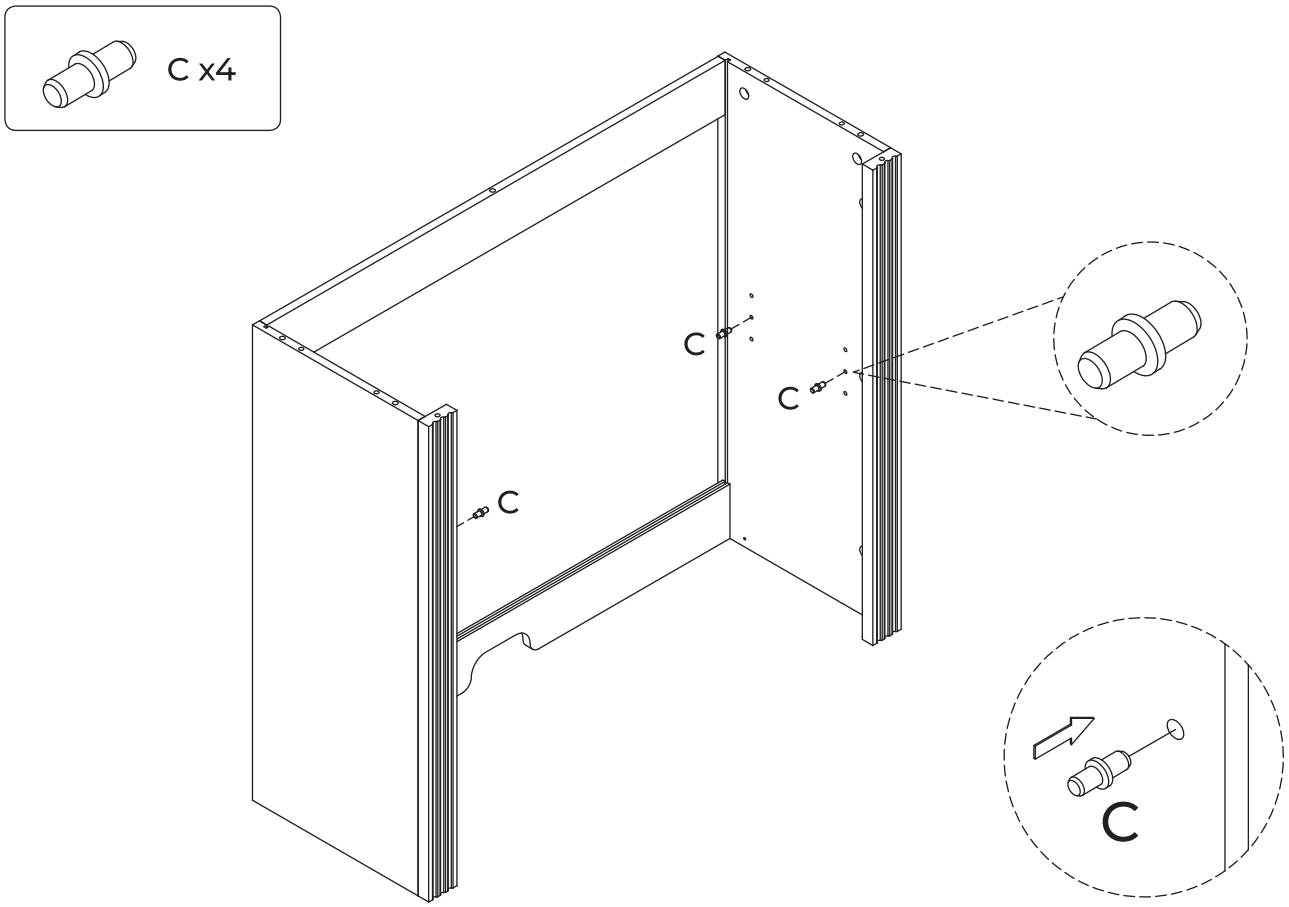


Step 8

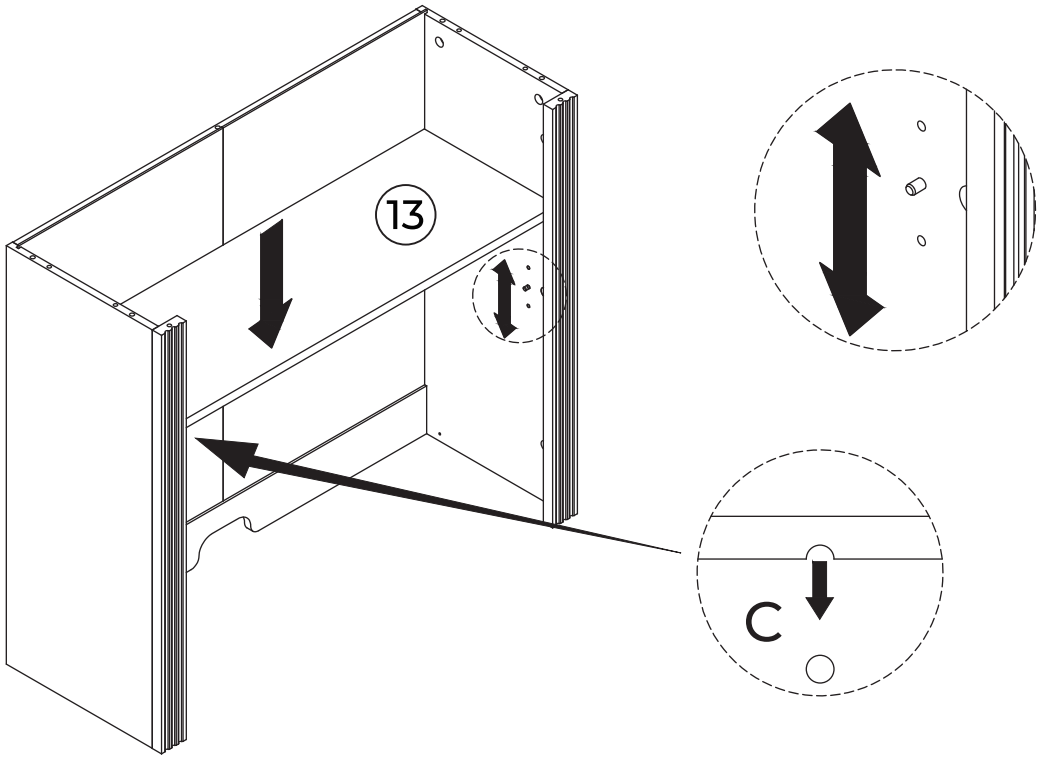

Step 9




D x6

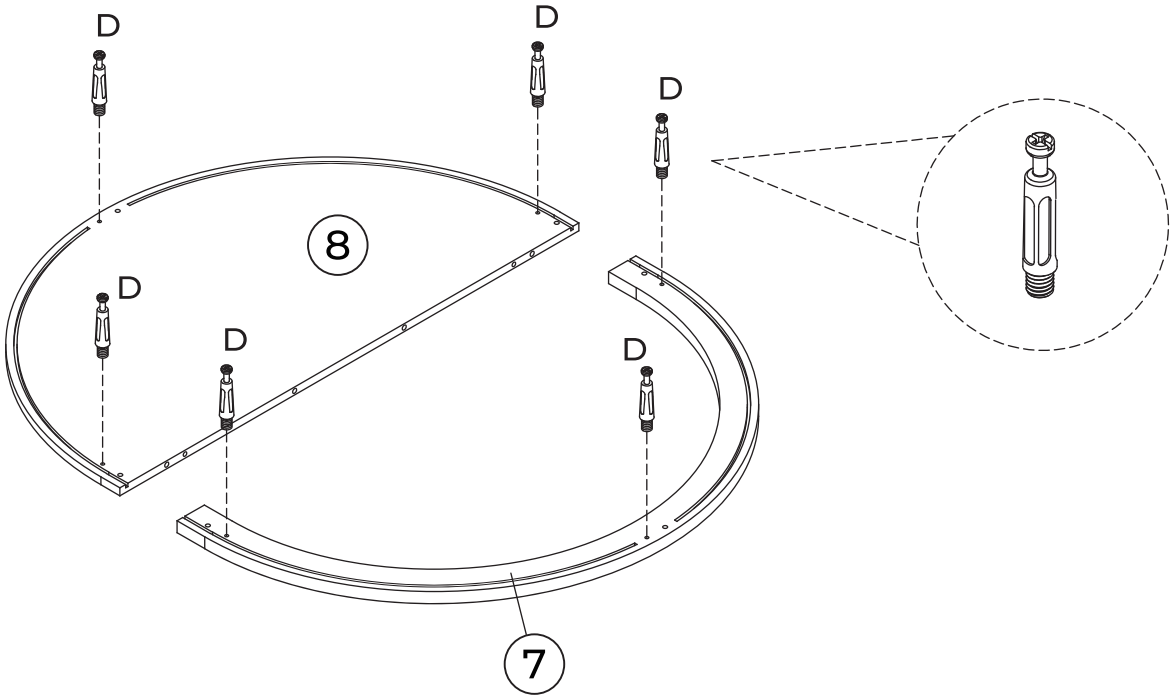

Step 10




E x3

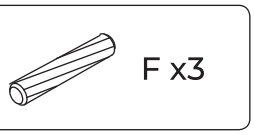


F x3

Step 11

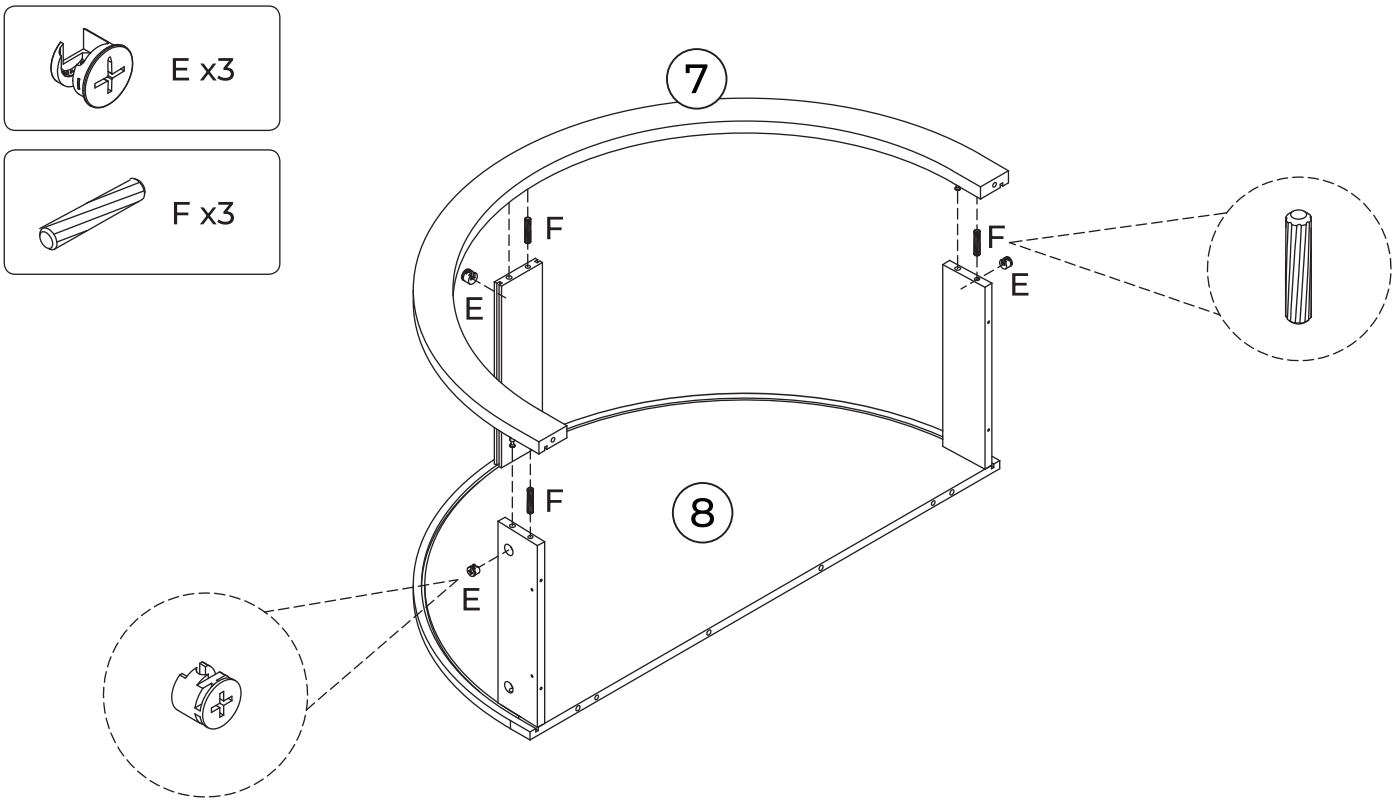


Step 12

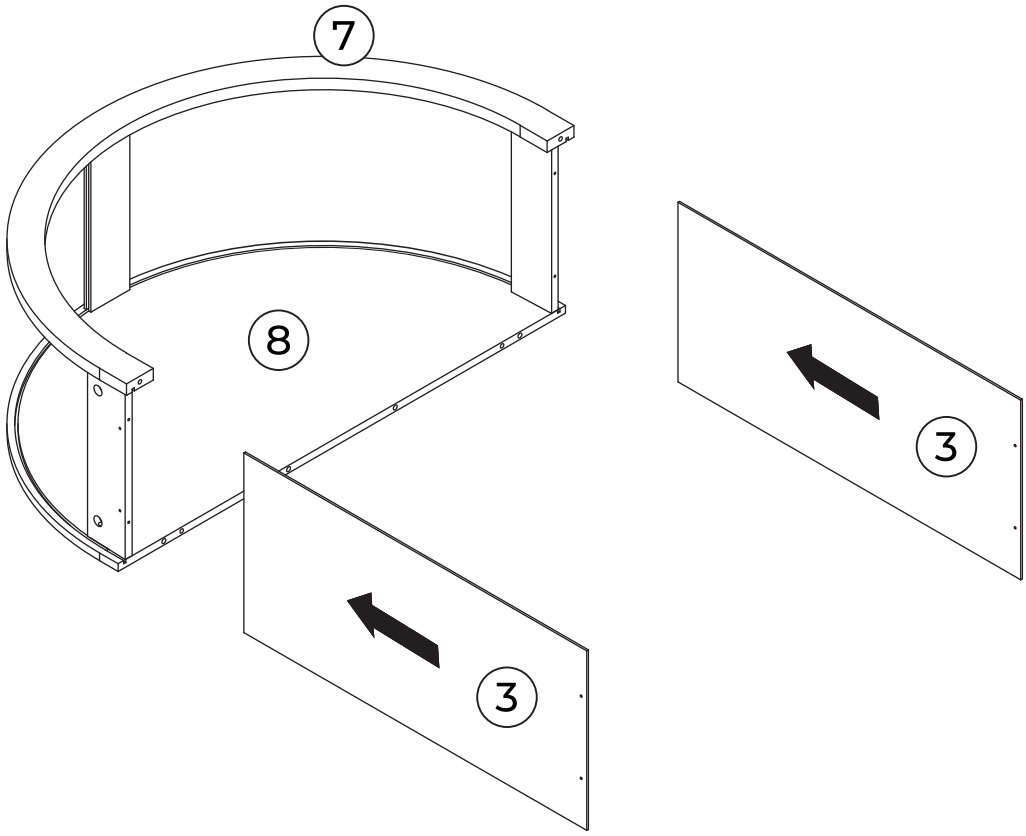

Step 13




D x4

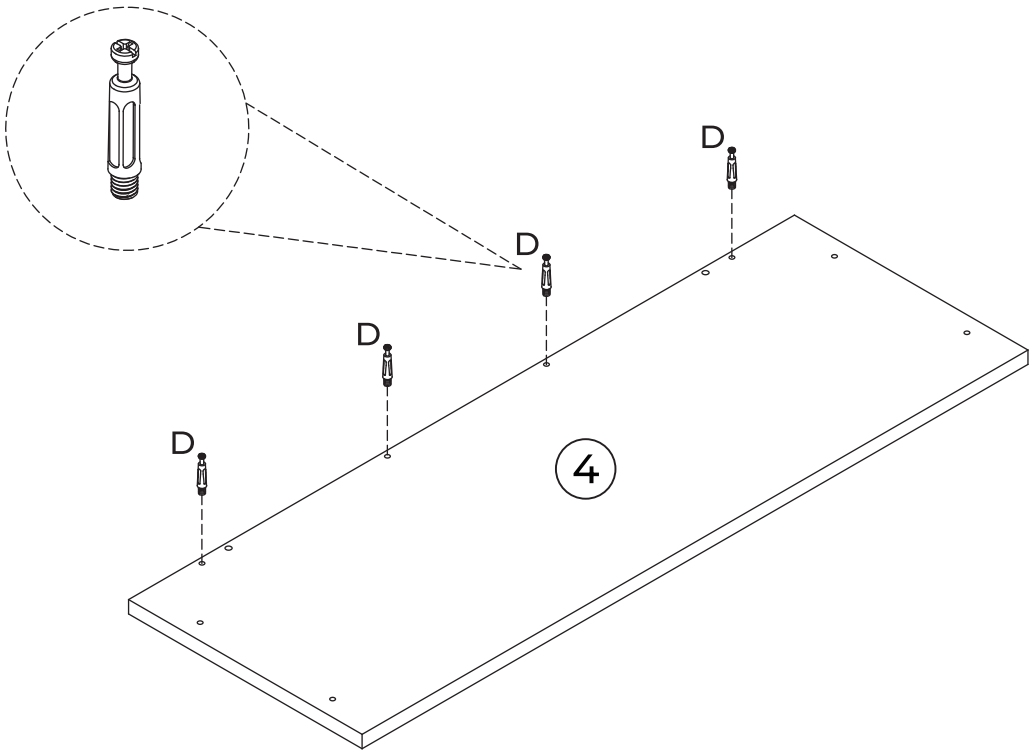

Step 14




E x4

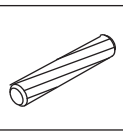


F x2




J x4

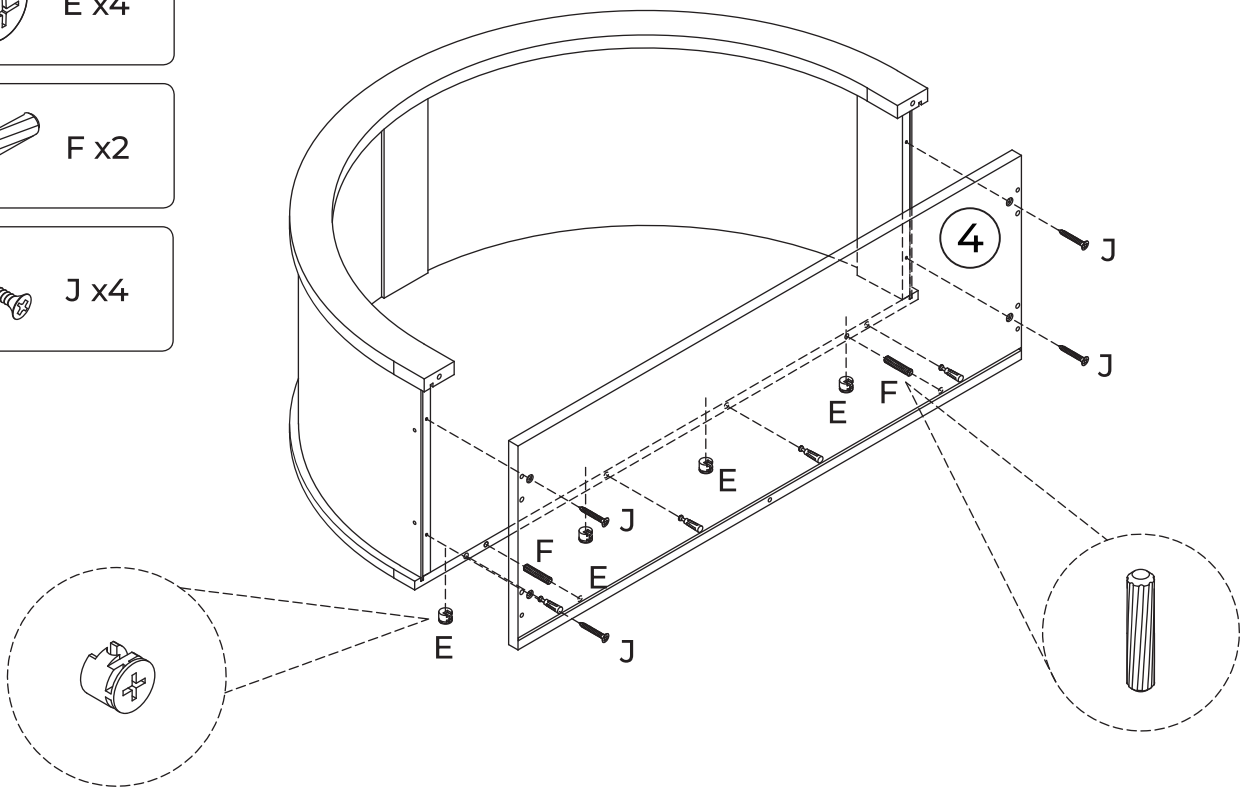



Step 15

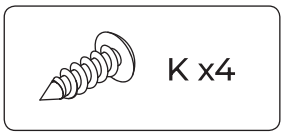

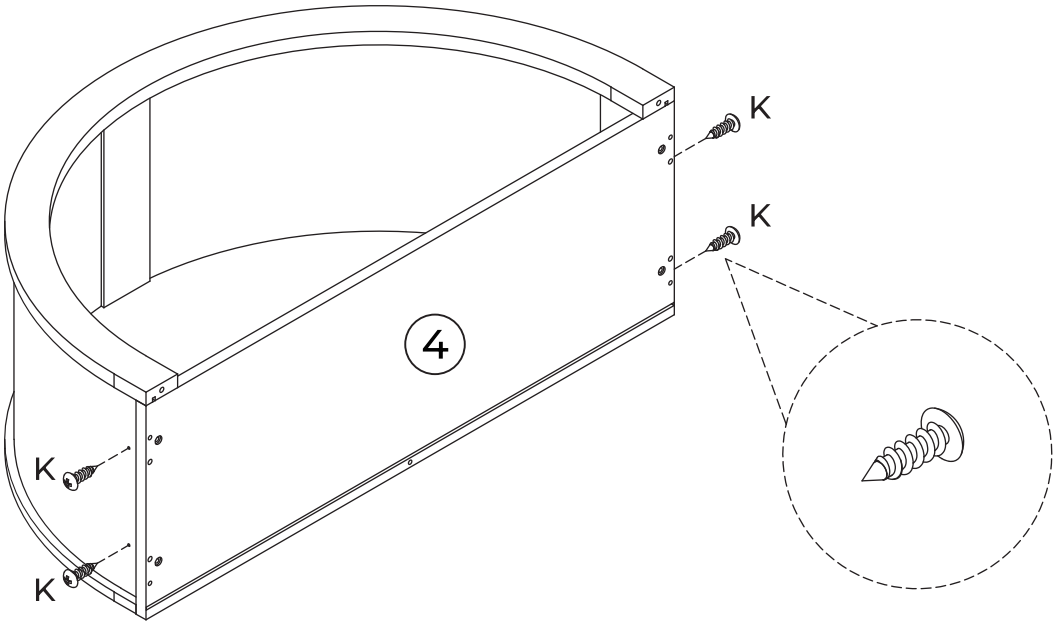

Step 16

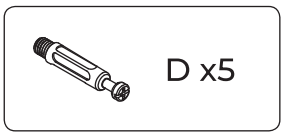


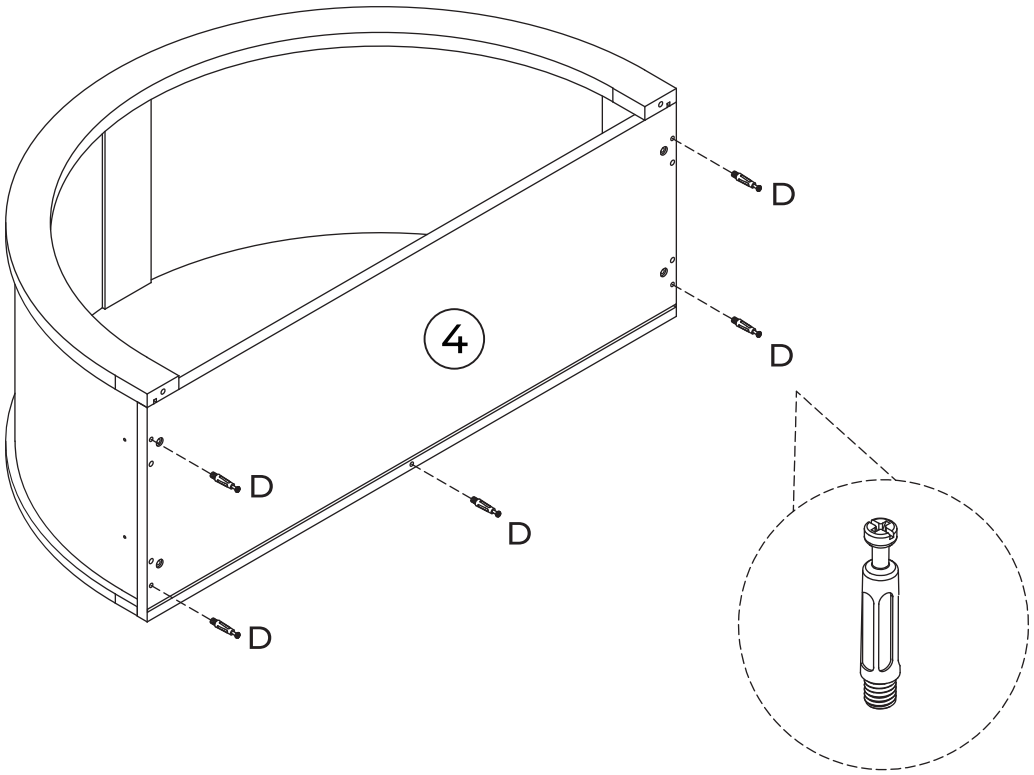


Step 17




E x4

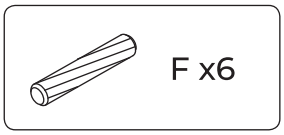


F x6

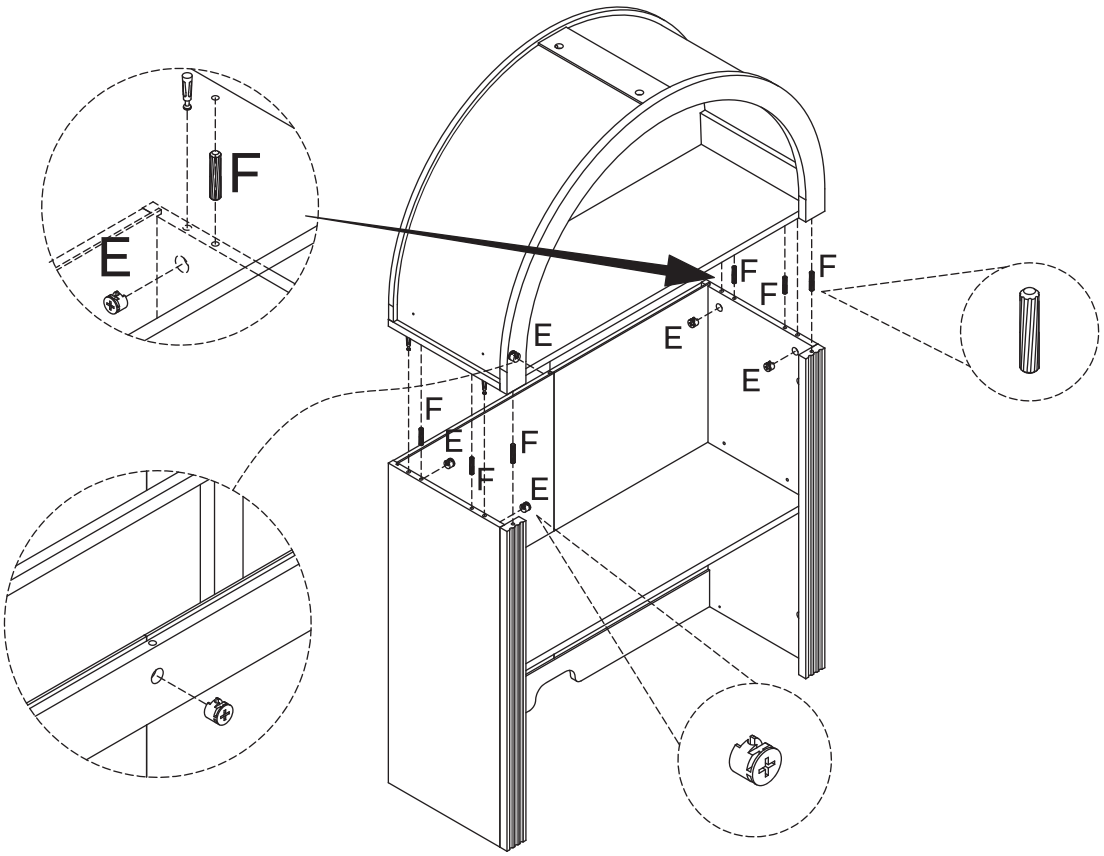


Step 18

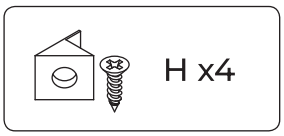


H x4

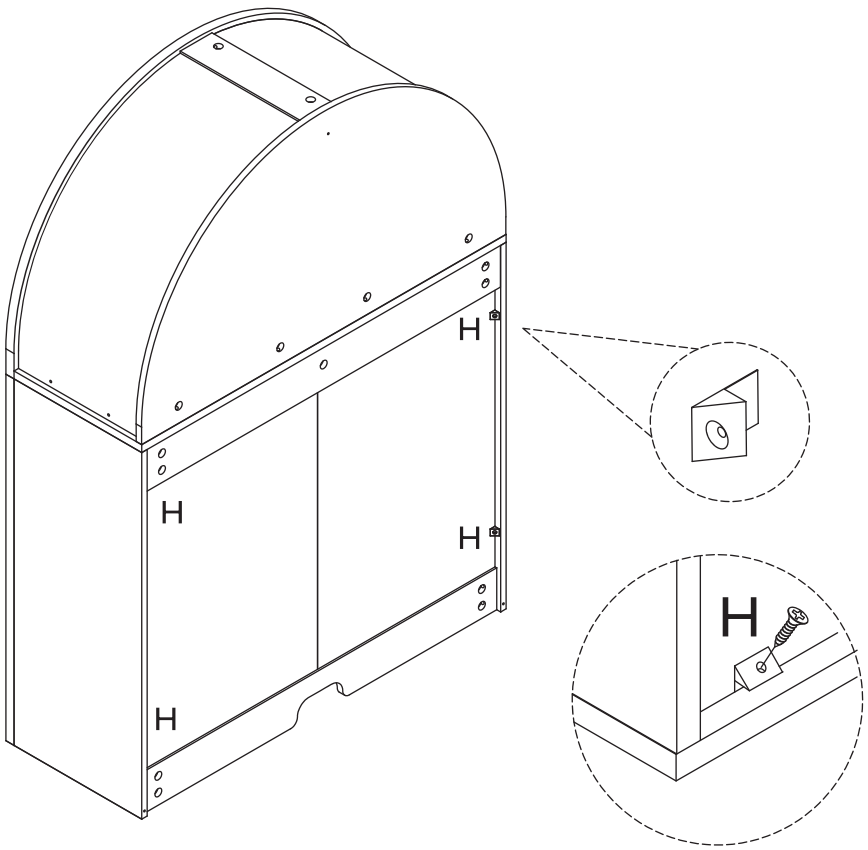

Step 19

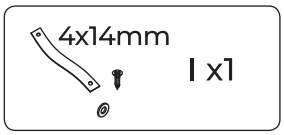





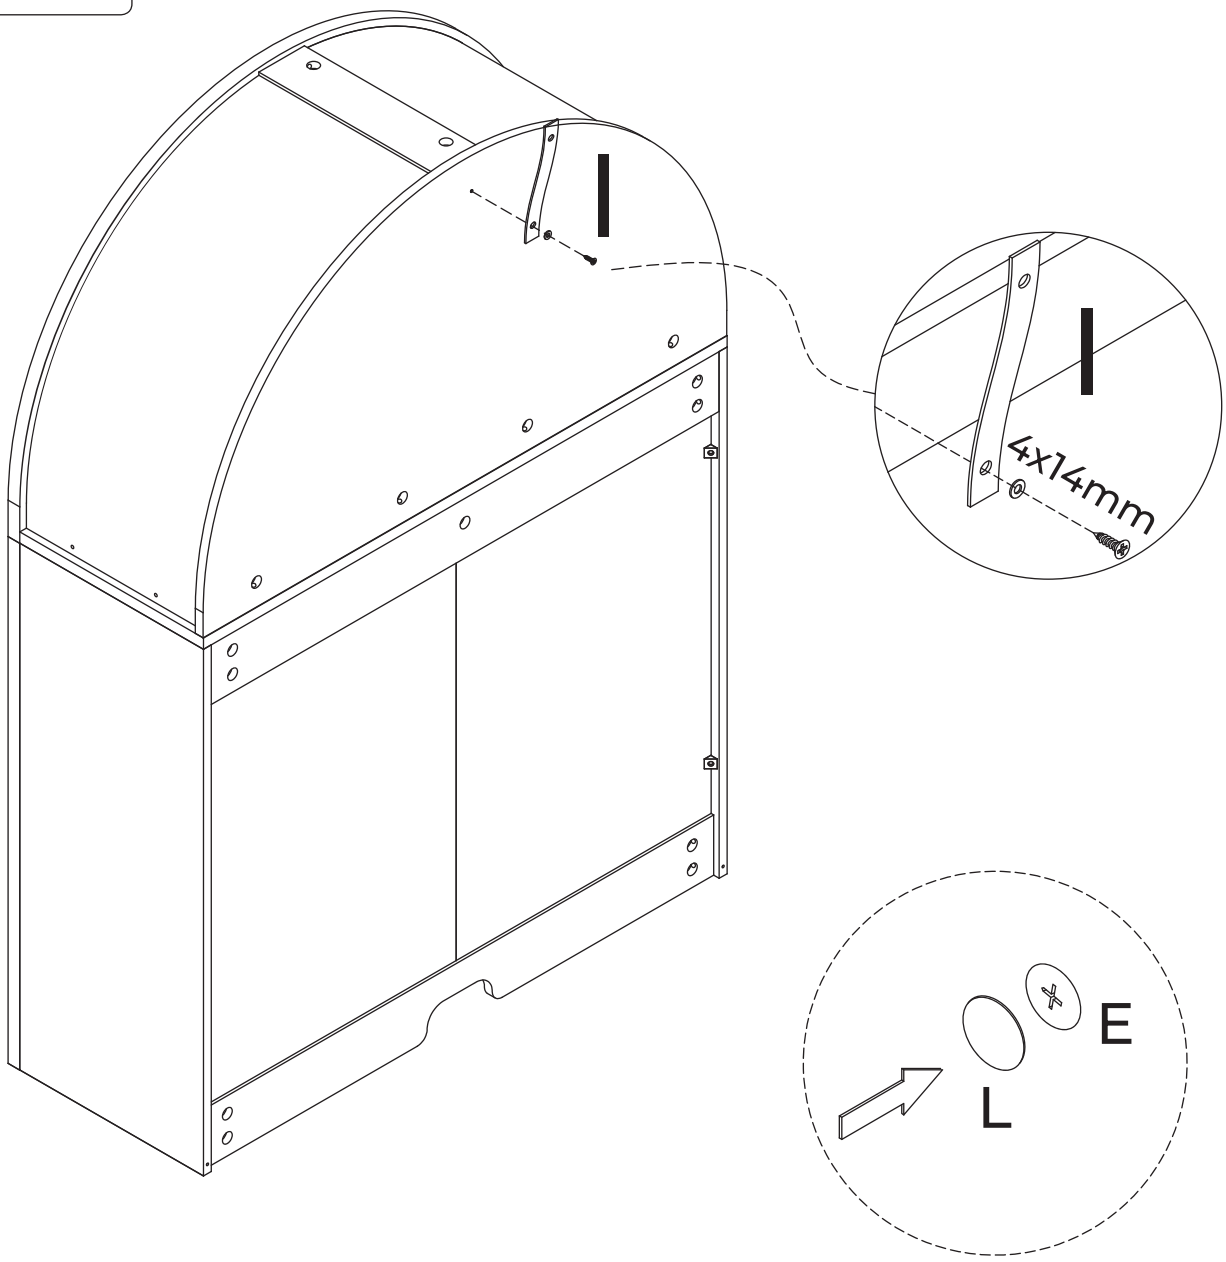

Use screw hole stickers in a color that matches the cabinet.

Step 20

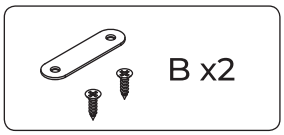

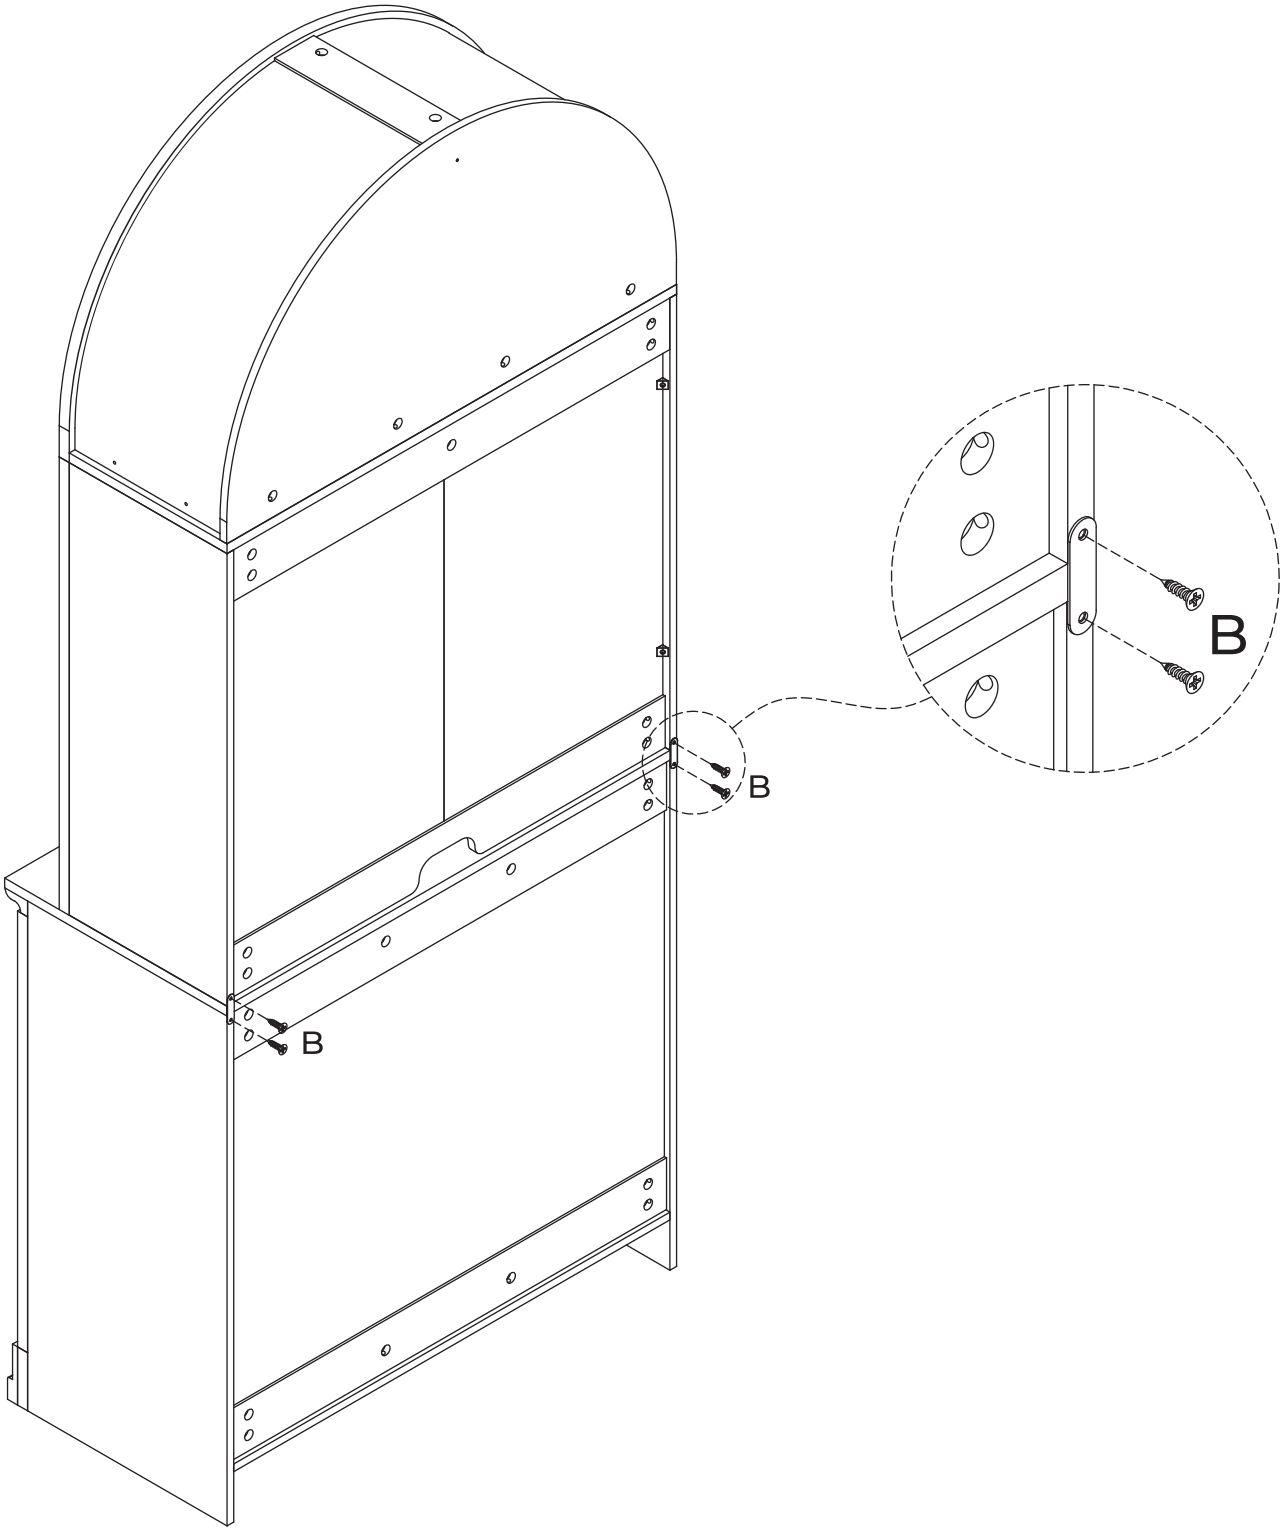

Step 21

