
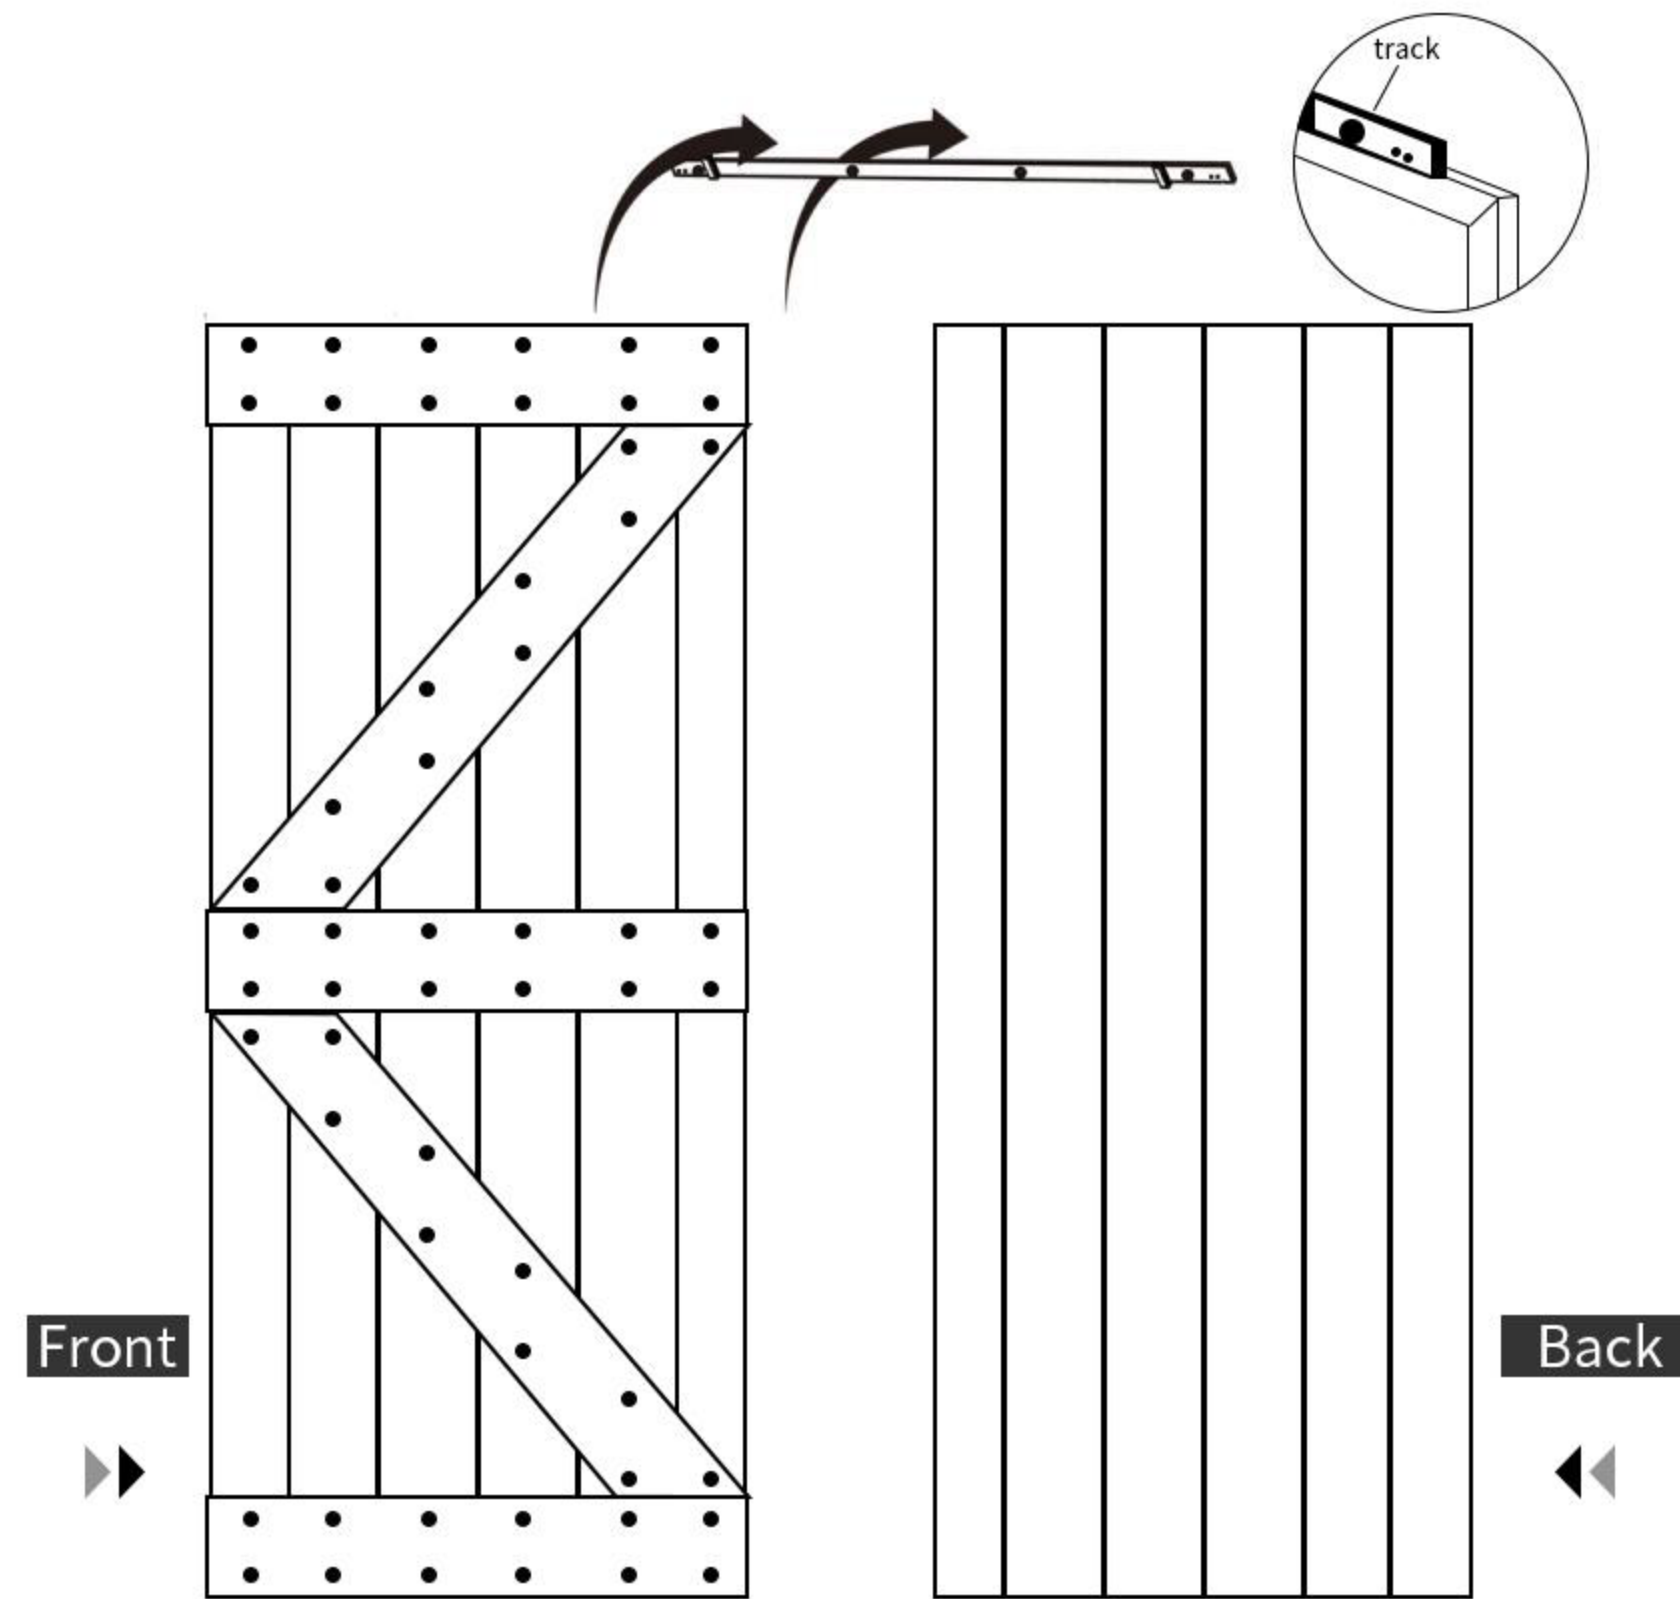


STEP 3: Lock all the screws into the pre-drilled holes.

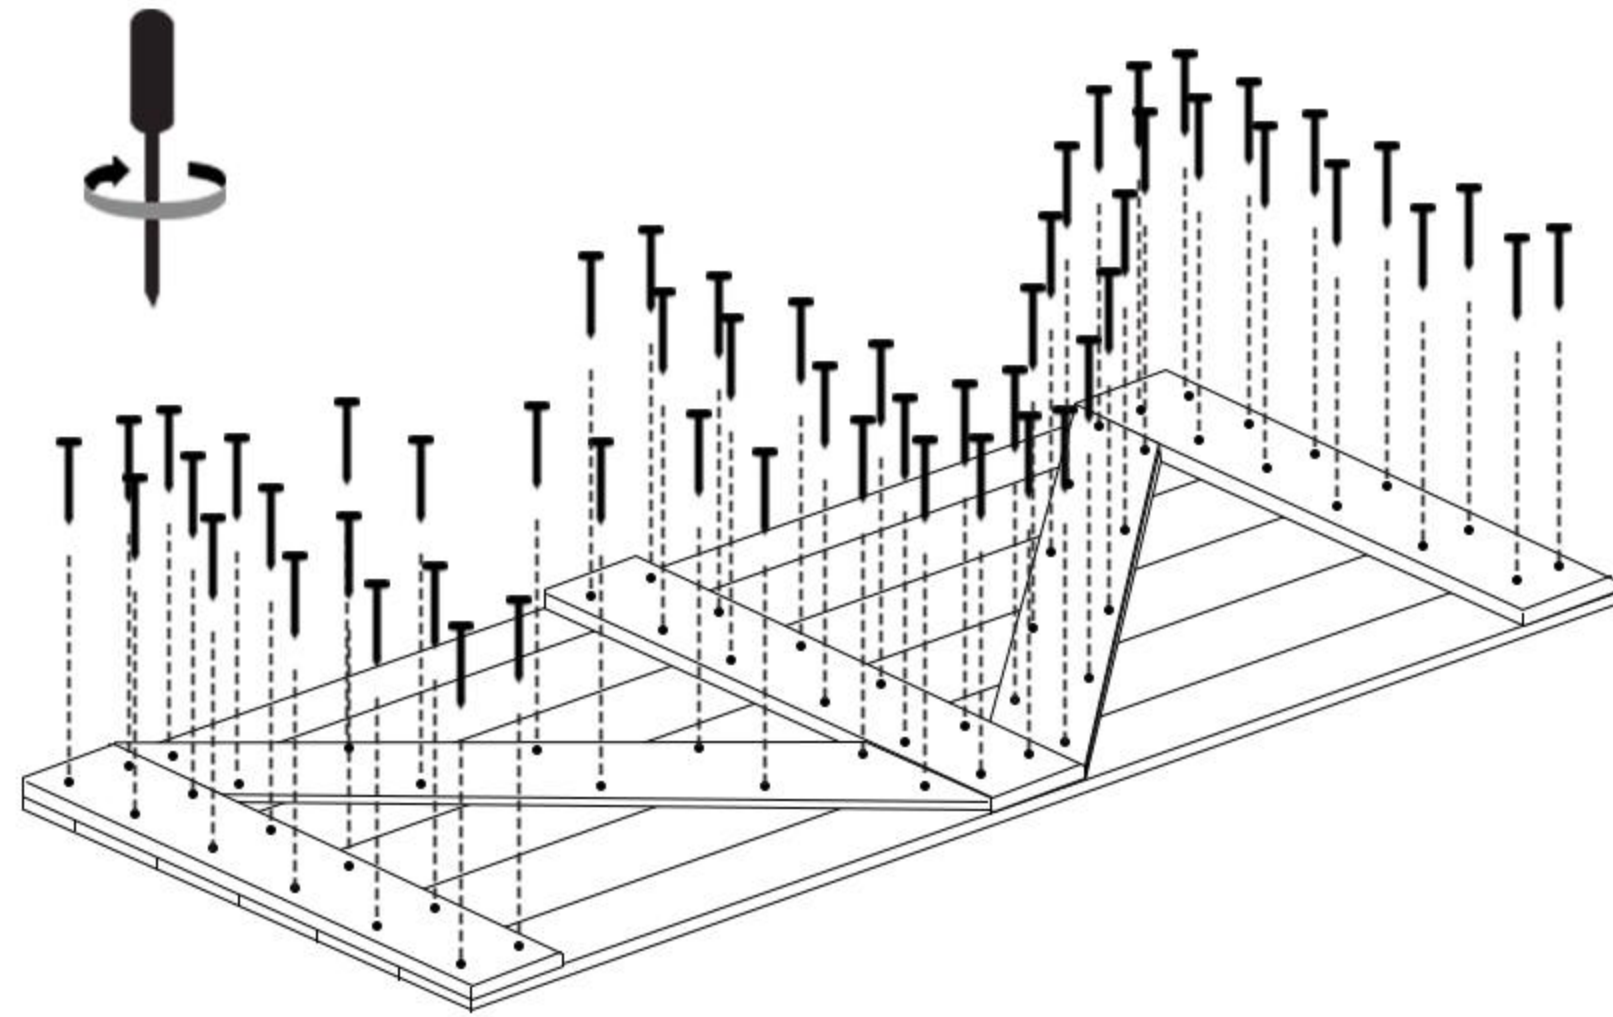

COAST SEQUOIA INC

**K - Series**

**Bi-Fold Sliding Barn Door  
Installation Instruction**

Remarks: The quantity of screw holes and screws will vary depend on the size of the product.

For installation of the sliding hardware kit, please refer to the sliding hardware kit installation instruction included in the package.

### —Return & Refund Policy

If, for any reason, you are not satisfied with a purchase, we invite you to review our policy on returns and refunds. The following terms are applicable for any product(s) that you purchased with us.

You are entitled to return your order within 30 days from the date on which you received the product or on which a third party you have appointed, who is not the carrier, takes possession of the product delivered. The delivery date will be subjected to the information provided by the shipping carrier. In order for the product(s) to be eligible for a return, please ensure the products are in original packaging and were not used or damaged.

If you ordered the product through a marketplace, their return and refund policy takes precedence. Coast Sequoia Inc reserves the right to refuse returns of any merchandise that does not meet the return conditions in our sole discretion.

Website: [www.coastsequoia.com](http://www.coastsequoia.com)

Email: [info@coastsequoia.com](mailto:info@coastsequoia.com)

## PARTS INCLUDED

Description	Side View	Part	12" Qty	15" Qty	18" Qty	21" Qty	24" Qty
Left Side Panel		(A)	1	1	1	1	1
Middle Panel		(B)	0	1	1	2	2
Right Side Panel		(C)	1	1	1	1	1
Top Panel		(D)	1	1	1	1	1
Center Panel		(E)	1	1	1	1	1
Bottom Panel		(F)	1	1	1	1	1
Cross Panel		(G)	2	2	2	2	2
Screw(Bag)		(H)	1	1	1	1	1


## PRE-INSTALLATION

### Product Cautions:

1. Avoid Direct Sunlight
2. Avoid Moisture
3. Avoid Rain



### Tools Required

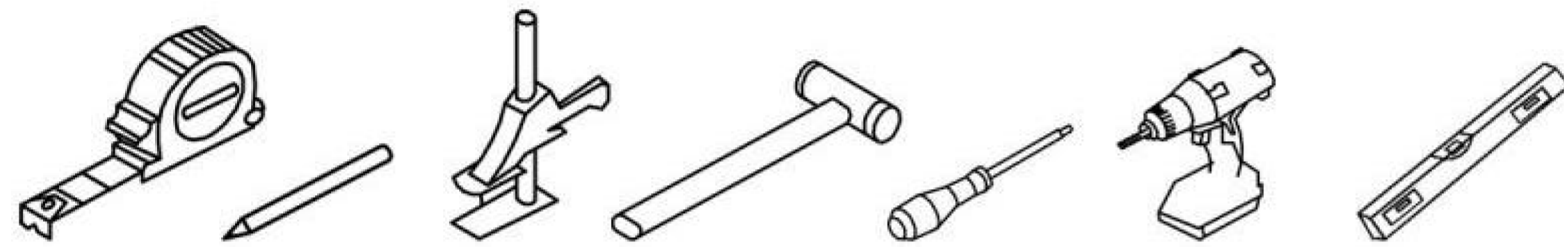


Assembly with a partner is recommended.  
Wear working gloves.

## INSTALLATION

### STEP 1:

Combine lower Panel A,B,and C.  
Make sure all panels with 45 degree incline side corners are facing upward.

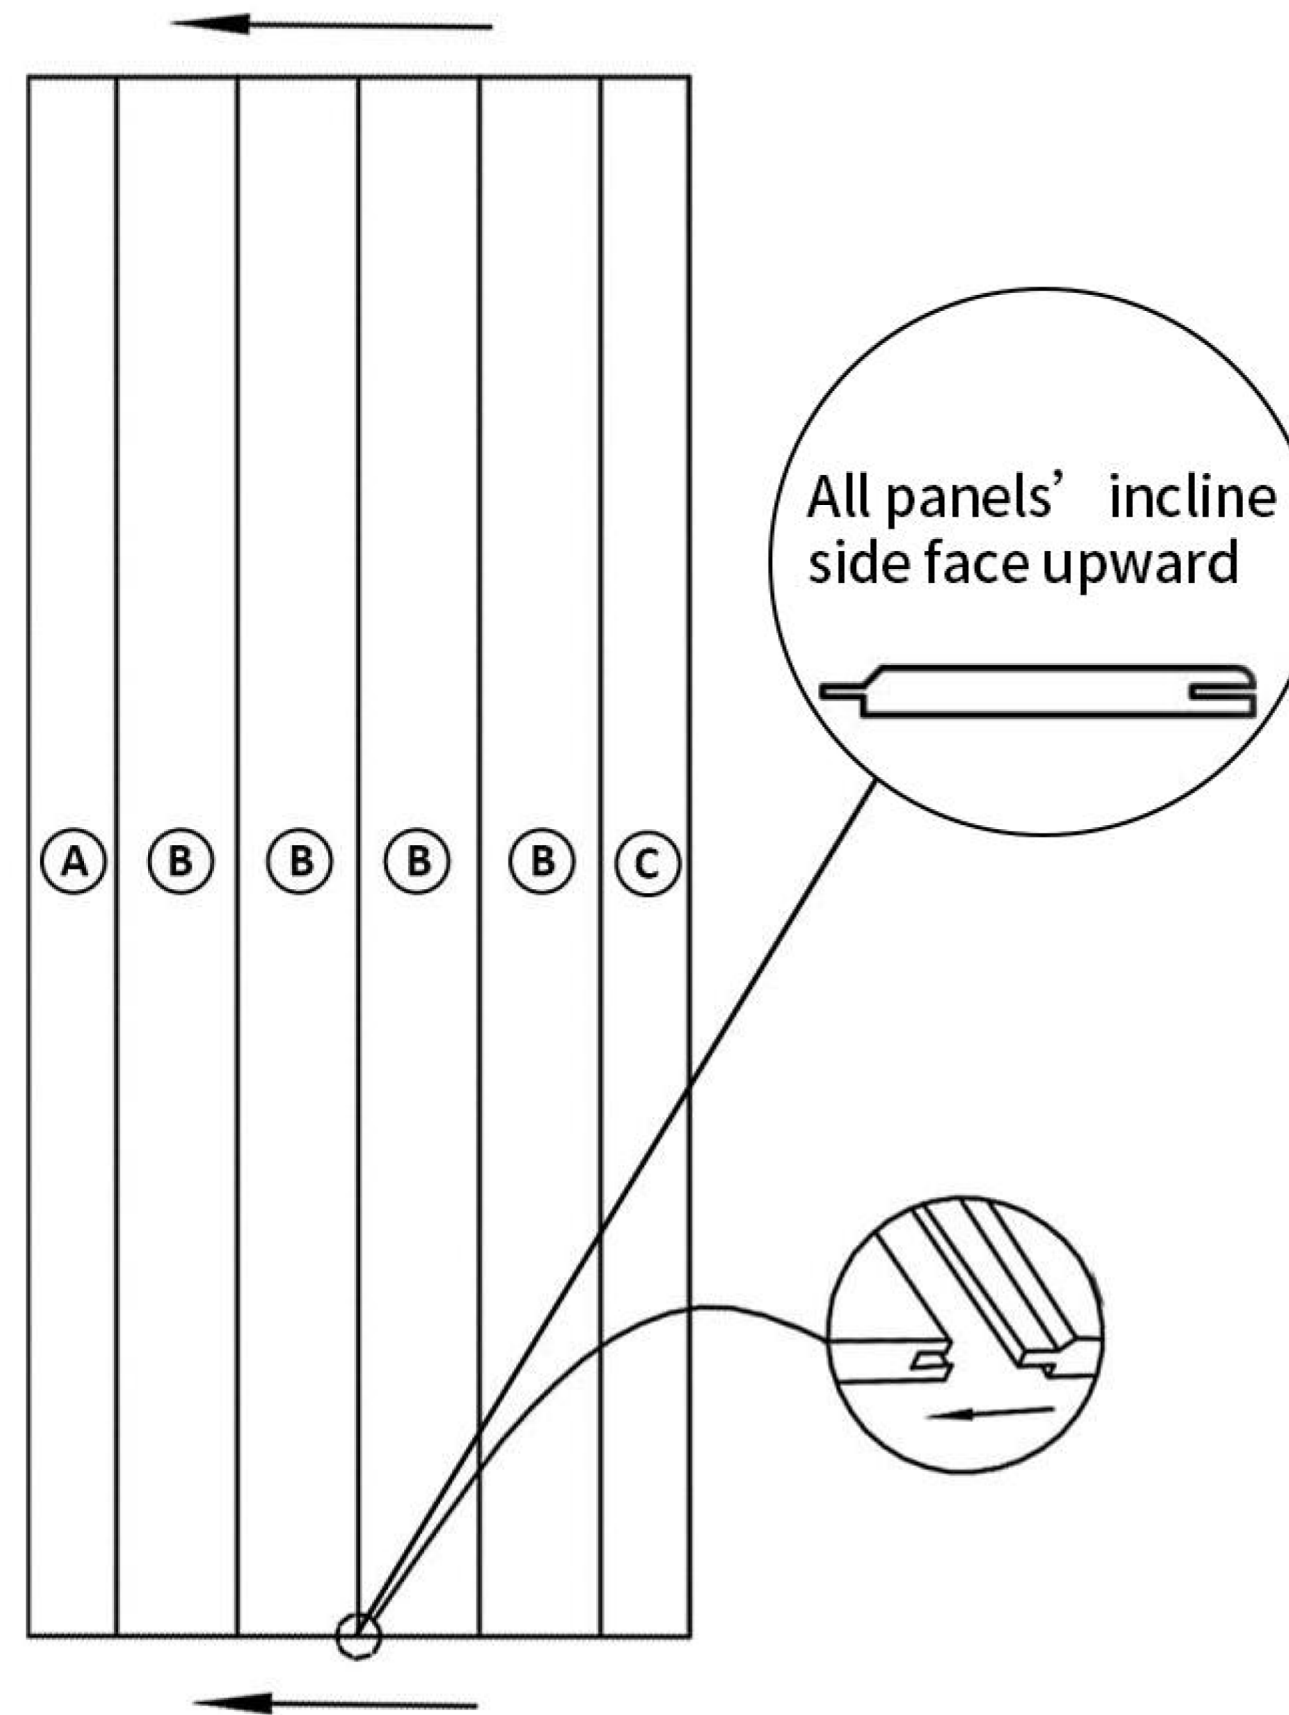

### STEP 2:

Adjust upper panel D,E,F,G.  
Panels D,E&F are 8" width.  
Cross panels G are 6" width.  
Bottom panel F has inner groove for floor guide installation.

