


## Bed Frame with Storage Headboard & Charging Station Assembly Instructions

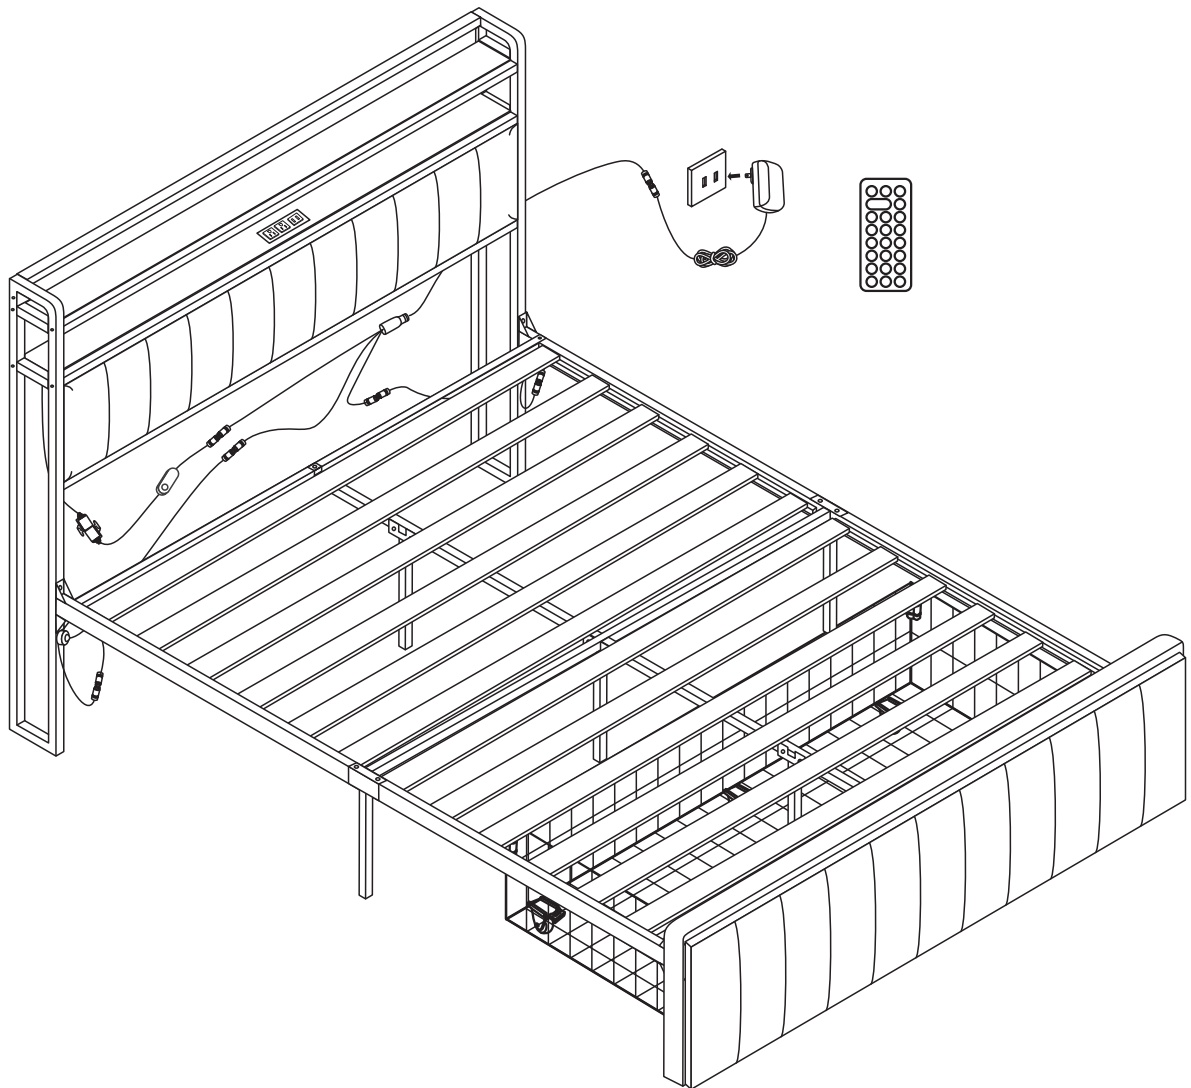


### **Dear Customers,**

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADEINCHINA

# ASSEMBLY INSTRUCTIONS

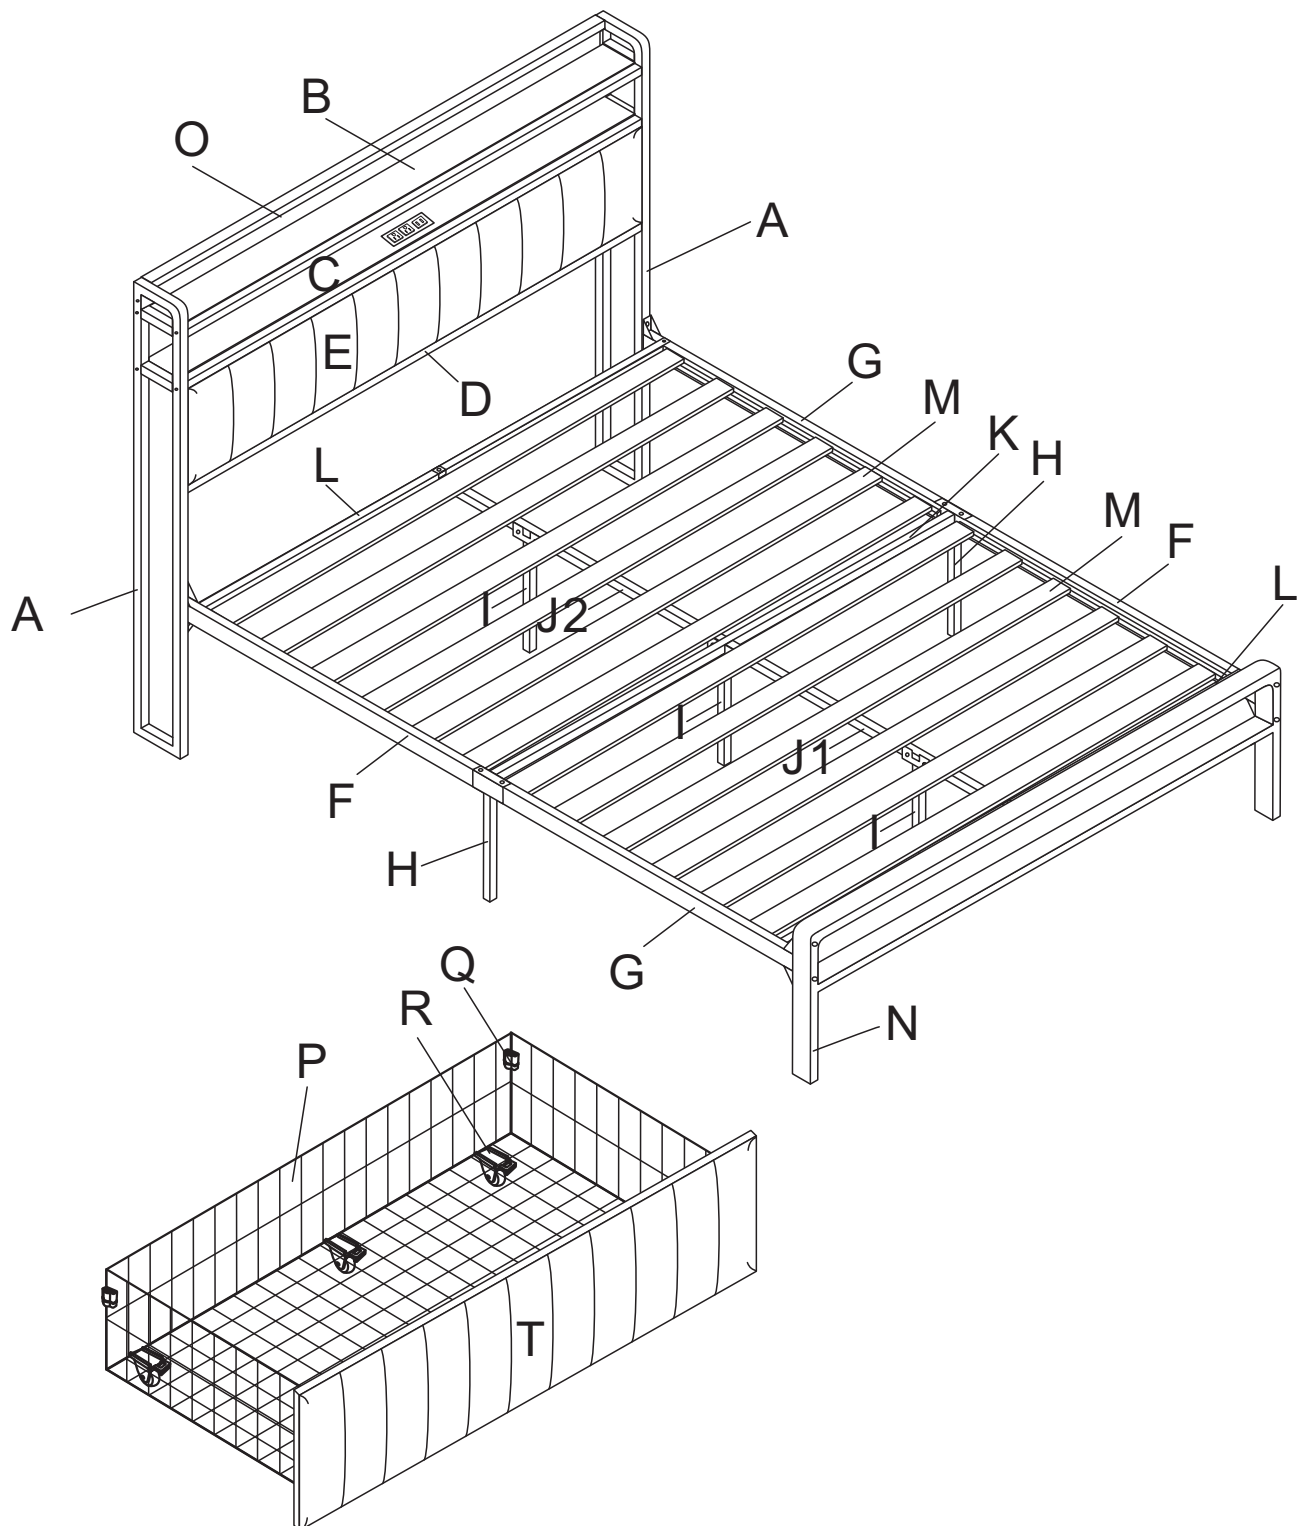


Notice: Do not tighten the screws too tightly at the beginning of the assembly. After each hole position is matched well, with gently force to screw, if there is no problem, then tighten all the screws.

## PARTSLIST

A x2PCS	B x1PC	C x1PC	D x1PC	E x1PC	
F x2PCS	G x2PCS	H x2PCS	I x3PCS	J1 x1PC	
J2 x1PC	K x1PC	L x2PCS	M x2PCS	N x1PC	
O x1PC	P x1PC	Q x2PCS	R x6PCS	S x2PCS	
T x1PC	U x2PCS	V x1PC	W x2PCS	X x1PC	
Y x1PC	Z x1PC				
1 x18PCS	2 x5PCS	3 x16PCS	4 x14PCS	5 x1PC	
M8x40mm	M8x55mm	M8x20mm	M6x13mm		

# ASSEMBLY INSTRUCTIONS

1

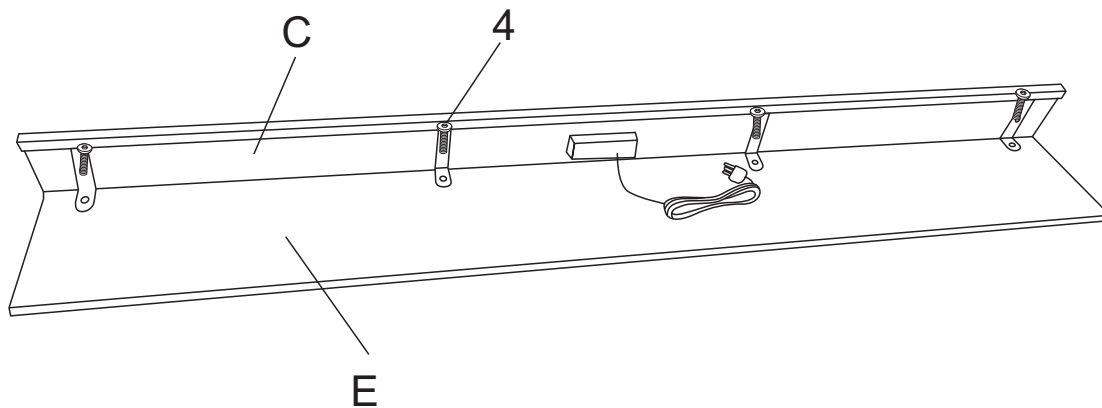


4

  
M6x13mm

4PCS

2

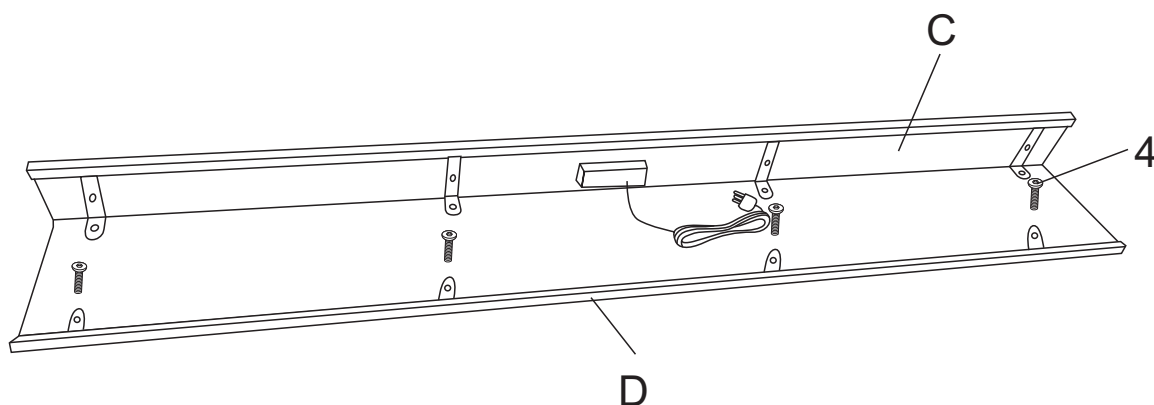


4

  
M6x13mm

4PCS

# ASSEMBLY INSTRUCTIONS

3

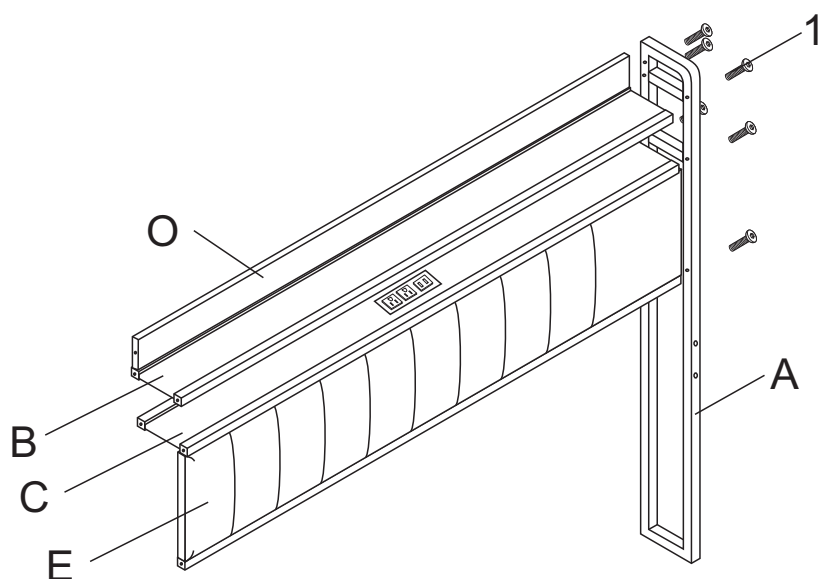


1

M8x40mm

6PCS


4

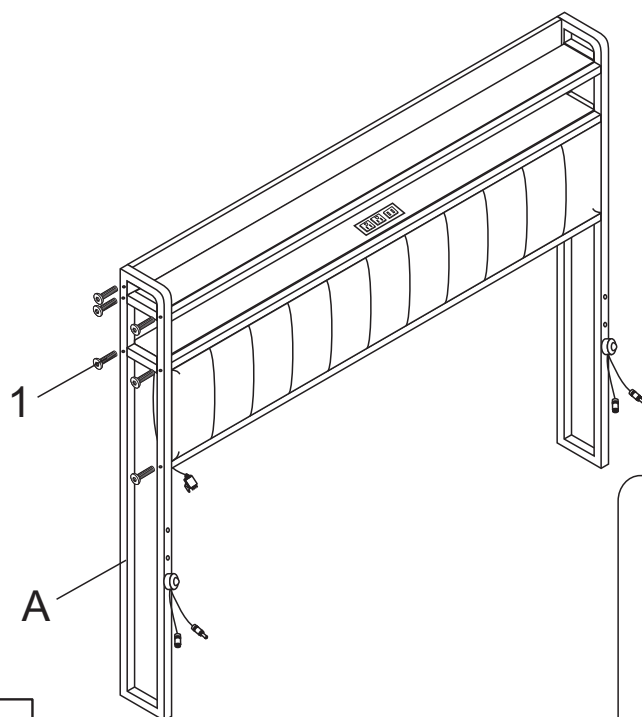

1


M8x40mm

6PCS

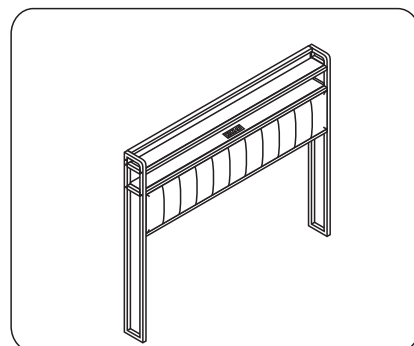

# ASSEMBLY INSTRUCTIONS

5

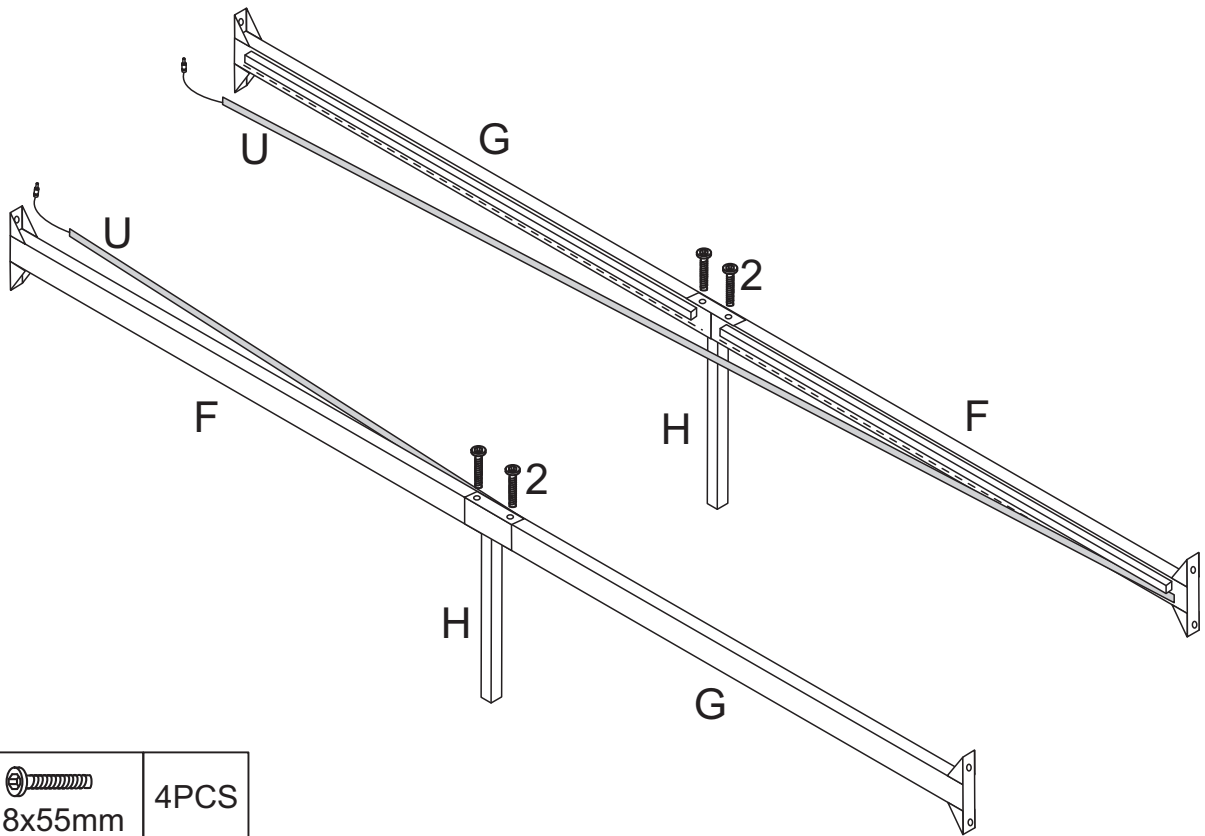


2

M8x55mm

4PCS

6

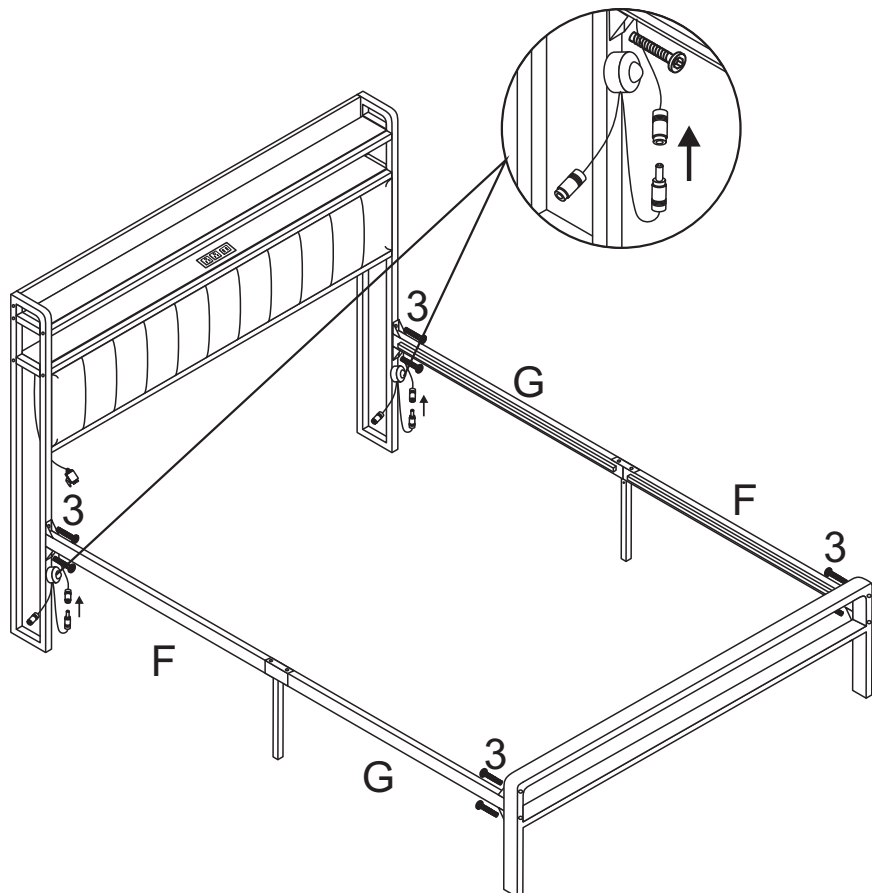


3

M8x20mm

8PCS

# ASSEMBLY INSTRUCTIONS

7

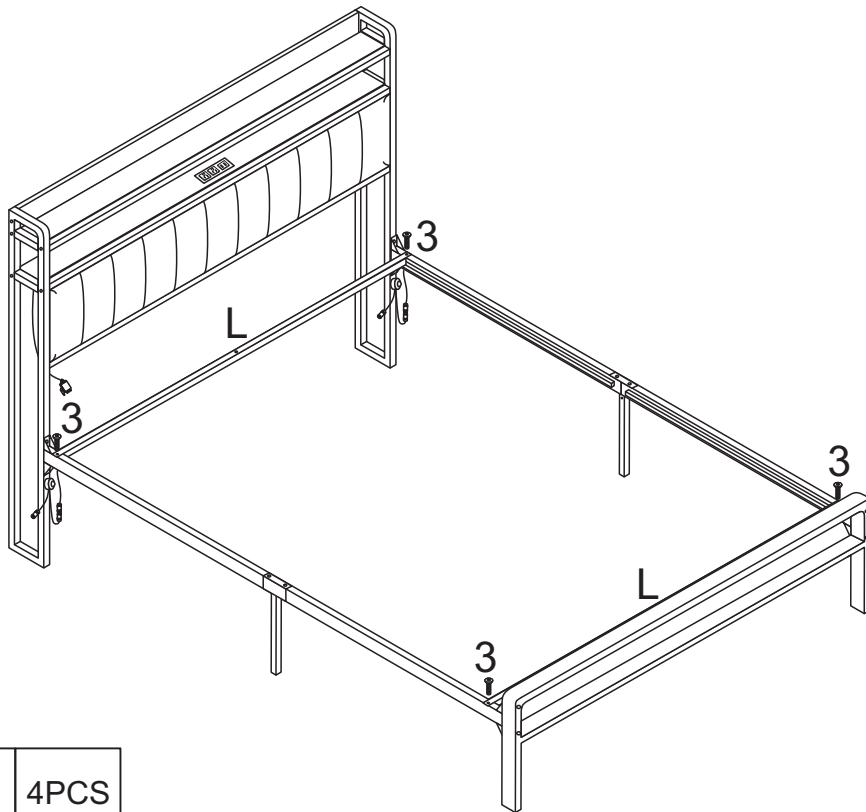


3

M8x20mm

4PCS

8

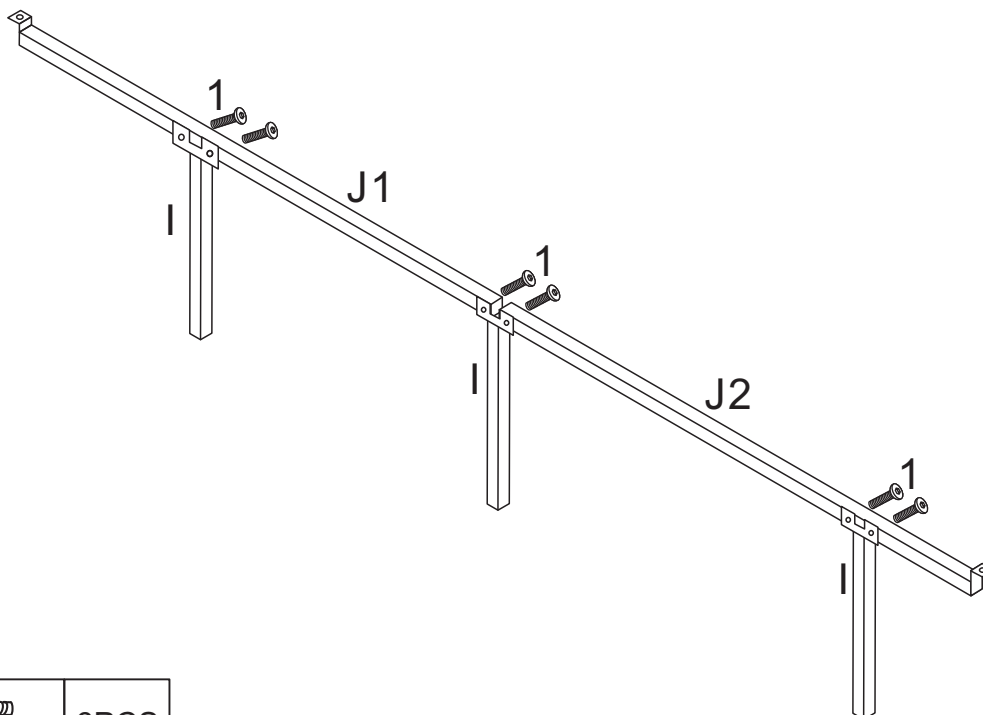


1



M8x40mm

6PCS


# ASSEMBLY INSTRUCTIONS

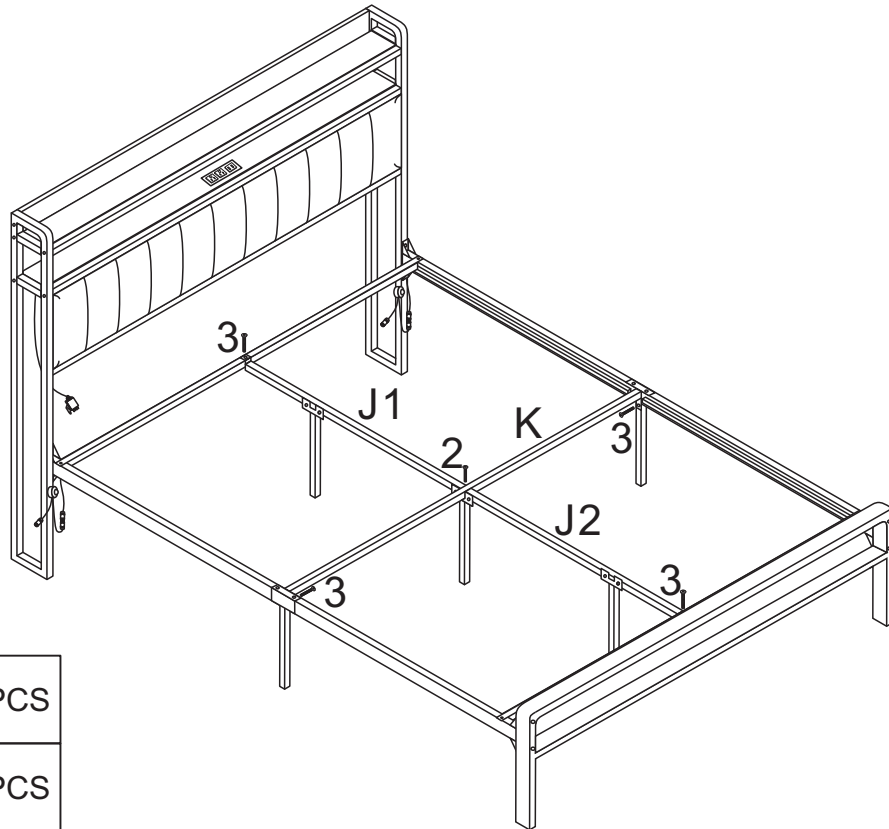9




3	 M8x20mm	4PCS
2	 M8x55mm	1PCS

10

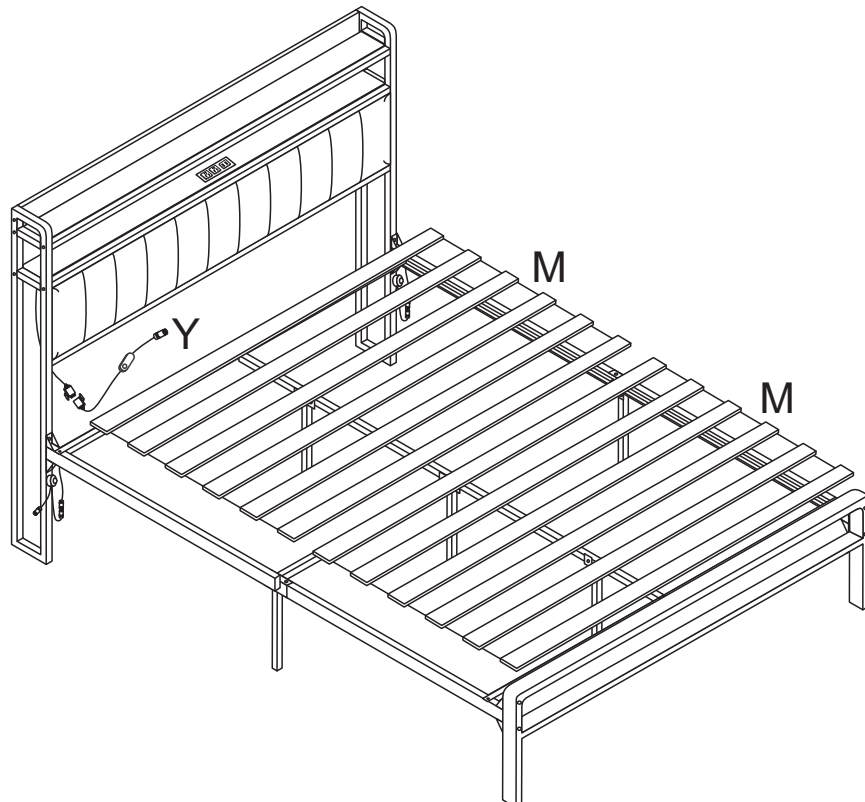




11

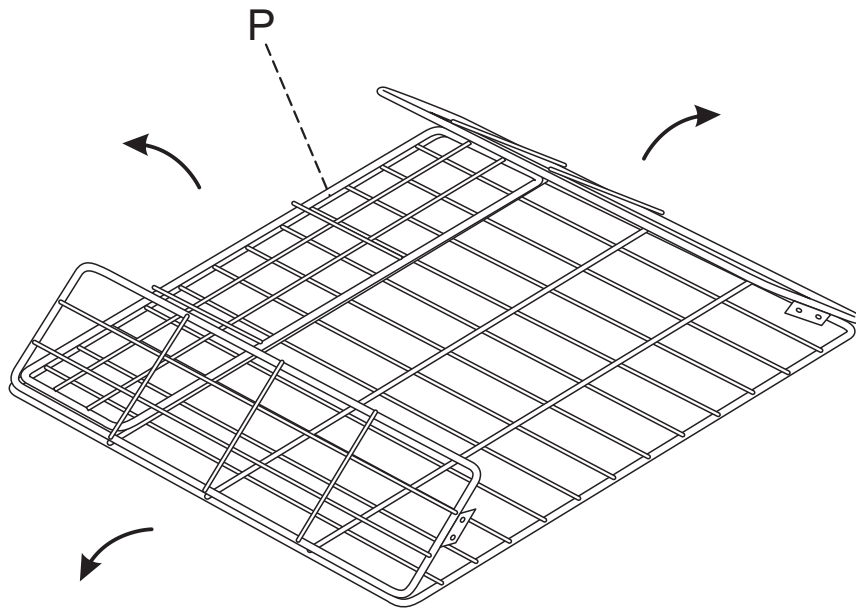

12

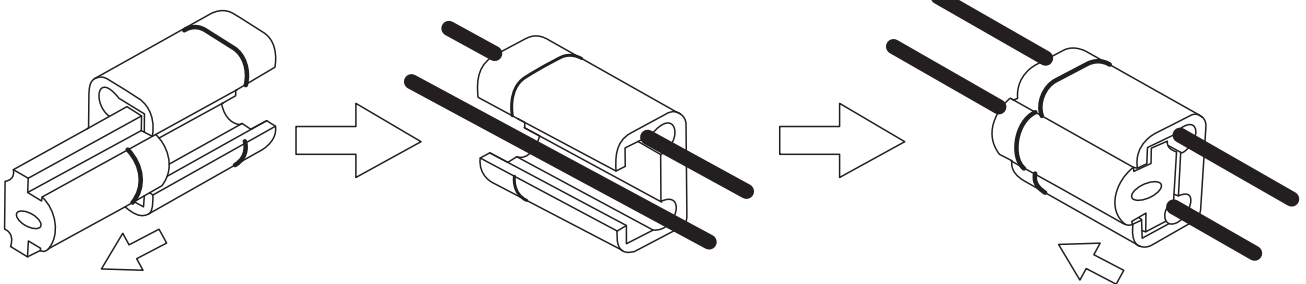


You can pull the buckle out by following the direction indicated by the arrow


Place round iron tube as shown for better drawer assembly

This is the only direction that can be locked.

## 13

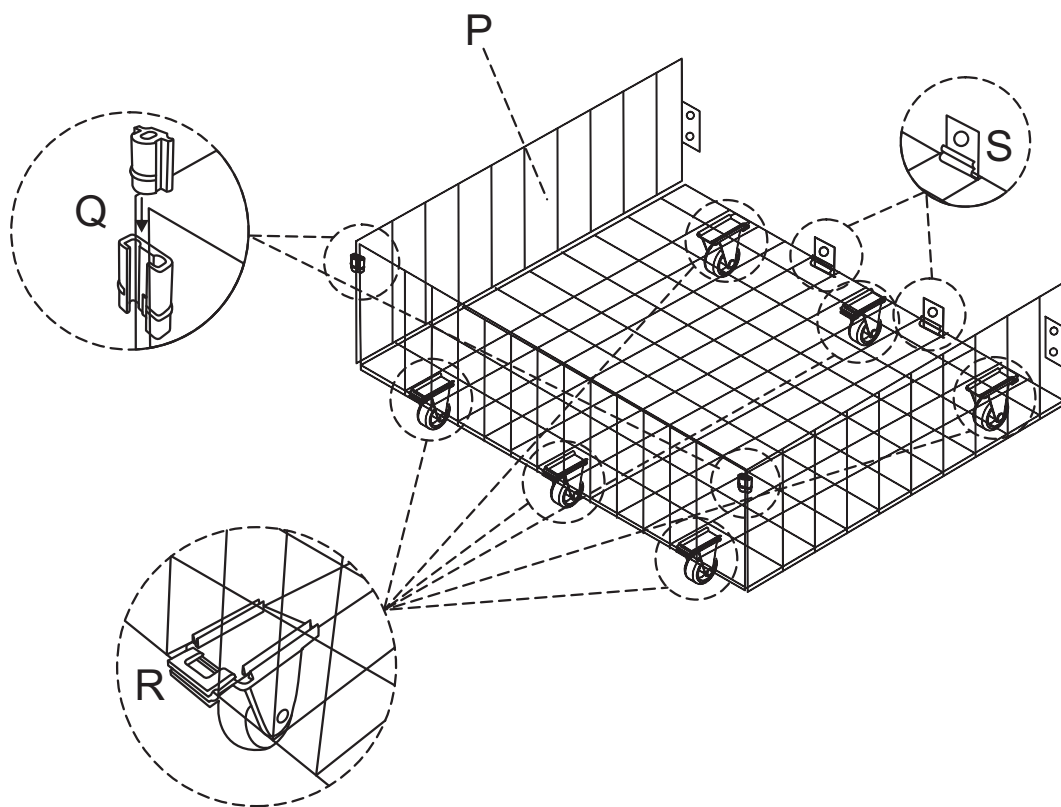

## 14

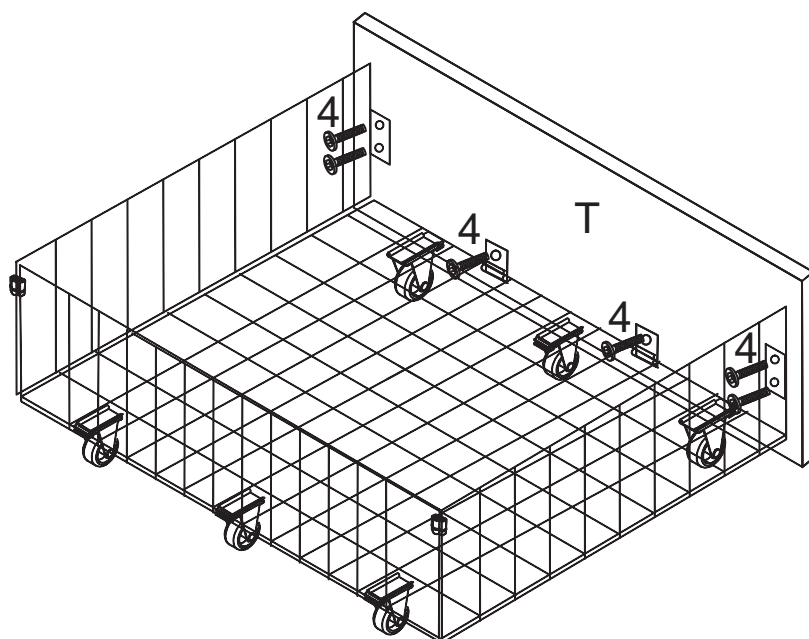


4

  
M6x13

6PCS

15

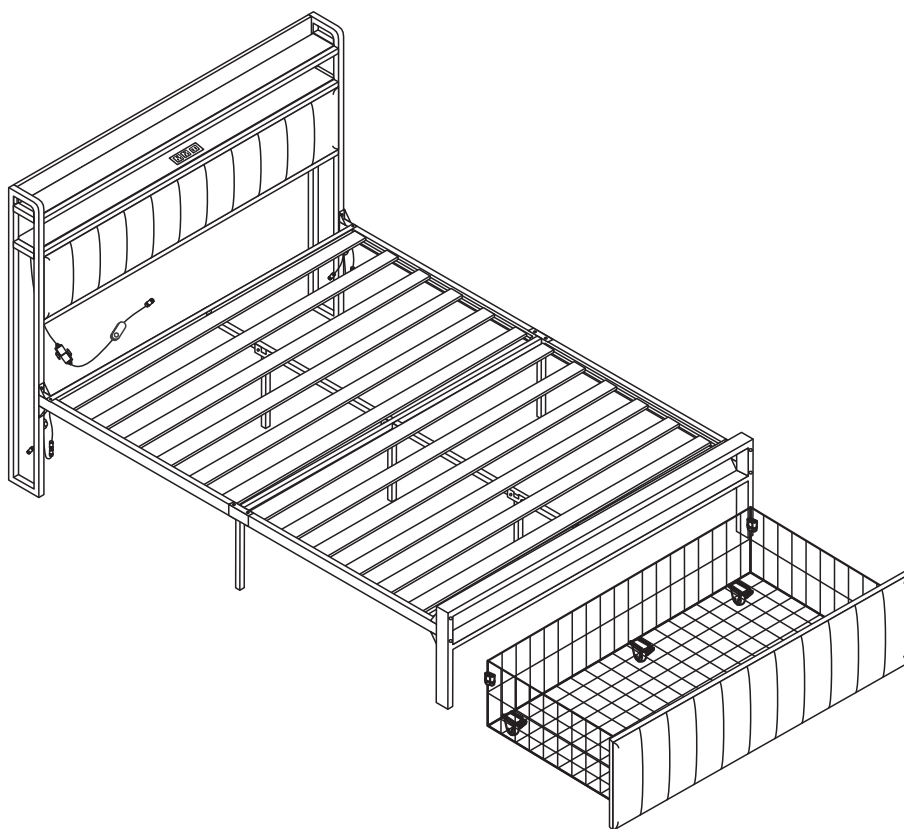

16

