

COMPUTER DESK

OPERATING INSTRUCTIONS



WARNING

1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **Intended for residential use only**


COMPUTER DESK

ASSEMBLY INSTRUCTIONS


IMPORTANT NOTE:
1. Use hand tools only for assembly as power tools may cause damage
2. Carefully remove any staples used for packaging.

PART	QTY
A. Glass Top	1
B. Keyboard Glass	1
C. Left Side Frame	1
D. Right Side Frame	1
E. Keyboard Frame	1
F. Bottom Panel	1
G. Back Support	2
H. Front Cross Bar	1
I. Rear Cross Bar	1
J1. Bolt (11/16")	4 + 1 Extra
J2. Bolt (15/32")	8 + 1 Extra
J3. Bolt (3/8")	4 + 1 Extra
J4. Bolt (5/16")	4 + 1 Extra
K. Glass Support	1
L. Allen Wrench	1

STEP 1

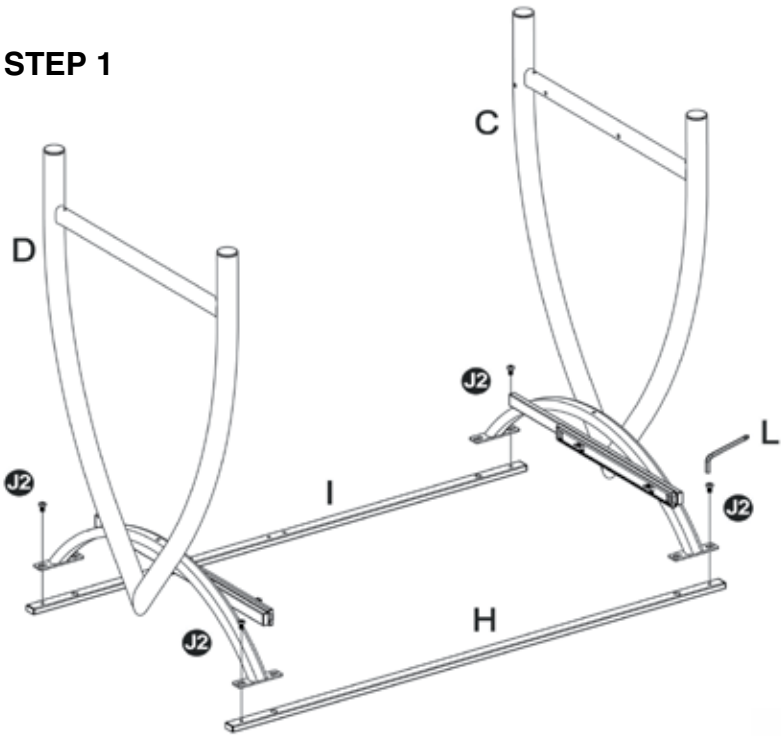

STEP 2

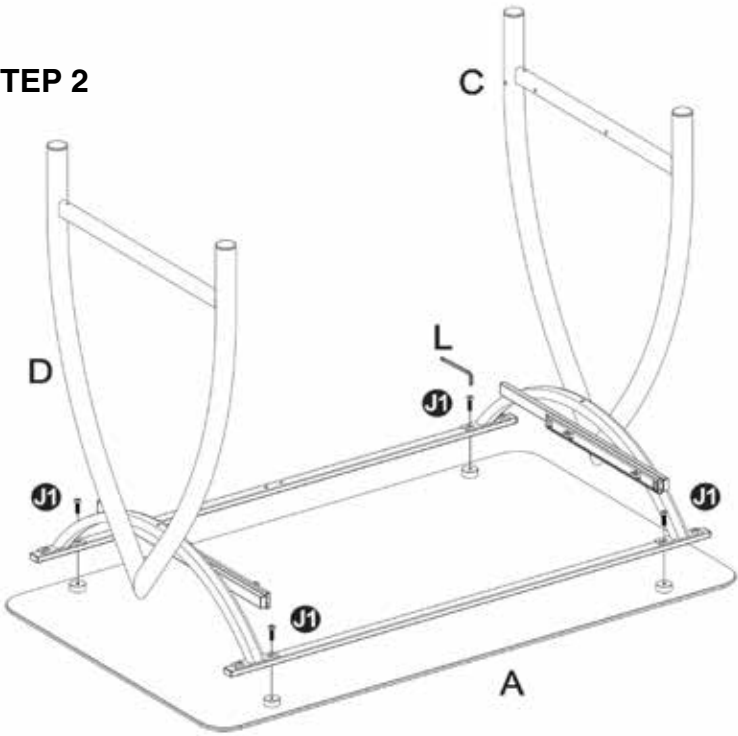


Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.
STEP 1 Attach Left Side Frame (C) and Right Side Frame (D) to Front Cross Support (H) and Rear Cross Support (I) using two Bolts (J2) for each side frame. **DO NOT FULLY TIGHTEN BOLTS (J2).**
STEP 2 Attach side frame assembly to Glass Top (A) using four Bolts (J1). **DO NOT FULLY TIGHTEN BOLTS (J1).**


COMPUTER DESK

ASSEMBLY INSTRUCTIONS


STEP 3

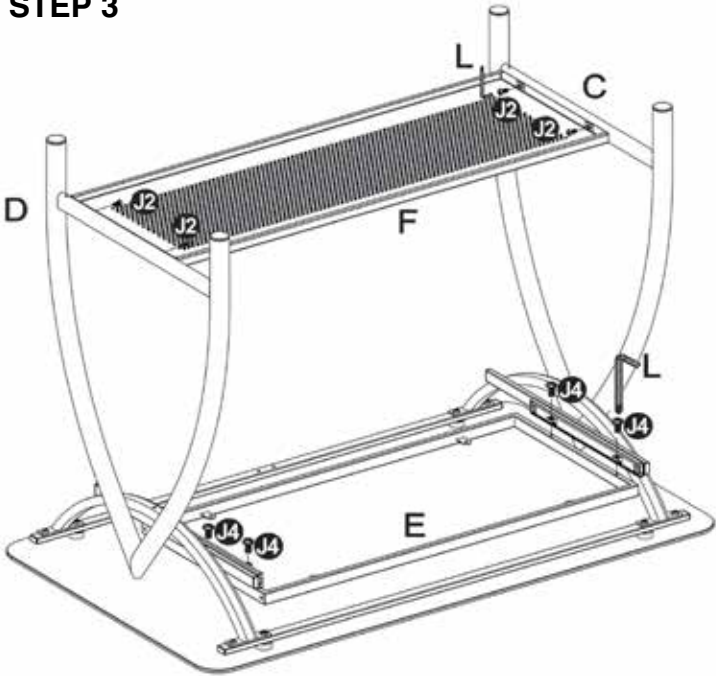


STEP 4

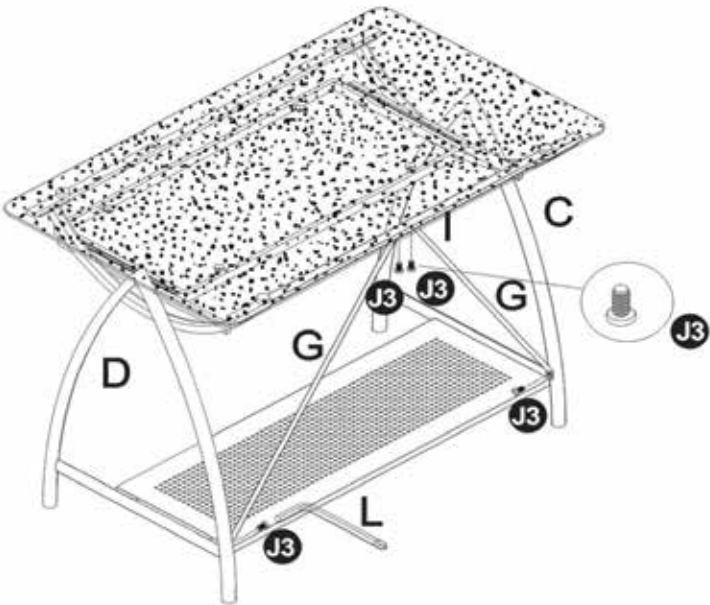

STEP 5

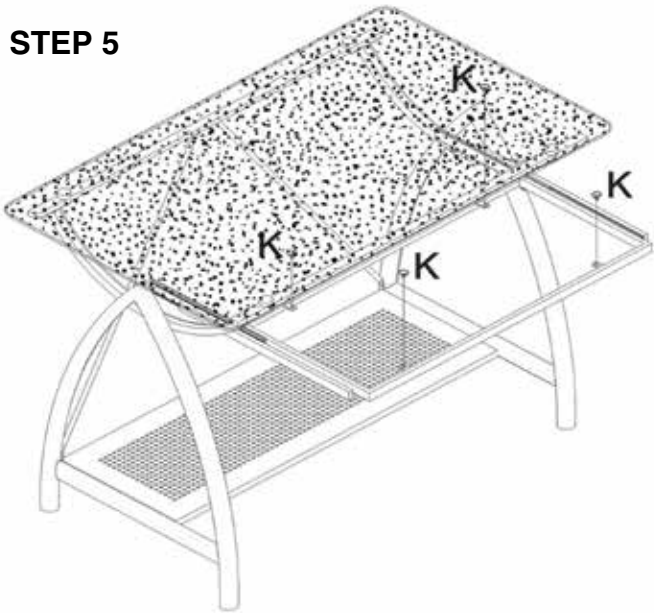

STEP 6

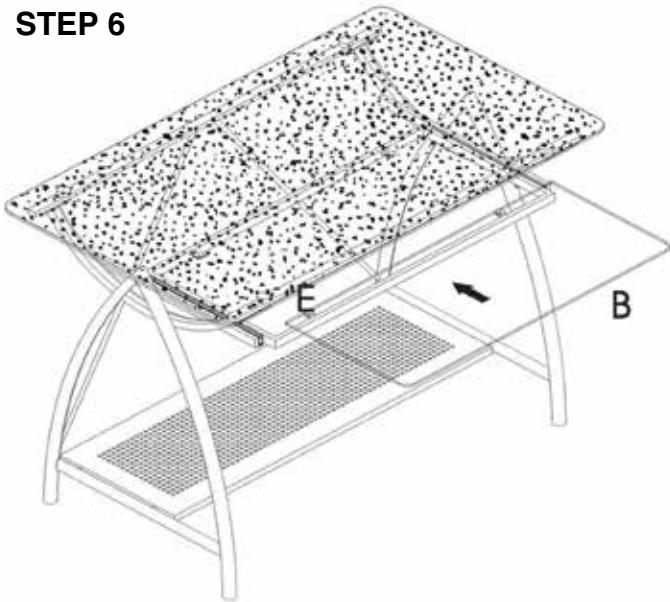

STEP 3 Attach Bottom Panel (F) to Left Side Frame (C) and Right Side Frame (D) using four Bolts (J2). **APPLY FIRM PRESSURE TO ALIGN ASSEMBLY AND FULLY TIGHTEN ALL BOLTS USING ALLEN WRENCH (L).** Attach Keyboard Frame (E) to assembly using four Bolts (J4), **FULLY TIGHTEN ALL BOLTS USING ALLEN WRENCH (L).**
STEP 4 Attach both Back Supports (G) to rear of assembly using four Bolts (J3). **FULLY TIGHTEN ALL BOLTS USING ALLEN WRENCH (L).**
STEP 5 Attach Glass Supports (K) to Keyboard Frame (E).
STEP 6 Carefully place Keyboard Glass (B) onto Keyboard Frame (E).
ATTENTION: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING COMPUTER DESK.