



3 Drawer Dresser for Bedroom

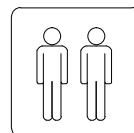















READ AND SAVE THESE INSTRUCTIONS FOR FURNITURE USE

OPERATING INSTRUCTIONS

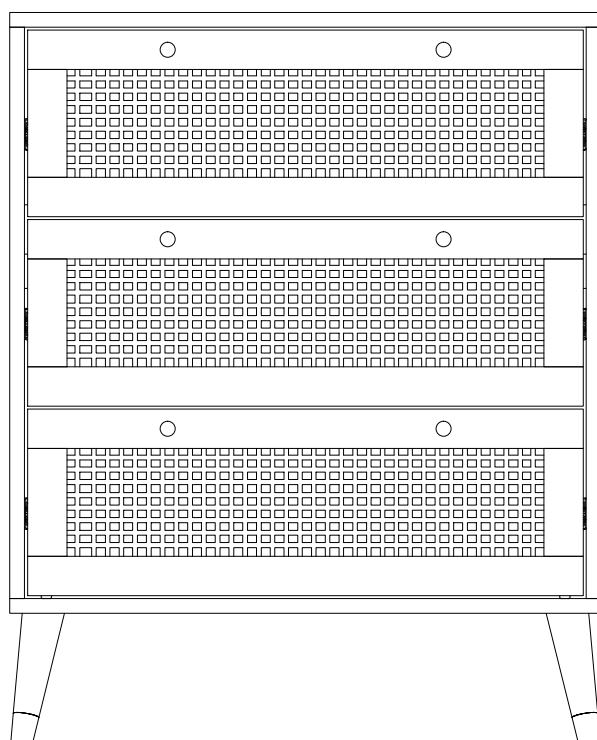







■ Part List

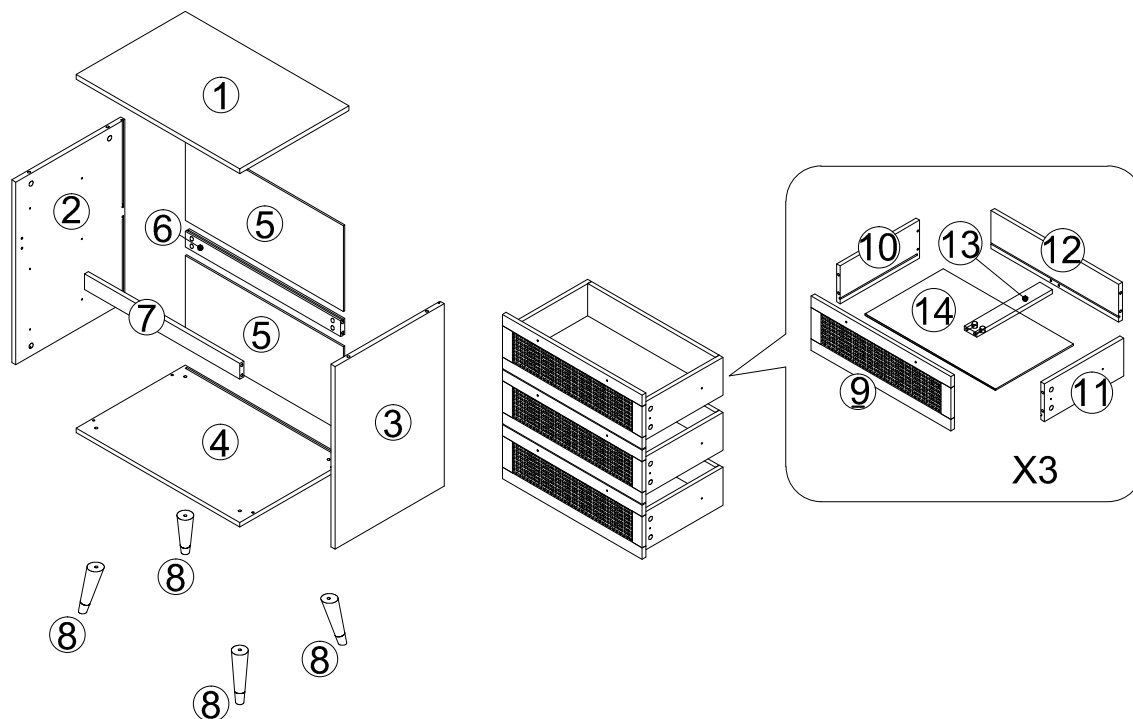

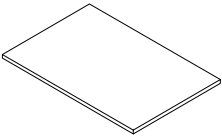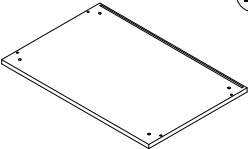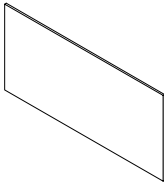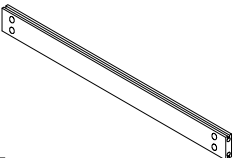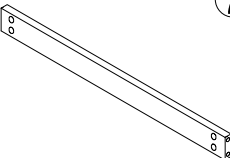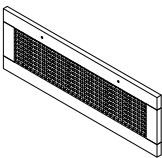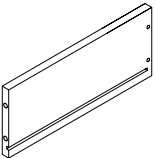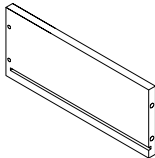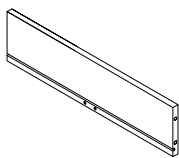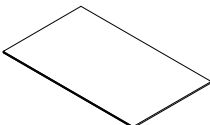 X1	 X1	 X1	 X1
 X2	 X1	 X1	 X4
 X3	 X3	 X3	 X3
 X3	 X3		



PART	QTY.	ITEM	DIAGRAM
A	52	6X40MM	
B	52	Ø12MM	
C	24	Ø3.5X14MM	
D	4	Ø8X30MM	
E	6	Ø3.8X18MM()	
F	6	L12"	
G	2		

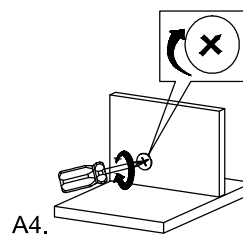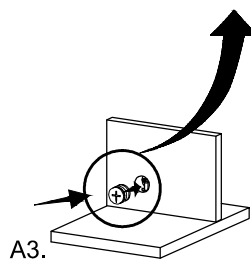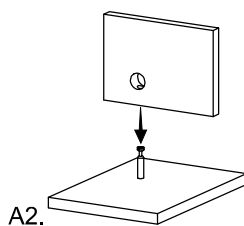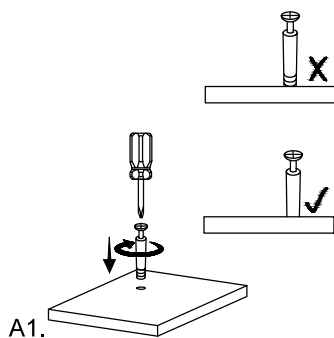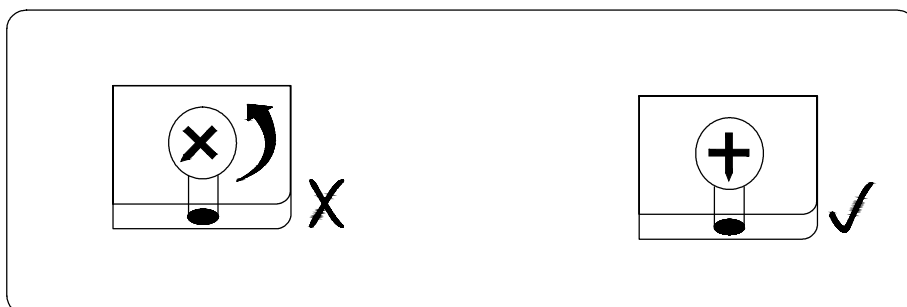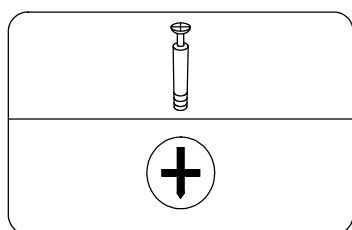

TIPS:


When installing furniture,
Please put some foam on the ground to avoid scratches
or damage to the board.



■ Assembly Instructions

1


F L12"
 X6

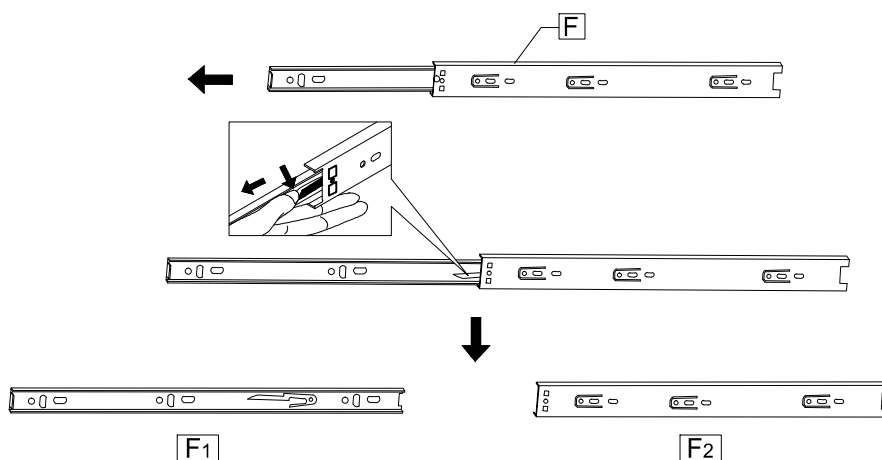

2

C $\phi 3.5 \times 14 \text{MM}$
 X6


F2 L12"
 X3

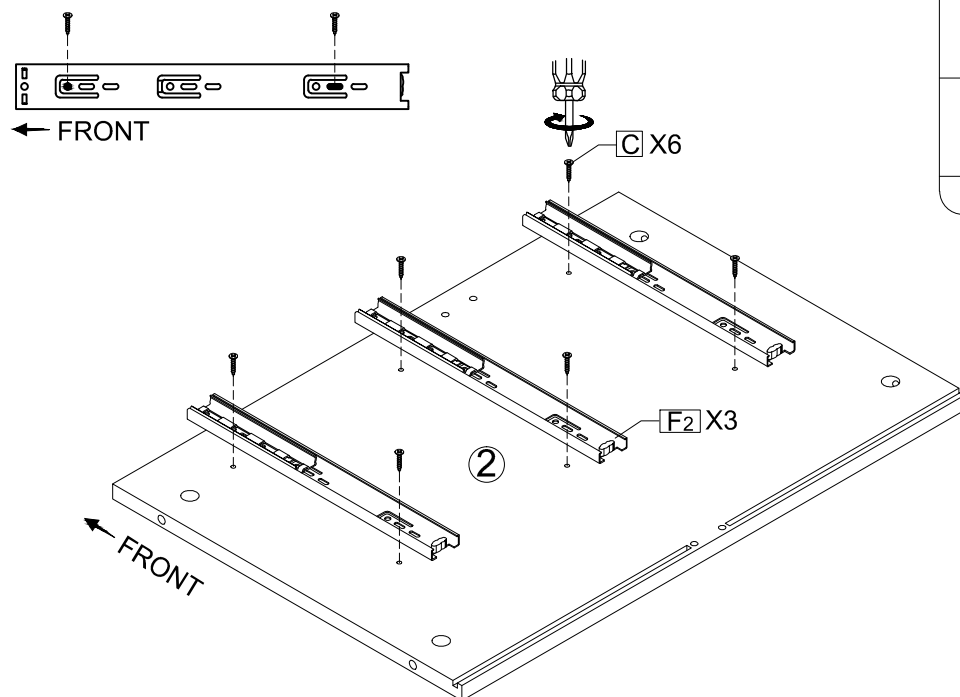




■ Assembly Instructions

3

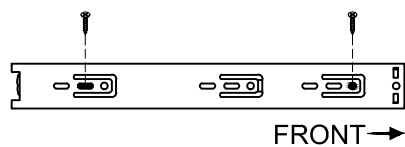

FRONT →

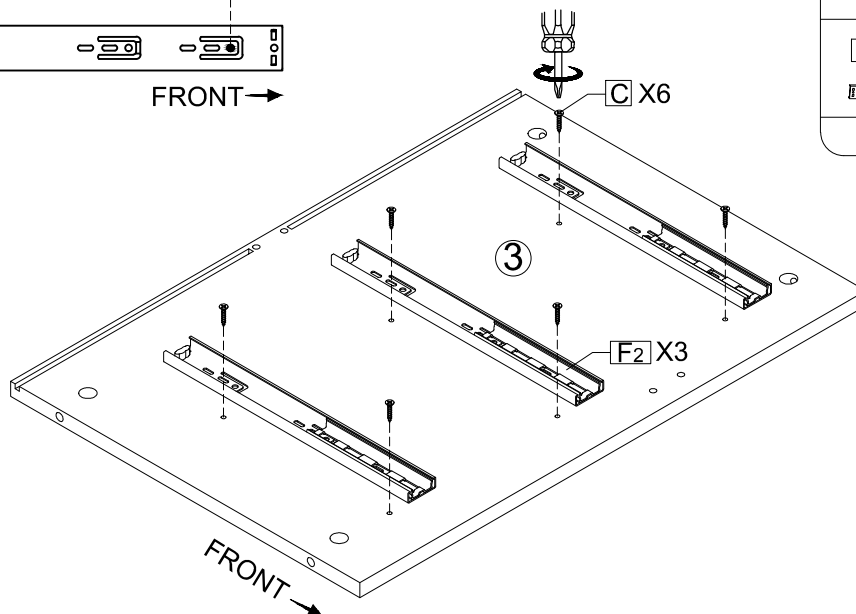

③

F2 X3



FRONT →

C $\phi 3.5 \times 14 \text{MM}$
X6

F2 L12"

X3

4

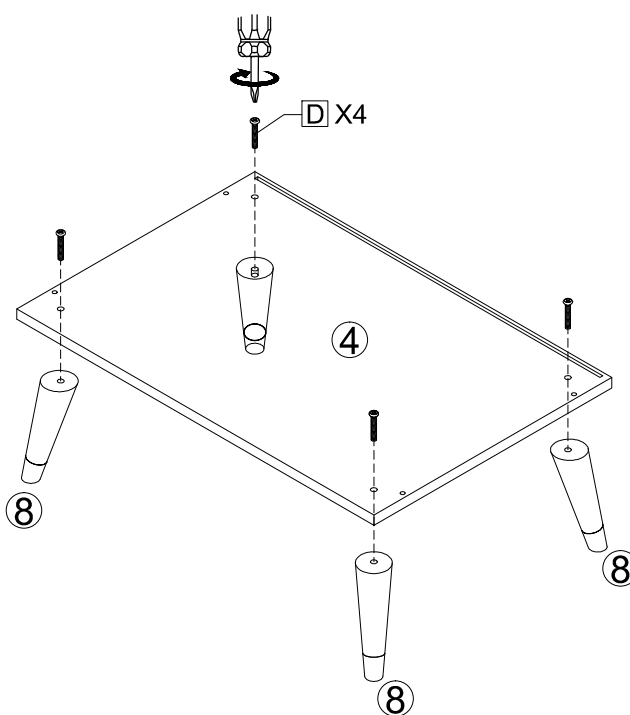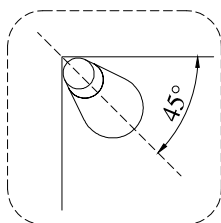

④

⑧

⑧


⑧

D $\phi 8 \times 30 \text{MM}$
X4




■ Assembly Instructions

5

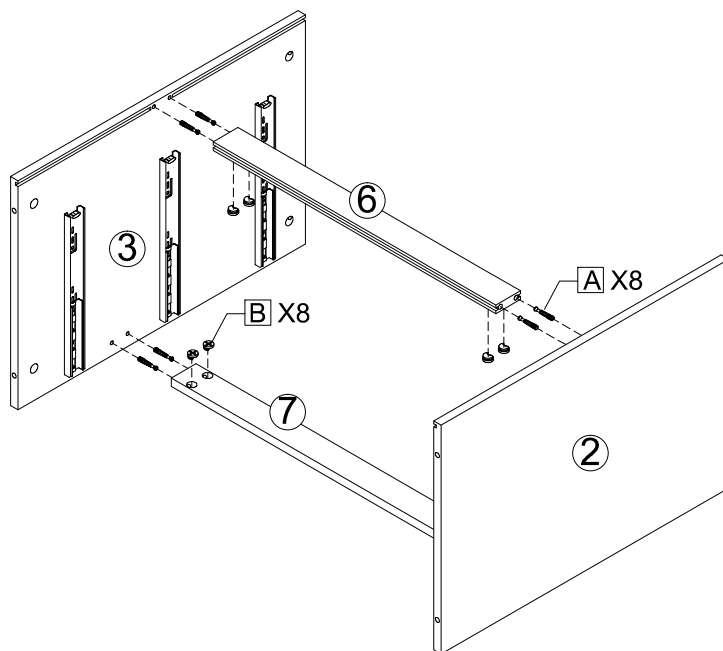



A 6X40MM
 X8

B ϕ 12MM
 X8

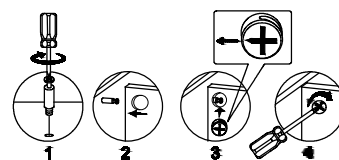

After completing each step, please tighten the screws.


6

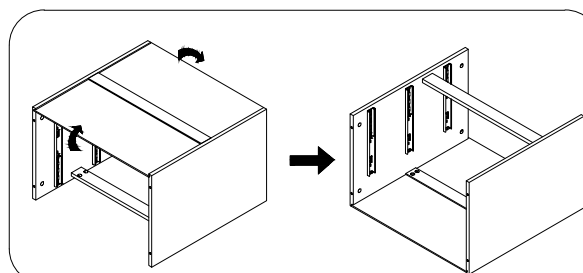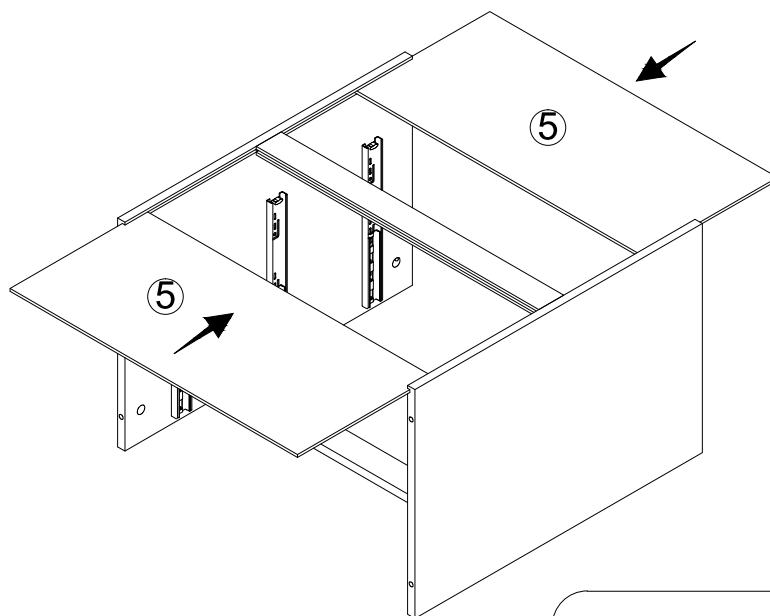




■ Assembly Instructions

7

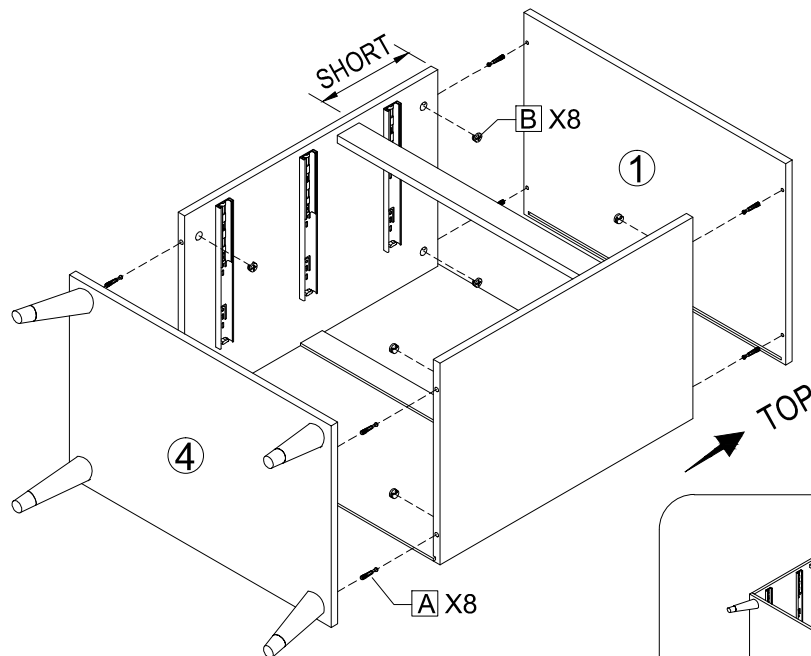


A 6X40MM
X8

B ϕ 12MM
X8

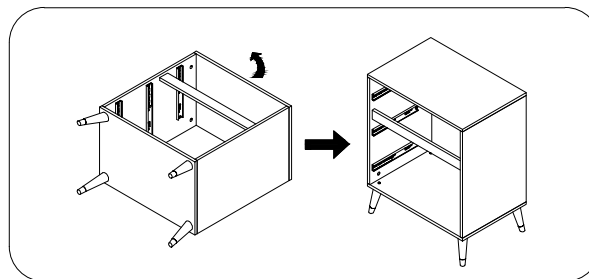


8

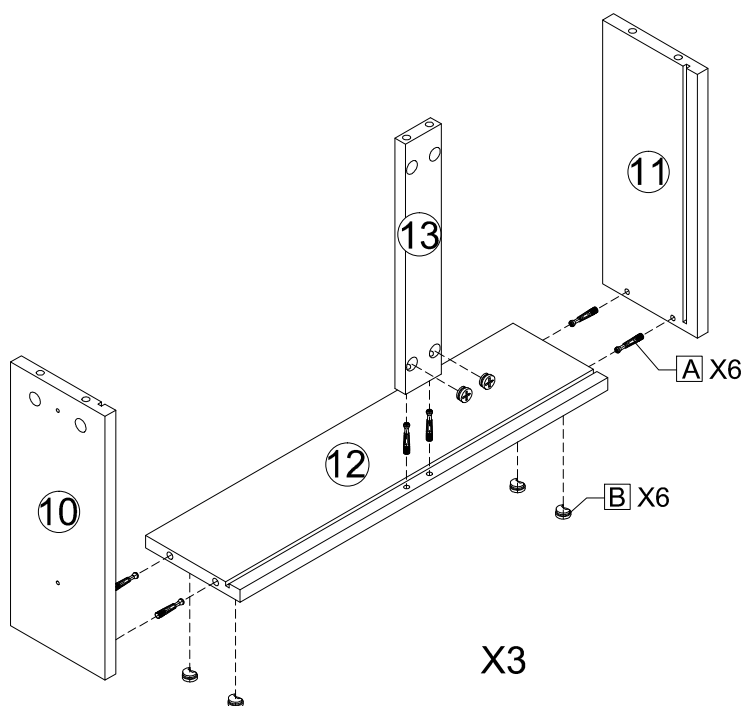

A 6X40MM
X18

B ϕ 12MM
X18

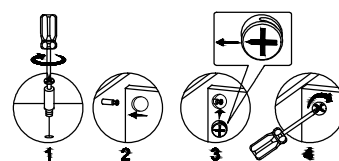


After completing each step, please tighten the screws.




■ Assembly Instructions

9

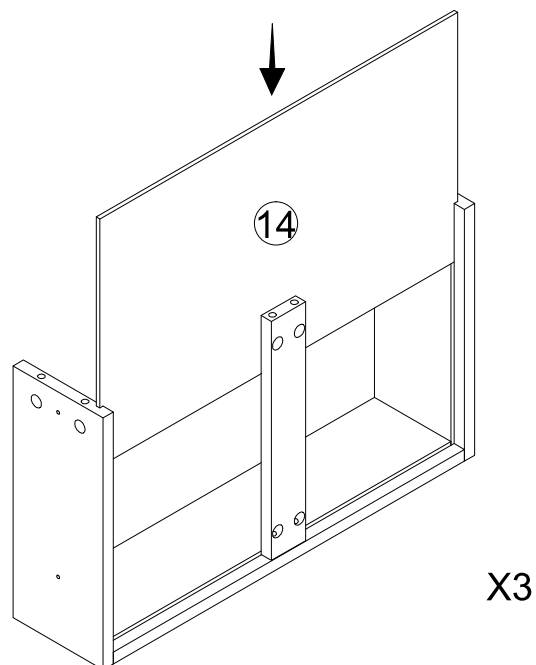

10

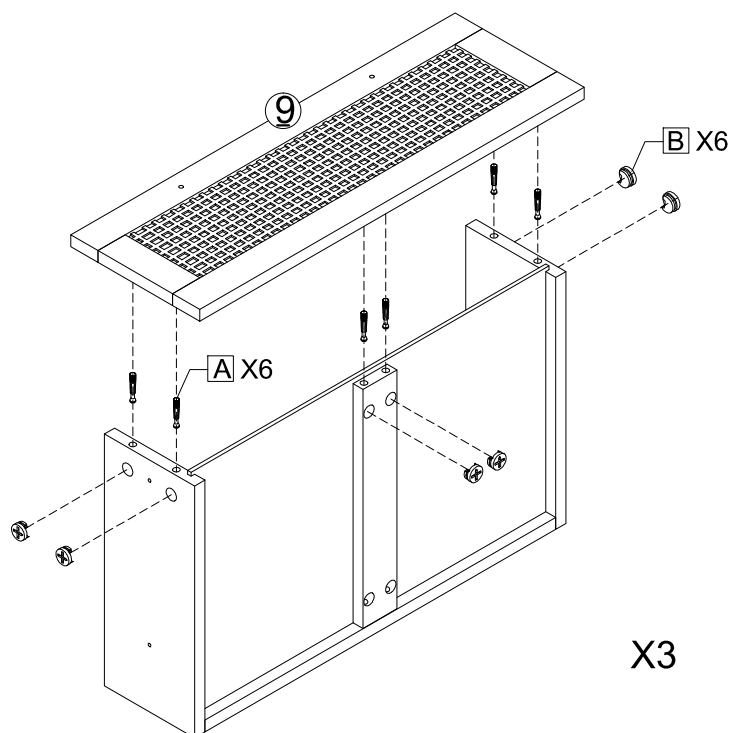

- | | | |
|---|--------|-----|
| A | 6X40MM | |
| | | X18 |
| B | ø12MM | |
| | | X18 |




■ Assembly Instructions

11



← FRONT

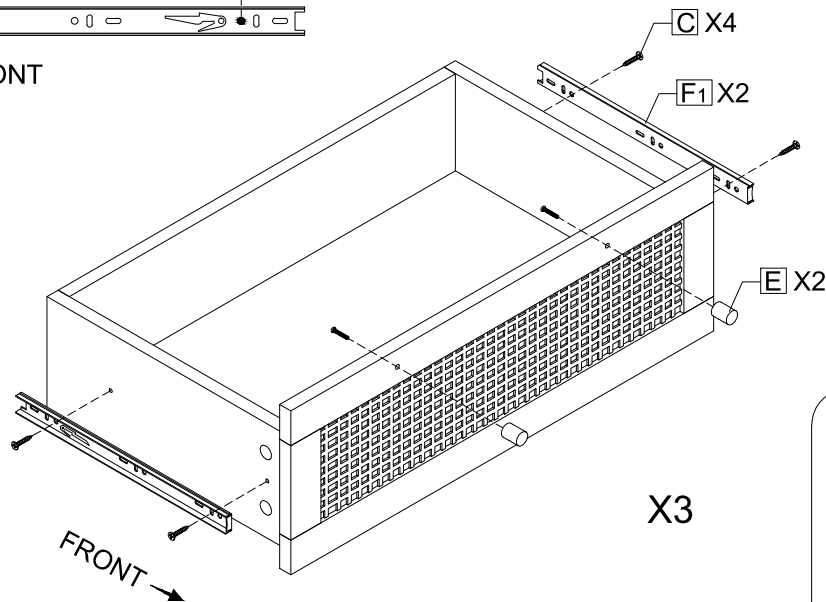

X3

C $\phi 3.5 \times 14 \text{MM}$

X12


E




$\phi 3.8 \times 18 \text{MM}$
X6

F1 L12"

X6

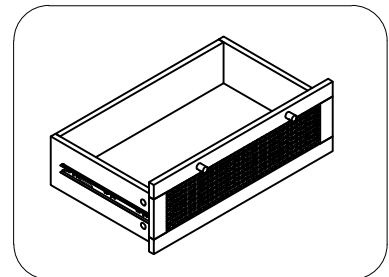

12

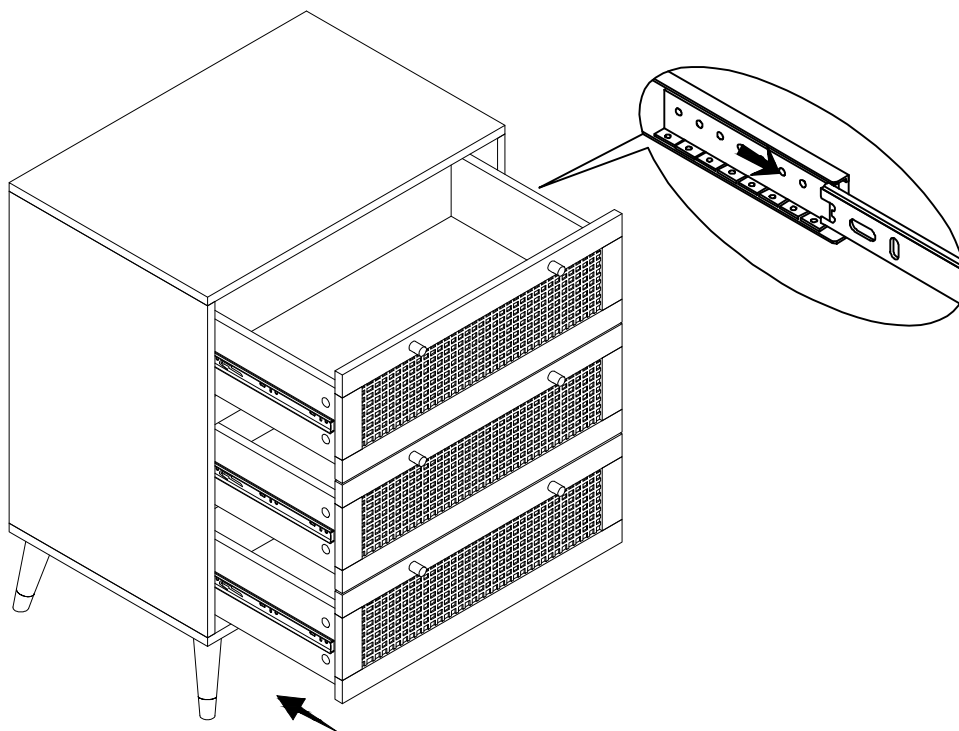



■ Assembly Instructions

13

