



ASSEMBLY INSTRUCTIONS


JR LOFT

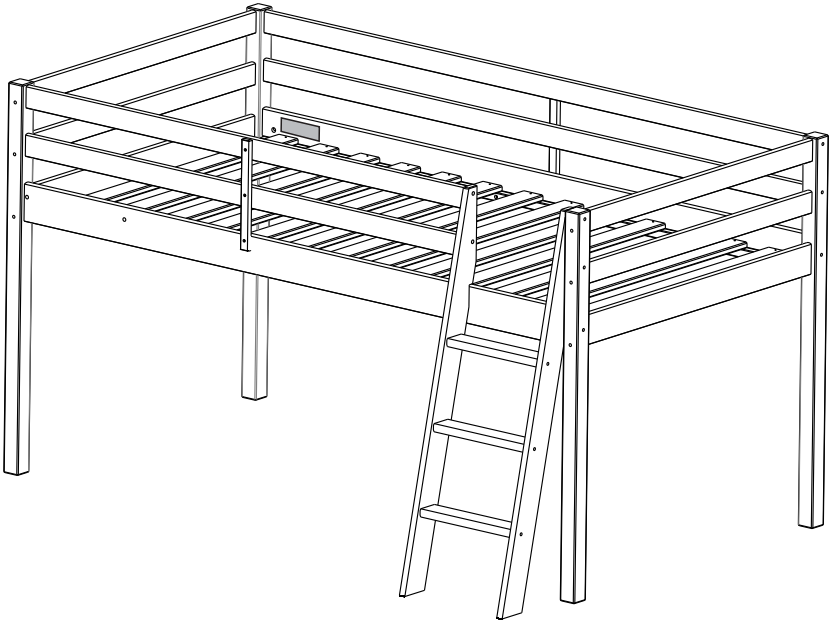

OPTION 1

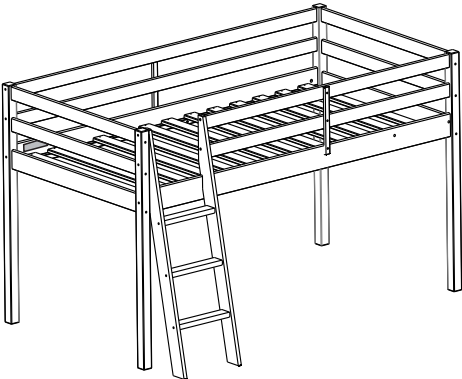


OPTION 2

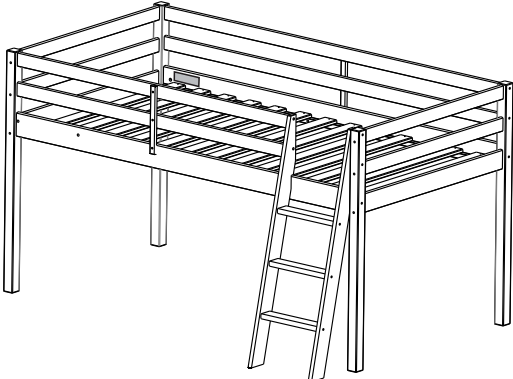


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at our website.

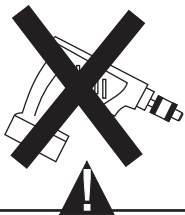


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

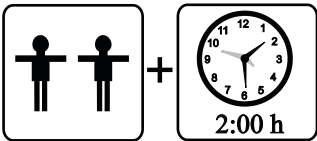

Tools Required






(Not included)



(Not included)

Part List - JR LOFT

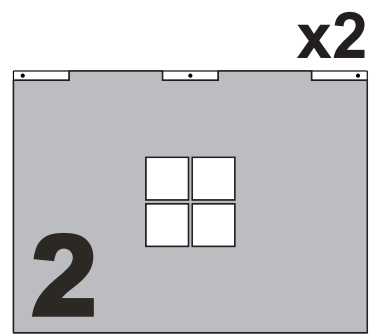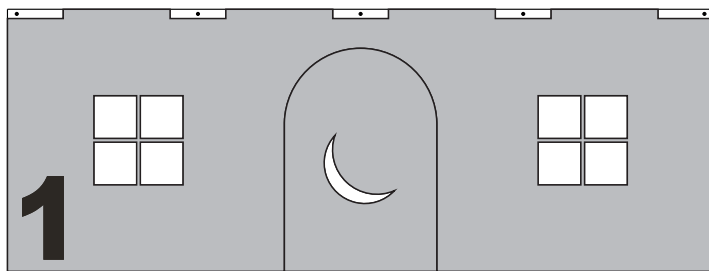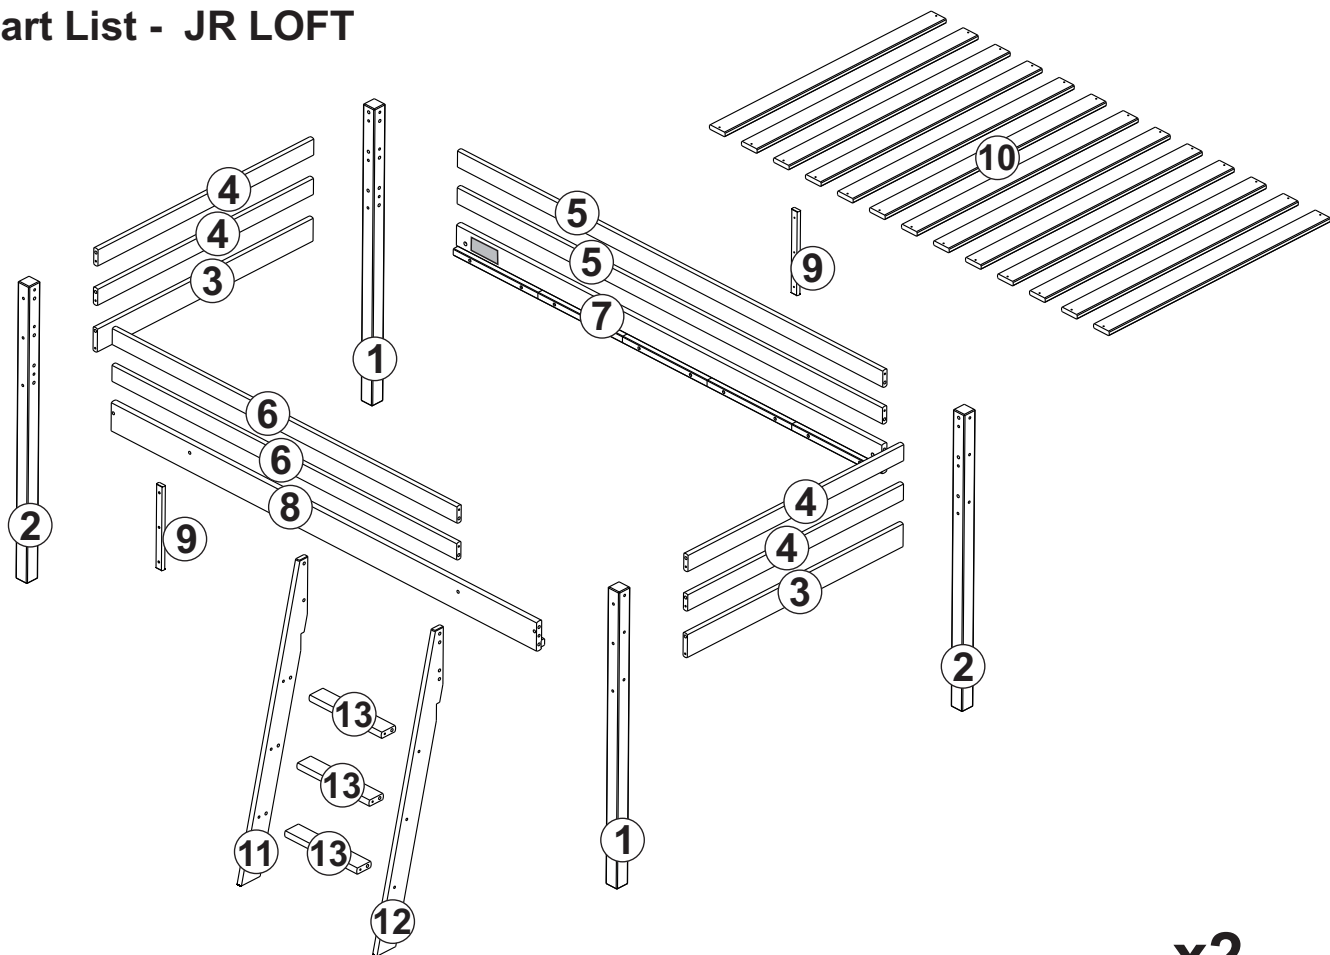

Identifying the Hardware-Identify the hardware using the illustrations below.

A  04
1/4 x 100 x 17mm

B  18
7 x 90 x 17mm

C  06
4.0 X 30

D  10
7 x 60 x 17mm

E  04
1/4

F  34
10X40

G  02

H  26
4,0 x 35

I  02

K  11
3,5 x 16

L  01

01

F





10X40

34


L



01

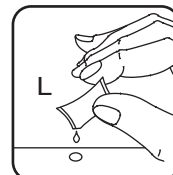


(Not included)

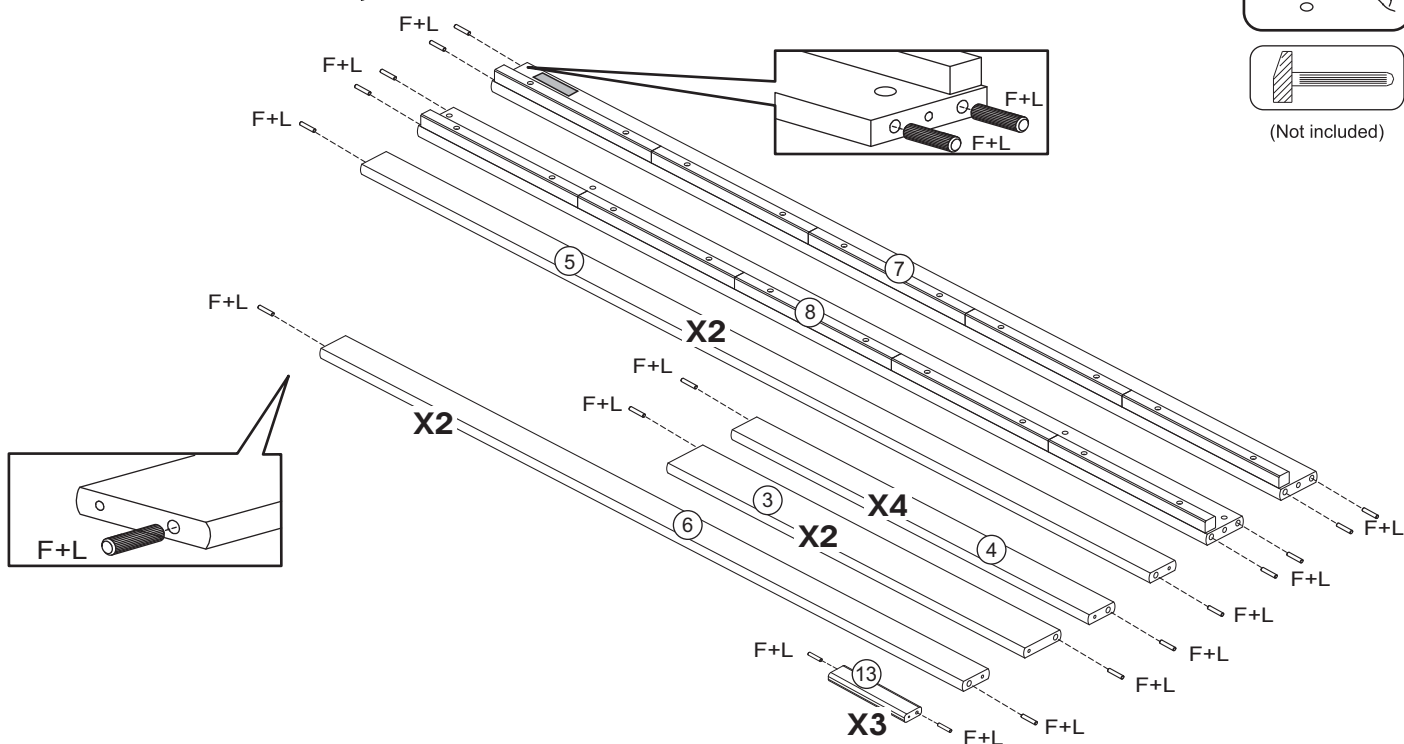

02


B




7 x 90 x 17mm

12

I



01

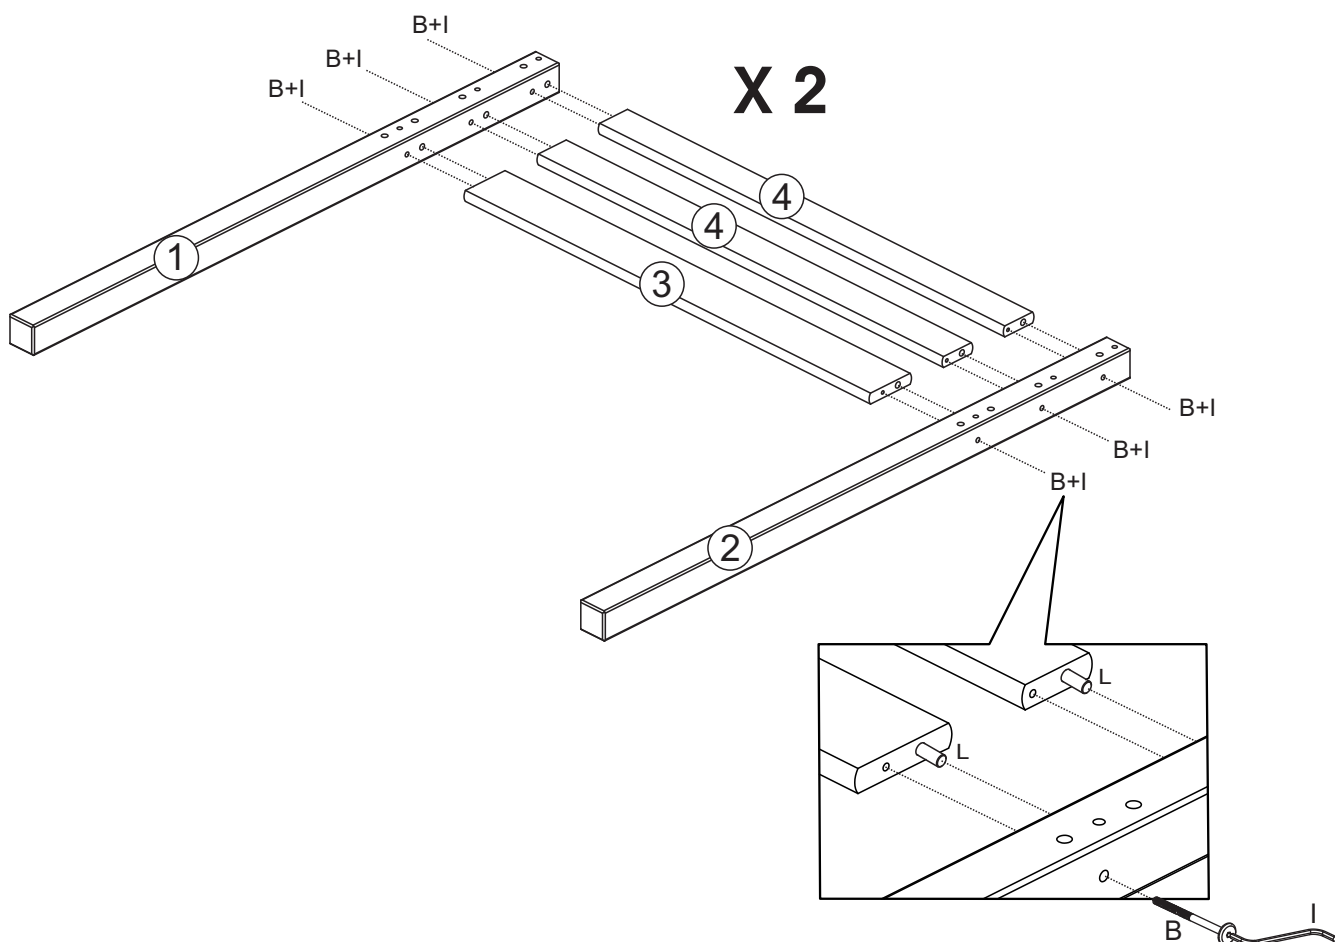

Jr Loft w/Tent

3 Of 10





03

A  **04**
1/4 x 100 x 17mm

B  **04**
7 x 90 x 17mm

E  **04**
1/4

I  **01**

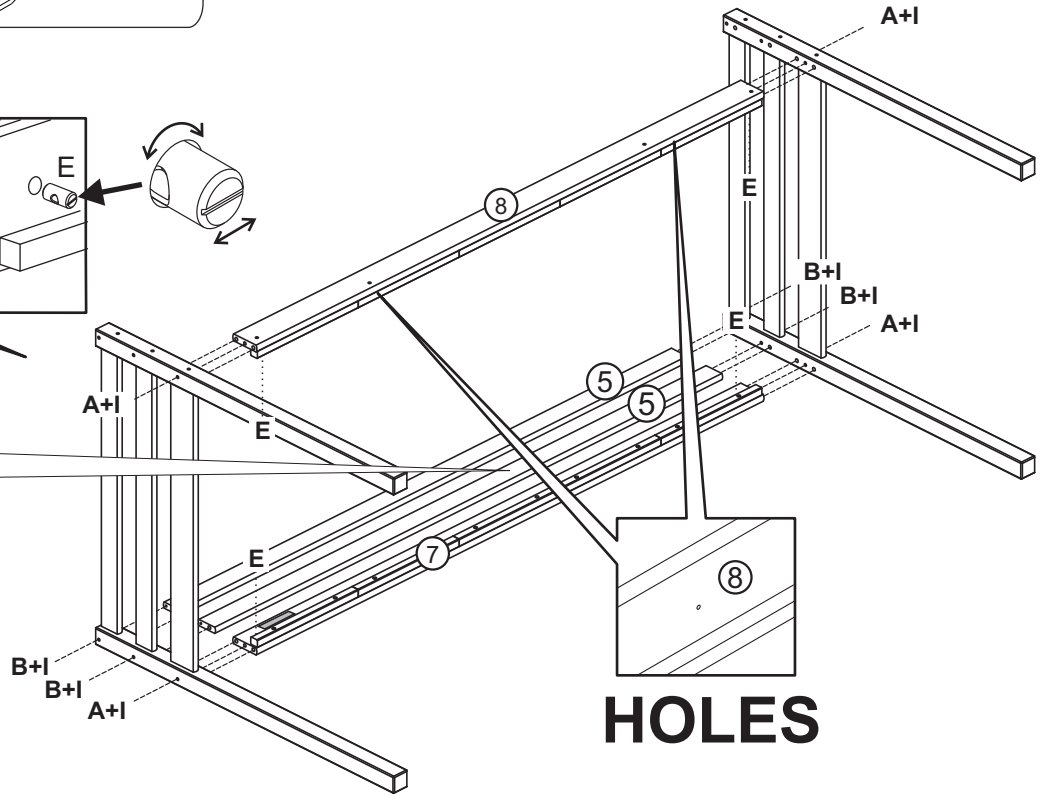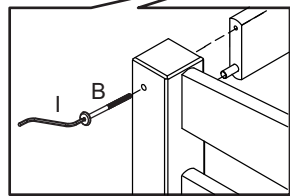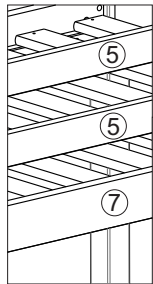
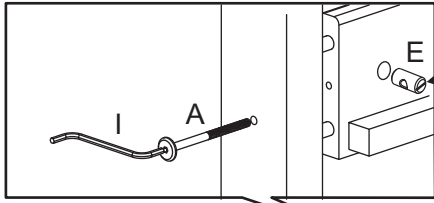


HOLES

04


D  **06**
7 x 60 x 17mm

I  **01**

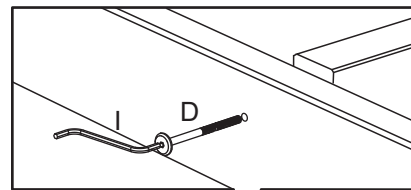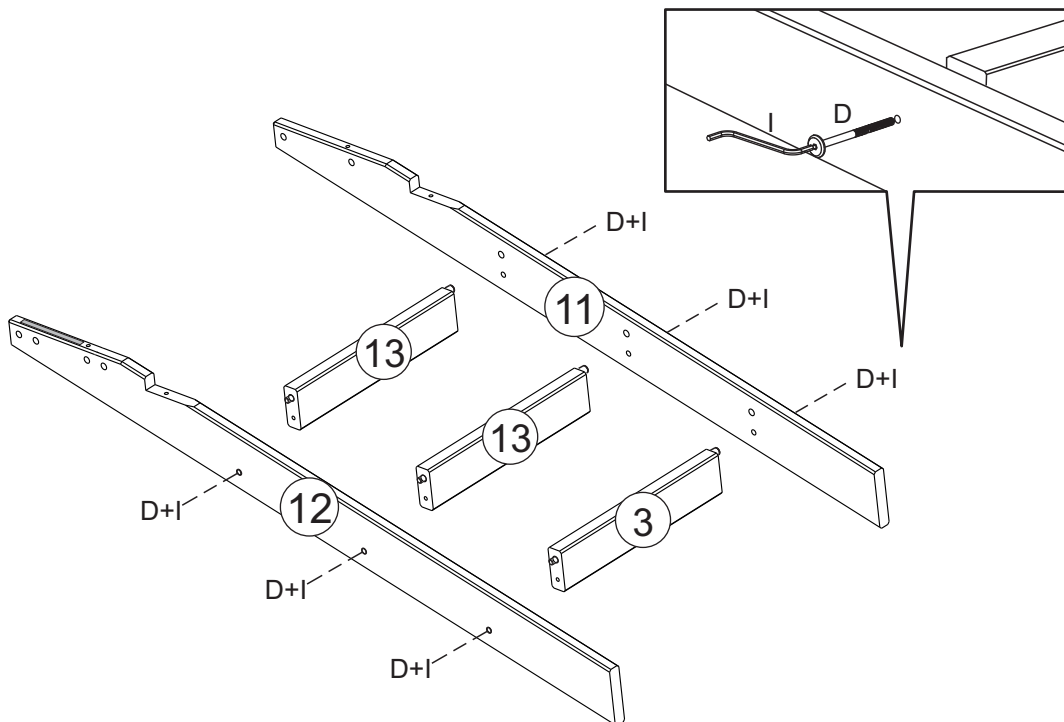


05

K



3,5 x 16

06

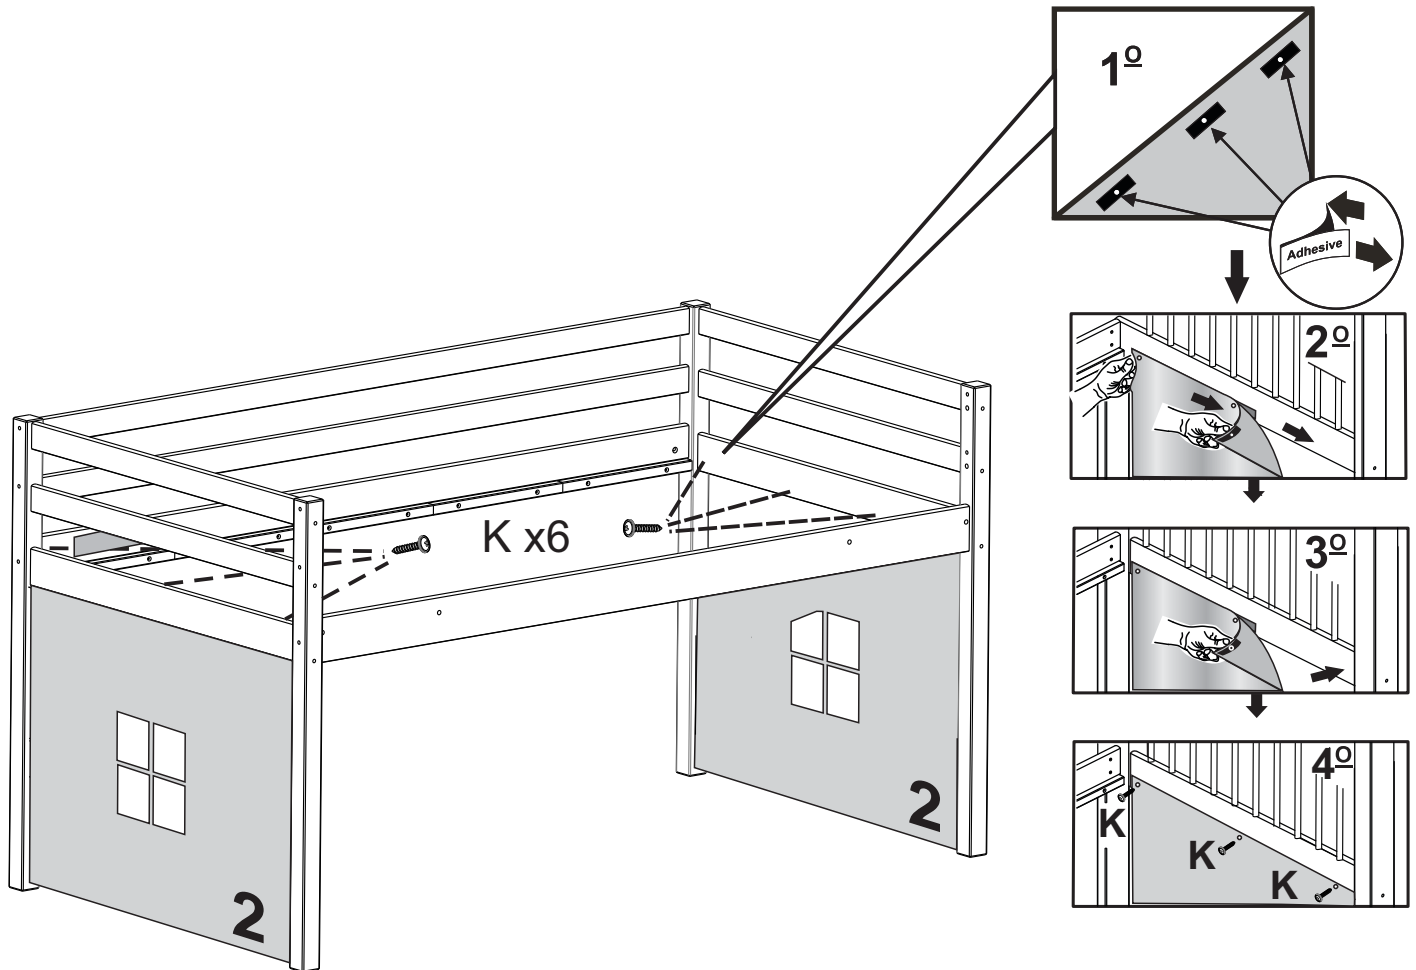


ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on both ends to fix on the crossbars on instructions.








06

K




05

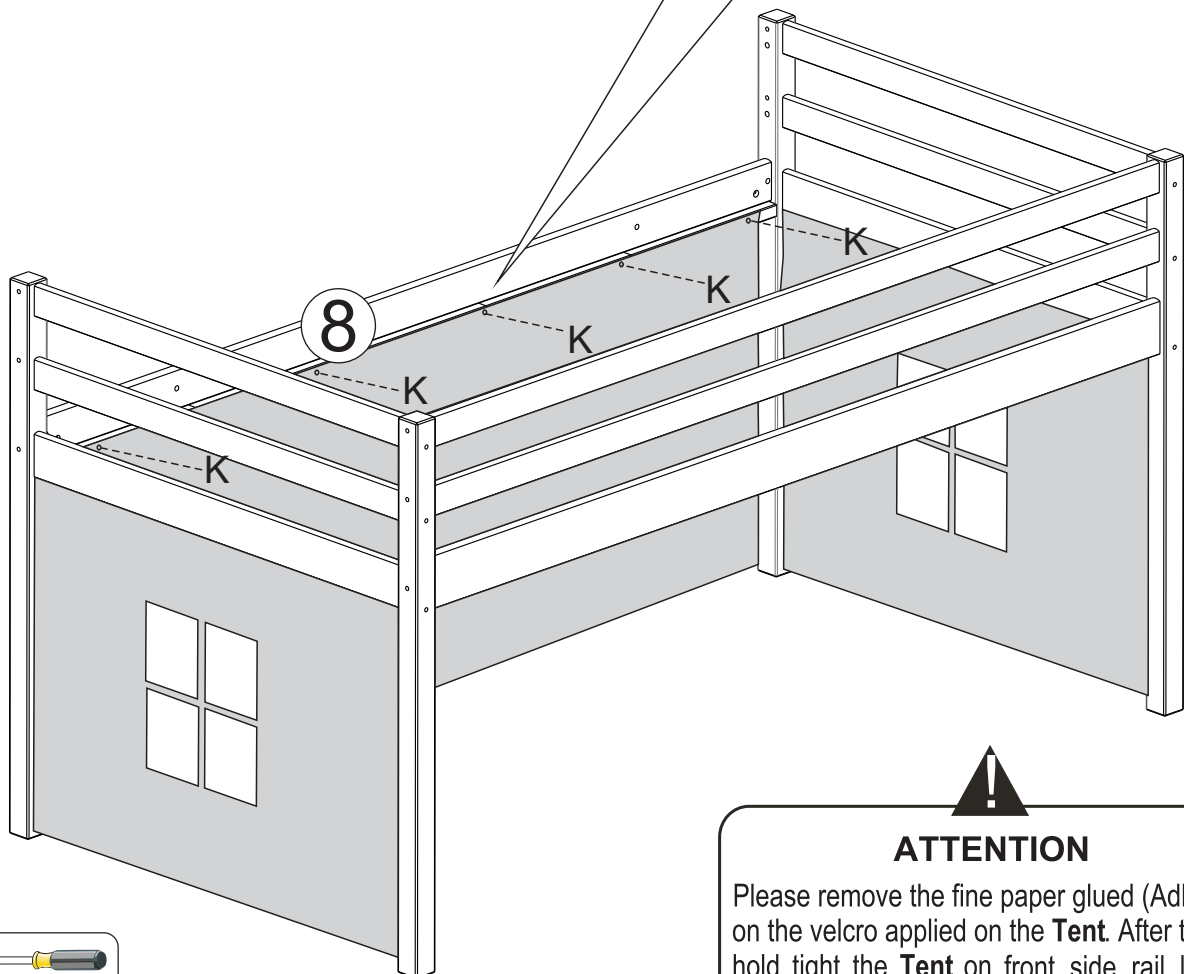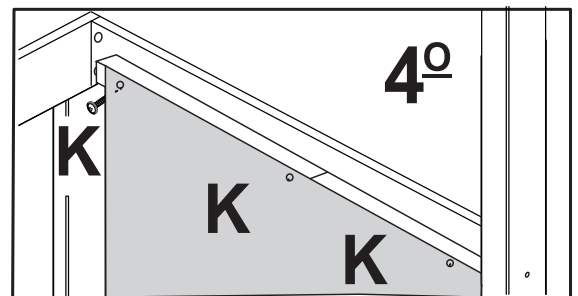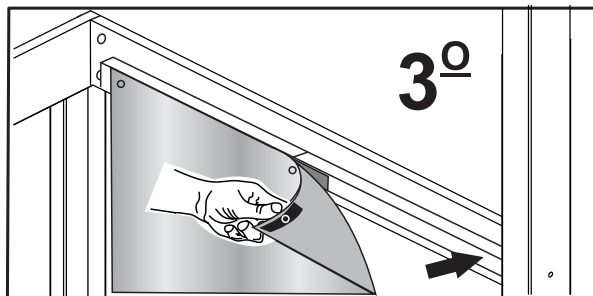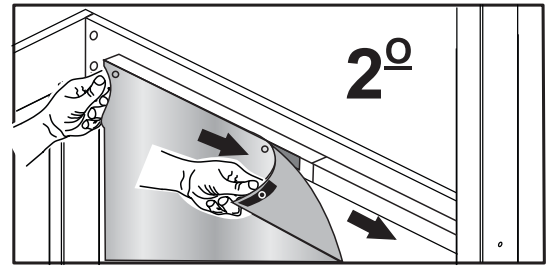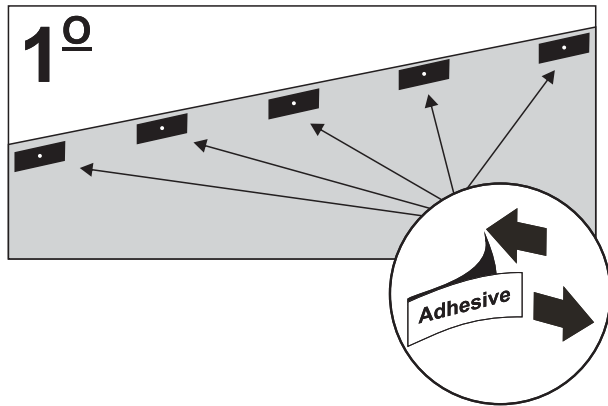


ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on front side rail like showing on instructions.



07

B






02

7 x 90 x 17mm

I




01

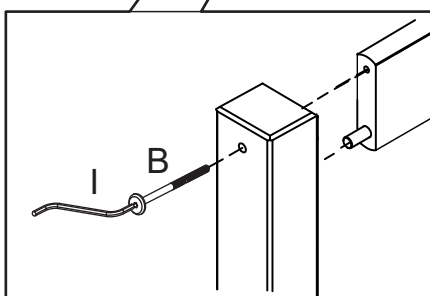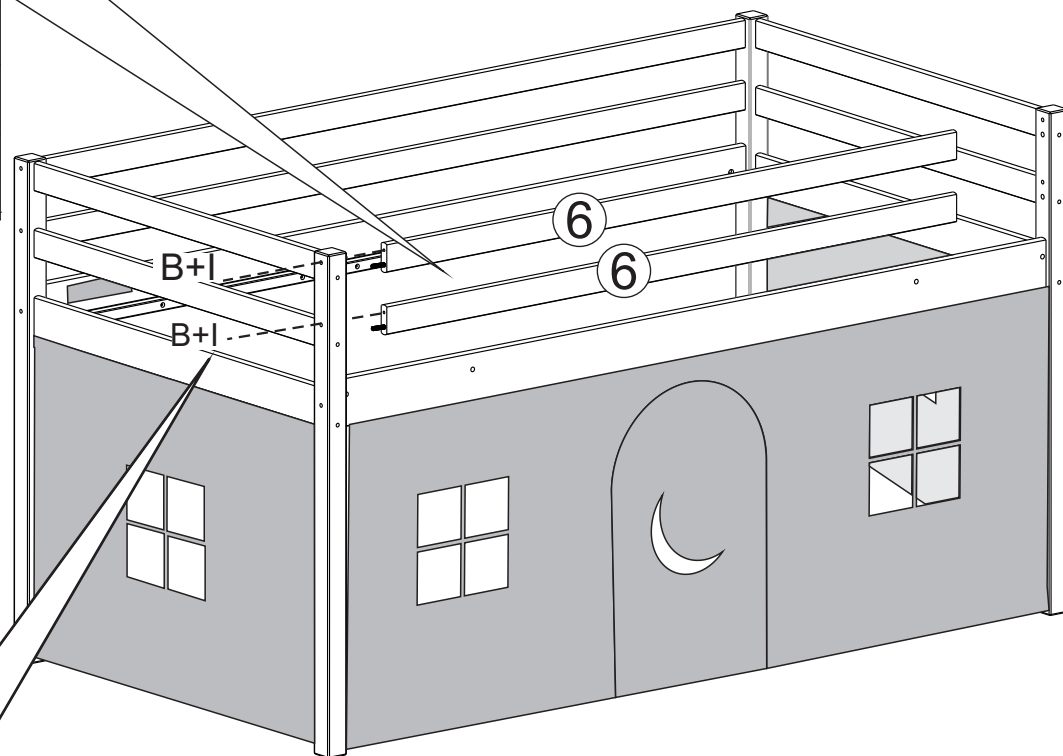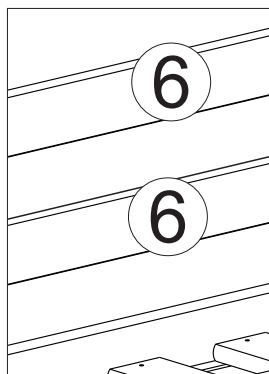

OPTION 1



OPTION 2

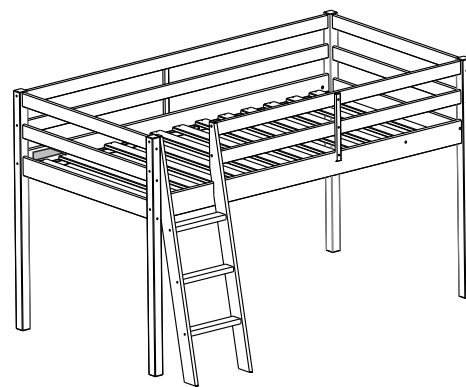



08

D  **04**
7 x 60 x 17mm




G  **02**

I  **02**

1°

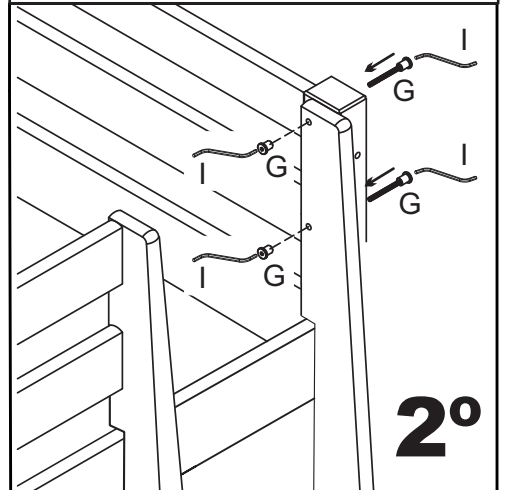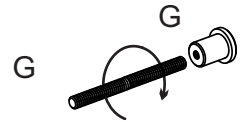


2°

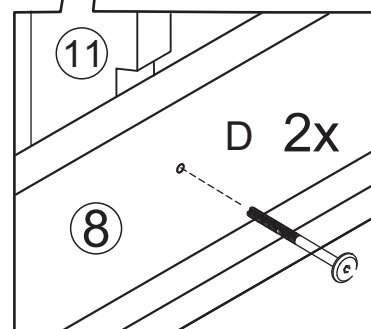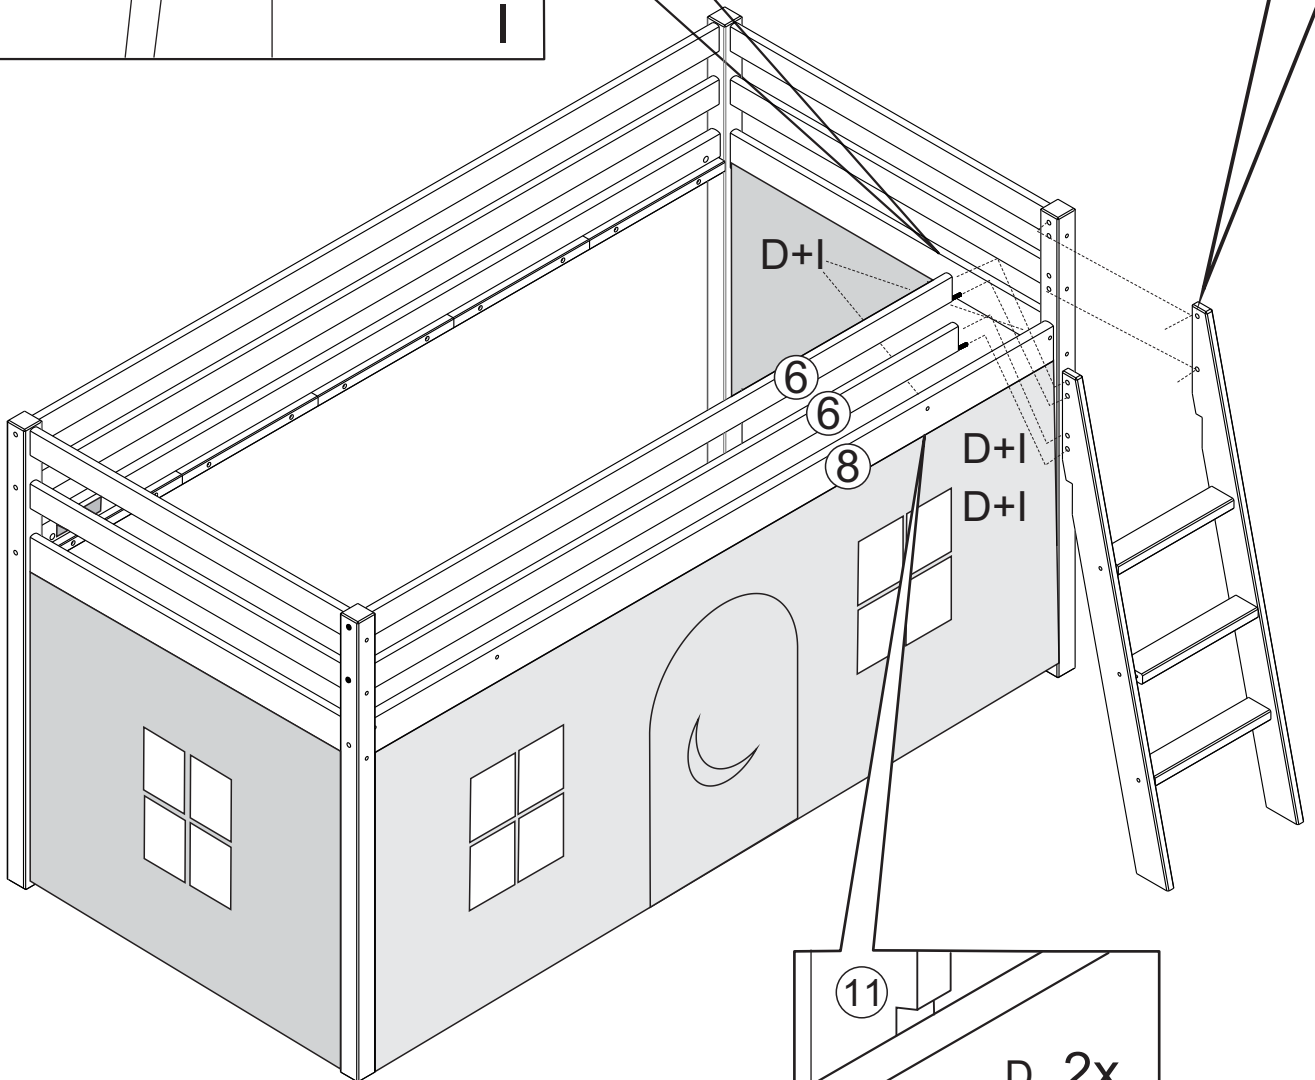
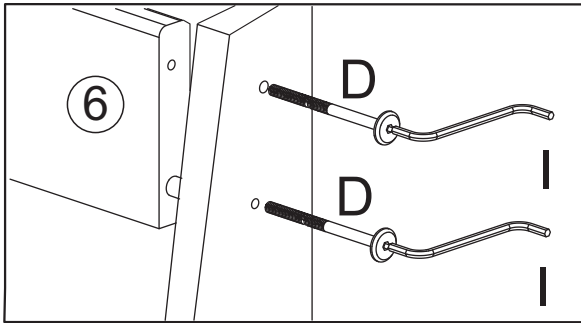


09

C



06

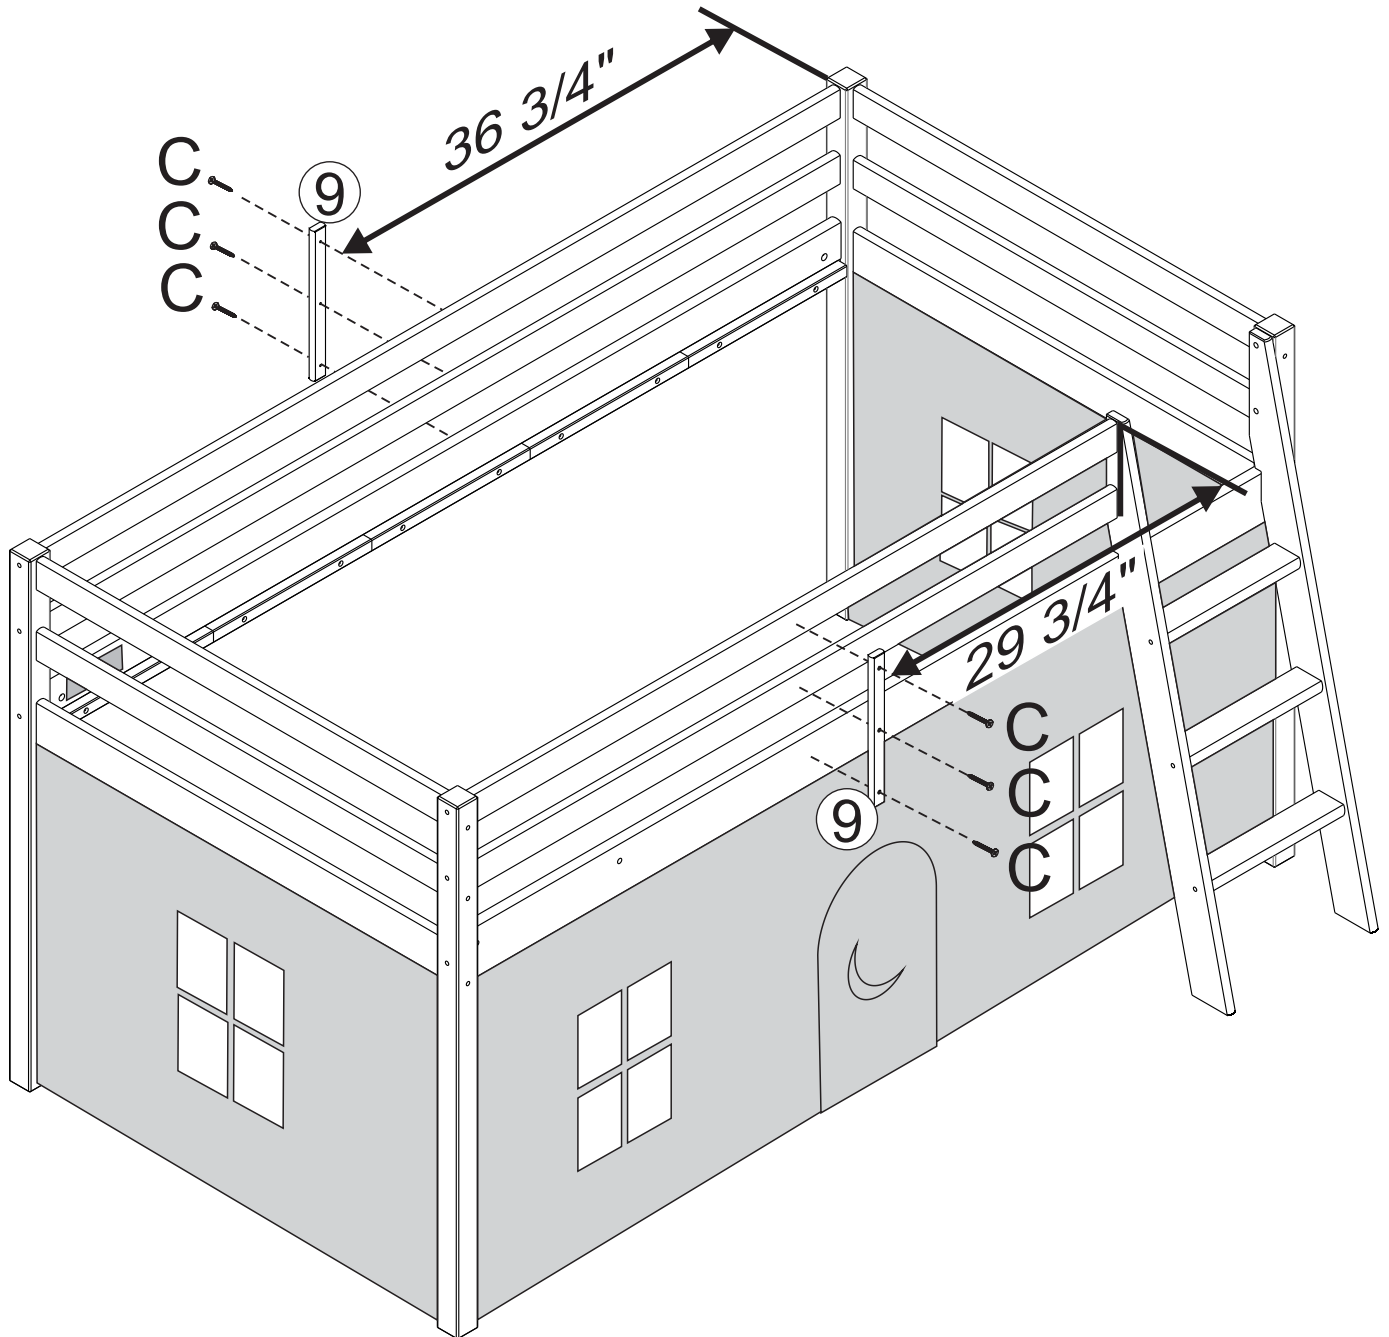

10

H





4,0 x 35

26



**The first slat must be fixed here
at 2 1/4" from each headboard end.**

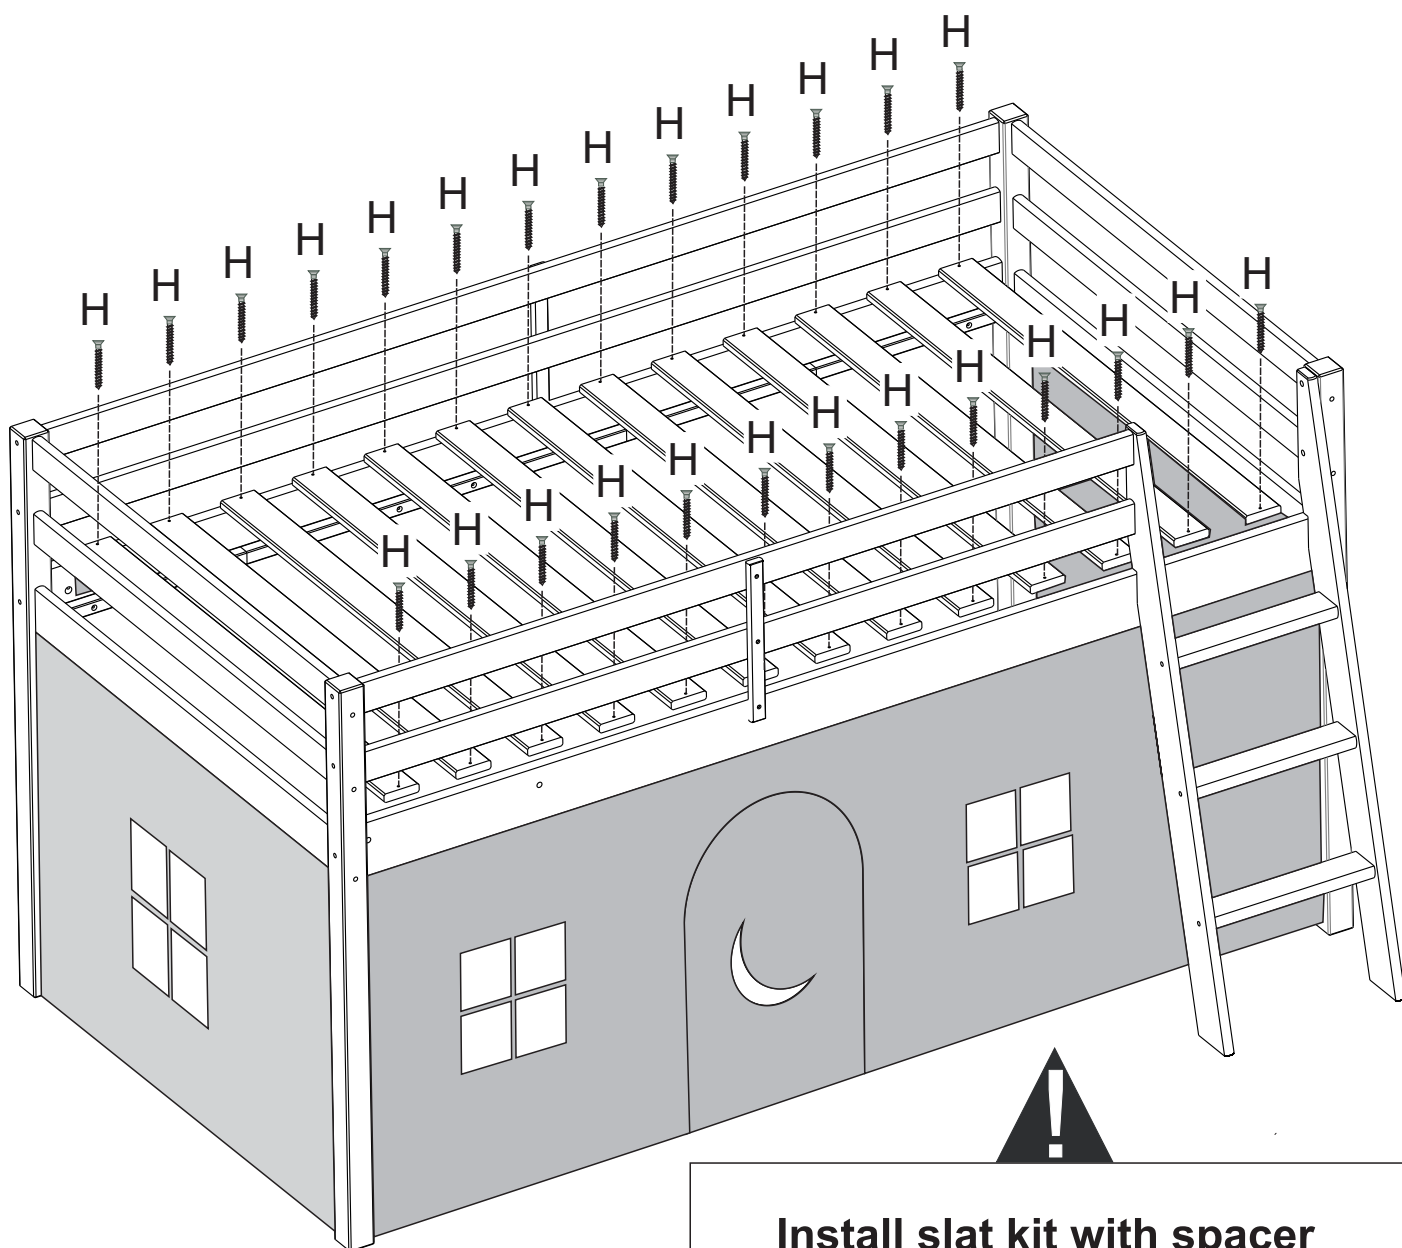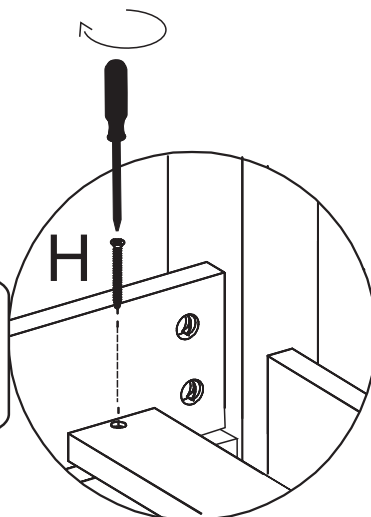

**Install slat kit with spacer
tape on top (Facing up).**