

Find Your Fit

Simple steps to choose the right size and ensure a perfect fit.



1 MEASURE YOUR OPENING

Measure the opening width from finished wall to finished wall at the top, middle, and bottom. Use the smallest of the three measurements.

1 Opening ≠ Door Size

Measure your opening, then select within the size range.




2 SELECT THE SIZE RANGE THAT MATCHES YOUR OPENING

YOUR OPENING (Actual Wall to Wall)	SELECT SIZE	DOOR WIDTH	DOOR HEIGHT	WALK-IN WIDTH (Actual Entry Space)
44" - 48"	48"W x 76"H	25 1/4"	76"	18" - 22" W
50" - 54"	54"W x 76"H	28 1/4"	76"	21" - 25" W
56" - 61"	60"W x 76"H	31 1/4"	76"	24" - 28" W
62" - 66"	66"W x 76"H	34 1/4"	76"	27" - 31" W
68" - 72"	72"W x 76"H	37 1/4"	76"	30" - 34" W

Choose the size range (Model Width) that matches your actual opening. Do not size up for a wider entry.

3 WALK-IN WIDTH

Walk-in width is the actual entry space when the sliding door panel(s) are fully open.

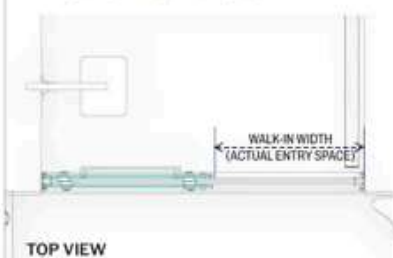

4 BEFORE YOU ORDER, CONFIRM THESE INSTALLATION DETAILS

✓ CONFIRM DOOR HEIGHT



Designed for 76" tall opening.

Measure from the shower base along the finished wall to ensure sufficient height for the 76" door.



Measure carefully before ordering.



Professional installation is recommended.



Review the installation manual for detail.