

























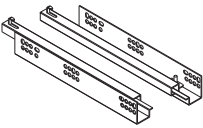











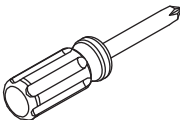



ASSEMBLY INSTRUCTIONS

1		x1	13		x1
2		x1	14		x1
3		x2	15		x1
4		x2	16		x2
5		x2	17		x2
6		x2	18		x2
7		x1	19		x2
8		x1	20		x1
9		x1	21		x1
10		x2	22		x2
11		x1	23		x2
12		x1			



ASSEMBLY INSTRUCTIONS

A	 Ø6x26mm	x130	J		x2
B	 Ø15x9mm	x130	K		x2
C	 Ø3.5x14mm	x94	L		x6
D		x2	M	 big bend	x4
E		x2	N	 middle bend	x4
F		x2	O		x8
G	 Ø4x25mm	x6	P		x2
H	 M4x22mm	x12	Q		x1
I		x6			



Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

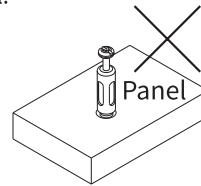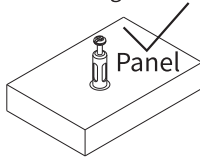

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

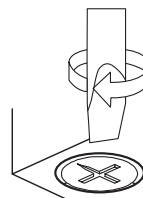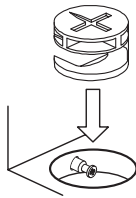


Turn the cam lock clockwise to tighten.


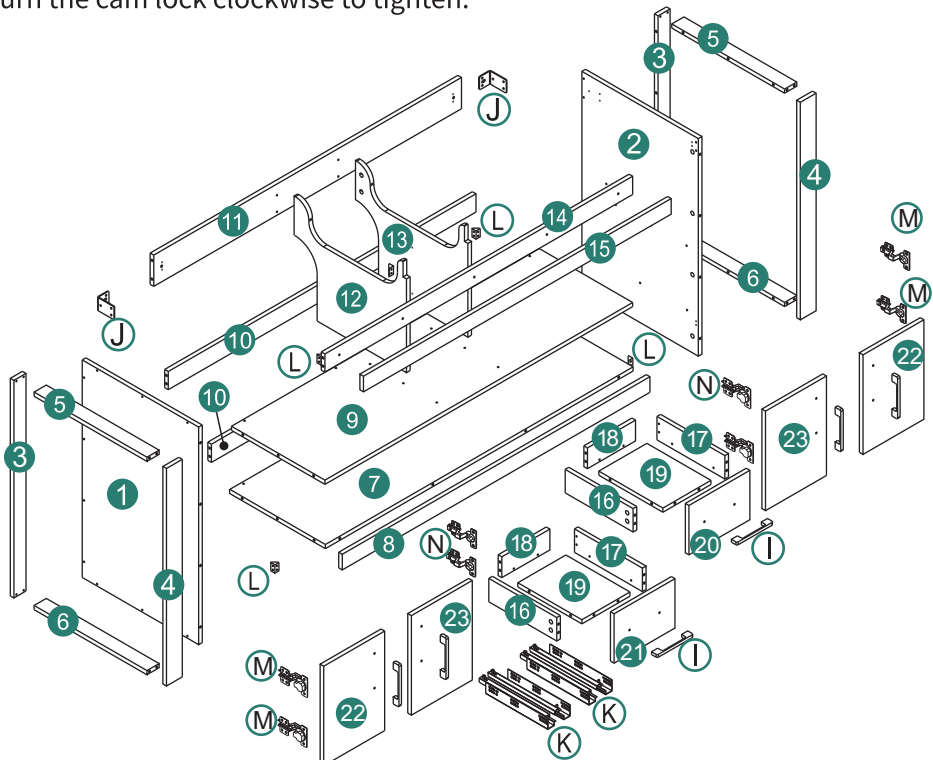


ASSEMBLY INSTRUCTIONS





1



The floor needs to be covered with paper or carpet protective material before installation!

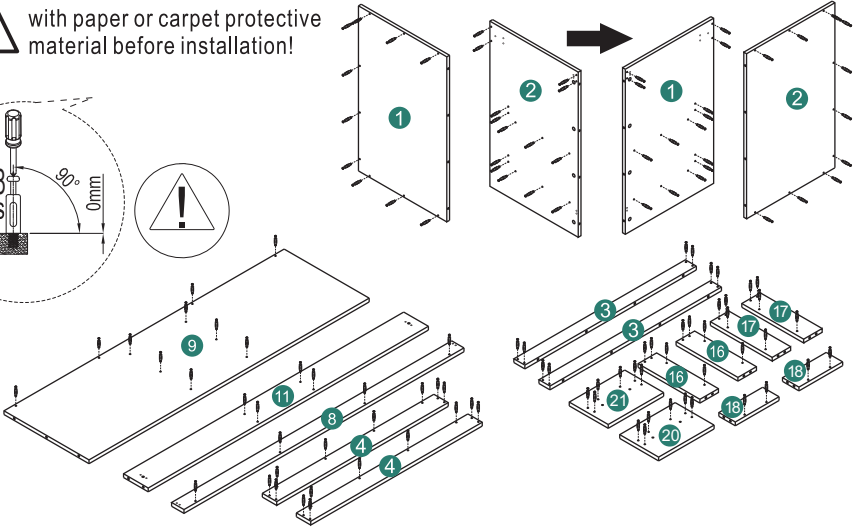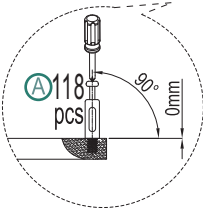


2

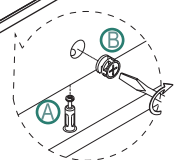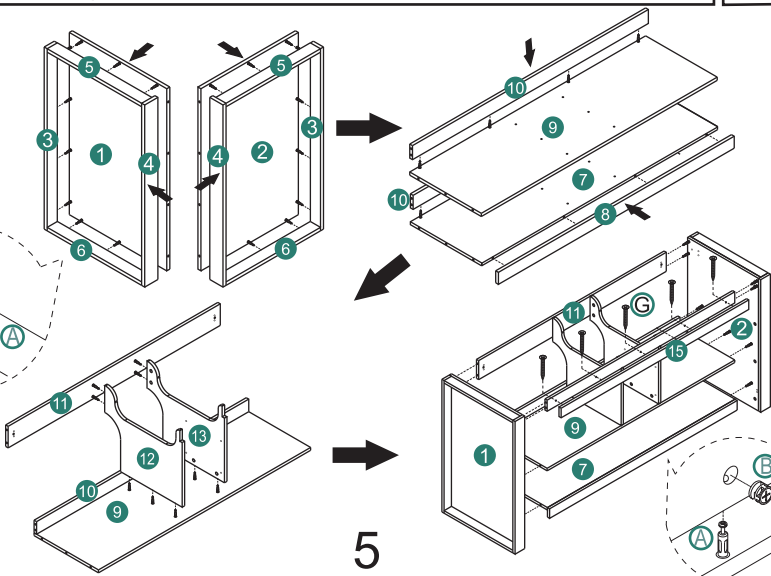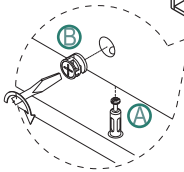

ASSEMBLY INSTRUCTIONS

3

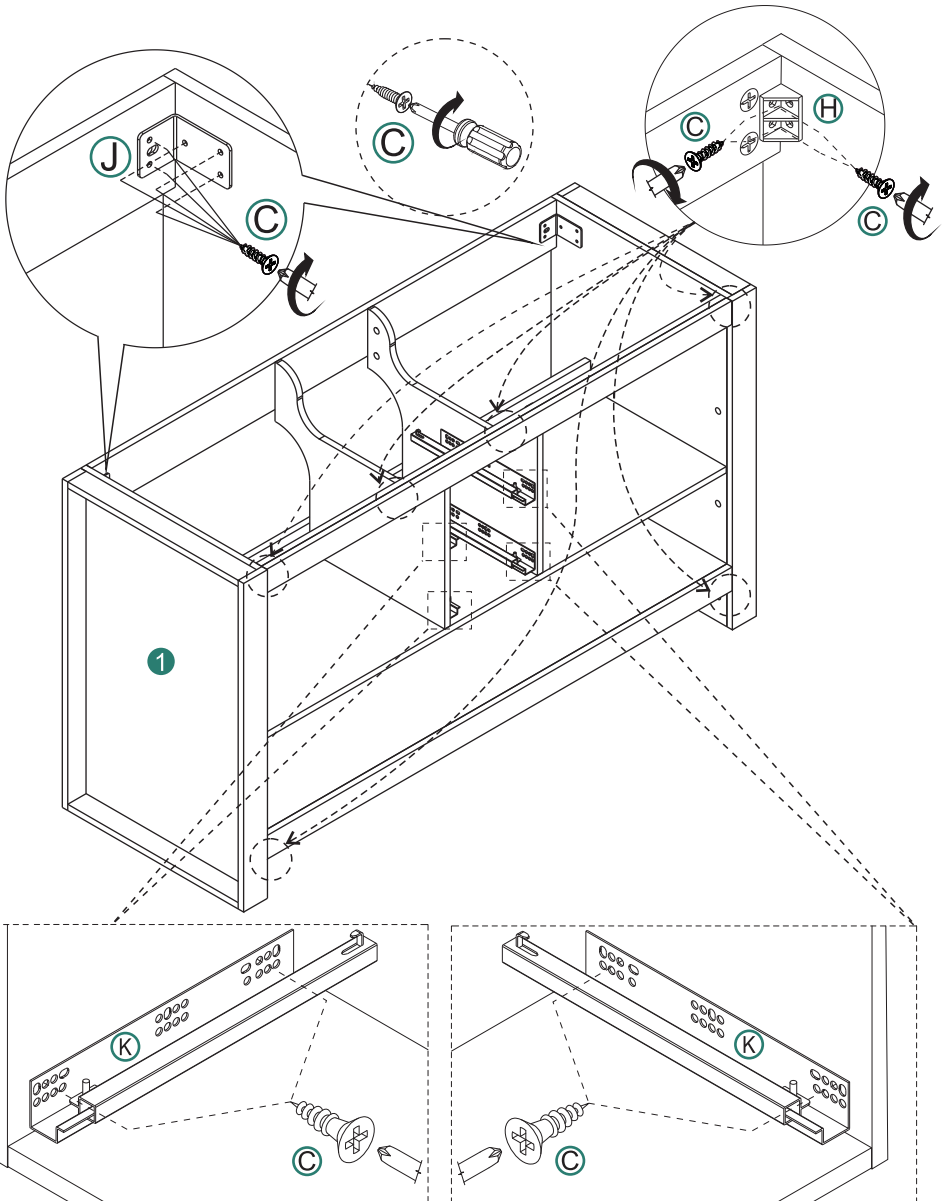


ASSEMBLY INSTRUCTIONS

4

16 2pc 17 2pc 18 2pc 19 2pc 20 1pc 21 1pc

B32 H4pcs I2pcs

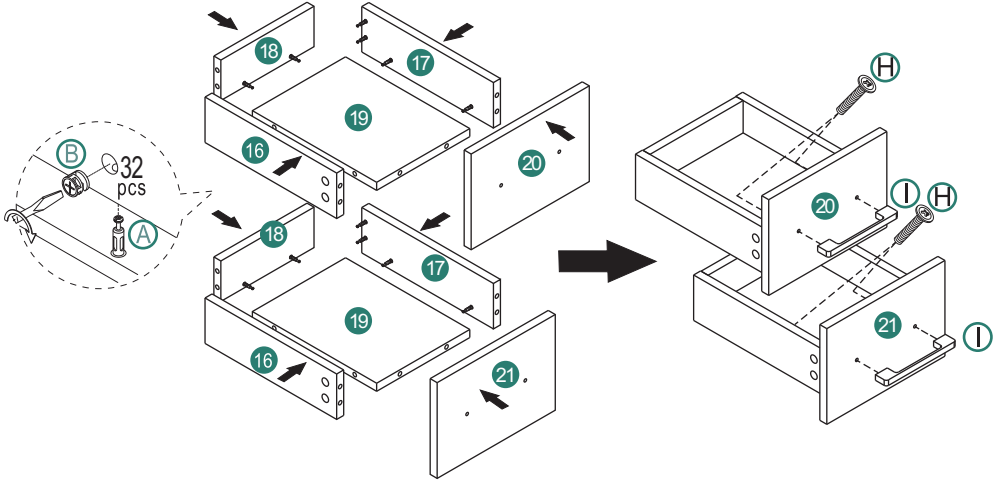


5

22 2pc 23 2pc

C16pcs H8pcs I4pcs M4pcs N4pcs

D2pcs

Bring your own tools

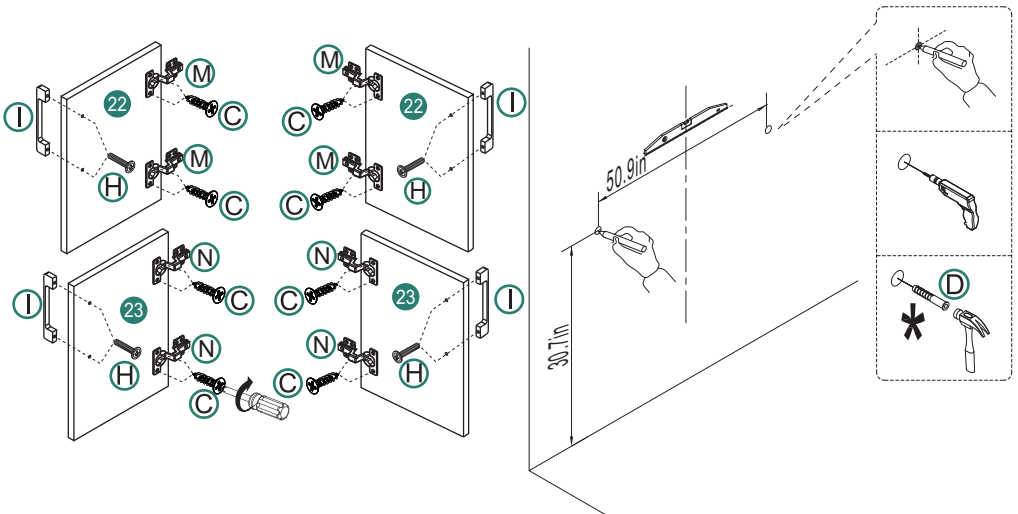

ASSEMBLY INSTRUCTIONS

6



Ⓢ40pcs





Ⓢ2pca




Ⓢ2pca



Ⓢ8pca

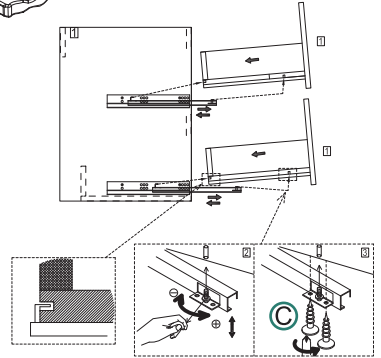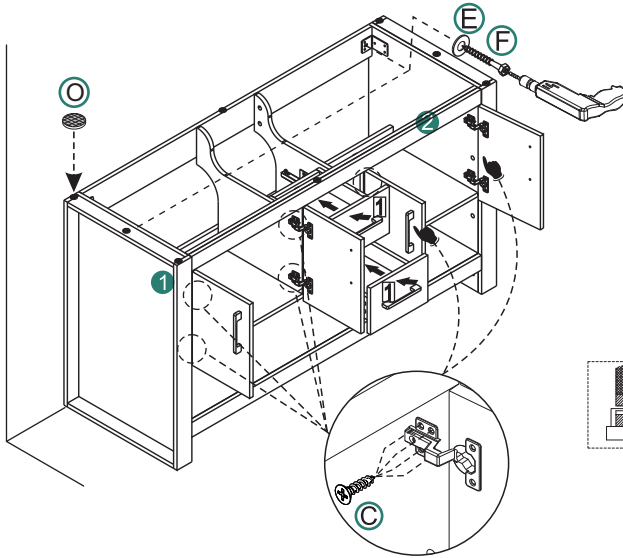

7



Ⓢ2pcs

