

TOOLS REQUIRED:

Allen Wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. CAUTION: Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Put the chair back on the smooth and clean soft surface.

2. Attach seat ① to chair back ② using Bolt (A), Lock washer (B), Flat washer (C) and tighten with Allen Wrench (D). As shown in Figure 1.

3. Insert Bolt (H) to front legs ③. As shown in Figure 2.

4. Attach front legs ③ to seat ① using Nut (F), Lock washer (B), Flat washer (C) and tighten with Wrench (G). As shown in Figure 3.

5. Attach arms ④ to seat and back using Bolt (E), Lock washer (B), Flat washer (I) and tighten with Allen Wrench (D). As shown in Figure 4.

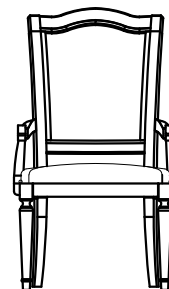


Figure 1

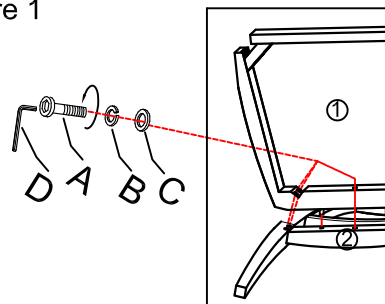


Figure 2

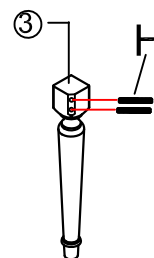


Figure 3


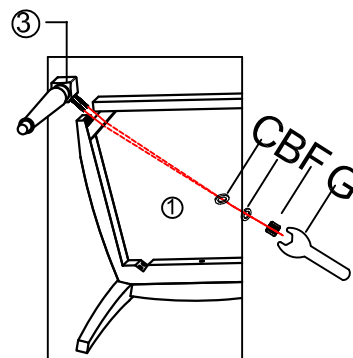


Figure 4

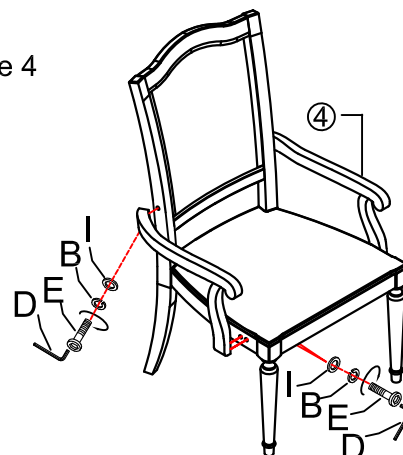

NO	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Bolt	5/16"x80mm	6pcs
B		Lock washer	Ø5/16"	15pcs
C		Flat washer	Ø5/16"x19mm	9pcs
D		Allen Wrench	100x50x4mm	1pc
E		Bolt	5/16"x38mm	5pcs
F		Nut	Ø5/16"	4pcs
G		Wrench	Ø5/16"	1pc
H		Bolt	Ø5/16"x65mm	4pcs
I		Flat washer	Ø5/16"x16mm	6pcs

Thank you for purchasing furniture
from american drew!