


# DRAWERS + MODESTY PANEL - TWIN

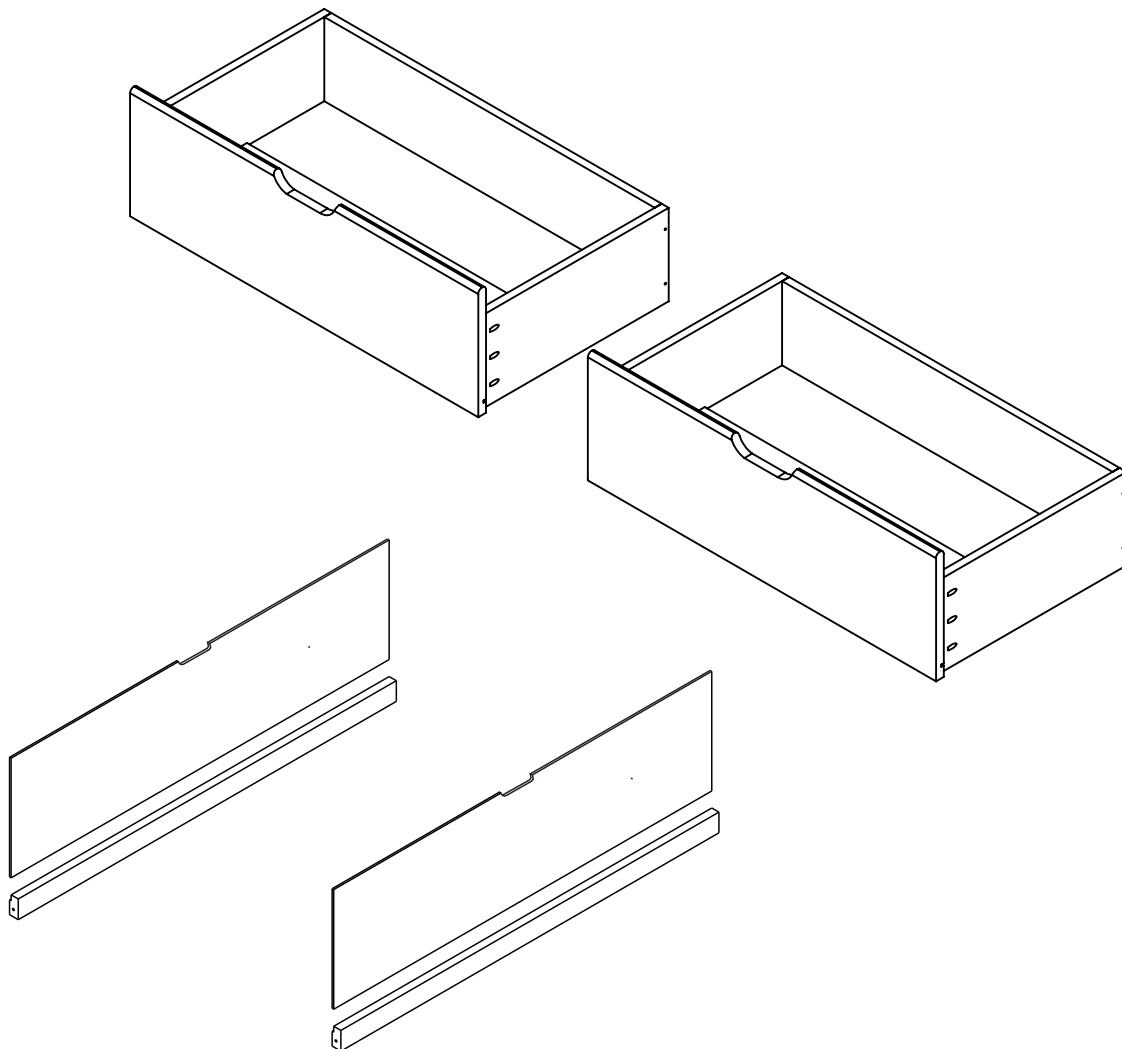


## ATTENTION



- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screw must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.



“Please! Confirm all parts and hardware are included to assemble!”

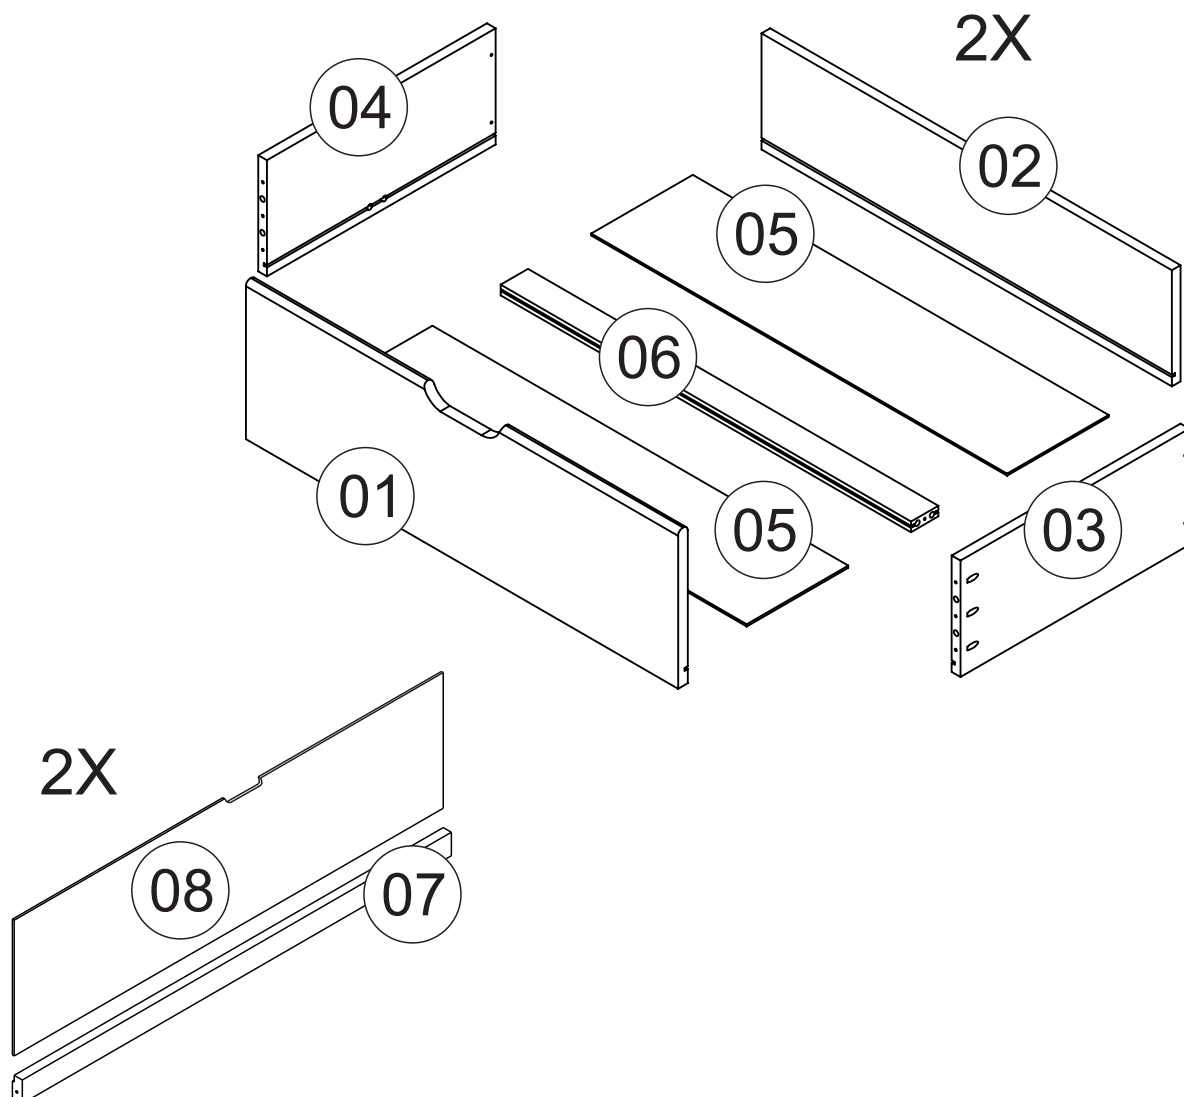


### Hardware - Carton

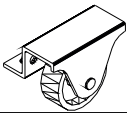
|           |                                                                                                                                                                                           |            |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| <b>T</b>  |  1 5/16"                                                                                               | <b>08x</b> |
| <b>Z</b>  |  <br>Ø1/8" x 5/8"   | <b>44x</b> |
| <b>AP</b> |  <br>Ø1/8" x 1 3/8" | <b>28x</b> |
| <b>AW</b> | <br>Ø3/8" x 1 3/8"                                                                                     | <b>16x</b> |

# ASSEMBLY INSTRUCTIONS


## Step 01

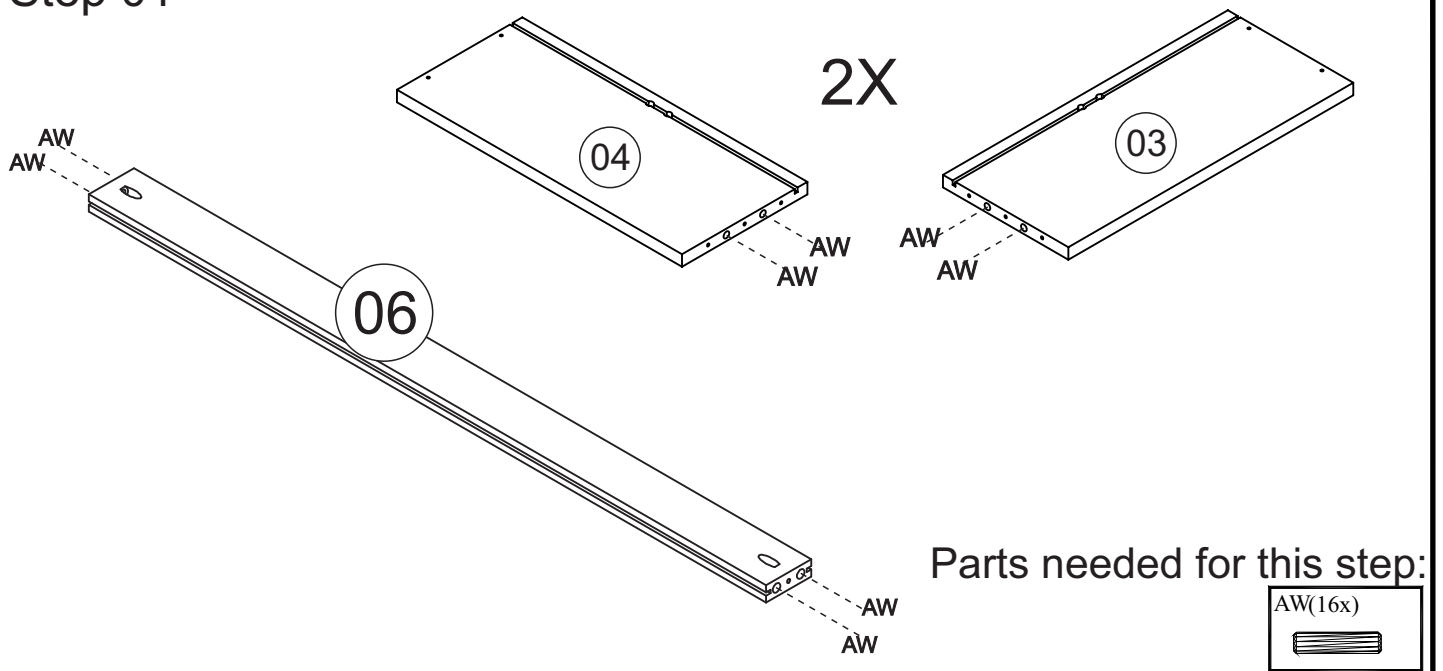


## Step 02

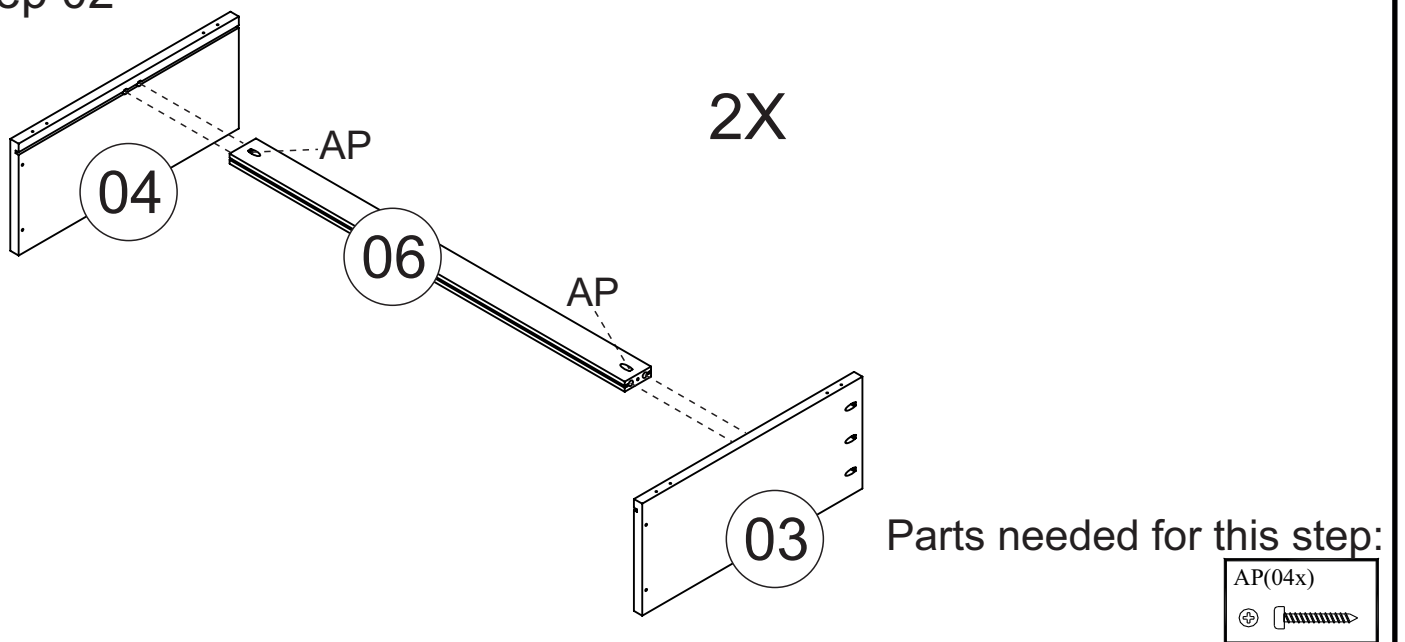

## Step 03

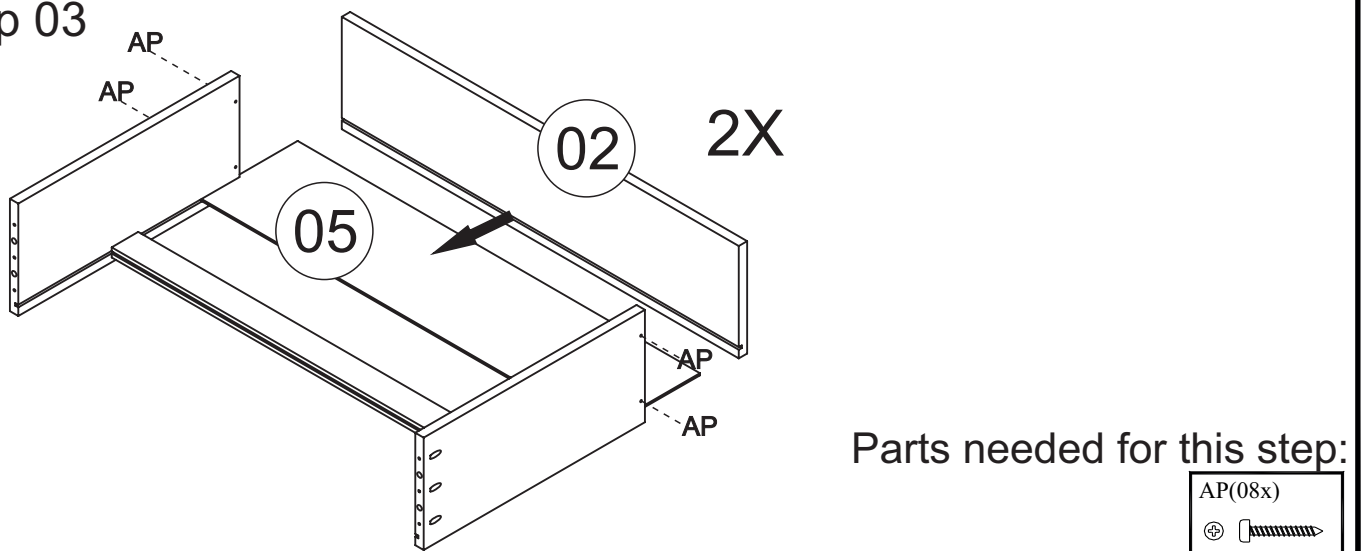

Step 04

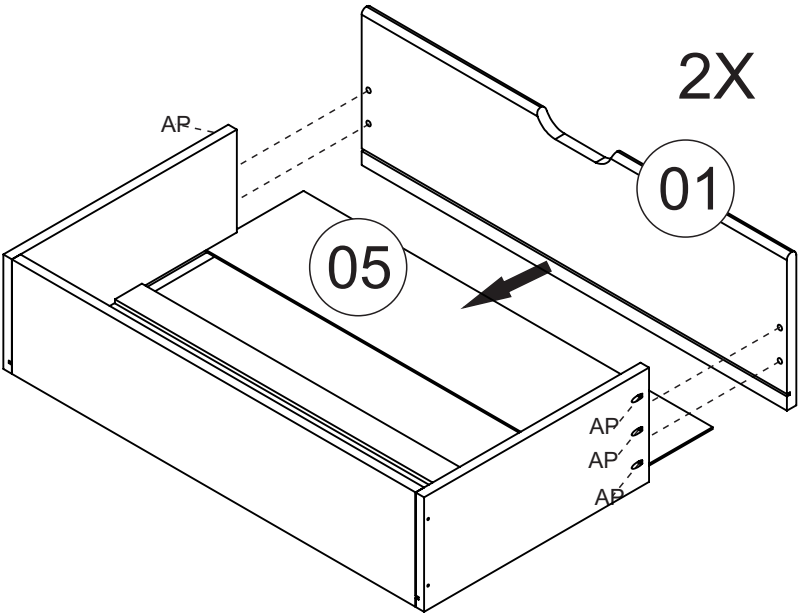


Parts needed for this step:

AP (12x)

Step 05

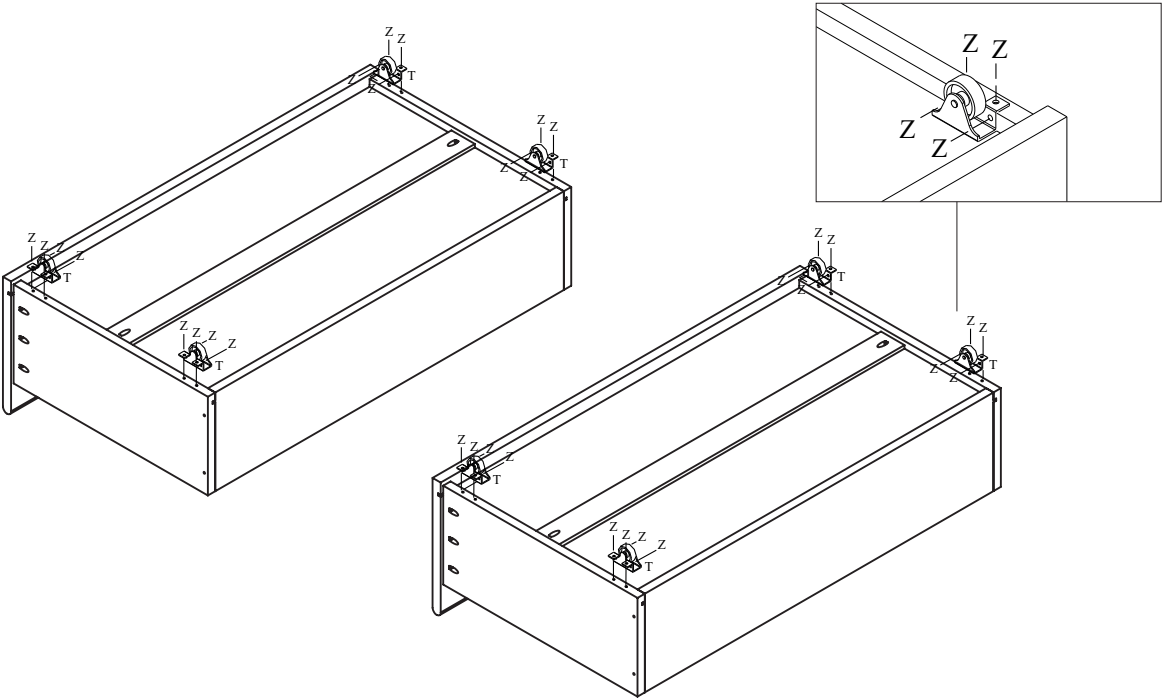

Parts needed for this step:


Z (32x)

T (8x)




## Step 06

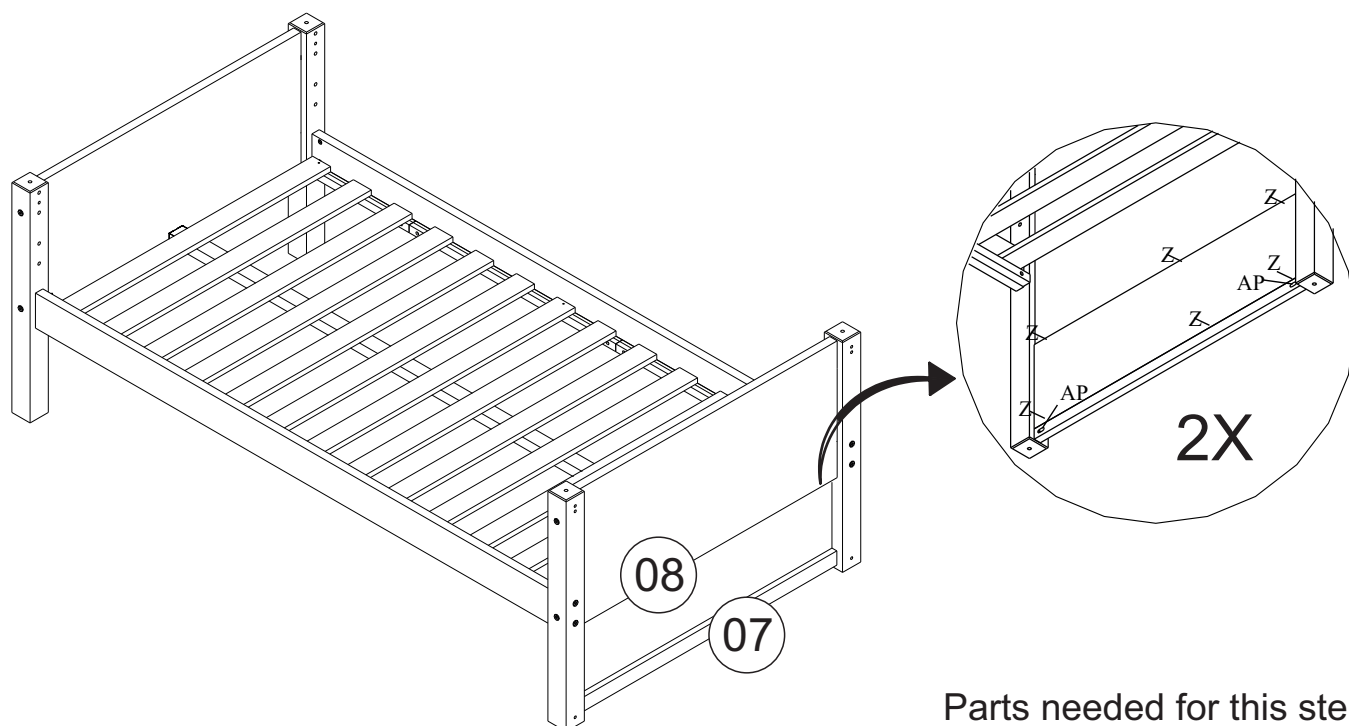

Parts needed for this step:

AP (4x)



Z (12x)



## Step 07

