

**BLACK TWIN SIZE HEADBOARD IN 1-1/2" TUBING**

---

**ASSEMBLY INSTRUCTION**



## ASSEMBLY INSTRUCTION

# Assembly Instruction

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
2. This product is for home use only and not intended for commercial establishment.

### PARTS IDENTIFICATION


A: HEADBOARD




Z	HARDWARE IDENTIFICATION		
	DESCRIPTION	FIGURE	Q'TY
1	BOLT 1/4"*62mm		4PCS
2	WASHER Ø18		4PCS
3	PVC WASHER Ø23*4mm		4PCS
4	NUT 1/4"		4PCS
5	ALLEN WRENCH		1PC
6	WRENCH		1PC
7	FINIAL		2PCS

## ASSEMBLY INSTRUCTION

STEP:1 Place the finals (7) into the headboard

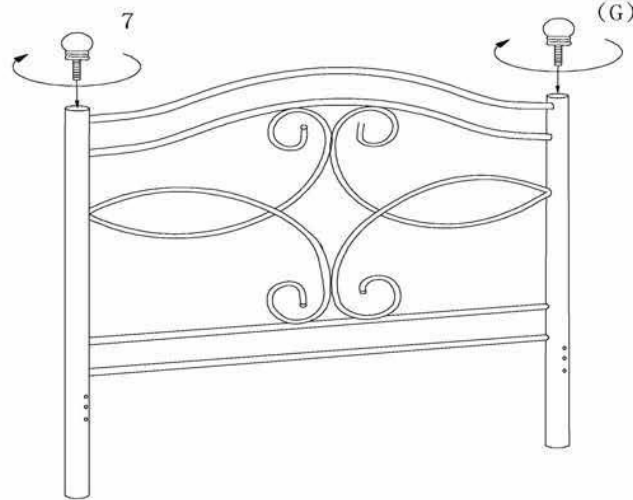

STEP:2

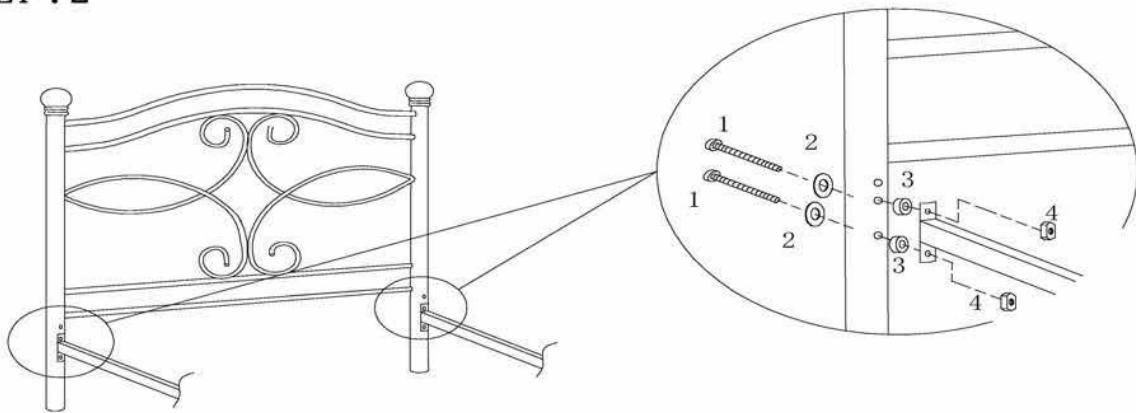

Assemble the siderails with bolt (1) with washers (2),  
PVC washers (3) and Nuts(4)