


ASSEMBLY INSTRUCTIONS



Curio

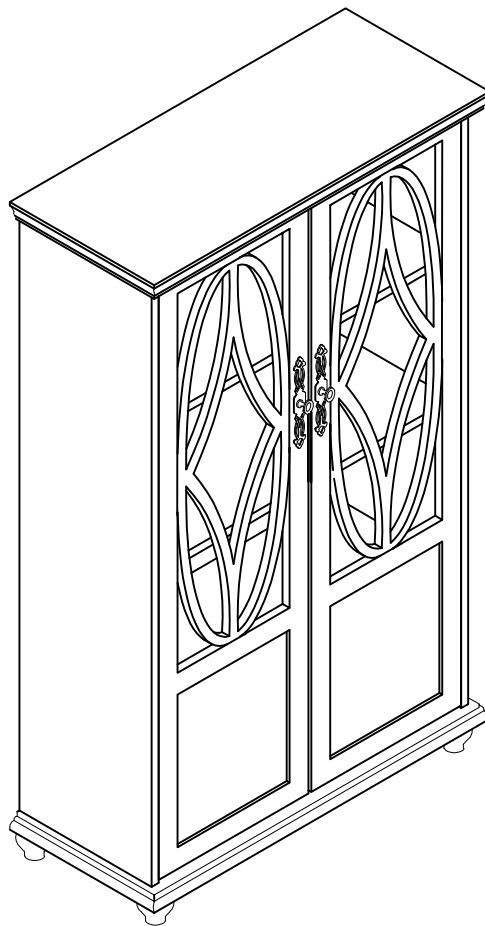

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To use a cam lock: (Please read below instructions before assembling)

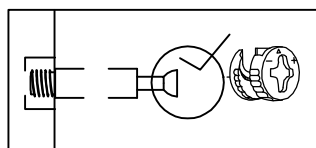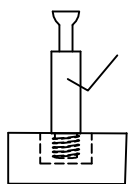

1. Insert cam screw into hole as shown in diagram A .

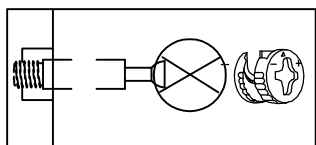
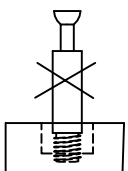


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.




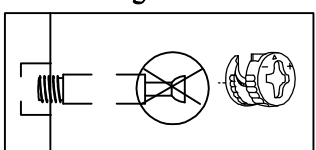


Diagram C

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

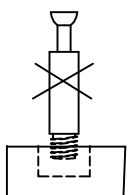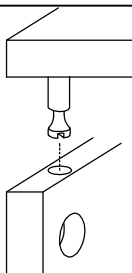


2. Connect the panels together.

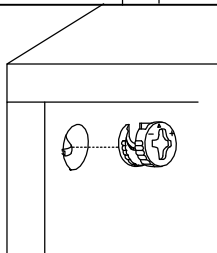

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

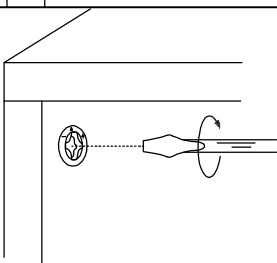










4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**




Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


Part List

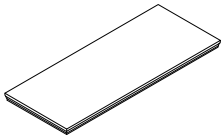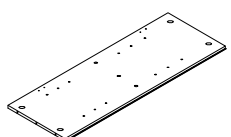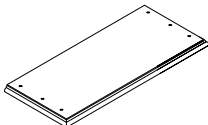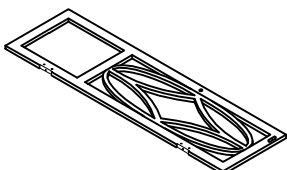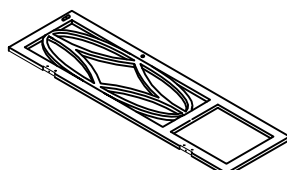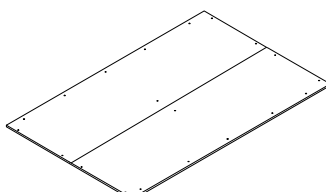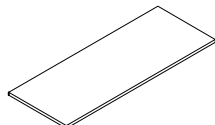A1 Quantity of 1  Top Panel	A2 Quantity of 2  Side Panel	A3 Quantity of 1  Bottom Panel	A4 Quantity of 1  Middle Shelf
A5 Quantity of 4  Leg	A6 Quantity of 1  Door(left)	A7 Quantity of 1  Door(right)	A8 Quantity of 1  Back Panel
A9 Quantity of 2  Adjustable Shelf			

Hardware List


B1 Quantity of 6  Wood Dowel	B2 Quantity of 12  Cam-bolt	B3 Quantity of 12  Cam-Lock	B4 Quantity of 1  Magnet
B5 Quantity of 4  Hinge	B6 Quantity of 22  Screw	B7 Quantity of 2  Bolt	B8 Quantity of 8  Shelf Support
B9 Quantity of 20  Screw	B10 Quantity of 2  Door Handle		

STEP 1

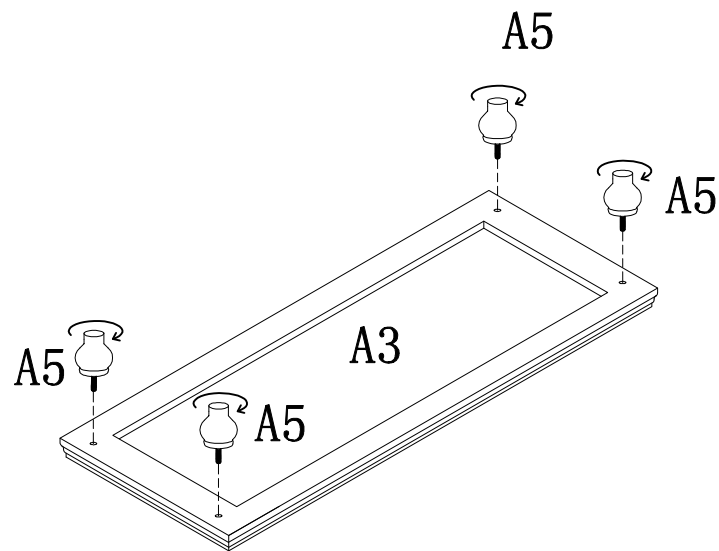


Assemble Legs (A5) to the bottom of Bottom Panel (A3).

STEP 2

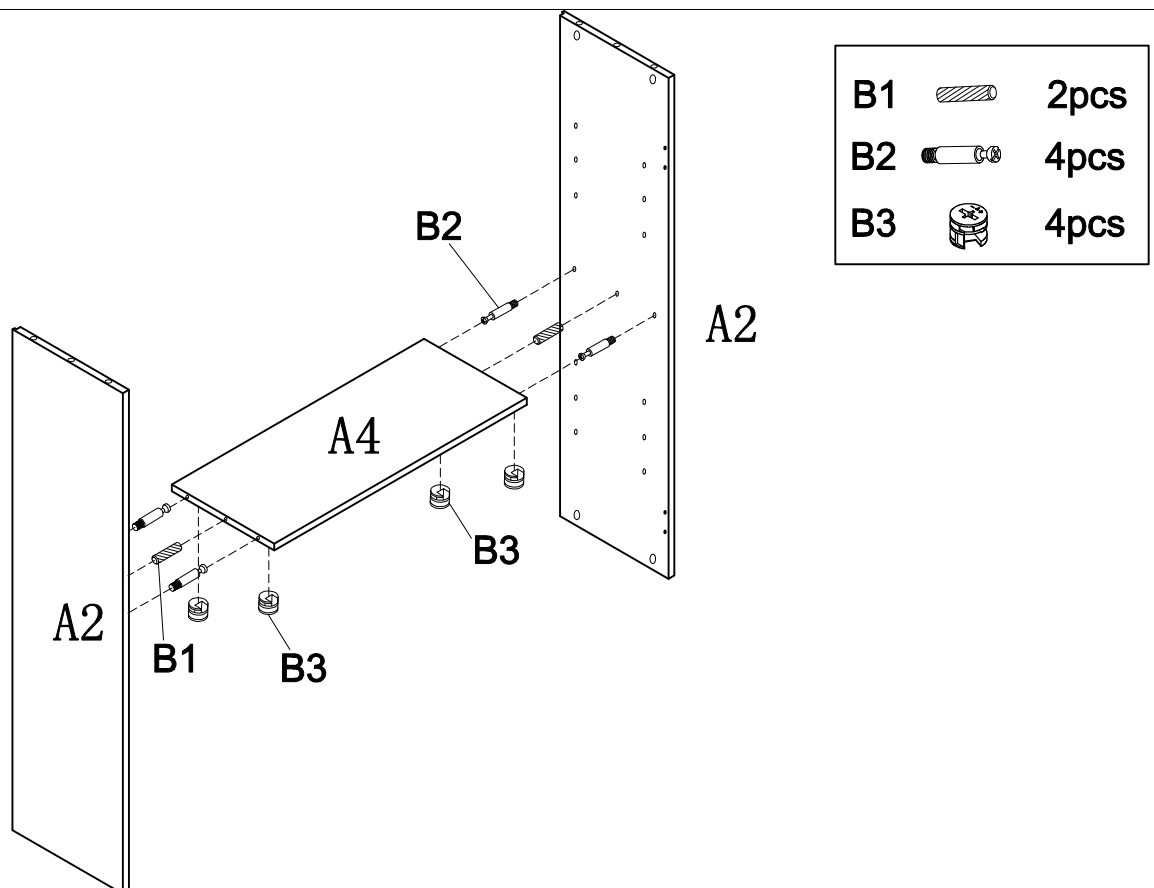


Assemble Side Panels (A2) to Middle Shelf (A4) using Cam-Bolt (B2), Cam-Lock (B3) and Wood Dowels (B1).

STEP 3

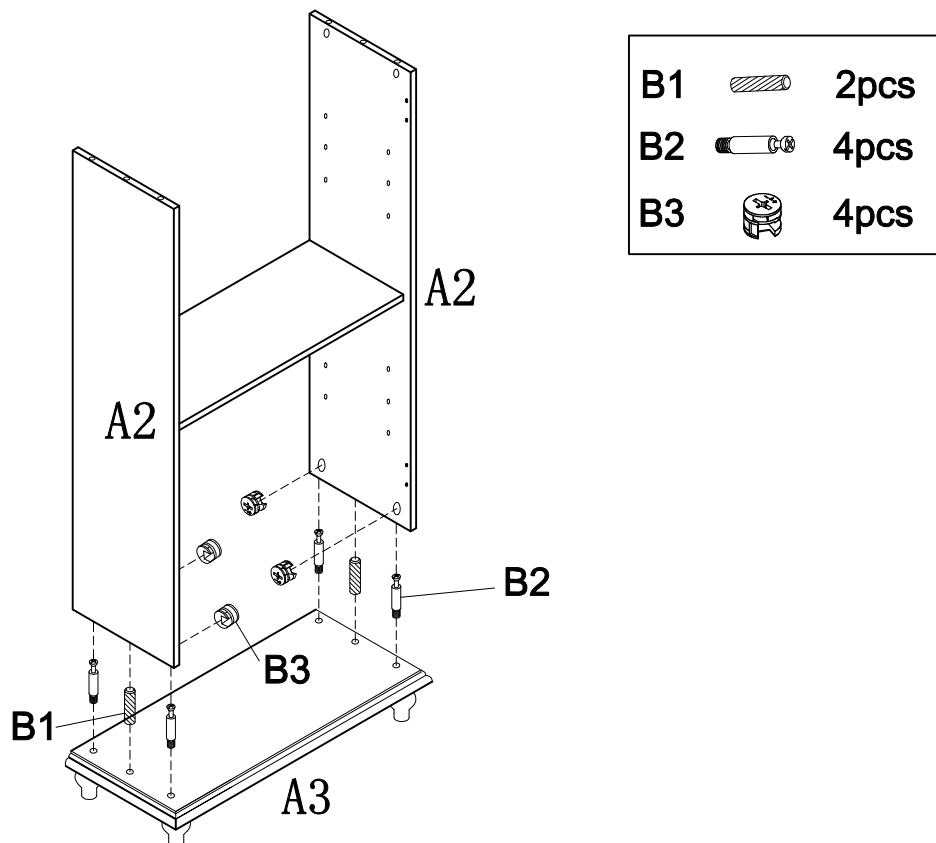


Assemble Side Panels (A2) to Bottom Panel (A3) using Cam-Bolt (B2), Cam-Lock (B3) and Wood Dowels (B1).

STEP 4

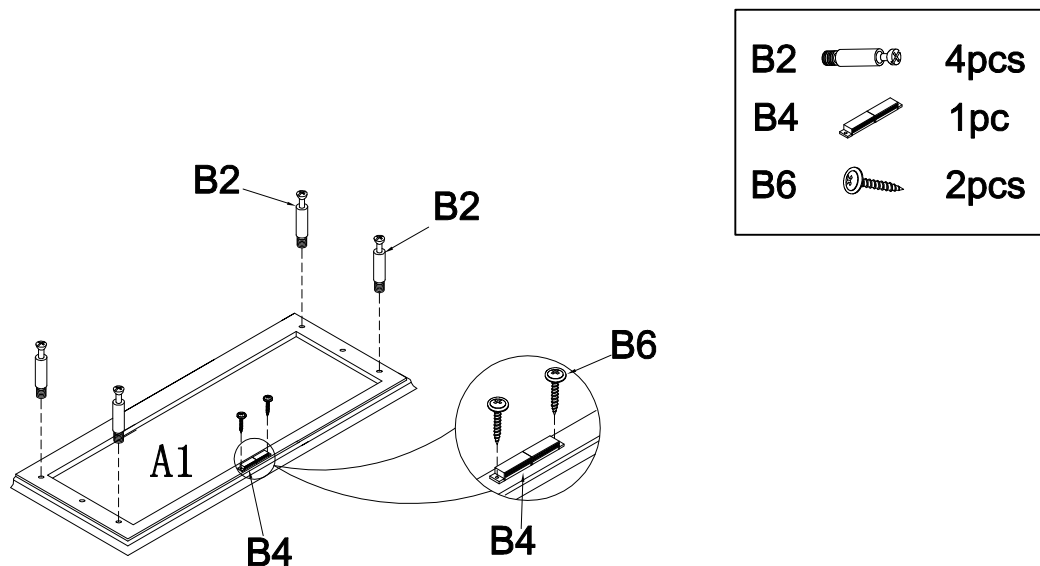

1. Attach Magnet (B4) to the bottom of Top Panel (A1) using Screws (B6). Please note holes are pre-drilled.
2. Insert Cam-Bolts (B2) into the holes on the bottom of Top Panel (A1), then tighten Cam-Bolts (B2).


STEP 5

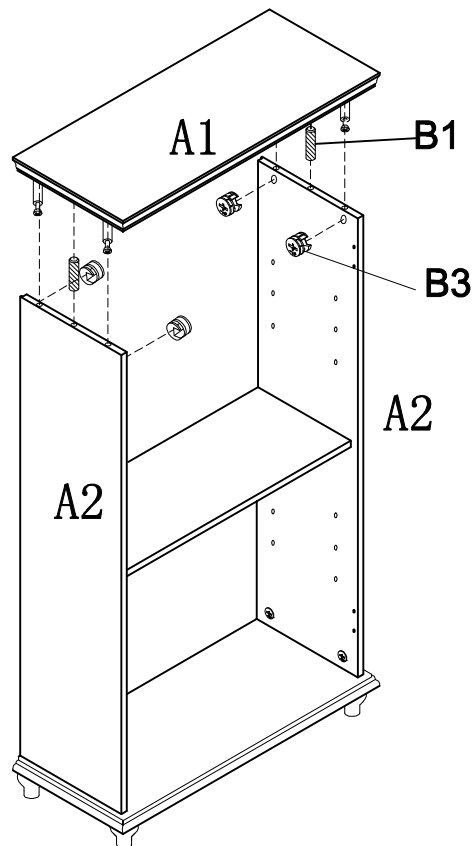

B1		2pcs
B3		4pcs

Attach Top Panel (A1) to Side Panels (A2) , then insert Cam-Lock (B3) and attach to Cam-Bolts (B2).

STEP 6

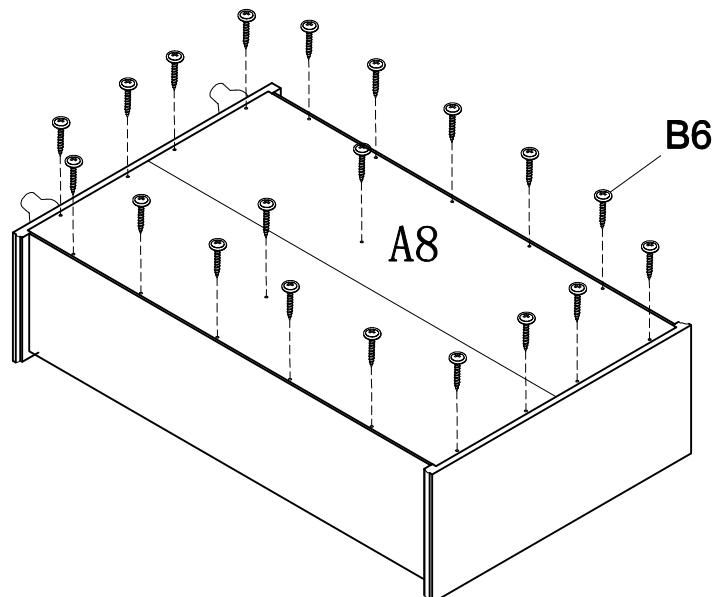


B6		20pcs
----	---	-------

Attach Back Panel (A8) to the back of this unit using Screws (B6).

STEP 7


B5		4pcs
B9		12pcs

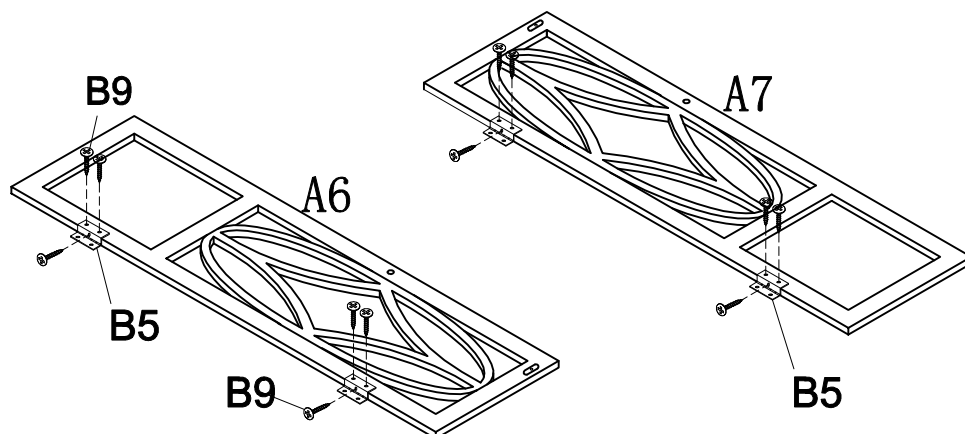

Attach Hinges (B5) to Door Panels (A6&A7) using Screws (B9).

STEP 8

B7		2pcs
B9		8pcs
B10		2pcs

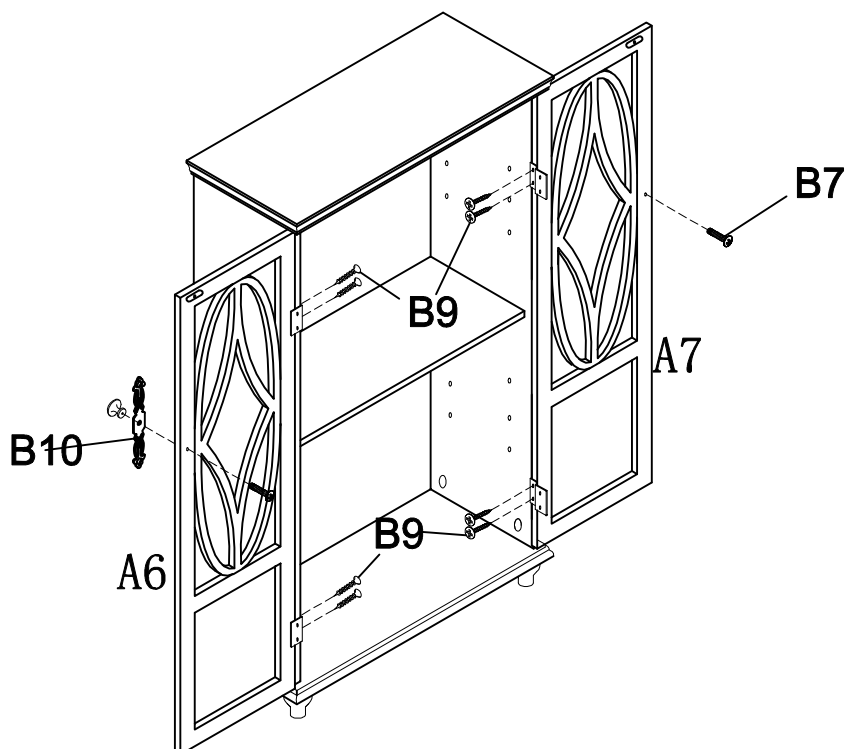


1. Assemble Door Panels (A6&A7) to Side Panels (A2) using Screws (B9).
2. Attach Handles (B10) to Door Panels (A6&A7) using Bolts (B7).

STEP 9

B8



8pcs

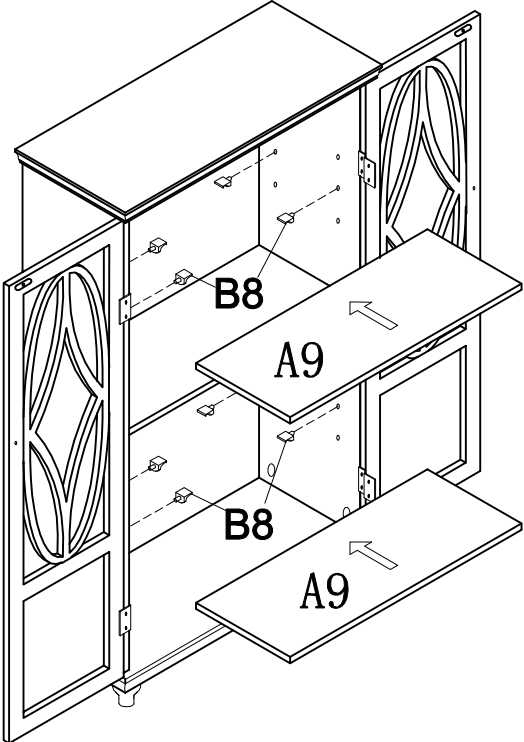

- 1). Insert Shelf Supports (B8) into holes on Side Panels (A2).
- 2). Place Shelves (A9) onto Shelf Supports (B8).

Made in China

APPENDIX: Dimension of Hardwares in this AI.

B1. Wood Dowel	B2. Cam-bolt	B3. Cam-lock
B6. Screw	B7. Bolt for handle	B9. Screw