
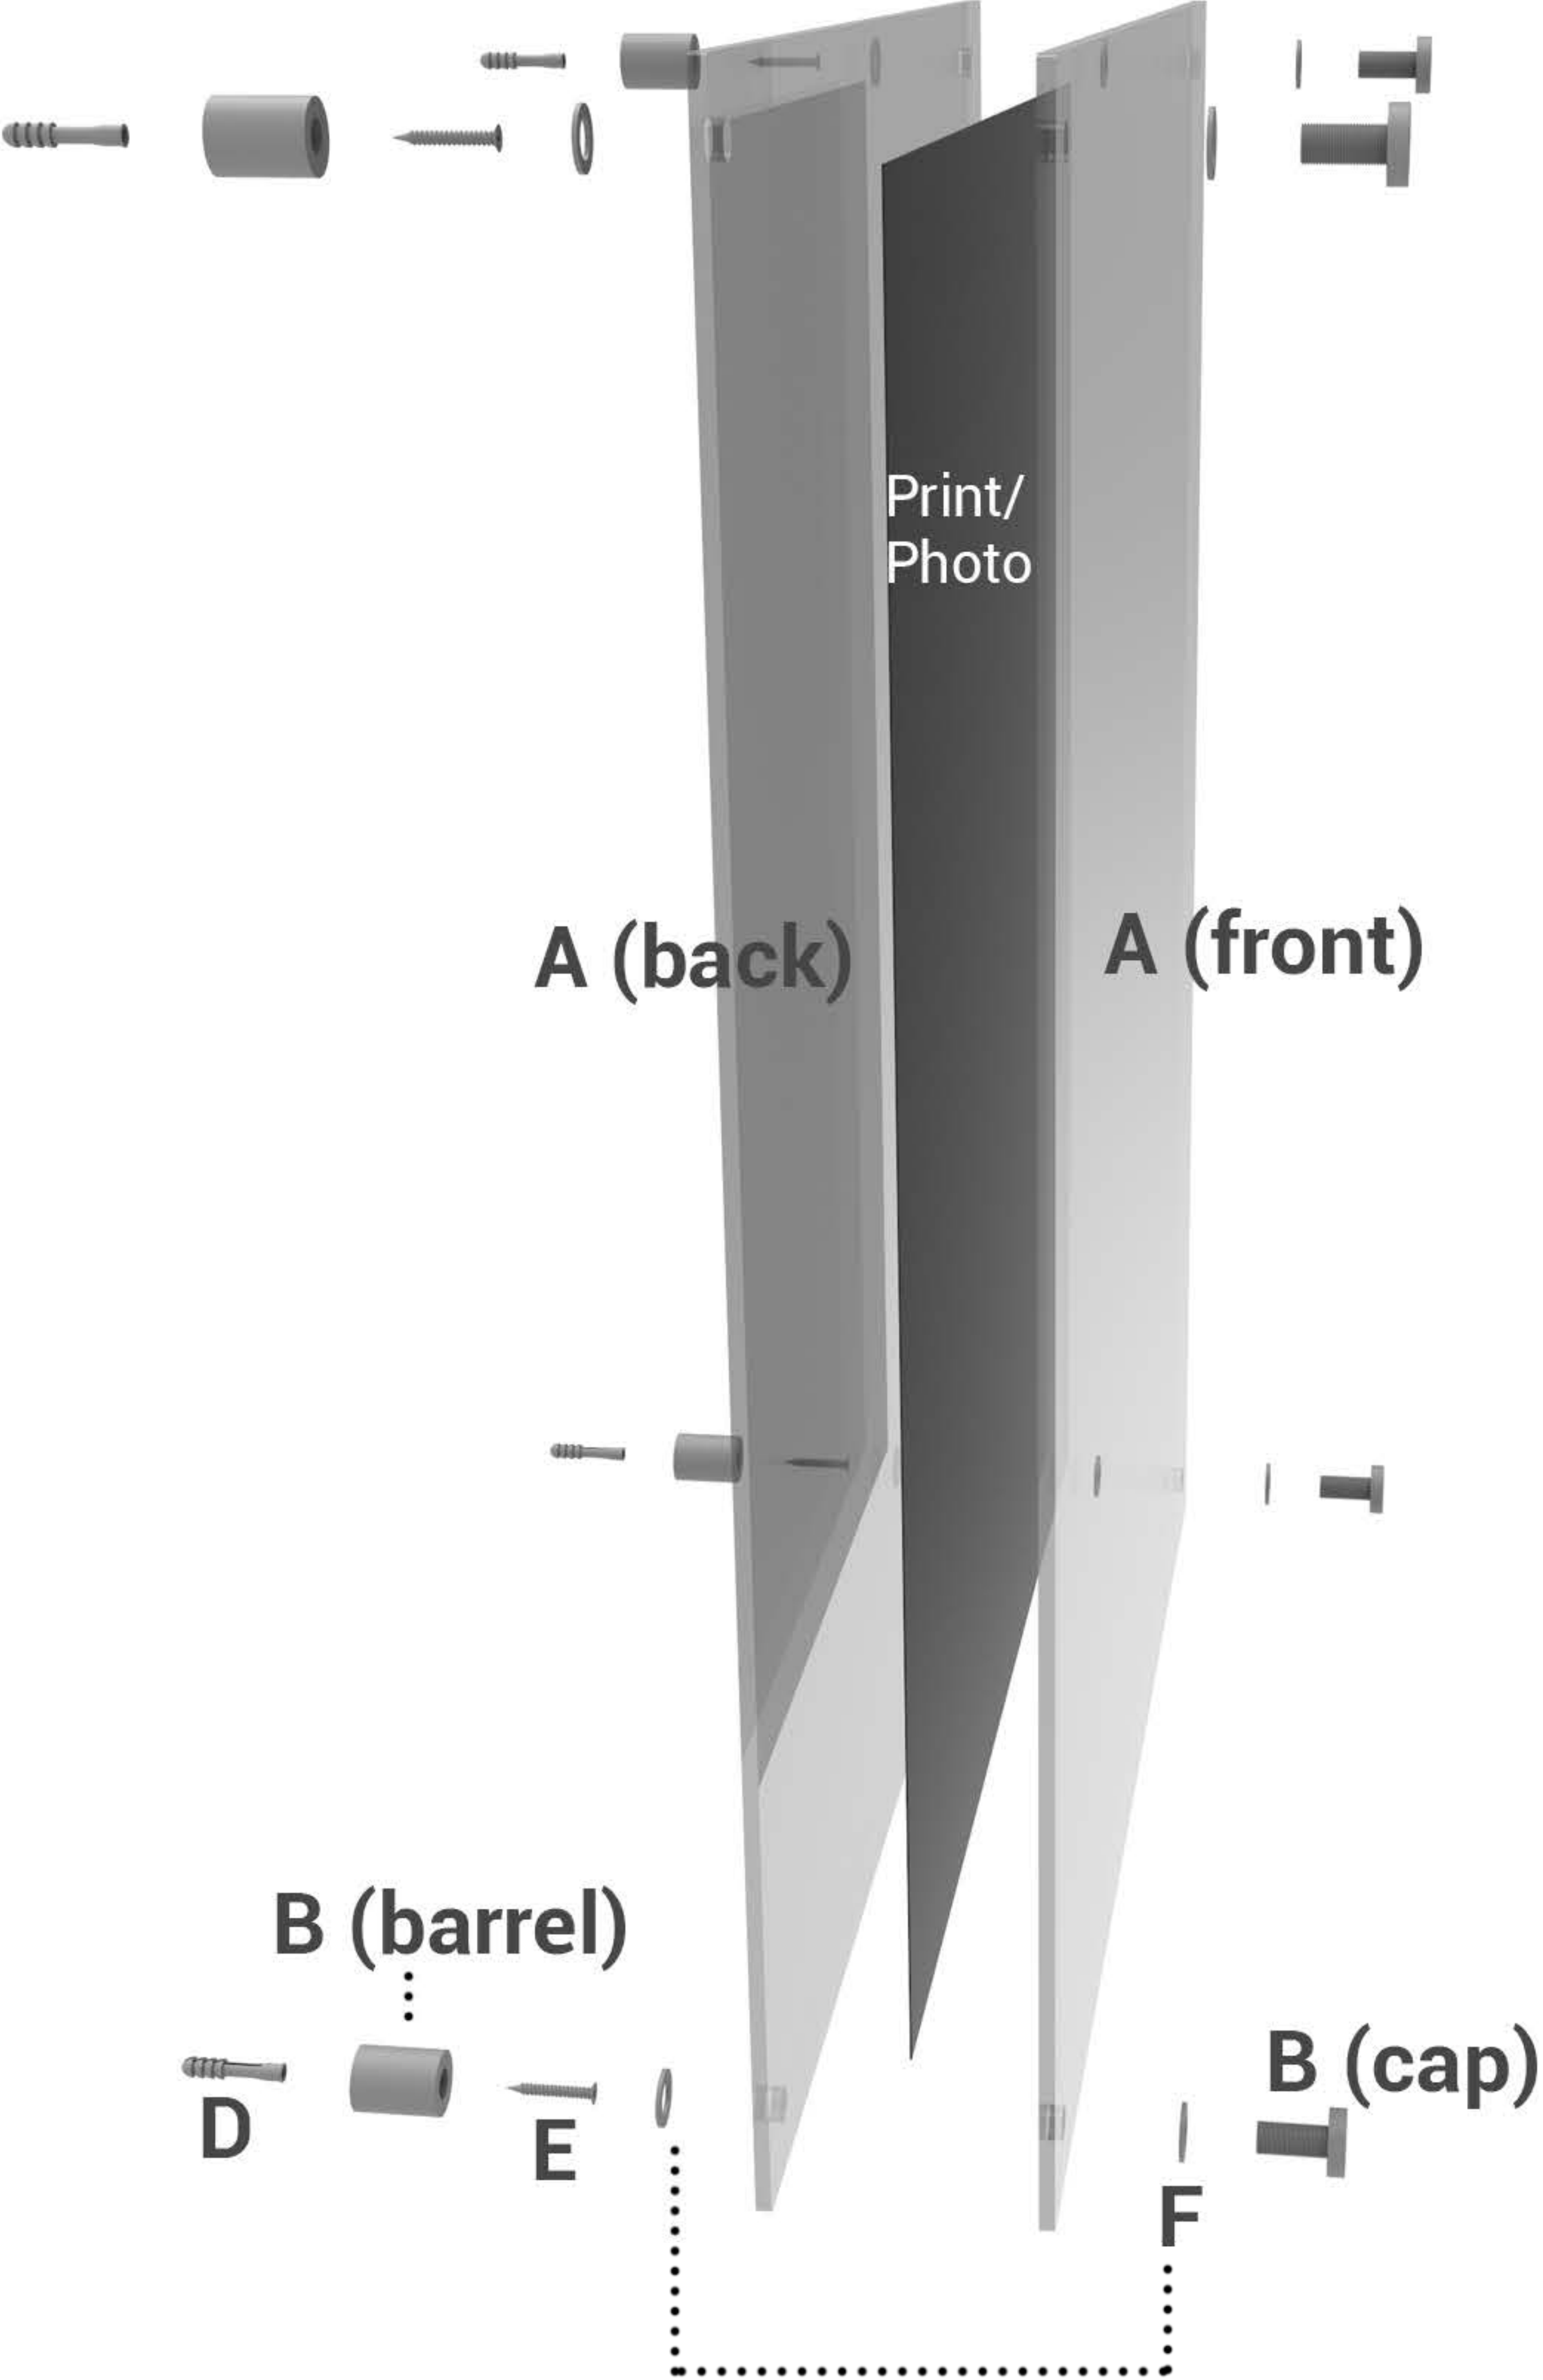


VALE ARBOR ACRYLIC FRAME WITH STAINLESS STANDOFF

Parts Listing

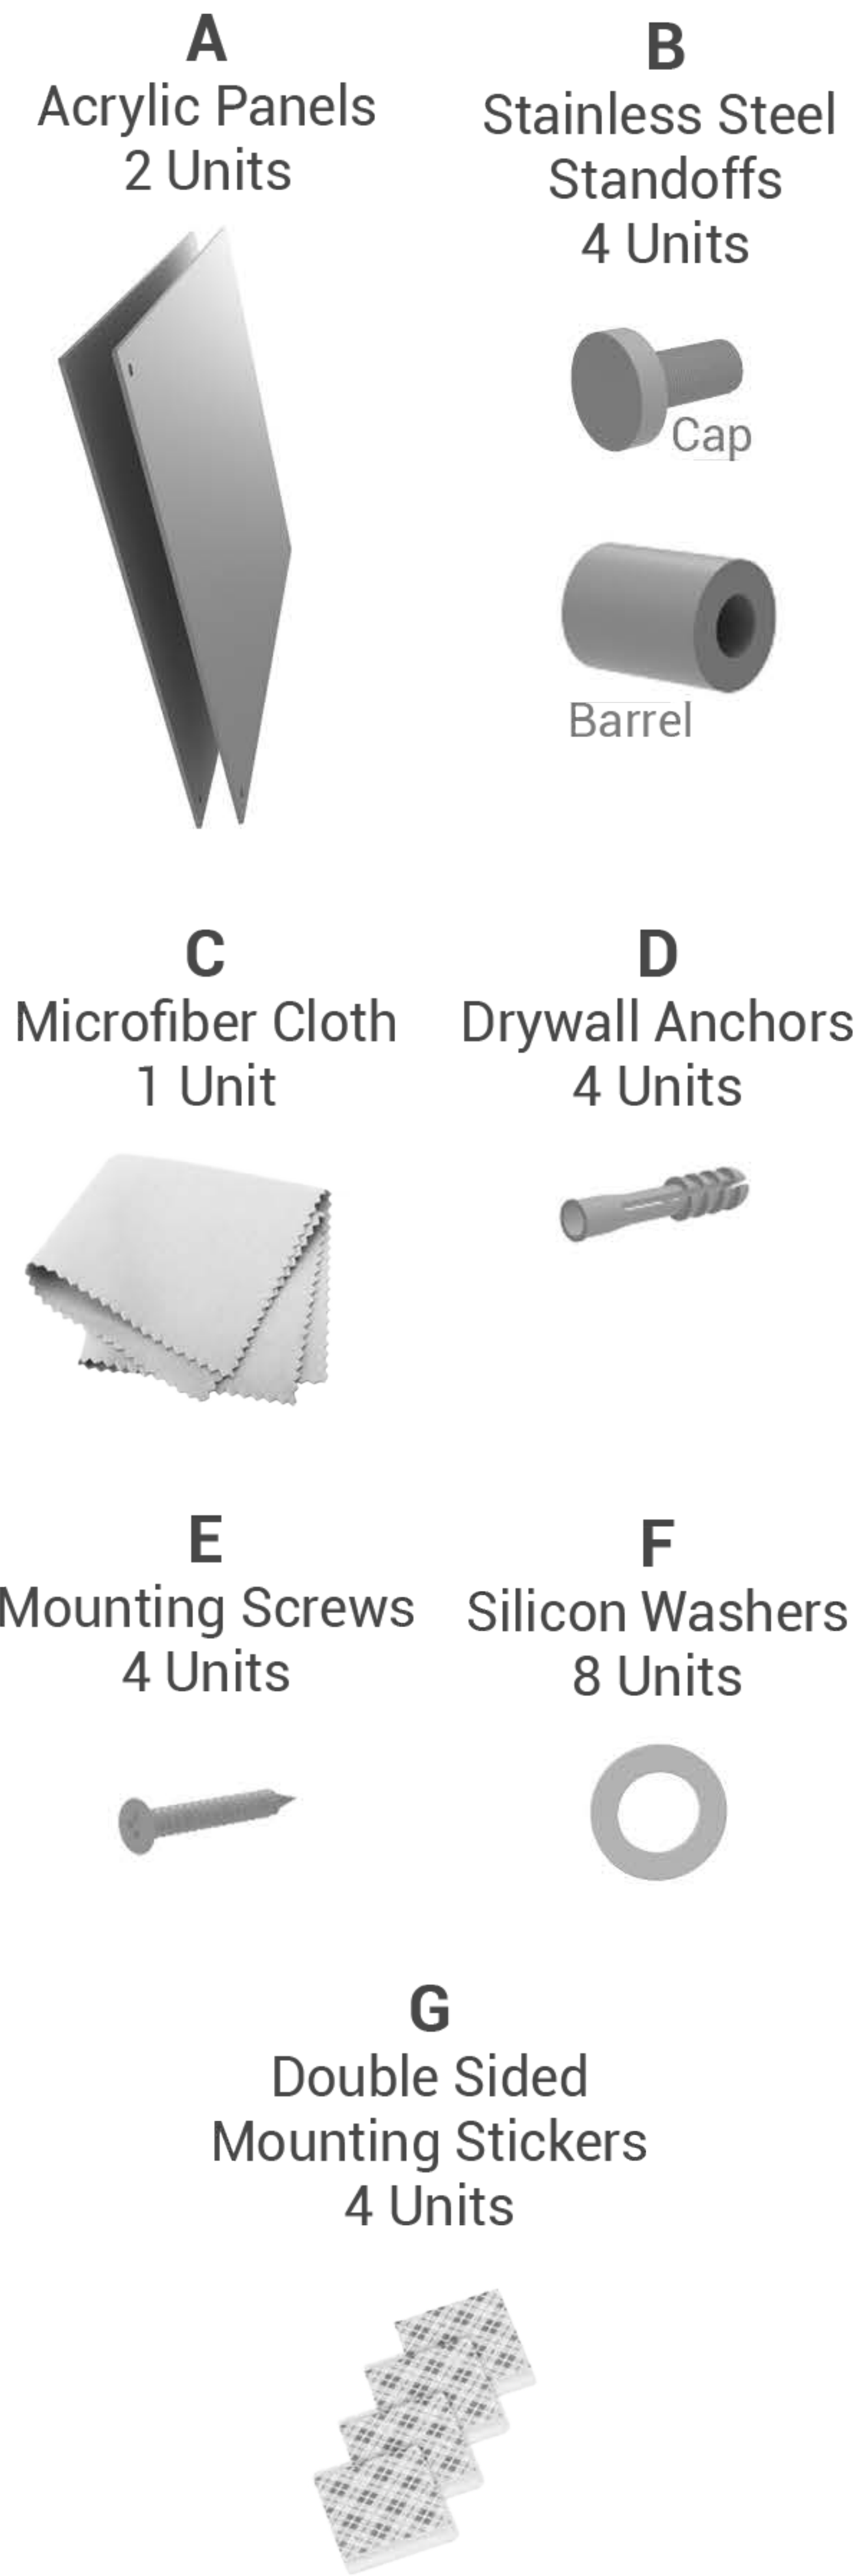

Caution: AUTION: Never use window cleaner, ammonia products, or other chemical sprays on acrylic. Use a soft clean damp cloth when cleaning acrylic surfaces. It is possible to scratch acrylic, so NEVER use any scouring compounds or chemical cleaners (no Windex or other glass cleaners (even if they are environmentally friendly, organic or non-scented)). Do not use any specialty solvents to remove stickiness or glue.

Scratches can happen. Unlike other materials, scratches on acrylic can be removed with specialty acrylic polish.

INSTALLATION INSTRUCTIONS

Tools Needed:
Phillips Head Screwdriver, Level, 3/16" Drill Bit, Pencil

Please Read All Instructions Before Installation

- Step 1: Remove packing material and corner guards
- Step 2: Place one acrylic panel (A) on wall (in exact location) with level on top (leave protective film on)
- Step 3: Once location is correct and panel is level, mark all 4 holes with pencil
- Step 4: Drill pilot holes for each of the 4 mounting holes with a 3/16" drill bit using pencil marks
- Step 5: Press drywall anchors (D) into holes until flush with drywall surface (Cannot be protruding from drywall)
- Step 6: Screw barrel of standoff (B) into the drywall anchors (D) with the provided screws (E)
- Step 7: Remove protective film from both sides of both acrylic panels (A)
- Step 8: Use double sided mounting stickers (G) to mount the print/photo to one of the acrylic panels (A) [both panels are identical] to be positioned closest to the wall
- Step 9: Use provided cloth (C) to wipe any fingerprints from acrylic panels (use water if necessary, NOT CLEANER)
- Step 10: Place one washer (F) on to each of the 4 standoff caps (B)
- Step 11: Place front acrylic panel (A) onto all 4 standoff caps (B)
- Step 12: Place Back panel (A) onto all 4 standoff caps (B)
- Step 13: Place one washer (F) on to each of the 4 standoff caps (B)
- Step 14: Have a second person hold the assembly (two panels, 4 standoff caps) up to the 4 mounted standoff barrels mounted to the wall
- Step 15: Slowly screw each standoff cap (B) into the barrels (B) (just a few turns for each to make sure all are started)
- Step 16: Hand tighten each of the 4 caps (B)

