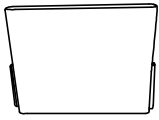
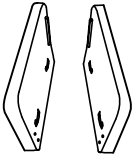








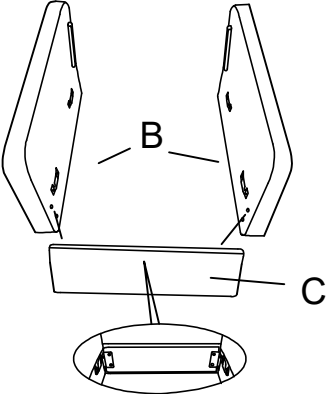
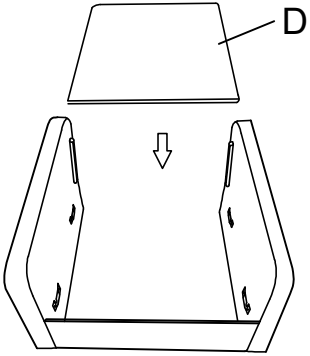
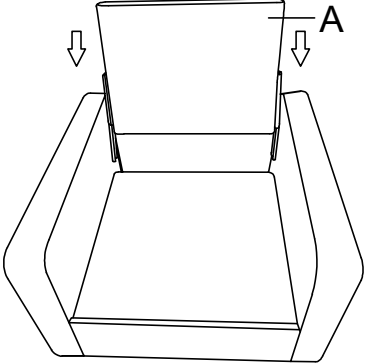
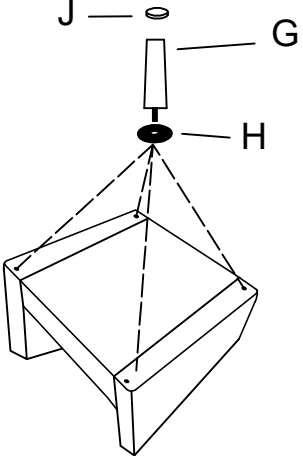
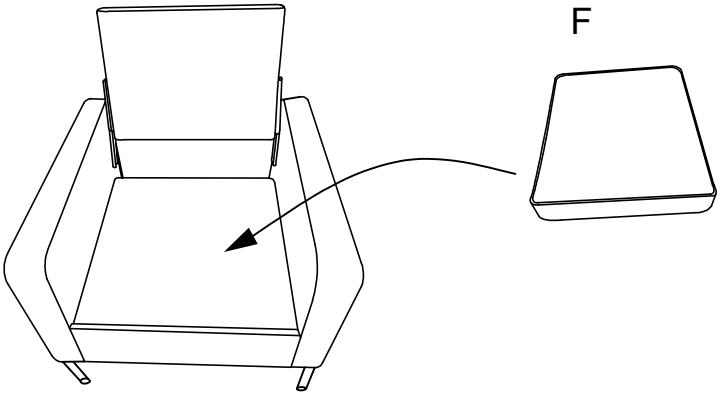
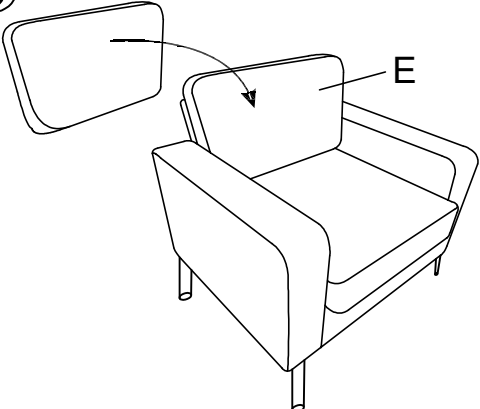
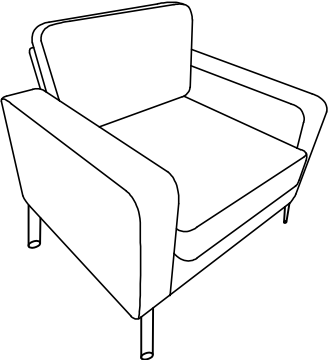


# Assembly Instructions

Ax1 	Bx2 	Cx1 	Dx1 	Ex1 
Fx1 	Gx4 	Hx4 	Ix1 	Jx4 

<p>① First, use the accessory "I" to unscrew the screws on "B". Then, align the holes on the iron piece of "C" with the screw holes on the handrail, and fix it with screws.</p> 	<p>②</p> 	<p>③</p> 
<p>④</p> 	<p>⑤</p> 	
<p>⑥</p> 	<p>⑦</p> 	<p>Please note: We provide fast after-sales service, don't worry if there is something wrong with the package you received. Please contact us first, we will reply you in time!</p>