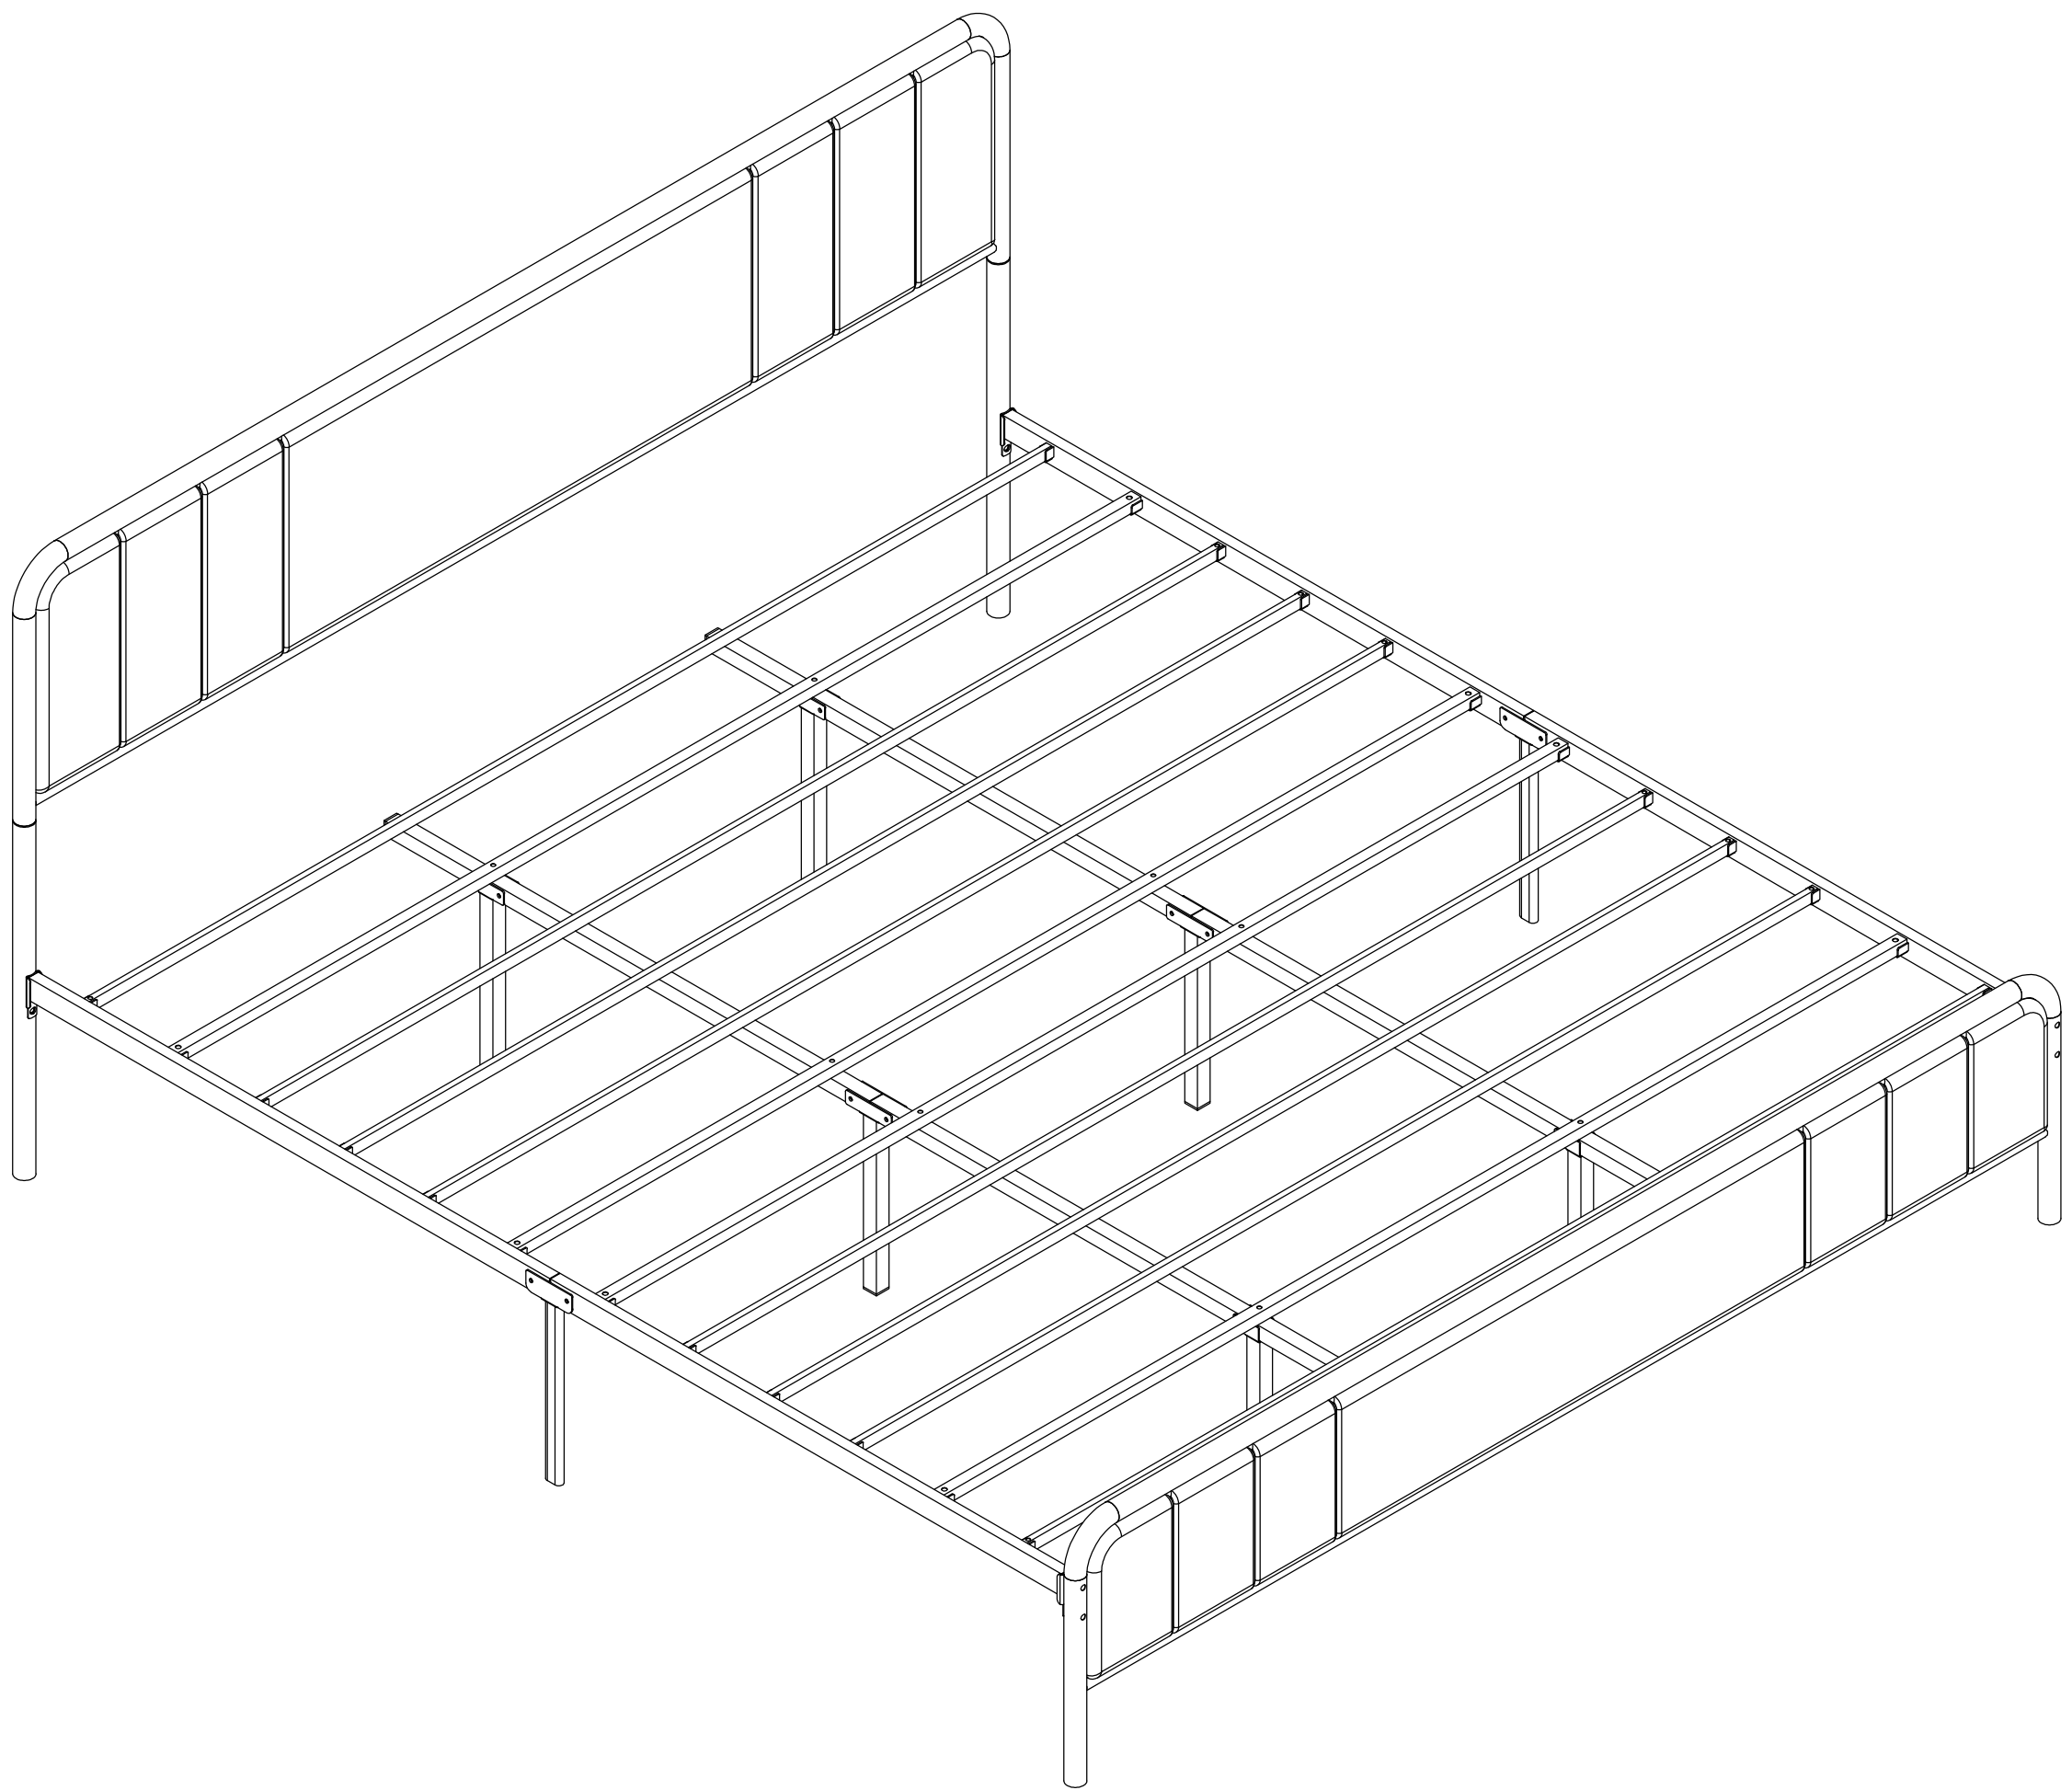


Assembly Instruction



Instruction Manual

Thank you for shopping with us!

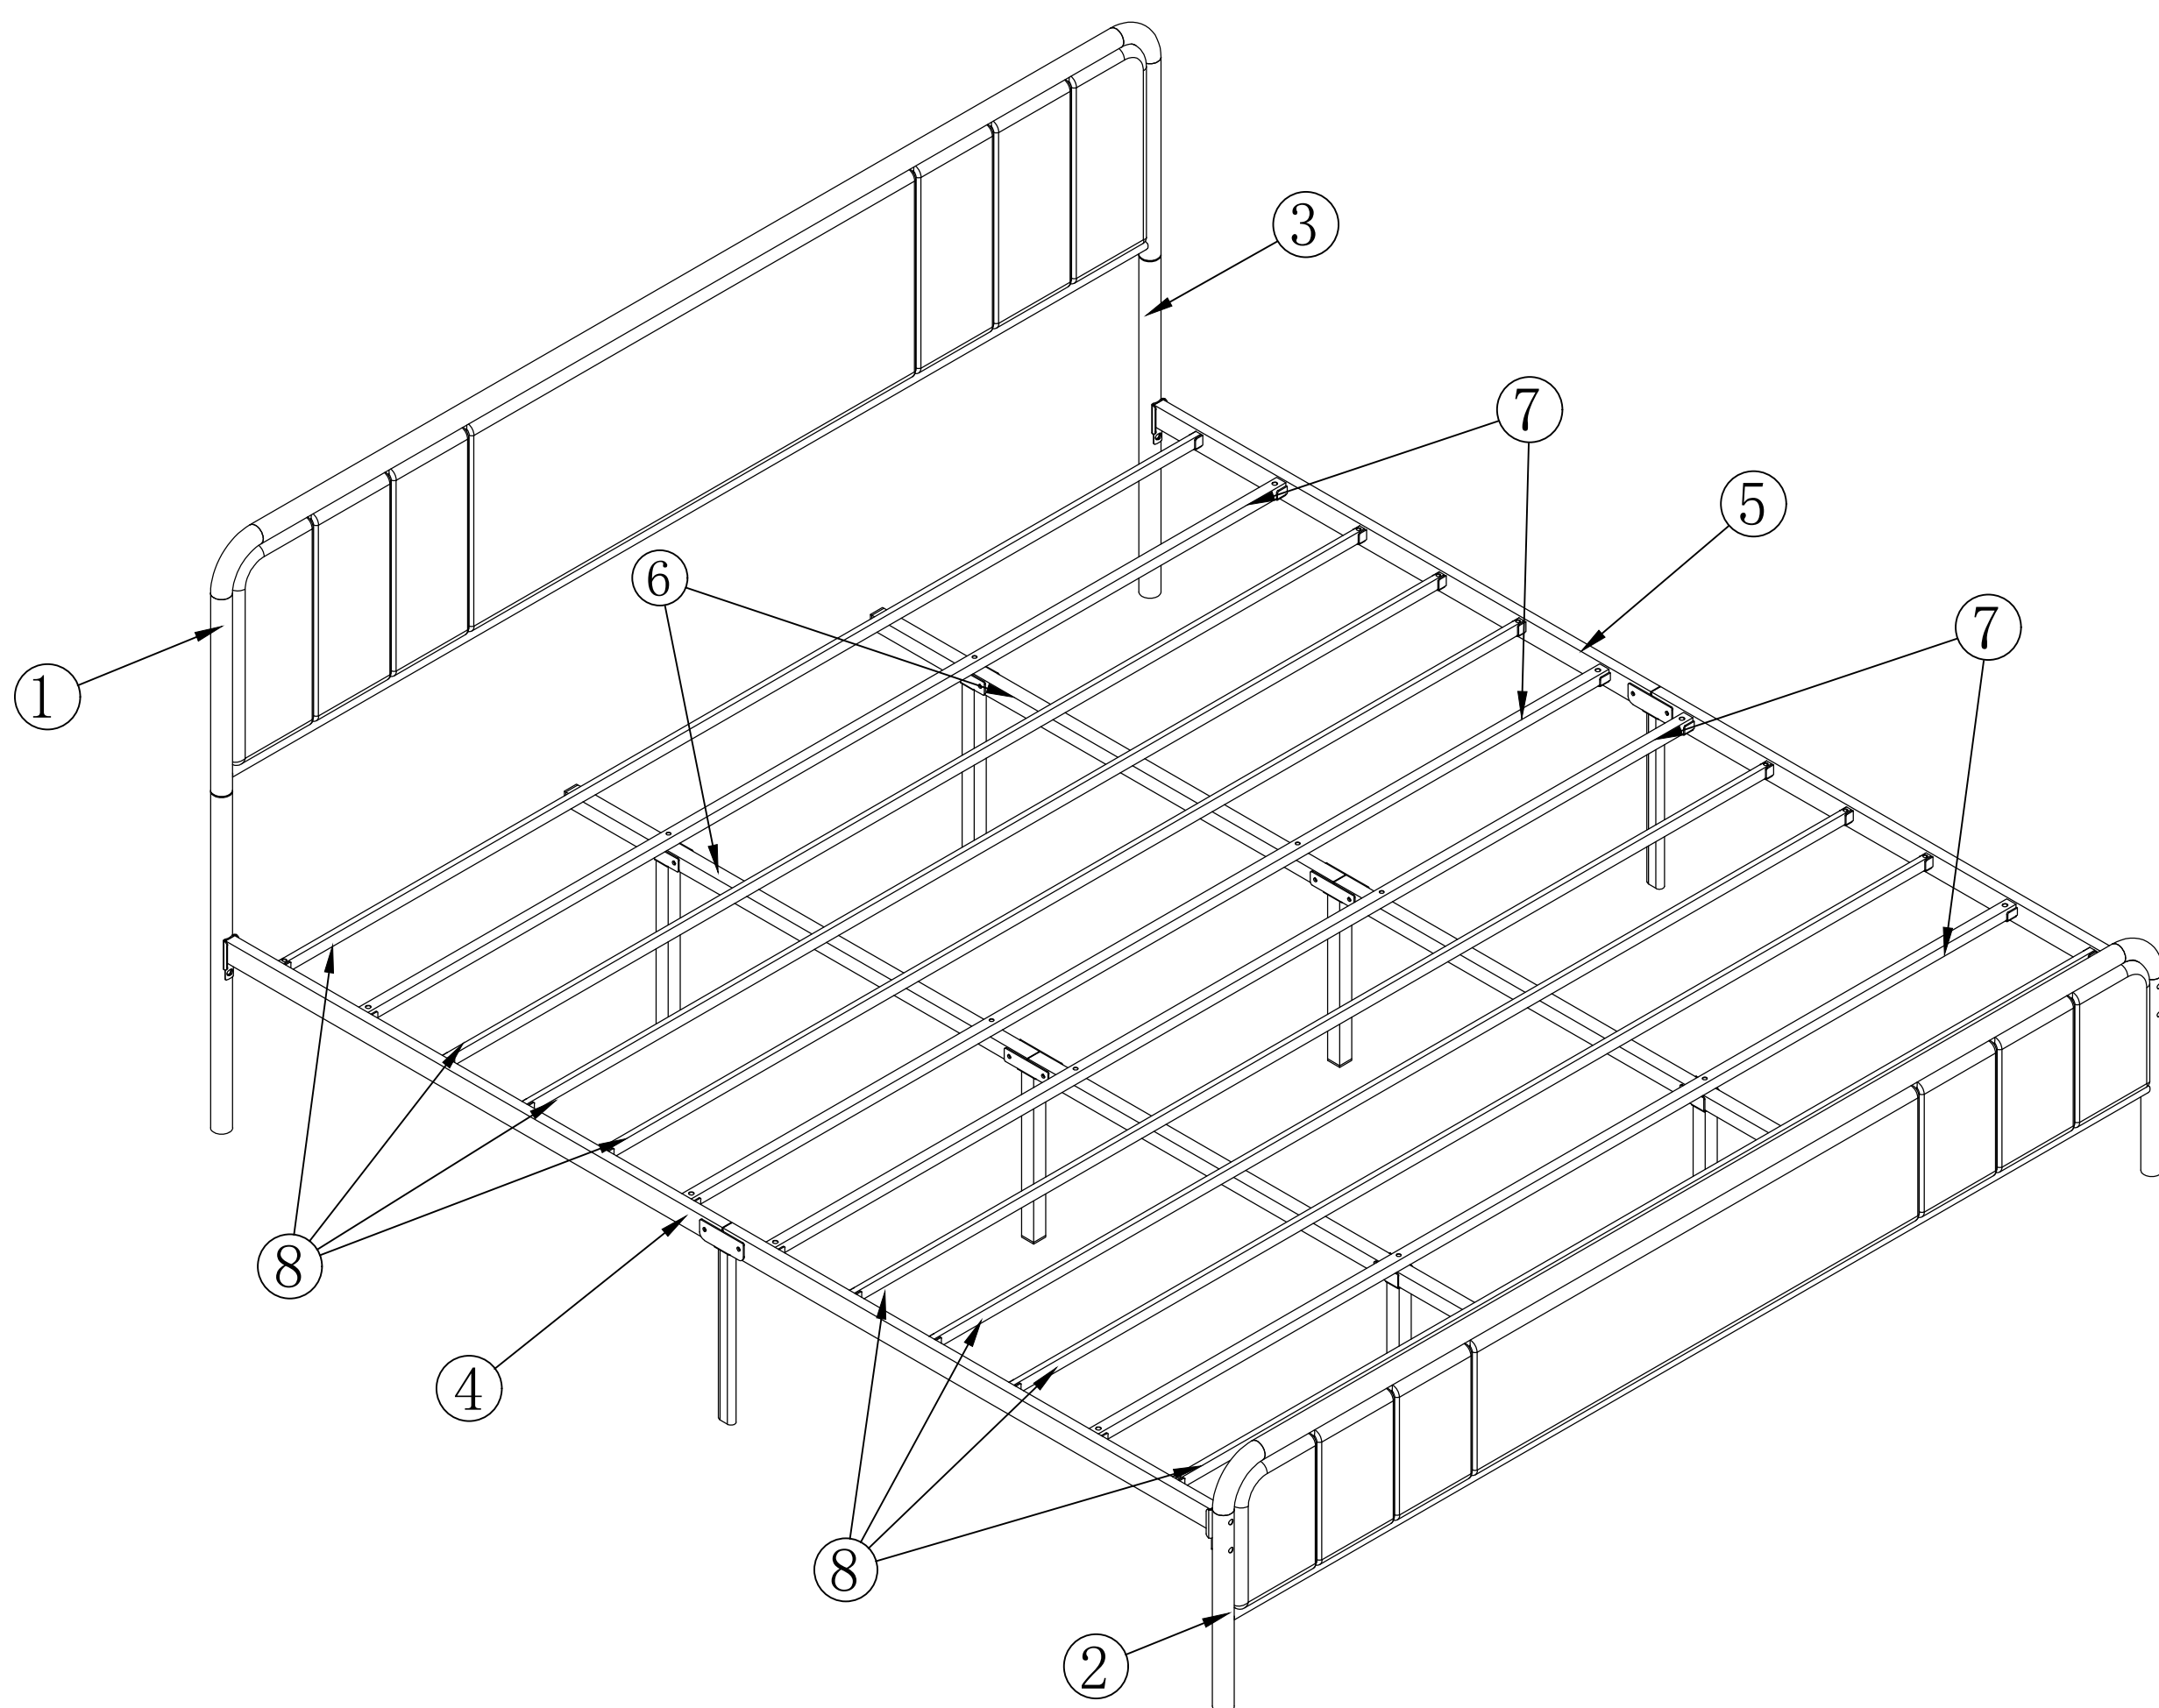
We appreciate your purchase and are ready to be at your service!

if you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!









We will definitely give you a satisfactory solution or answer then!

Contact us at our after-sales service email:










Email: 




Parts List
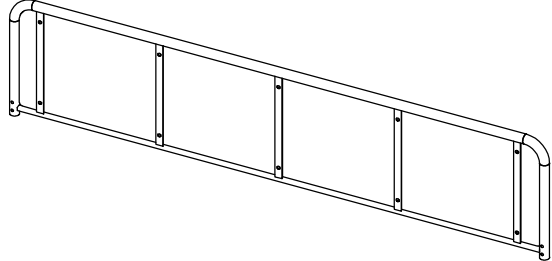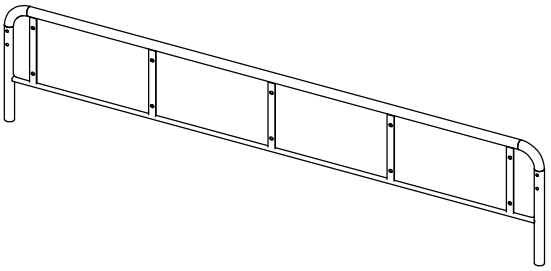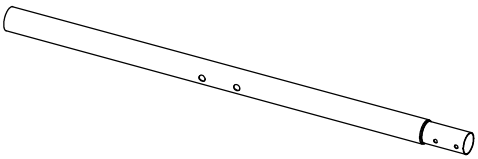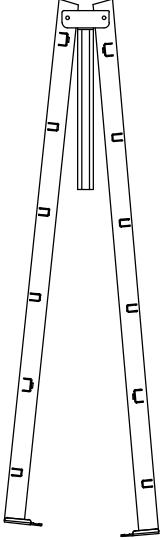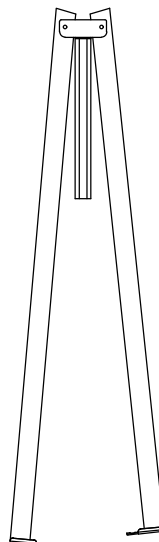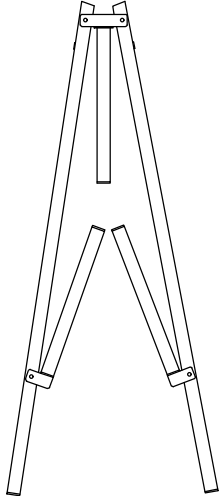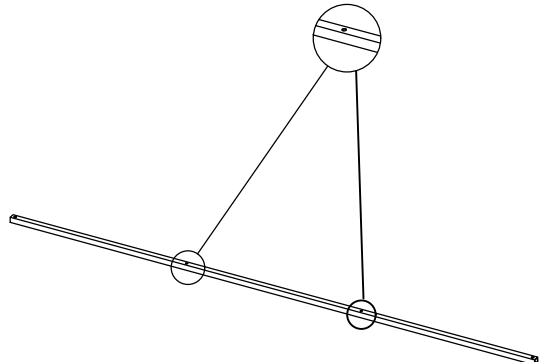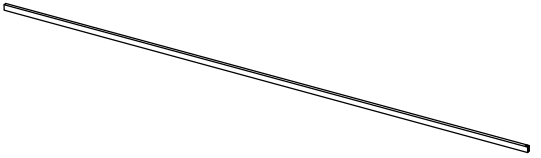
<div>1</div> <div></div> <div>1PC</div>	<div>2</div> <div></div> <div>1PC</div>	<div>3</div> <div></div> <div>2PCS</div>	<div>4</div> <div></div> <div>LEFT-1PC</div>
<div>5</div> <div></div> <div>RIGHT-1PC</div>	<div>6</div> <div></div> <div>2PCS</div>	<div>7</div> <div></div> <div>4PCS</div>	<div>8</div> <div></div> <div>8PCS</div>

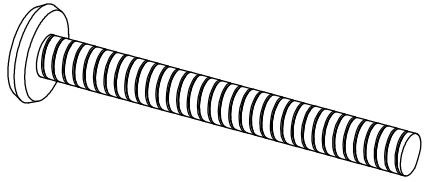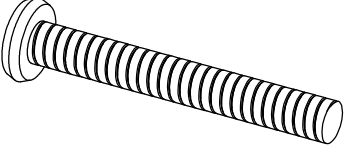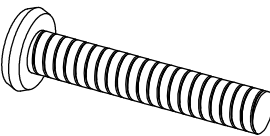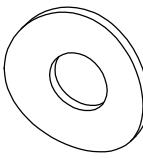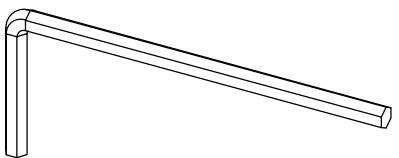
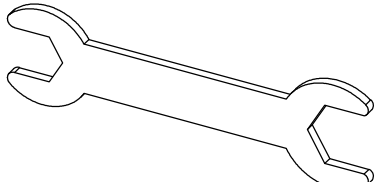

Hardware List

<div>A</div> <div>M6x60mm</div> <div></div> <div>4PCS</div>	<div>B</div> <div>M8x45mm</div> <div></div> <div>8PCS</div>	<div>C</div> <div>M6x35mm</div> <div></div> <div>4PCS</div>	<div>D</div> <div>M6x15mm</div> <div></div> <div>4PCS</div>
<div>E</div> <div>M6x25mm</div> <div></div> <div>8PCS</div>	<div>F</div> <div>M8</div> <div></div> <div>4PCS</div>	<div>G</div> <div>Φ 8</div> <div></div> <div>8PCS</div>	<div></div> <div></div> <div>1PC</div>
<div></div> <div></div> <div>1PC</div>			

Install the headboard


M6x15mm

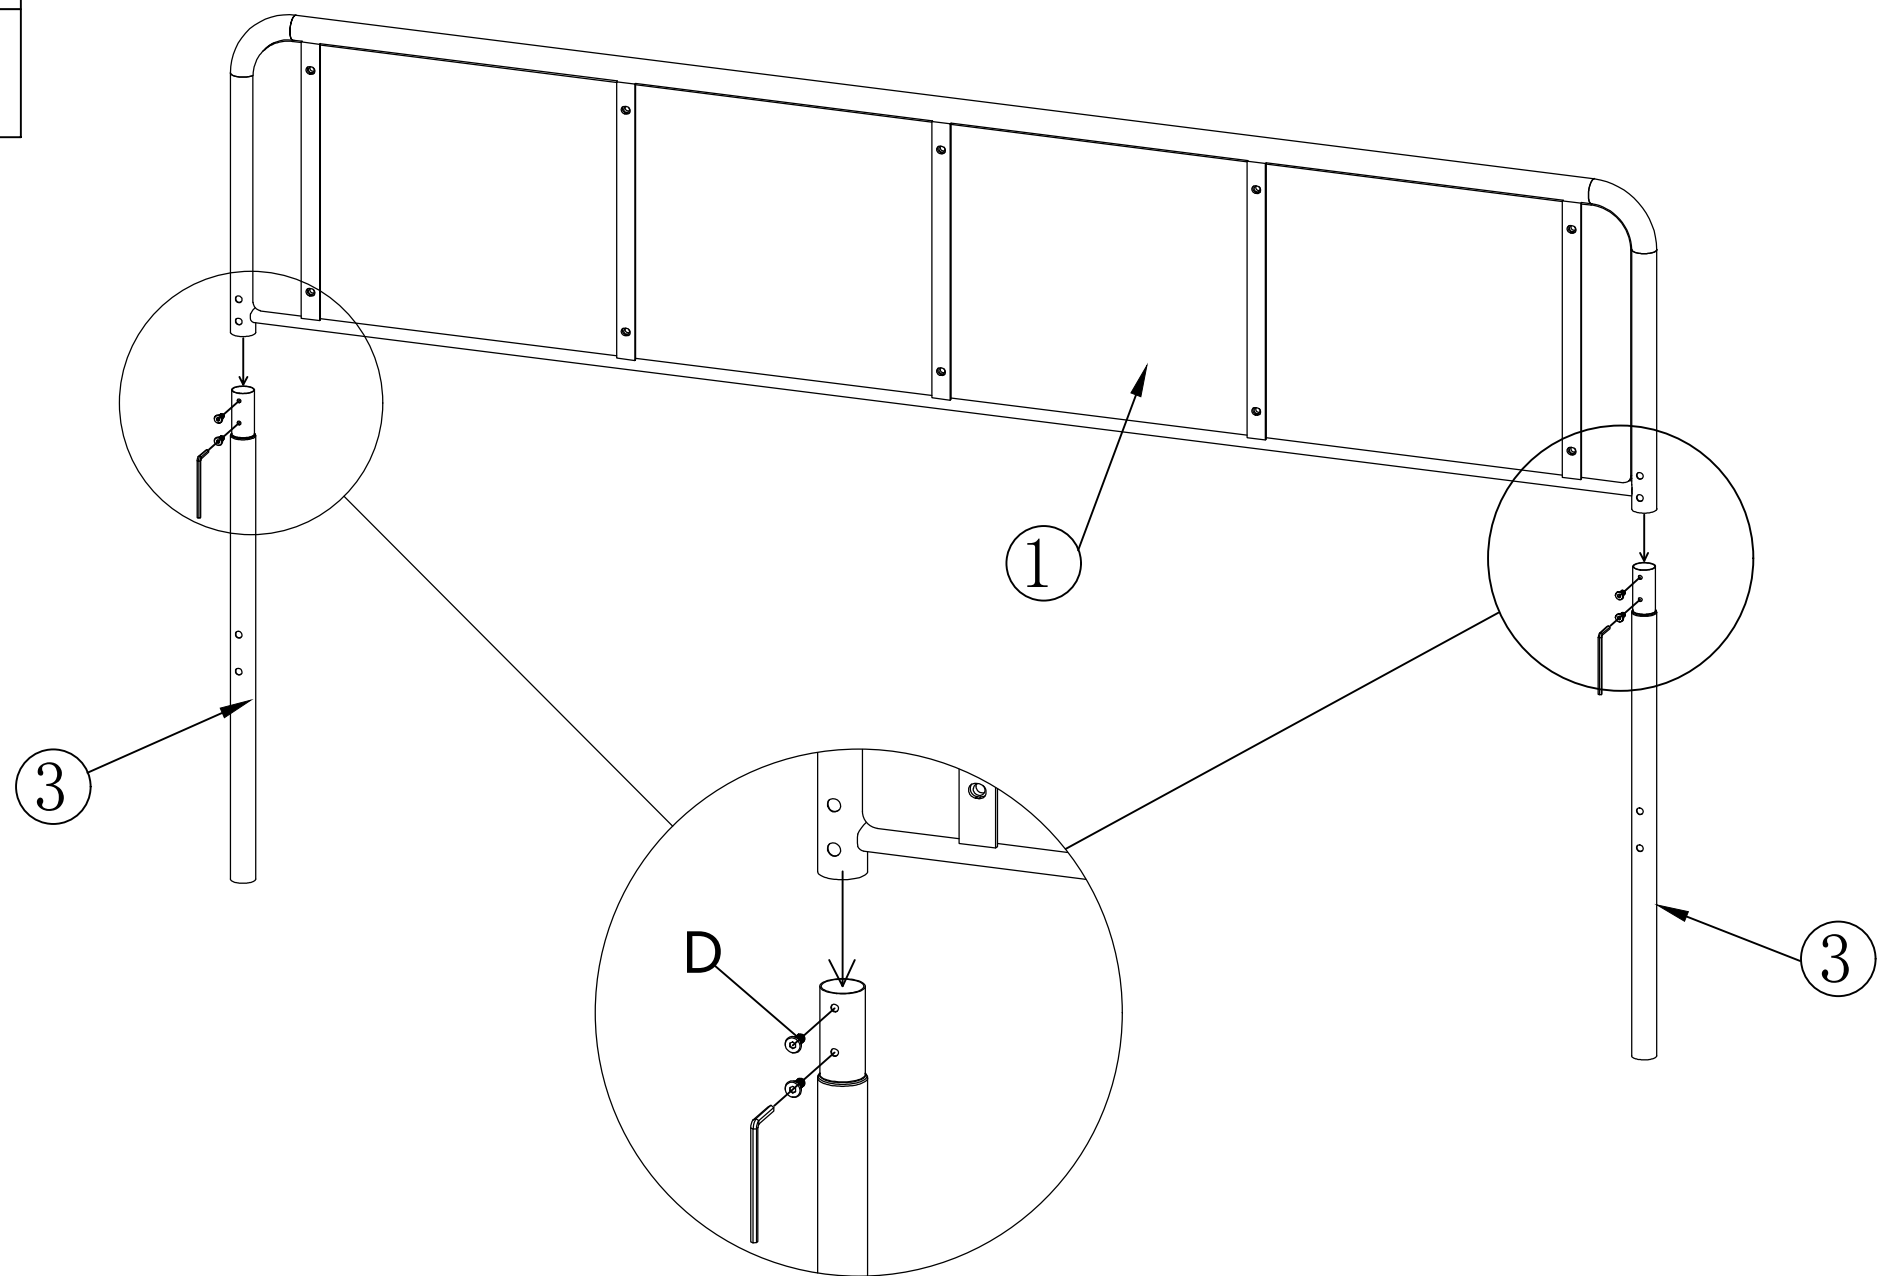
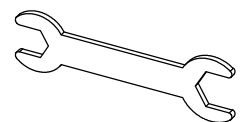
D 4PCS

Connect the headboard and the footboard by
fixing the side rail ④、⑤ on them
M8x45mm

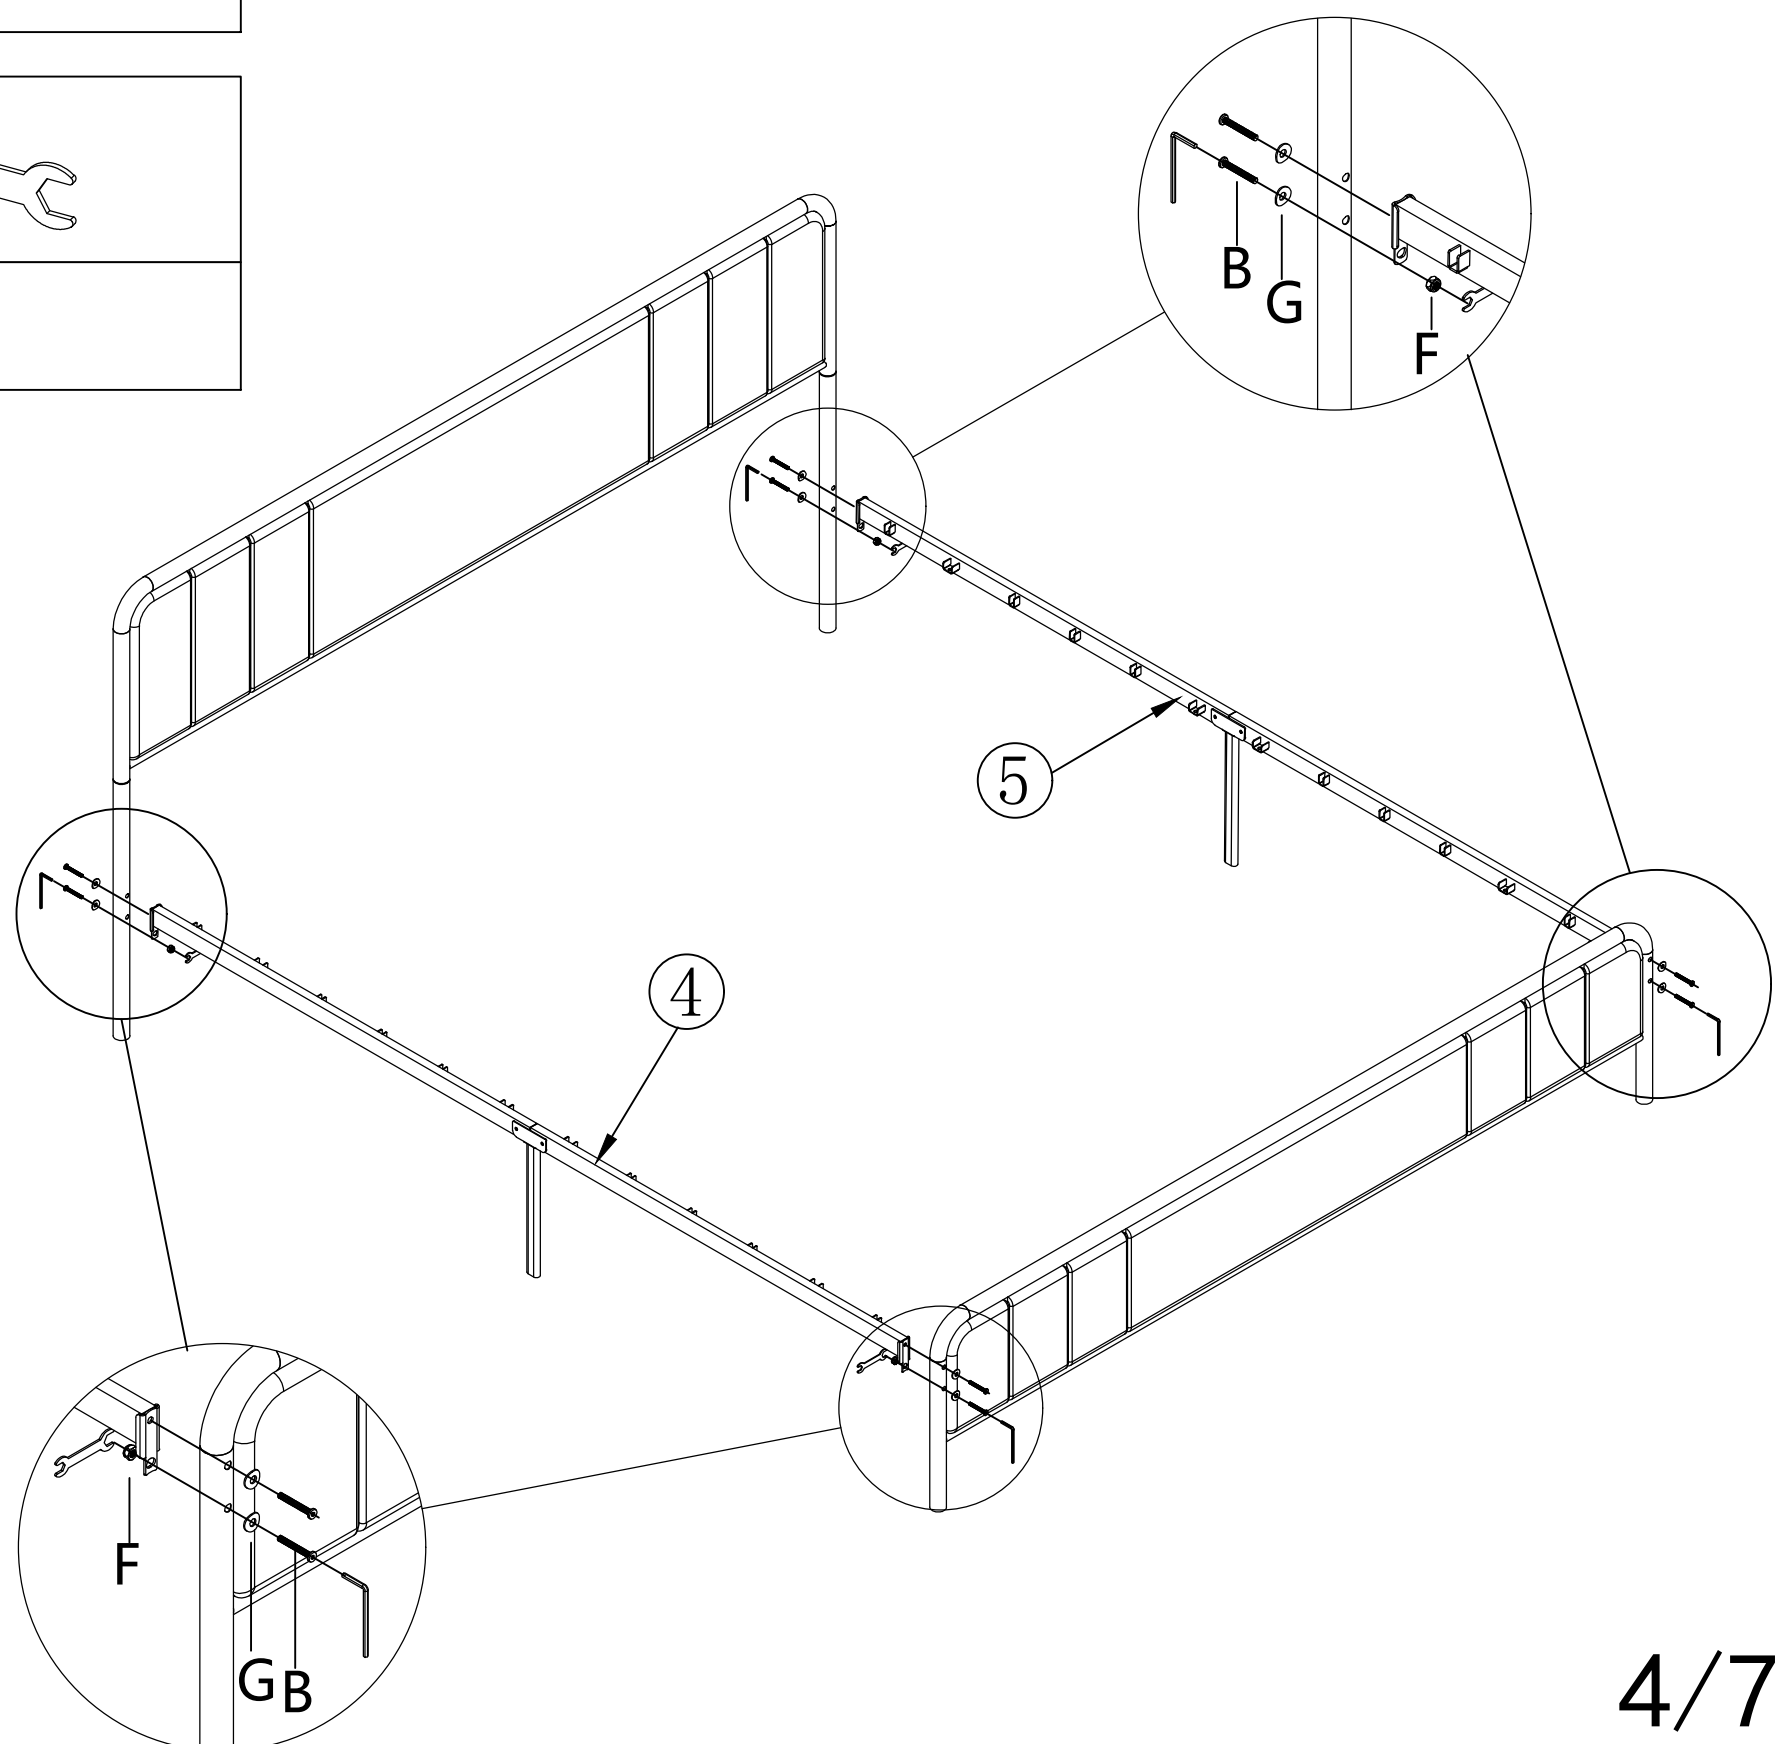
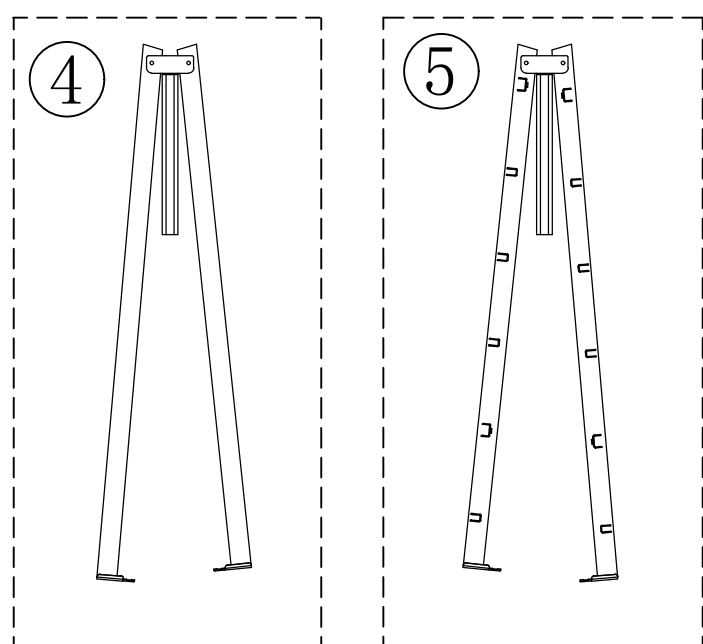
B 8PCS


M8

F 4PCS


Φ8

G 8PCS








M6x25mm

E

4PCS



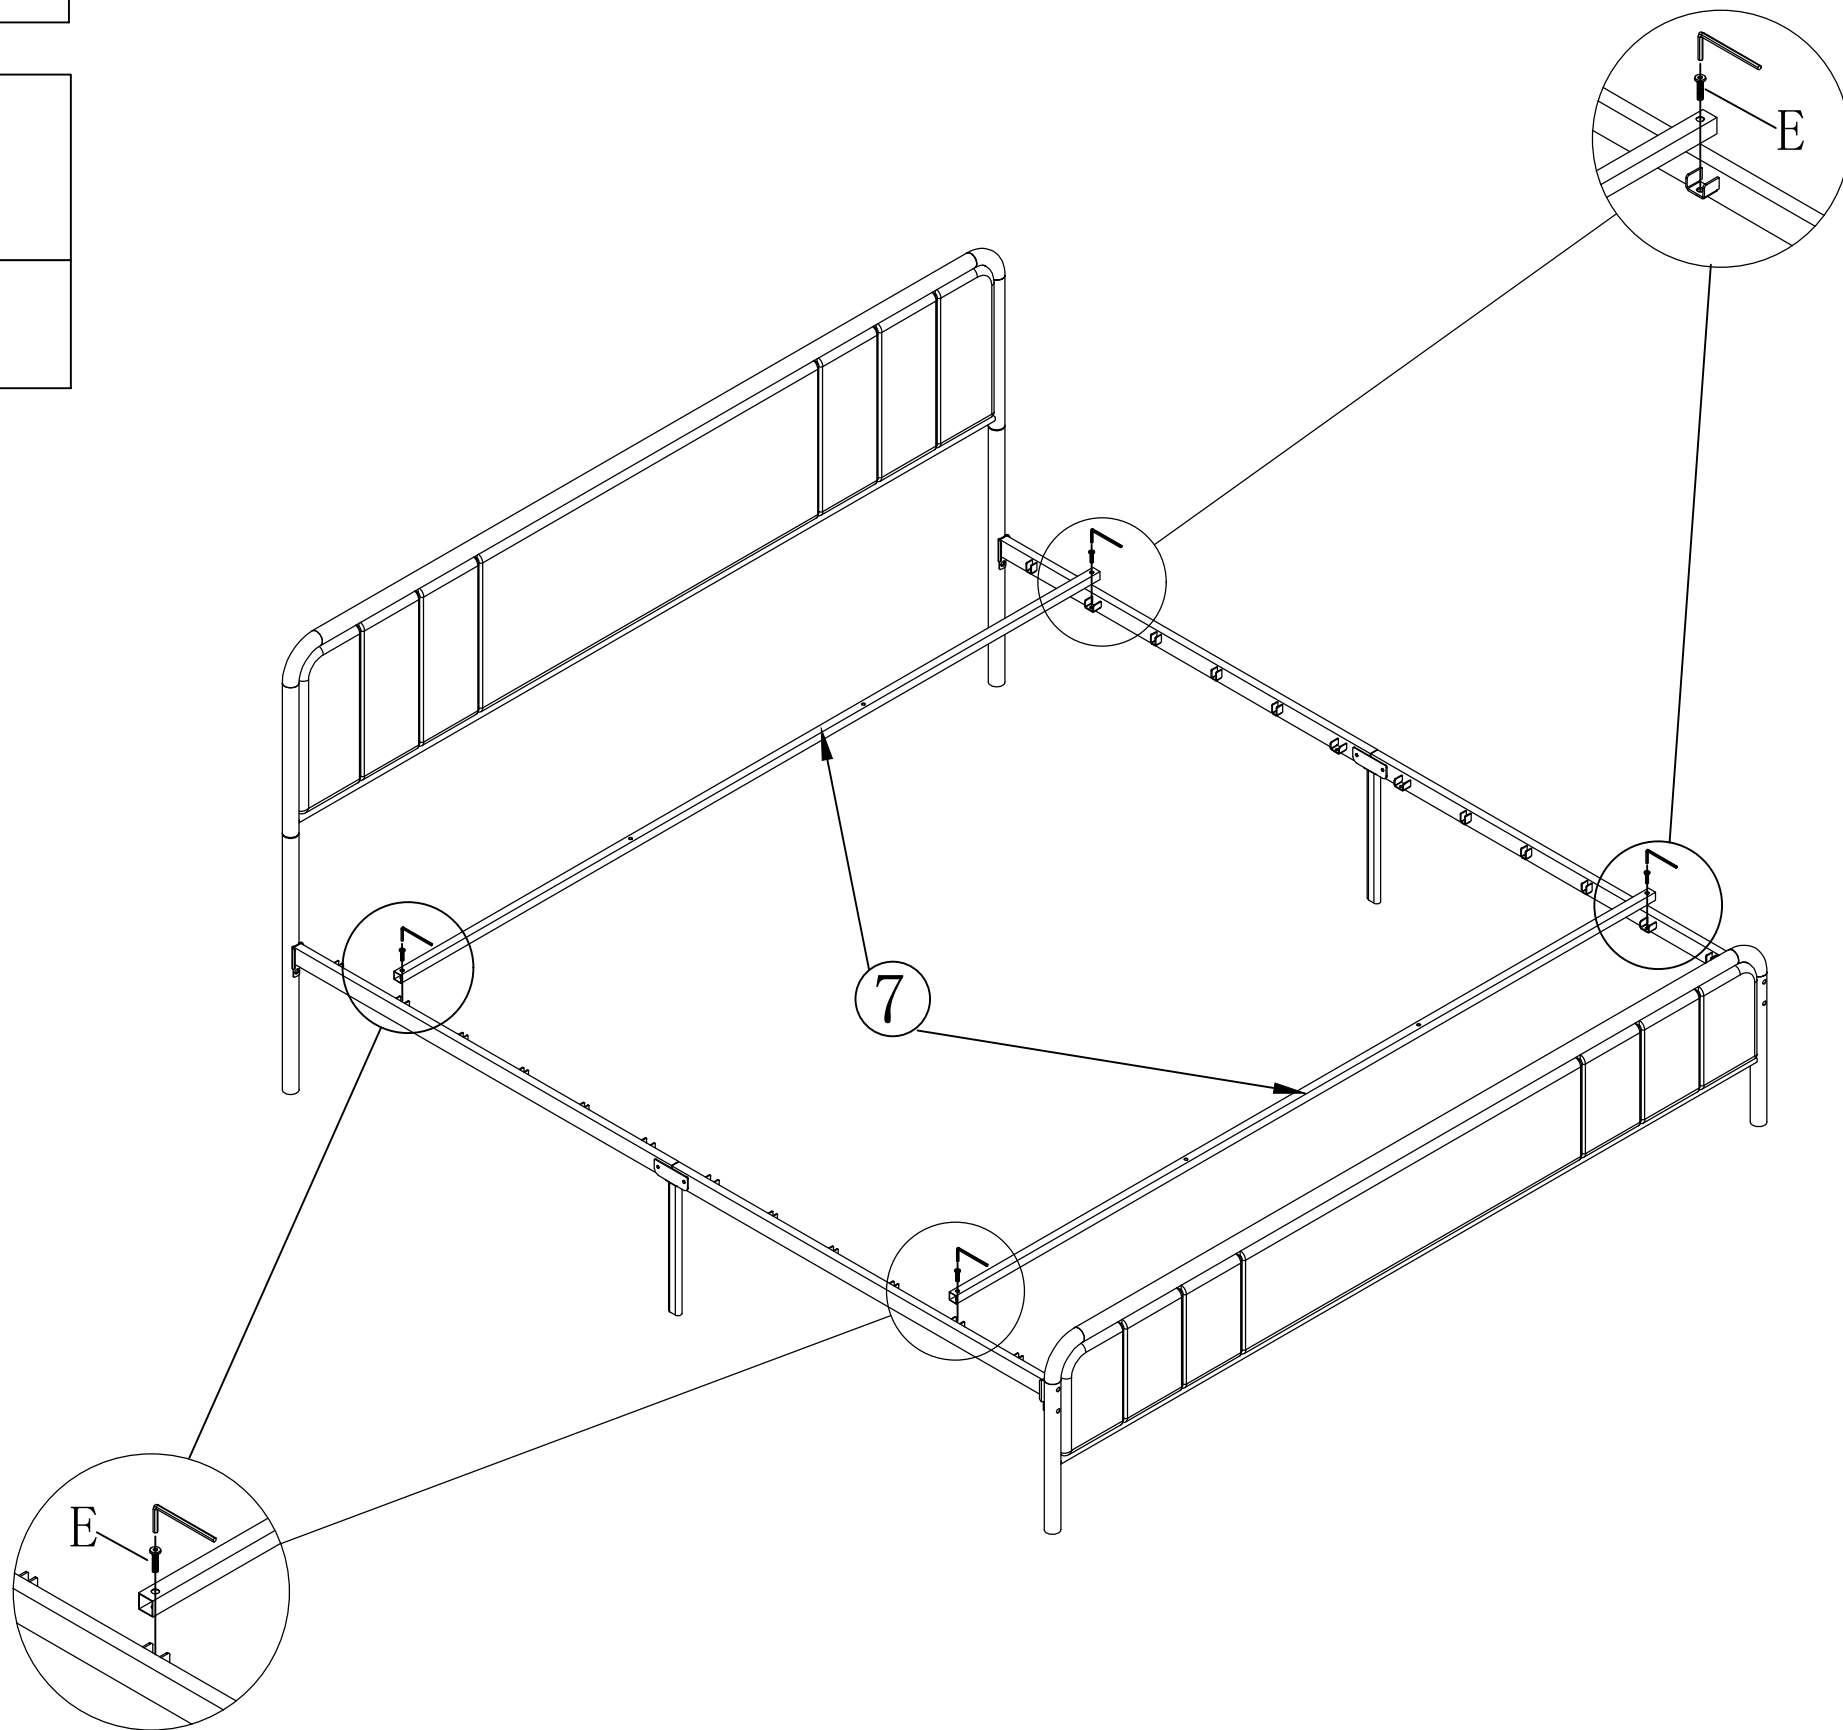
Put the beam ⑦ into the side rails and screw them.
DO NOT FULLY TIGHTEN because we need to put the middle rails under them in step 4.


M6x60mm

A


4PCS



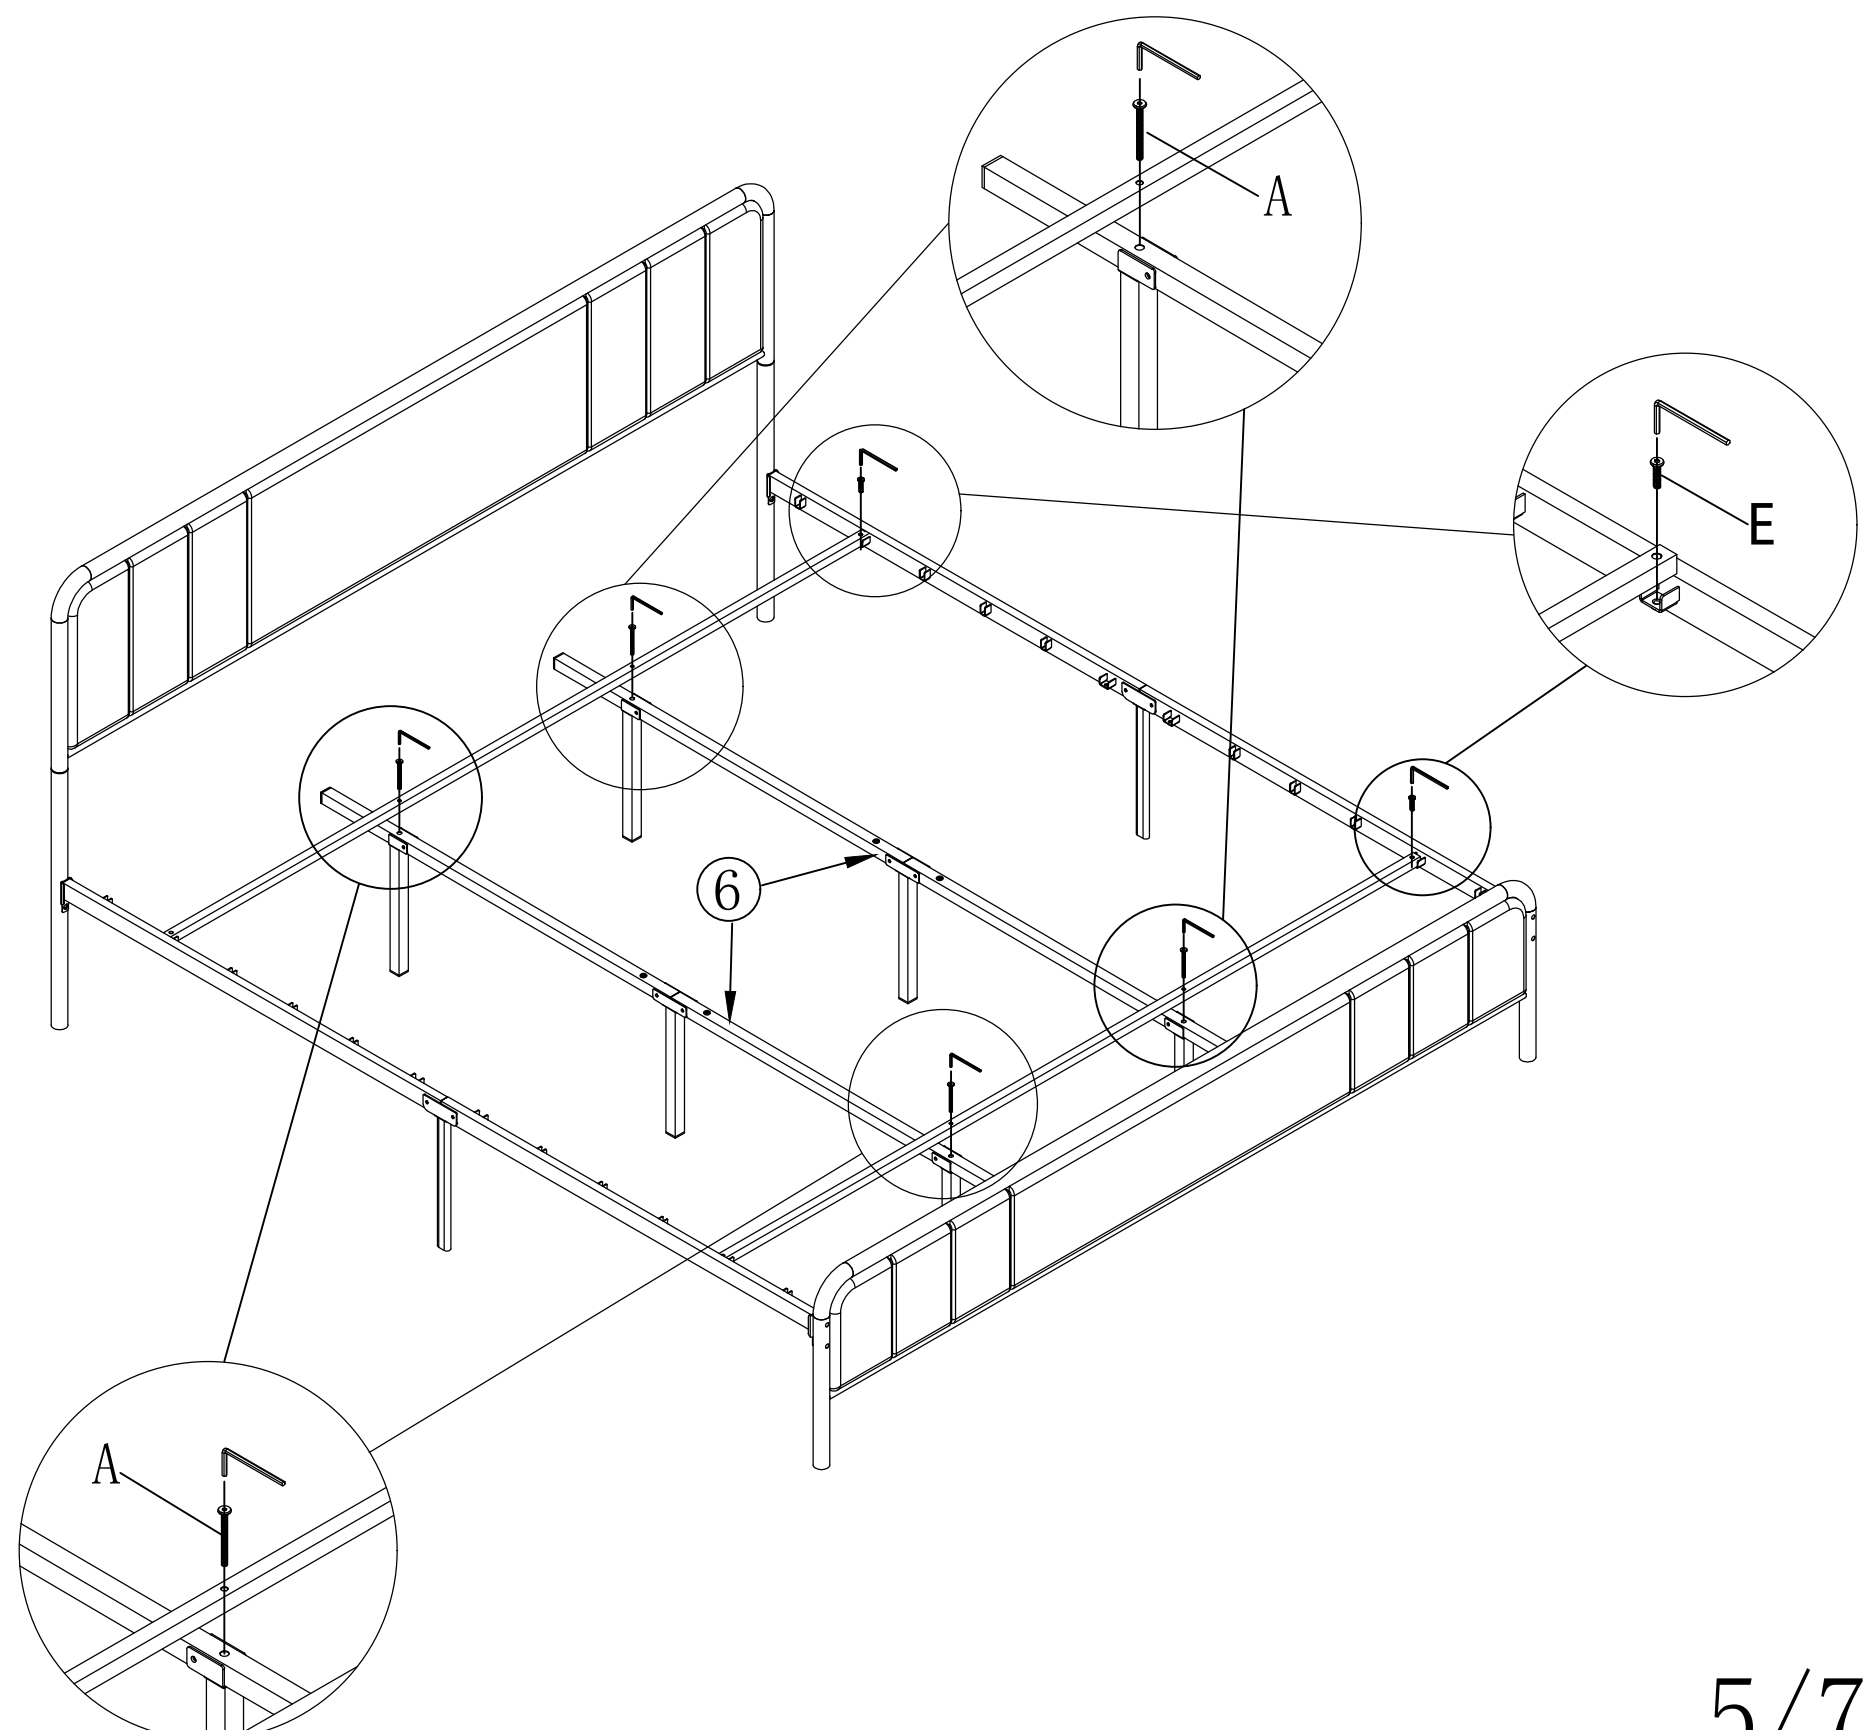
Put the middle rails under the beams and fix them.
FULLY TIGHTEN the beams in Step 3 now.



⑥ X2

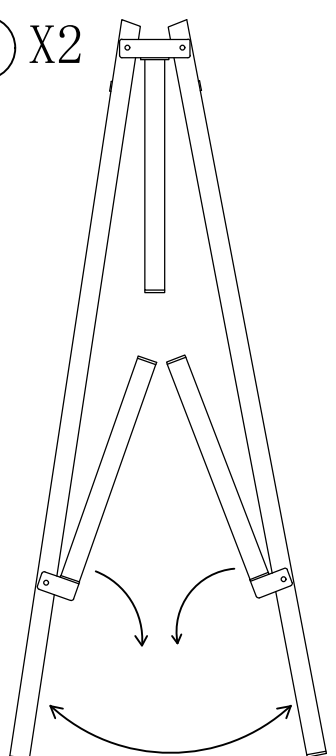


Fix the rest 2 beam ⑦ into place and tighten them



M6x35mm

C



4PCS




M6x25mm

E

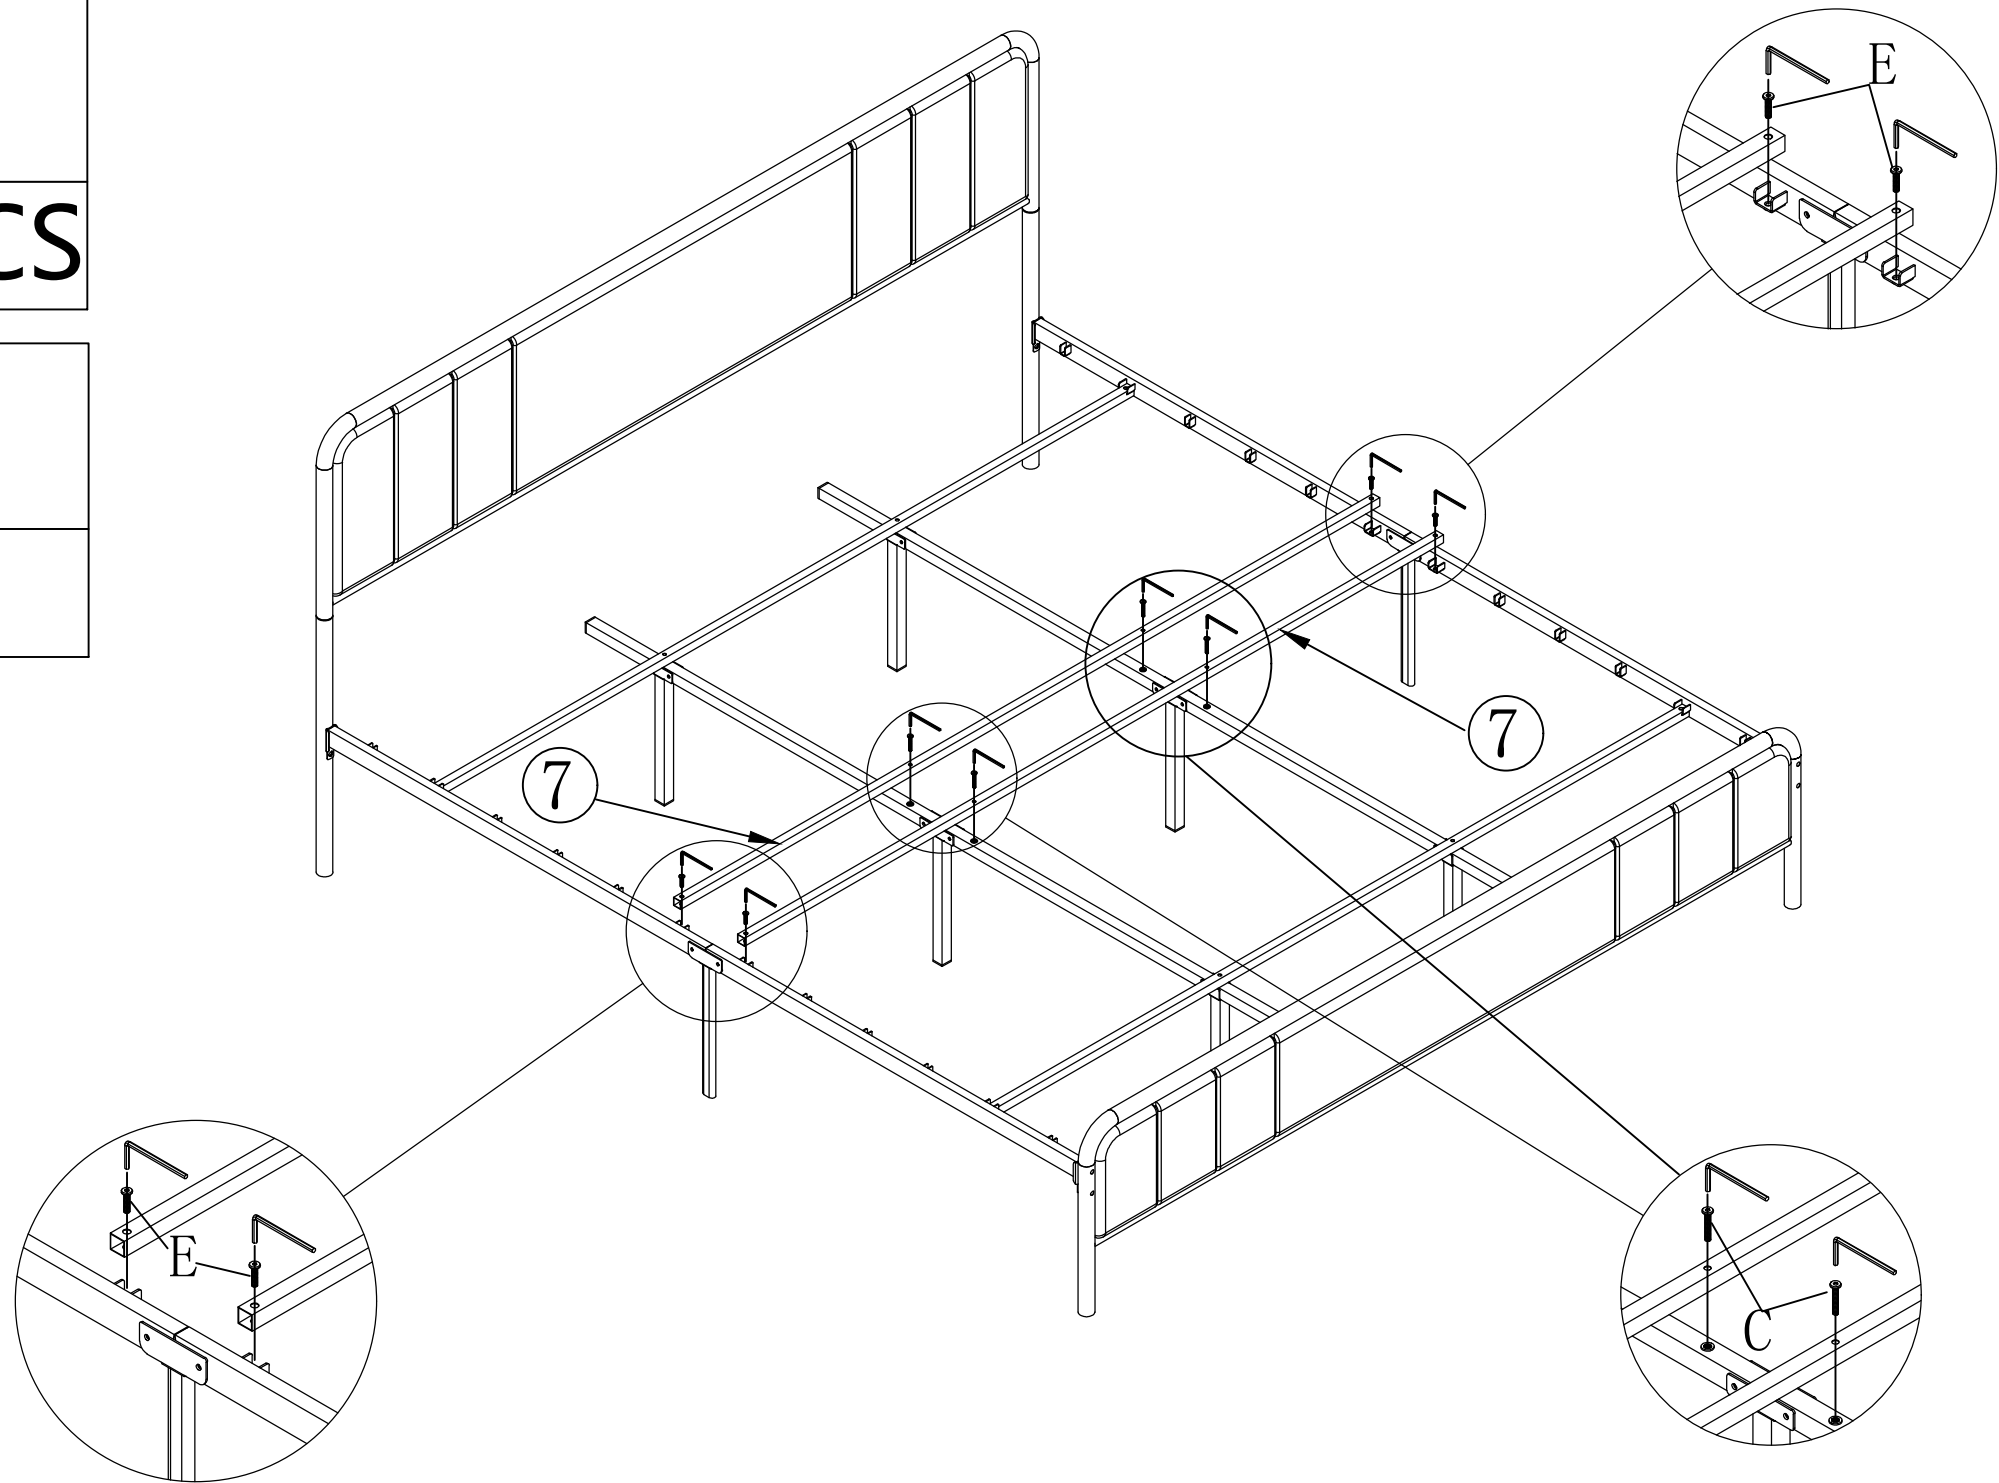4PCS



Insert the slats into the slots

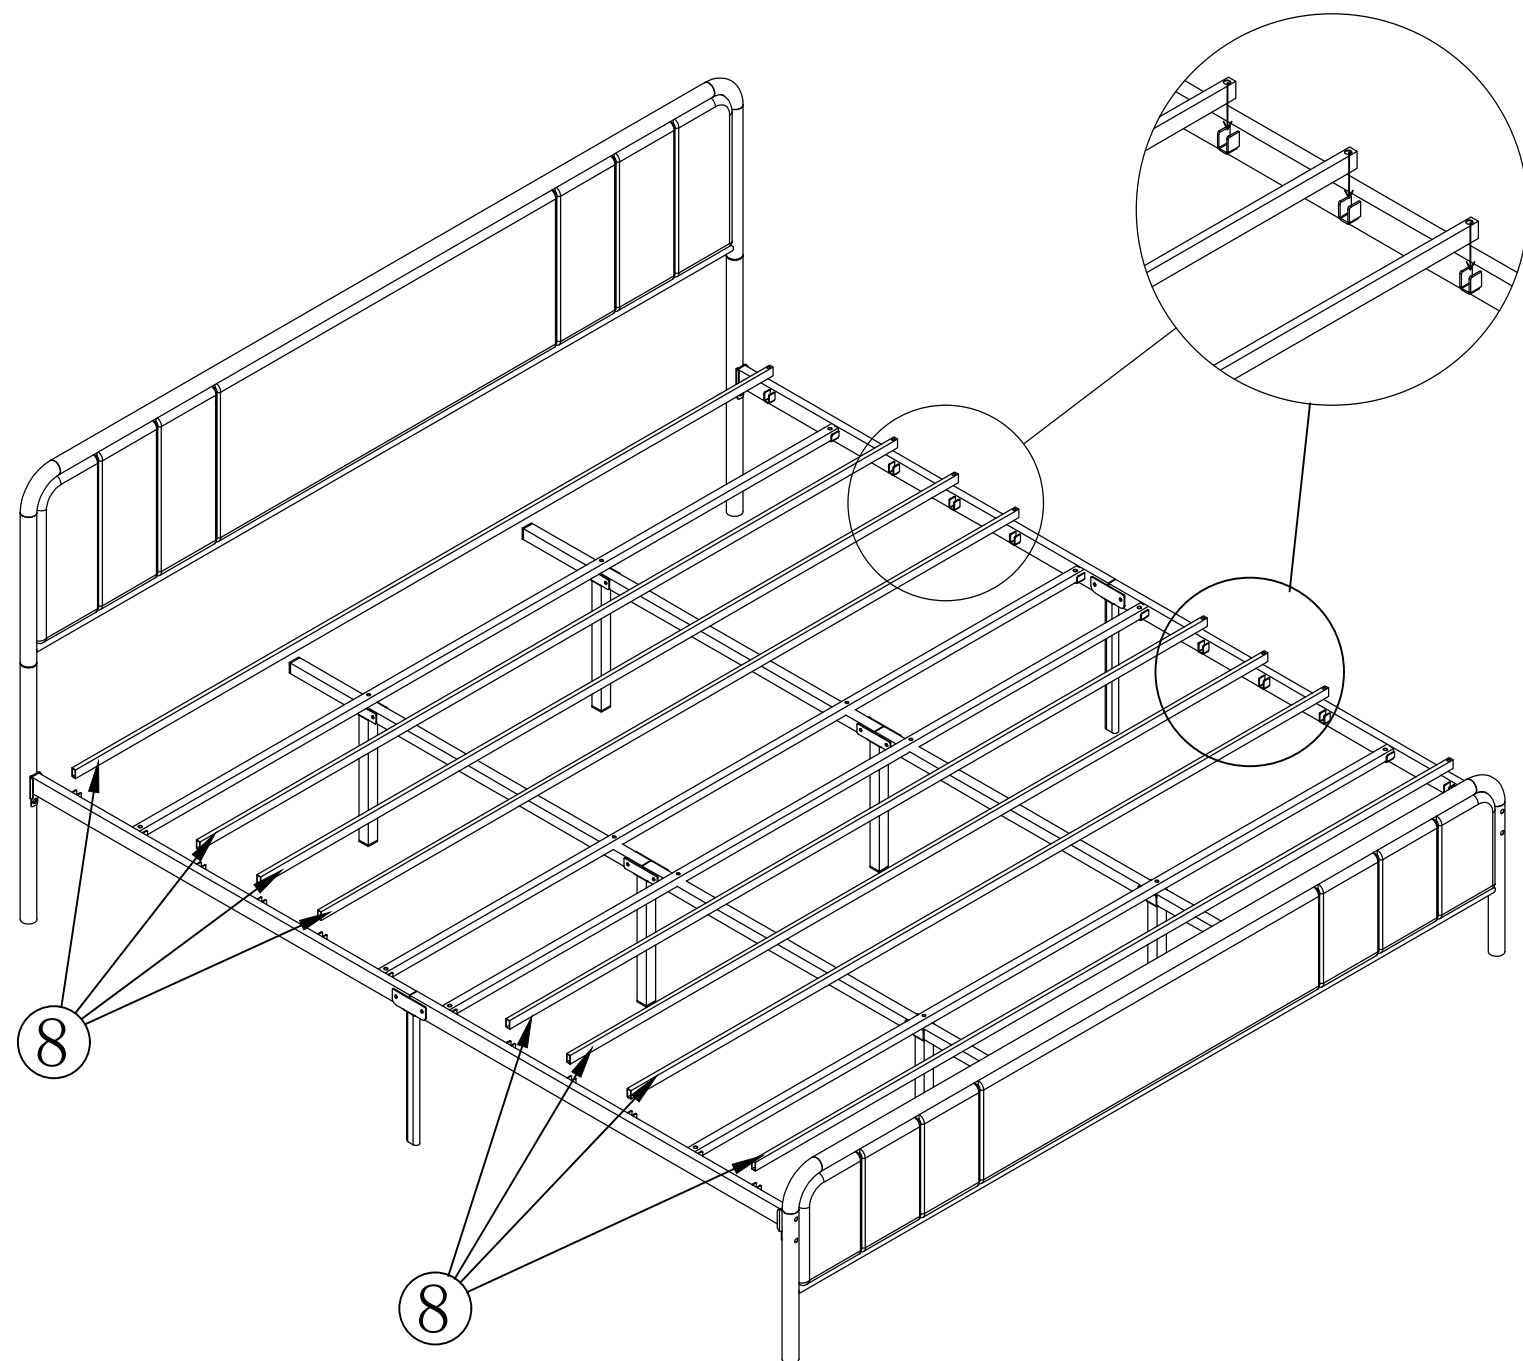

Finished assembly

