Installation Instructions




This installation guide shows the assembly method for the same style table and is applicable to this table.

Parts Explained




Cam Lock Fitting

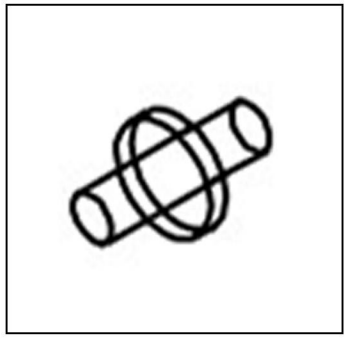


Shelf Support




Nut

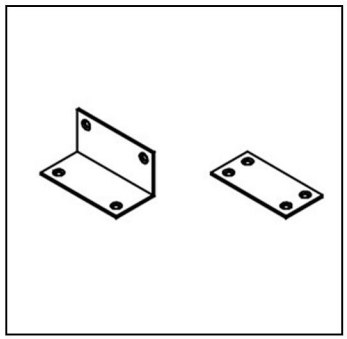


Angle Bracket

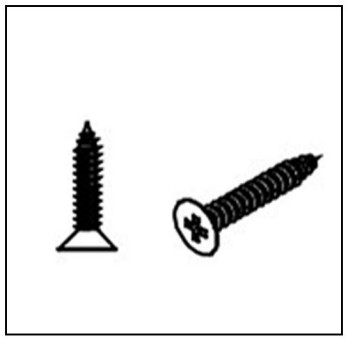

Self-tapping Screw

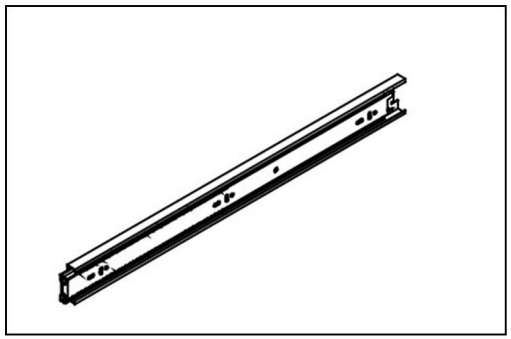


Full Extension Slide

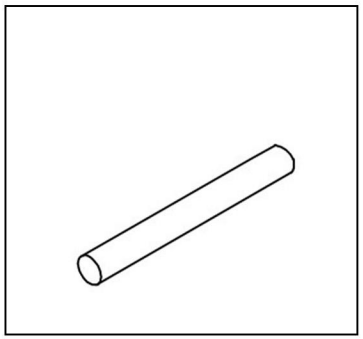

Wood Dowel


Long Side Cabinet Installation Steps

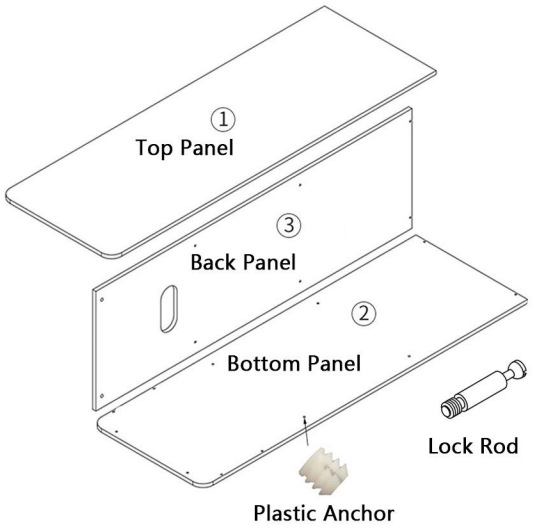

Step 1

Identify the three panels above.

1. Hammer the plastic anchors into the pre-drilled holes on the panels.
Make sure they are flush with the panel surface.
2. Screw the lock rods into the plastic anchors you just installed with a screwdriver.
Stop turning once the lock rod is fully seated.

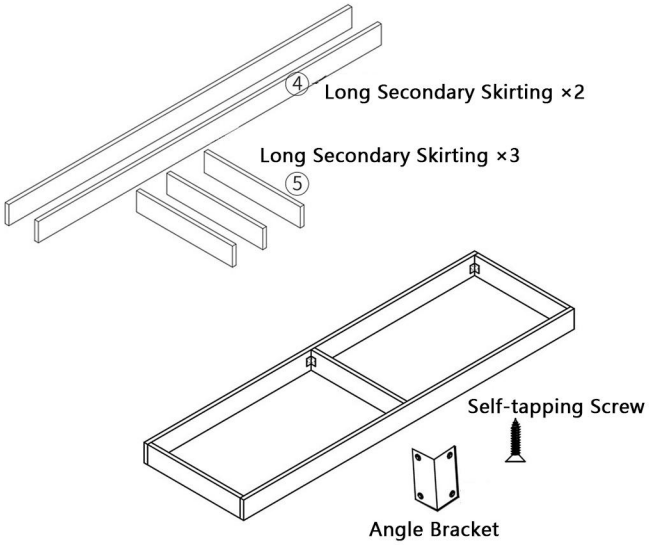


Step 2

Locate the five panels above.


1.Secure the five panels into a frame using the supplied angle brackets and self-tapping screws, as shown in the picture.

Long Side Cabinet Installation Steps

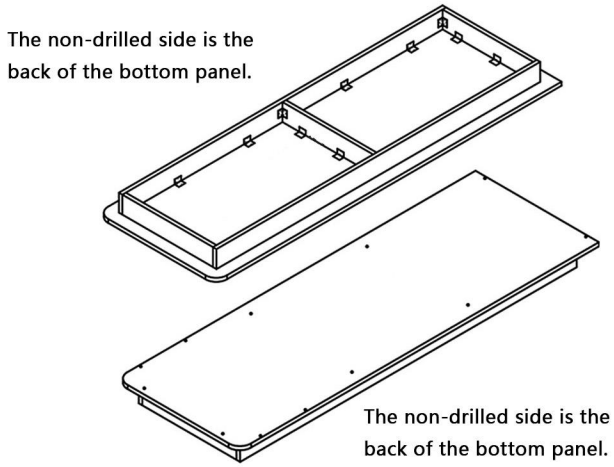

Step 3

1. Place the assembled base frame on the back side of the bottom panel. Fasten the bottom panel to the base frame with angle brackets and screws, then flip it over once secured.

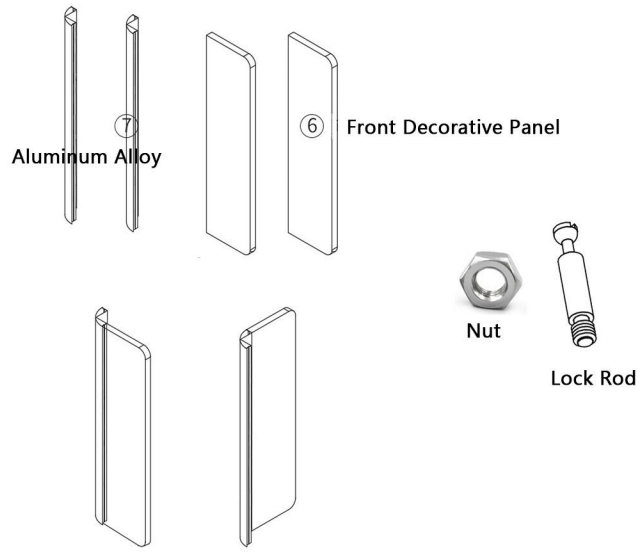


Step 4

Locate the 2 small decorative panels and 2 aluminum alloy profiles above.

1.Insert the small nuts into the slots of the aluminum profiles. Thread the lock rods onto the nuts without fully tightening. Align with the holes on the small decorative panels, then tighten the lock rods. Fasten nuts and lock rods on the other side as well and set aside for later use.


Long Side Cabinet Installation Steps

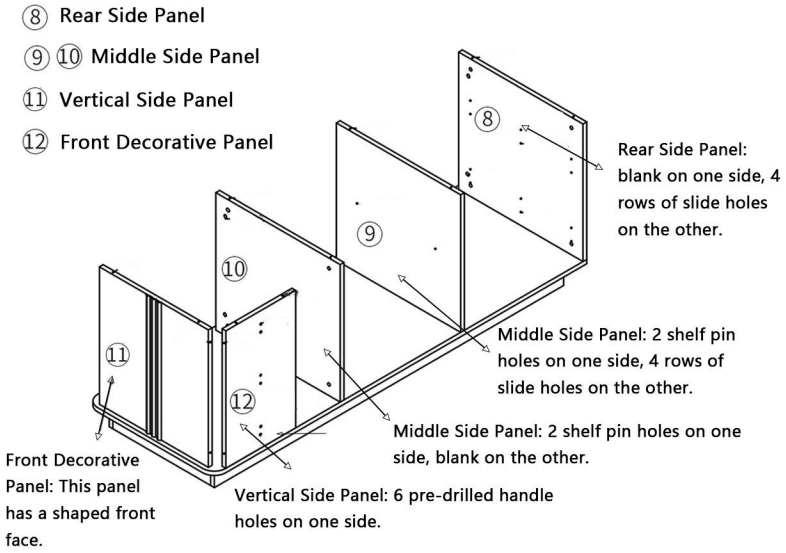

Step 5

Locate the five panels above respectively.

1. Install the five panels one by one onto the base frame assembled in Step 3.

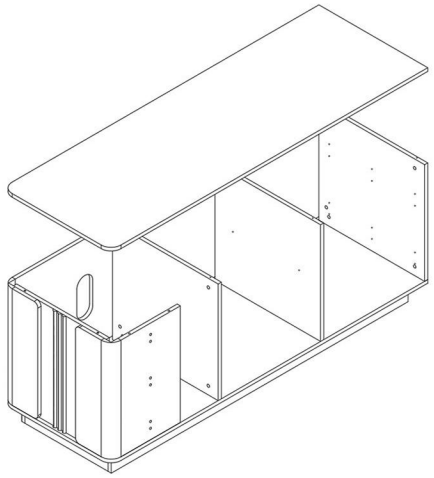


Step 6

1.Based on Step 5, fit the back panel of the secondary cabinet, then mount the front decorative panel assembled in Step 4. Finally place and secure the top panel. Fasten all lock rods with aluminum clips.

Note: Fasten the front face of the front decorative panel from the inside out using 3cm screws; the other side is locked with the lock rod.

Long Side Cabinet Installation Steps

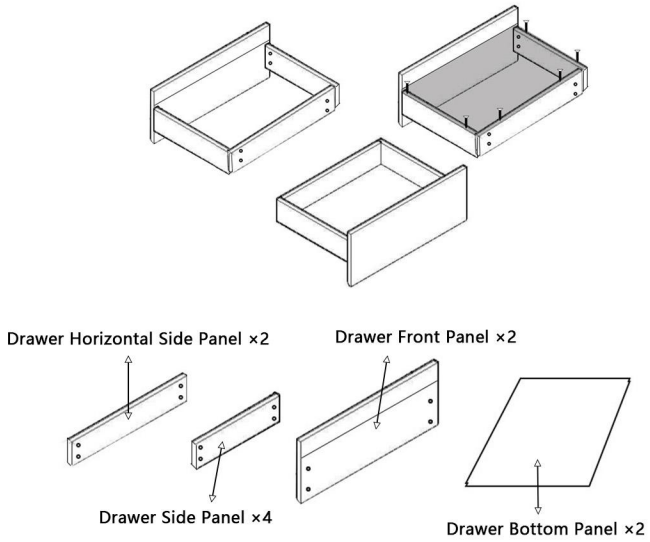

Step 7

Locate the drawer panels above for two drawers.

1. Hammer the plastic anchors into the pre-drilled holes and attach the lock rods. Assemble the four panels into a drawer frame as shown in the picture.

2. Lay the bottom panel flat, align all four edges, place it into the frame assembled in Step 1, and secure with self-tapping screws.


Note: Align the screws to the panel below.



Locate the slides in the hardware kit. Press the plastic release tab to separate the slide.



Separate into front and rear sections.

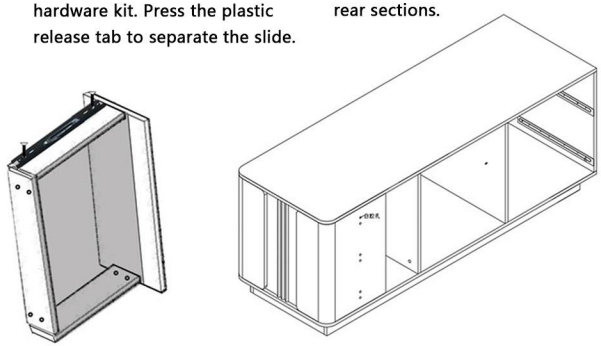


Step 8

1.Mount the front section of the slide you just removed onto the drawer.

Note: Align the front end of the removed slide with the drawer front panel and the drawer bottom panel, then secure with self-tapping screws


2. Mount the rear slide section inside the assembled side cabinet. Align it with the pre-drilled slide holes and fasten with self-tapping screws.

Long Side Cabinet Installation Steps

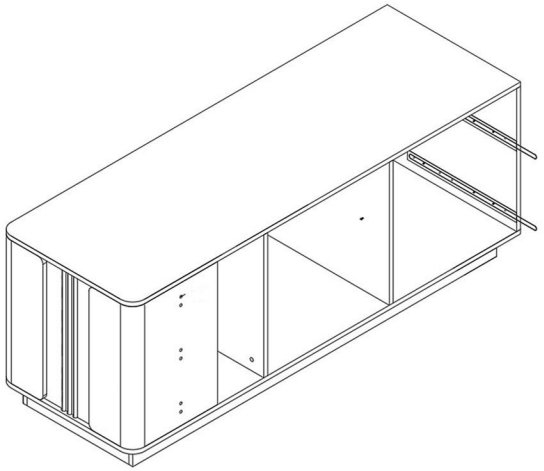

Step 9

1. Pull the slide mounted inside the side cabinet halfway out. Align the drawer with the slide and push it in. If there is a gap, remove the screws on the drawer and reinstall for adjustment.

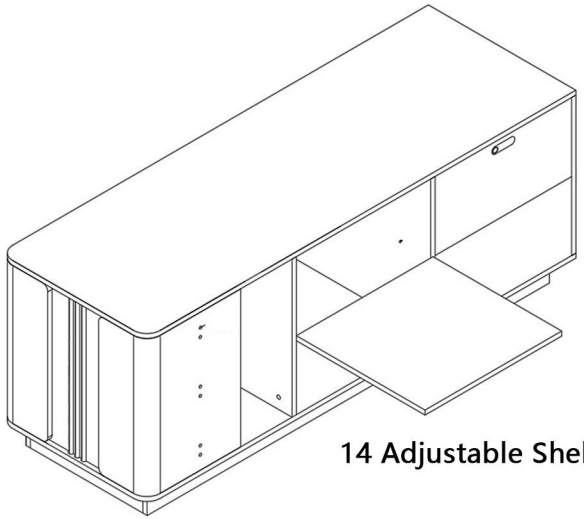


14 Adjustable Shelves


Step 10

1.Hammer the shelf pins into the pre-drilled holes, then place the adjustable shelf in position.

Long Side Cabinet Installation Steps

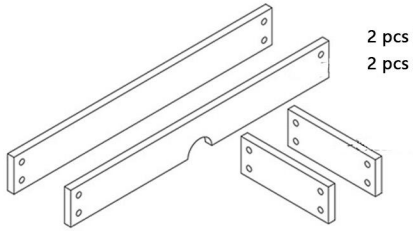


2 pcs Long Strips for Side Cabinet Top Box
2 pcs Short Strips for Side Cabinet Top Box

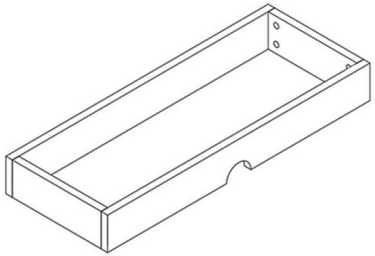

Step 11


1. Assemble the strips into the frame as shown in the picture. Tighten with lock handles and set aside for later use.

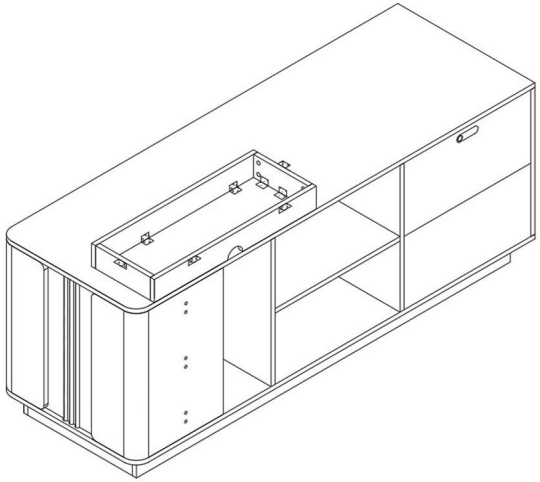

Step 12

1.Place the finished frame on the pre-assembled side cabinet, align it correctly, and secure with angle brackets. Leave space behind the brackets for later tabletop reinforcement.


Long Side Cabinet Installation Steps

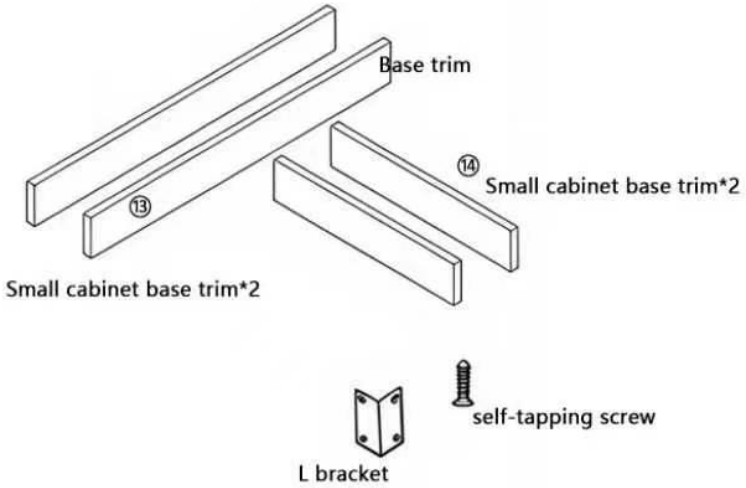

Step 13

Assemble the small cabinet. Locate the 4 top panels.


Use the supplied L brackets and self-tapping screws to fasten the 4 panels together into a frame, as shown in the figure above.

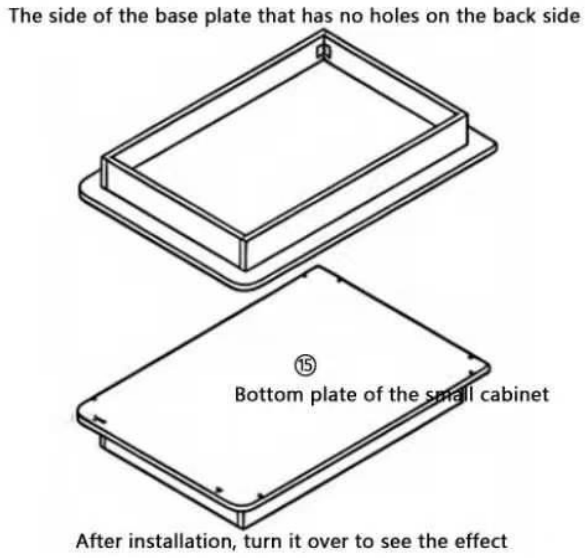

Step 14

Place the assembled base frame on the reverse side of the side cabinet bottom panel. Align it properly, fasten the base frame to the bottom panel with angle brackets and screws, then flip the whole assembly over (same operation as Step 3).


Long Side Cabinet Installation Steps

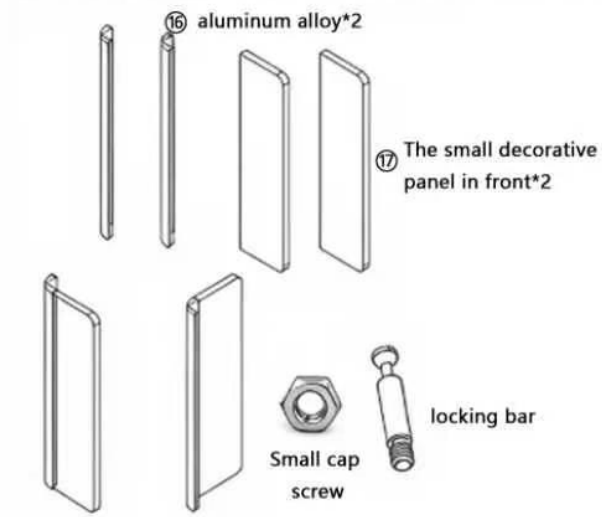

Step 15

Take out the 2 small decorative panels and 2 aluminum profiles.


Insert the lock nuts into the grooves of the aluminum profiles. Thread the lock rods onto the lock nuts without fully tightening. Align with the holes on the small decorative panels, then tighten the lock rods. Assemble the other side with lock nuts and lock rods in the same way for later use.

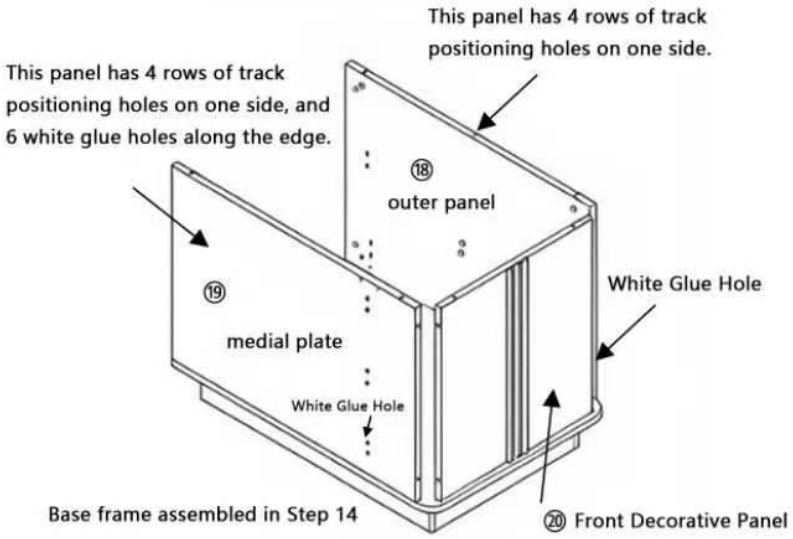

Step 16

Retrieve the 3 panels. Install them one by one onto the base frame assembled in Step 14.

Long Side Cabinet Installation Steps

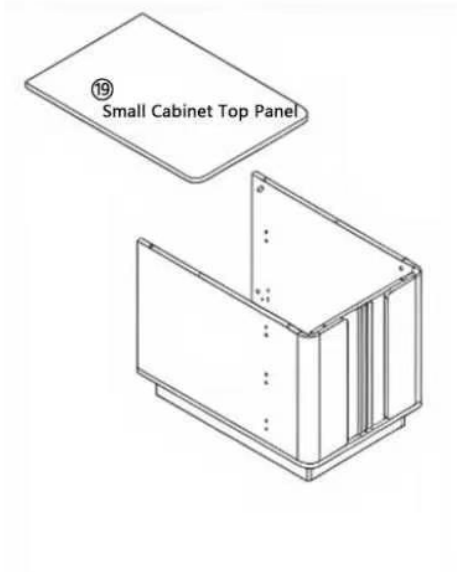


Middle Side Panel: 2 shelf pin holes on one side, 4 rows of slide holes on the other.

Step 17

Same procedure as Step 6 for the long side cabinet.

On the assembly from Step 16, fit the pre-assembled front decorative panel from Step 15, then place and secure the top panel. Fasten all lock rods with aluminum clips.


Note: For the front face of the decorative panel, use 3cm screws to fasten from inside out. Lock the side with lock rods.

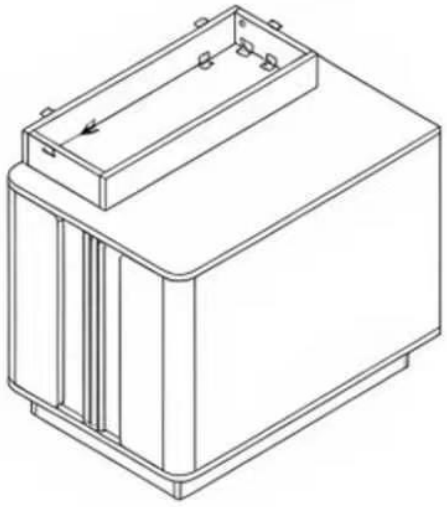

Step 18


Repeat Step 7, Step 8, Step 9, Step 11 and Step 12. The finished result matches the picture above.

Overall Table Assembly Steps

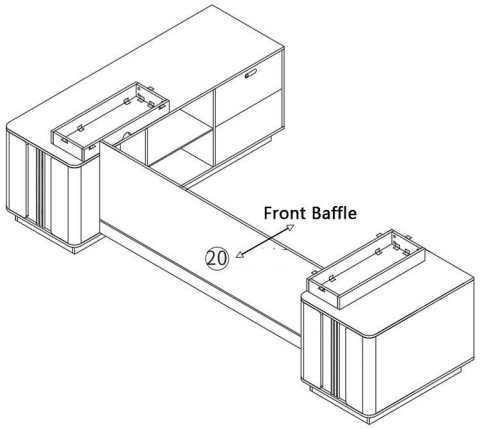

Step 19


1. Connect the assembled long secondary cabinet and short secondary cabinet with the front baffle, then position and secure them.

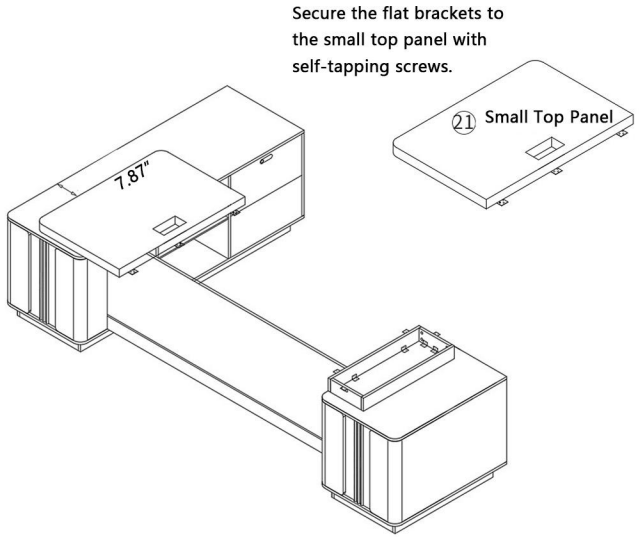

Step 20

1.Place the small top panel on the long secondary cabinet. Align the front edge flush with the front of the cabinet, leaving 7.87 inches from its right side to the cabinet edge, as shown above. Do not secure it yet. Wait until the other top section is positioned, then fasten both at the same time.

Overall Table Assembly Steps

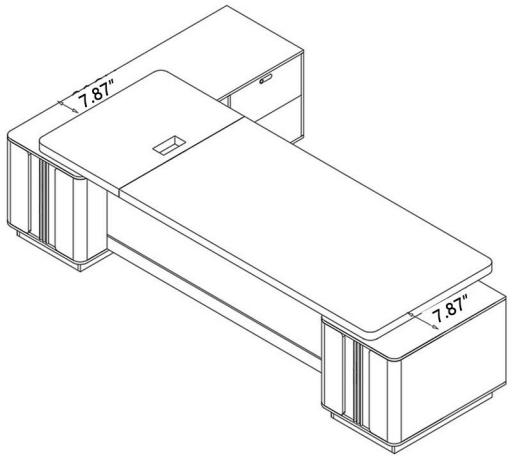

Step 21

1. Finally, place the other half of the top panel on top following Step 20. Align all four edges parallel, then secure from underneath with self-tapping screws.