

ASSEMBLY INSTRUCTIONS

Bird House Planters

TOOLS NEEDED

- #2 Square Drive Bit with 1/4" impact driver or screwdriver (Not Included)

PARTS LIST

- 1 - Base/Post Piece
- 2 - Arms
- 1 - Bird House Top

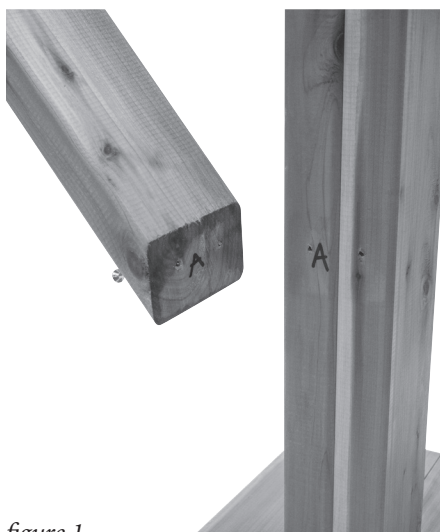


figure 1



figure 2

Step 1

Match A arm to A side post and fasten 2 screws (attached). Do same with B arm to B side. (See figure 1).

Step 2

Fasten 2 screws in front 1x4 piece to arms.

Step 3

Fasten bird house top with matching X to X and fasten 4 screws up from underneath. (See figure 2)



Now you have a complete Bird House Planter ready to put pots in each arm and enjoy.