


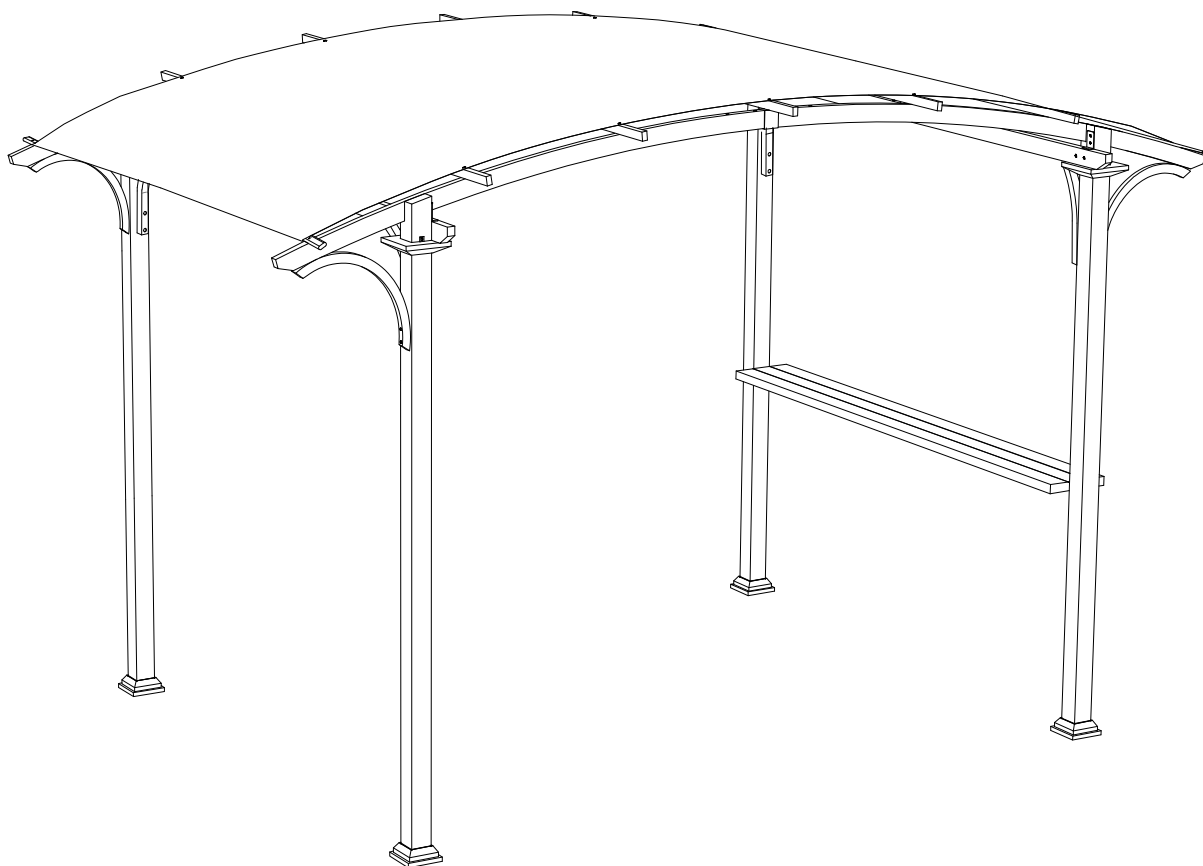

INSTRUCTION MANUAL

JOYSIDE Patio Pergola


IF YOU PURCHASED THE PERGOLA ONLINE AND HAVE
ANY QUESTIONS OR CONCERNS
PLEASE FEEL FREE TO CONTACT US







Email: service2outdoor@gmail.com
Text: +1628-263-4608



Warranty period: 180 days.

Lost accessories or parts costs will be incurred after 90 days of the date of purchase.








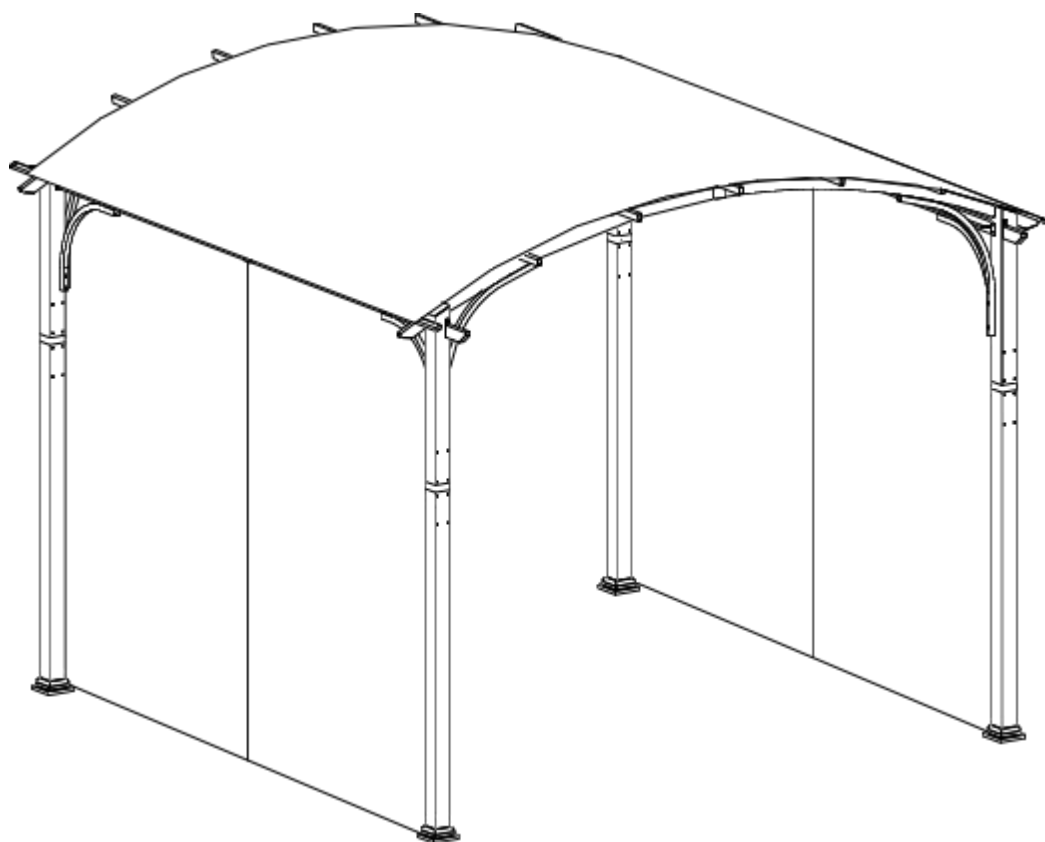


Part List

Description	Label	Qty	Part Image
Left Post	A1	1	
Right Post	A2	1	
Left mesa Post	A3	1	
Right mesa Post	A4	1	
Decoration on post	B	4	
Base Cover	C	4	
Base	D	4	
Long Arc beam	F1	2	
Short Arc beam	G1	2	
The left beam	H	2	
The right beam	I	2	
Arc beam connector	J	2	
Cross beam connector	K	2	
Beam card set	K1	2	
Arc edge oblique support	P	4	
Straight edge diagonal support	P1	4	
Long roof beam	M3	2	
Short roof beam	M4	2	

Long roof beam	N1	5	
Short roof beam	N2	5	
table board connector	U	2	
Canopy	W2	1	
mesa	T	1	

Hardware Pack

Label	Description	Qty	Add	Part Image
AA	Hexagon cross bolt M6*15	68	5	
CC	Hexagon cross bolt M6*45	26	2	
DD	Hexagon cross bolt M6*25	4	1	
FF	Stake D6*230	8		
HH	The plastic cap	32	4	
JJ	Hexagon cross bolt M6*10	4	1	
KK	Bolt M6*45	32	2	
Z1	Wrench M6	2		

<1>







A1 1x

A2 1x

A3 1x

A4 1x

1

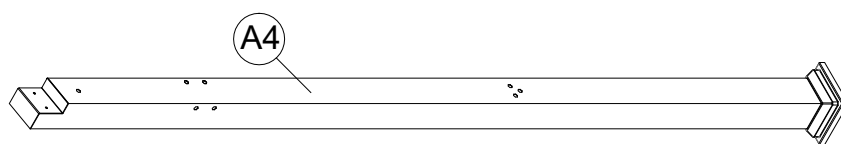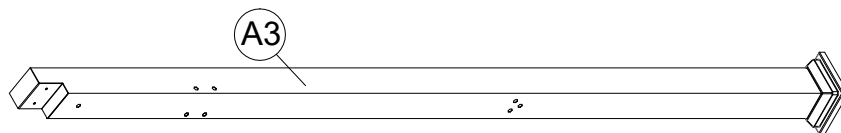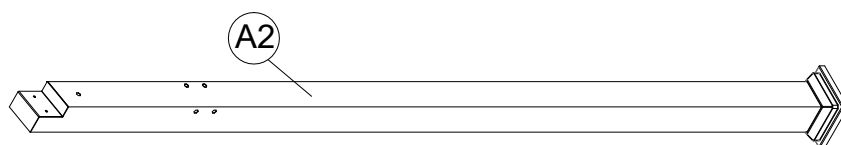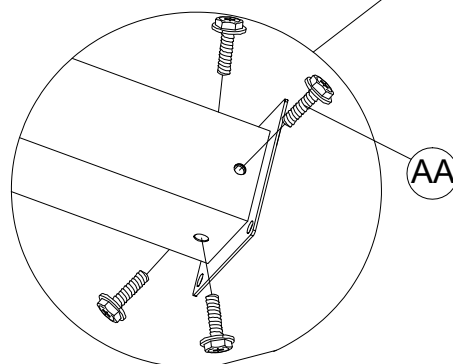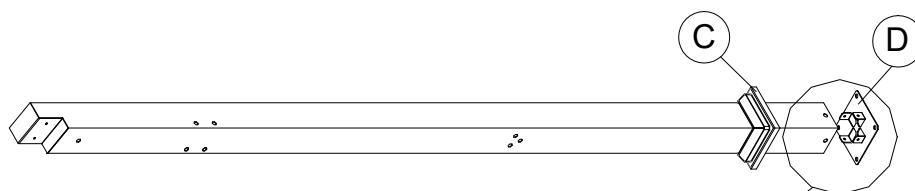

C 4x



D 4x



AA 16x M6x15

<2>



H 2x



I 2x









K 2x



K1 2x

2

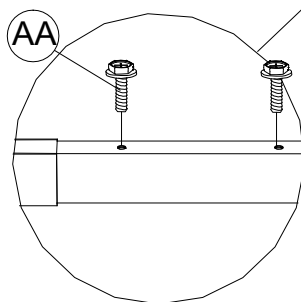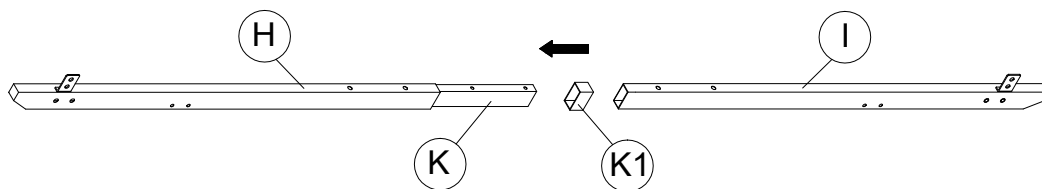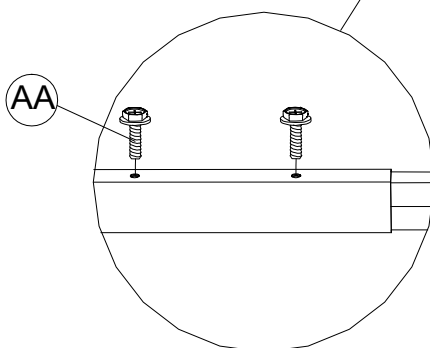


AA 8x

M6x15


<3>



P1 4x




B 4x

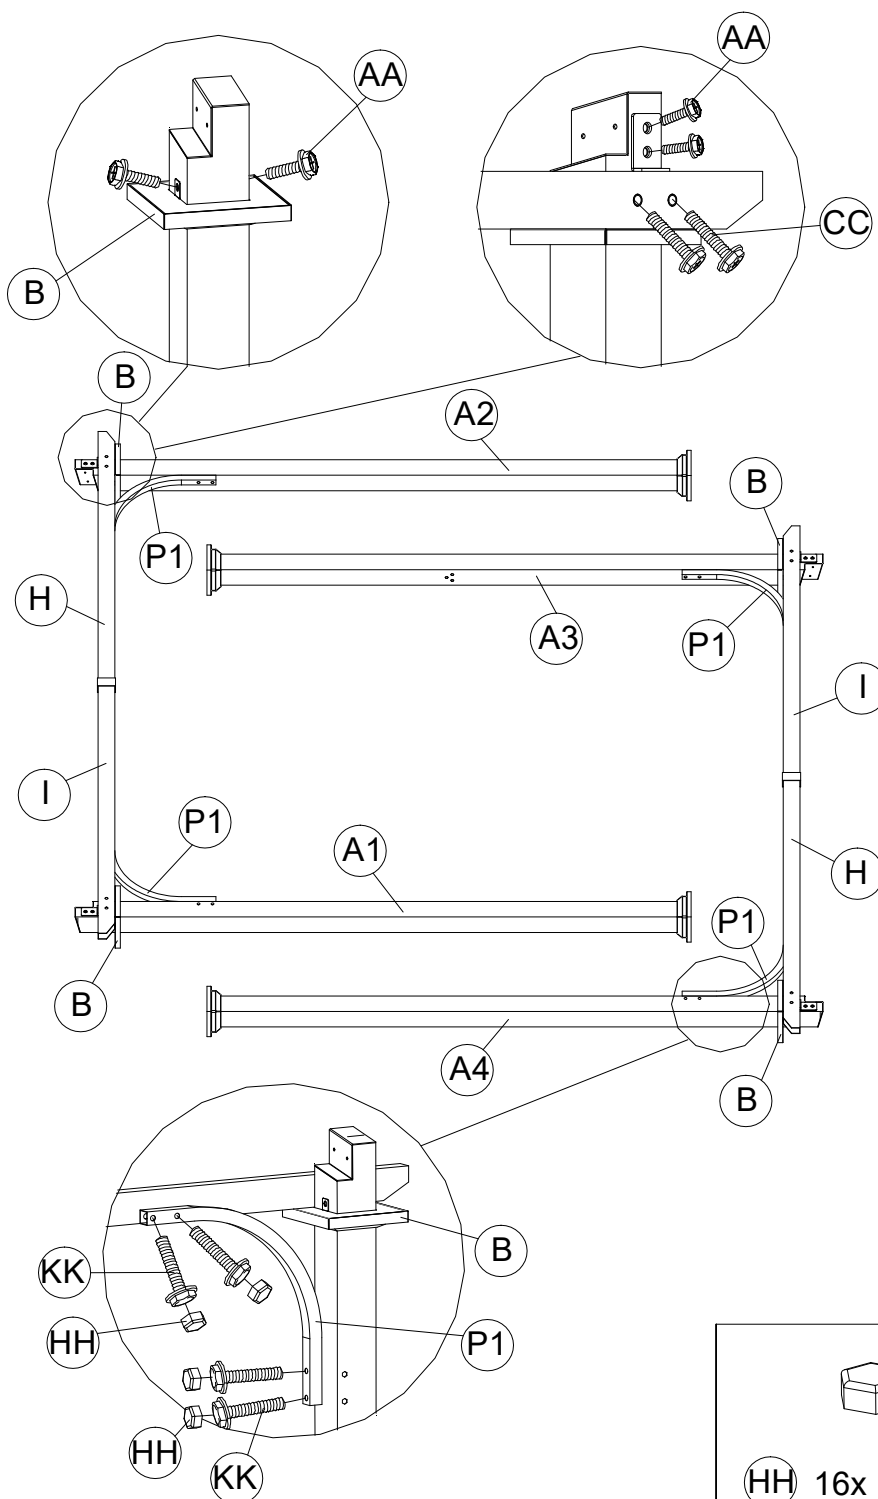


M6

HH 16x



M6x45

KK 16x



M6x45

CC 8x



M6x15

AA 16x

3

<4>



F1 2x









G1 2x



J 2x

4

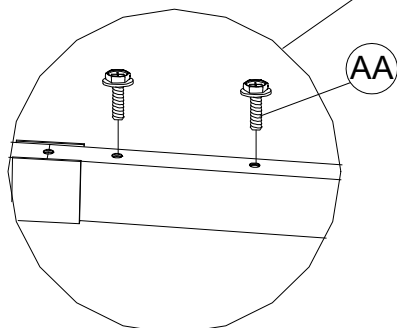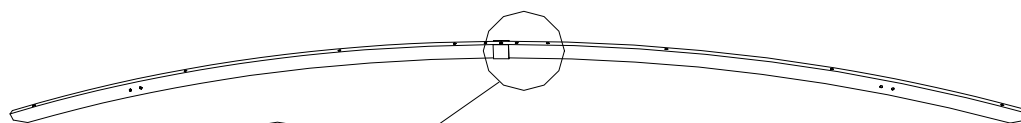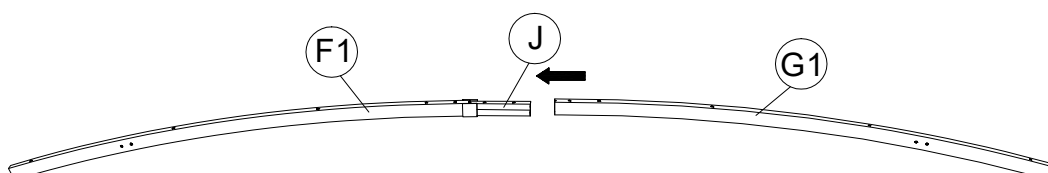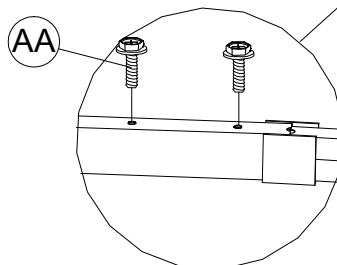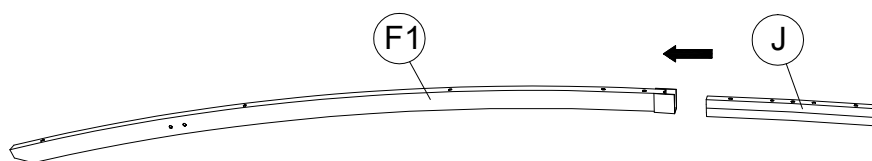


AA 8x

M6x15



P 4x


<5>

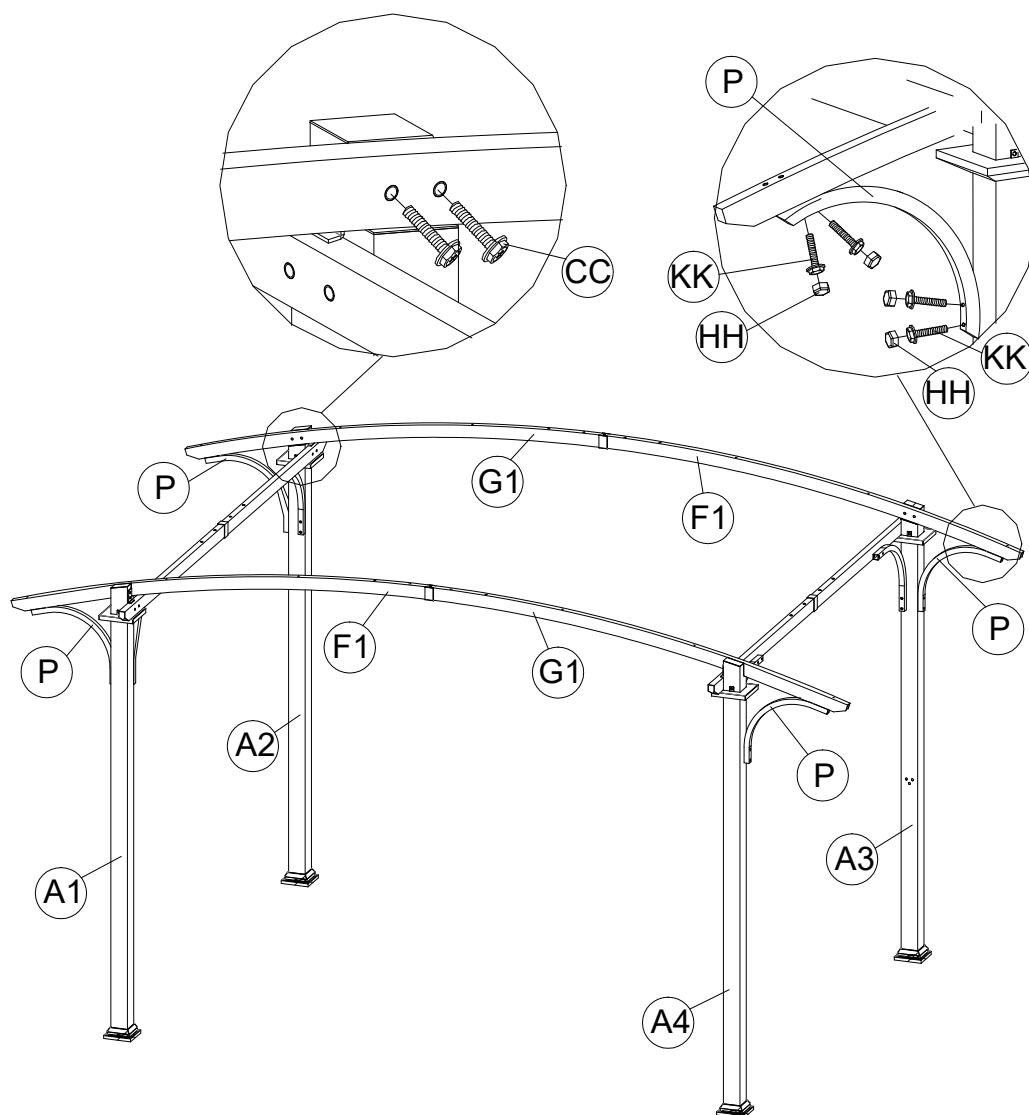


5



HH 16x M6




KK 16x M6x45




CC 8x M6x45


<6>



T 1x



U 2x

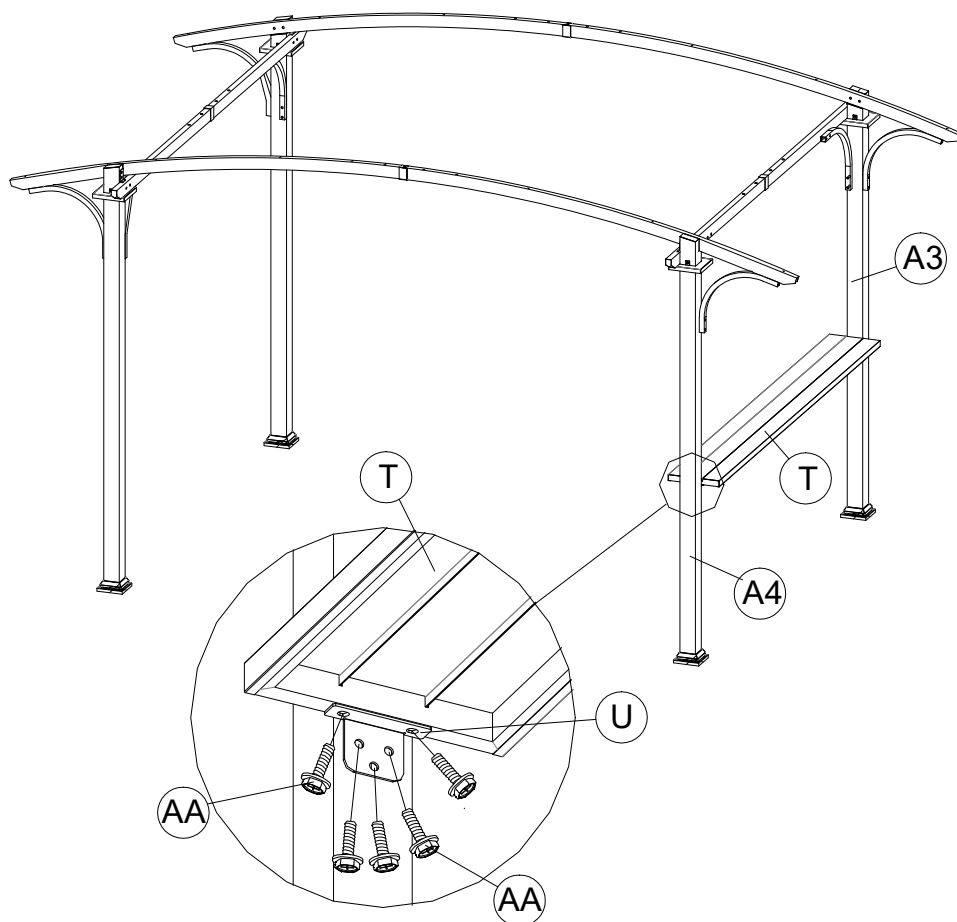

6






AA 10x

M6x15

<7>

N1 5x

N2 5x

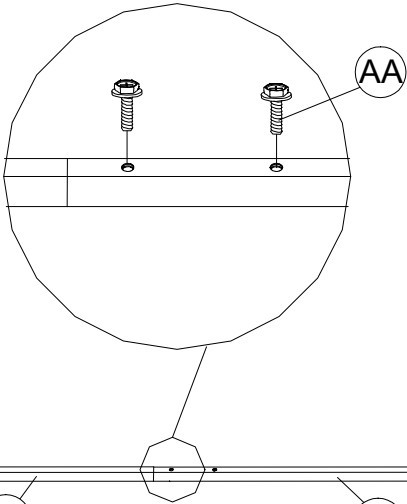

7



AA 10x

M6x15


<8>




M3 2x



M4 2x



W2 1x

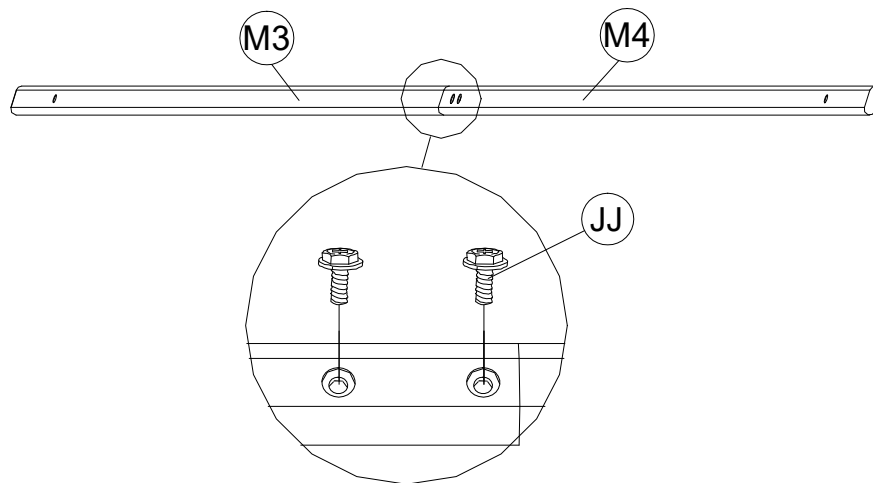

M4

M3

W2

M3

M4

After the tubes are assembled, they are
run in from both ends of the cloth.


8




M6x10

JJ 4x

<9>

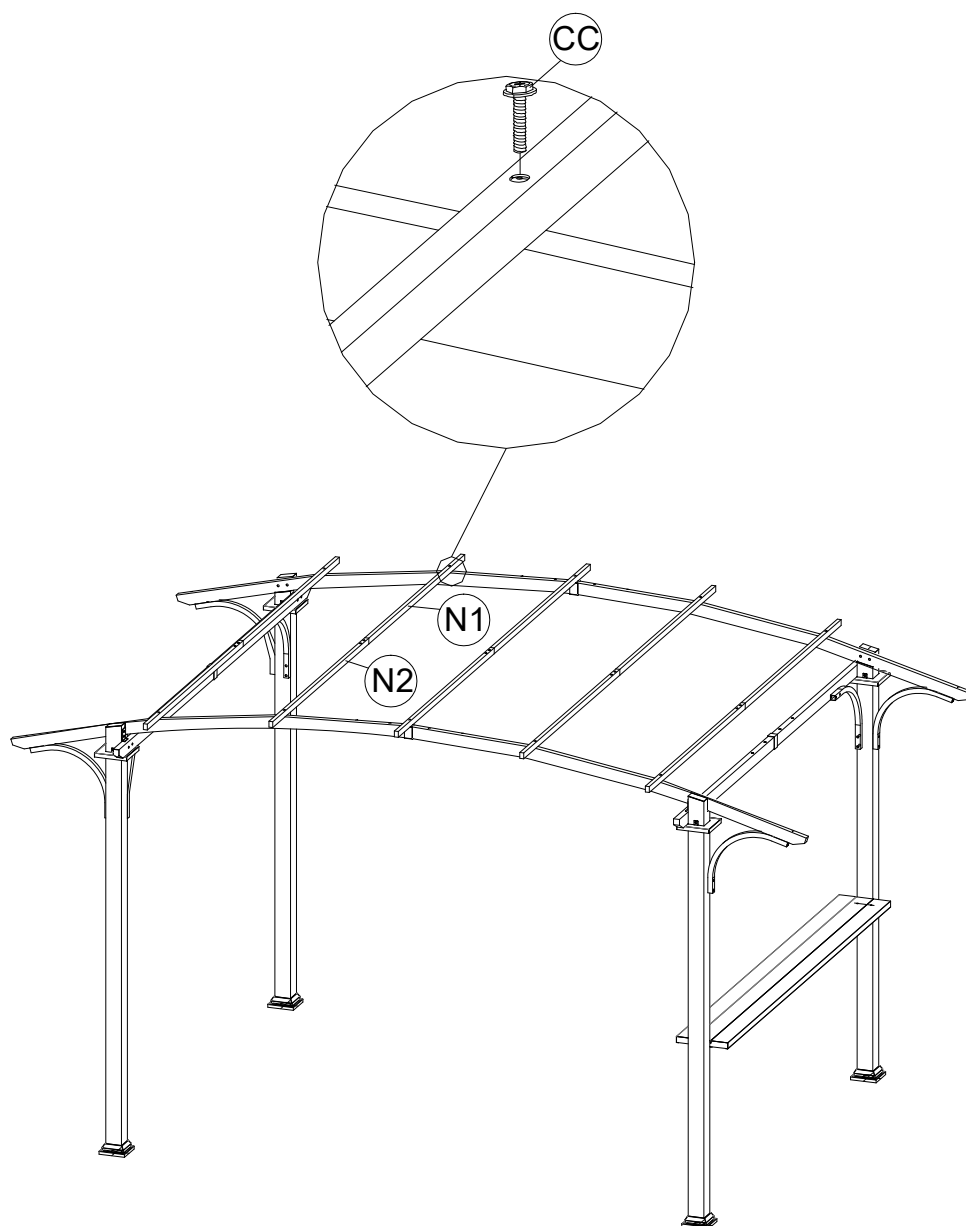

9




M6x45

CC 10x

<10>


Unroll the cloth, flatten
it and tighten the screws
at both ends.

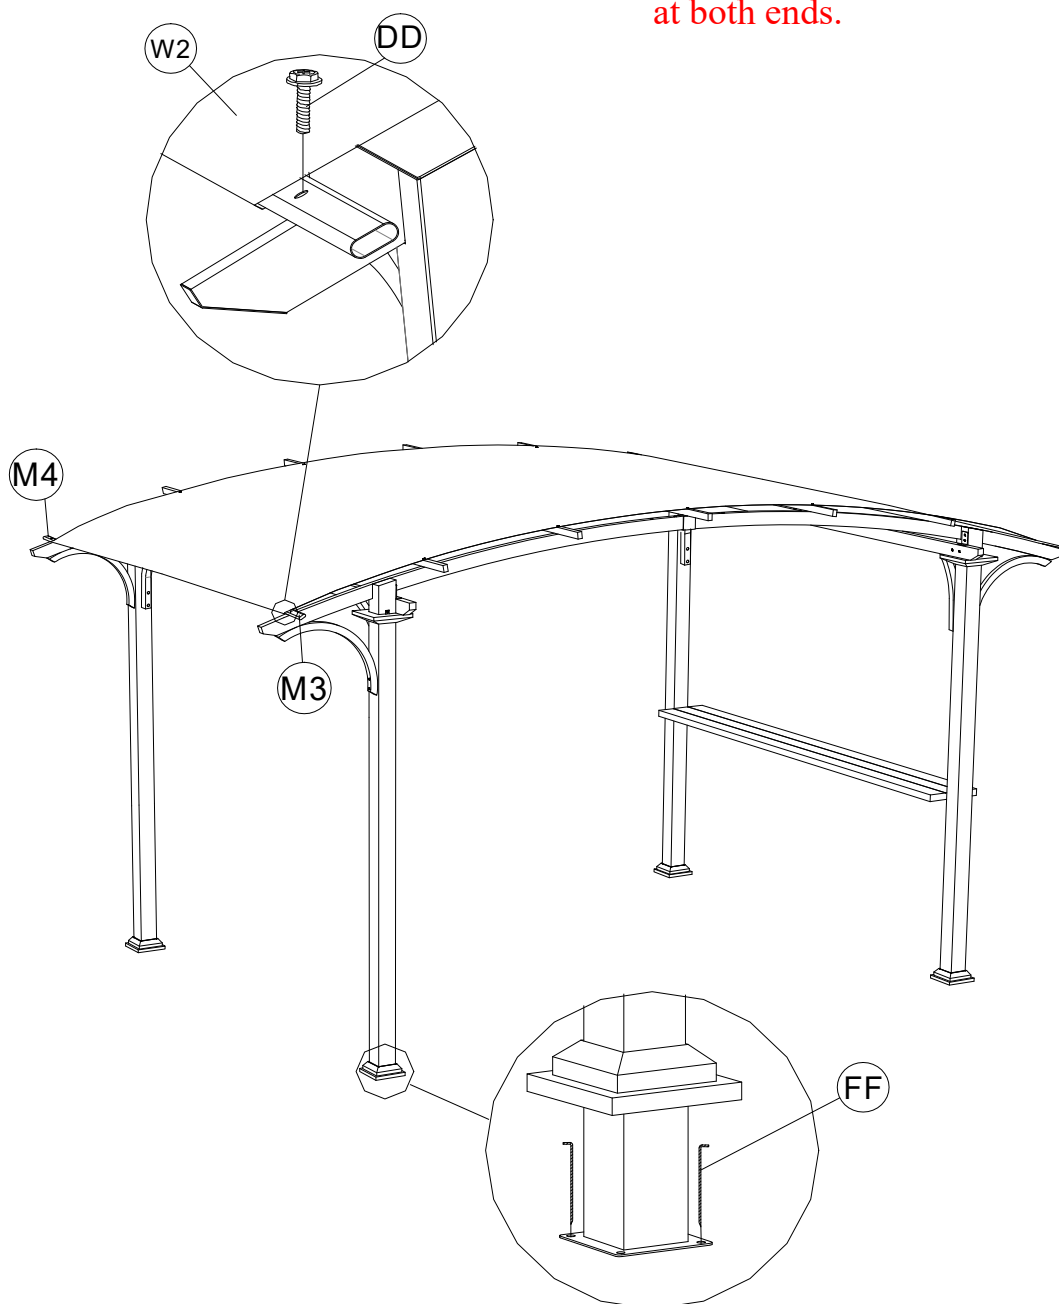


10

FF

8x



D6x230



M6x25

DD

4x