




Assembly Instructions

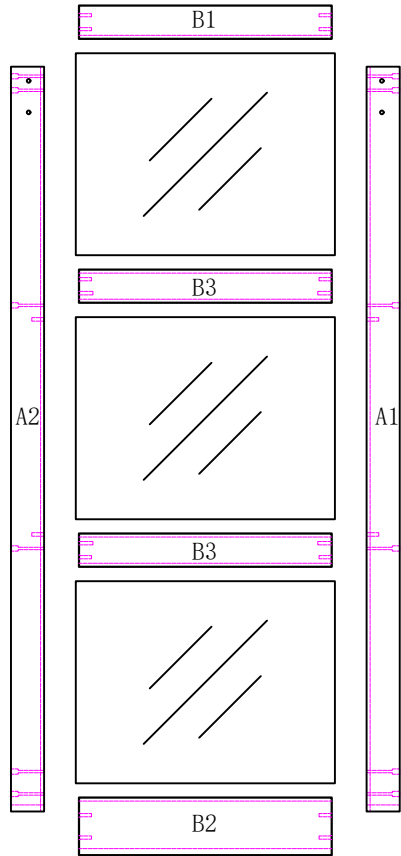


*Note: B1 B2 B3 must be the same place as above


Assembly Instructions

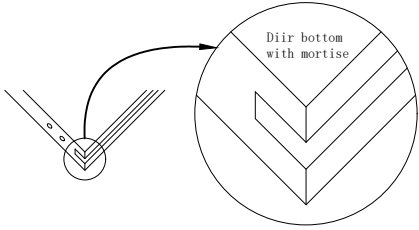


*The stile with dado should be in the bottom of door

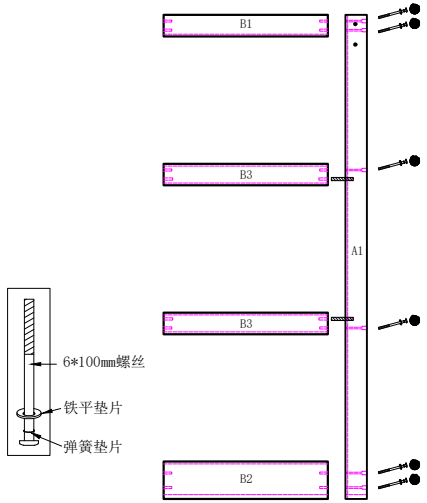

① Connet the rails B1、 B2、 B3 with A1 by using 6*100mm bolts and then cover the bolt holes with stickers F

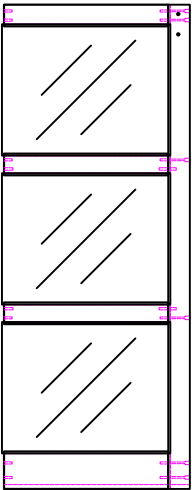

② Put all the tempered glass in

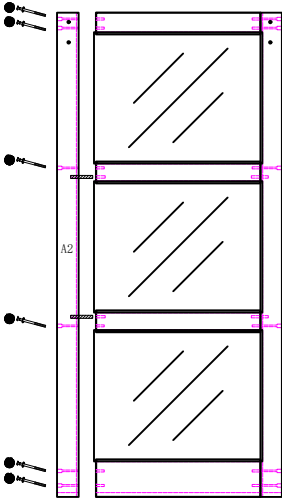

③ Connet the A2 with wood pins and bolts, cover the bolt holes with stickers F