
GDSG0180BK
GDSG0180WA
GDSG0180GE
GDSG0180YO

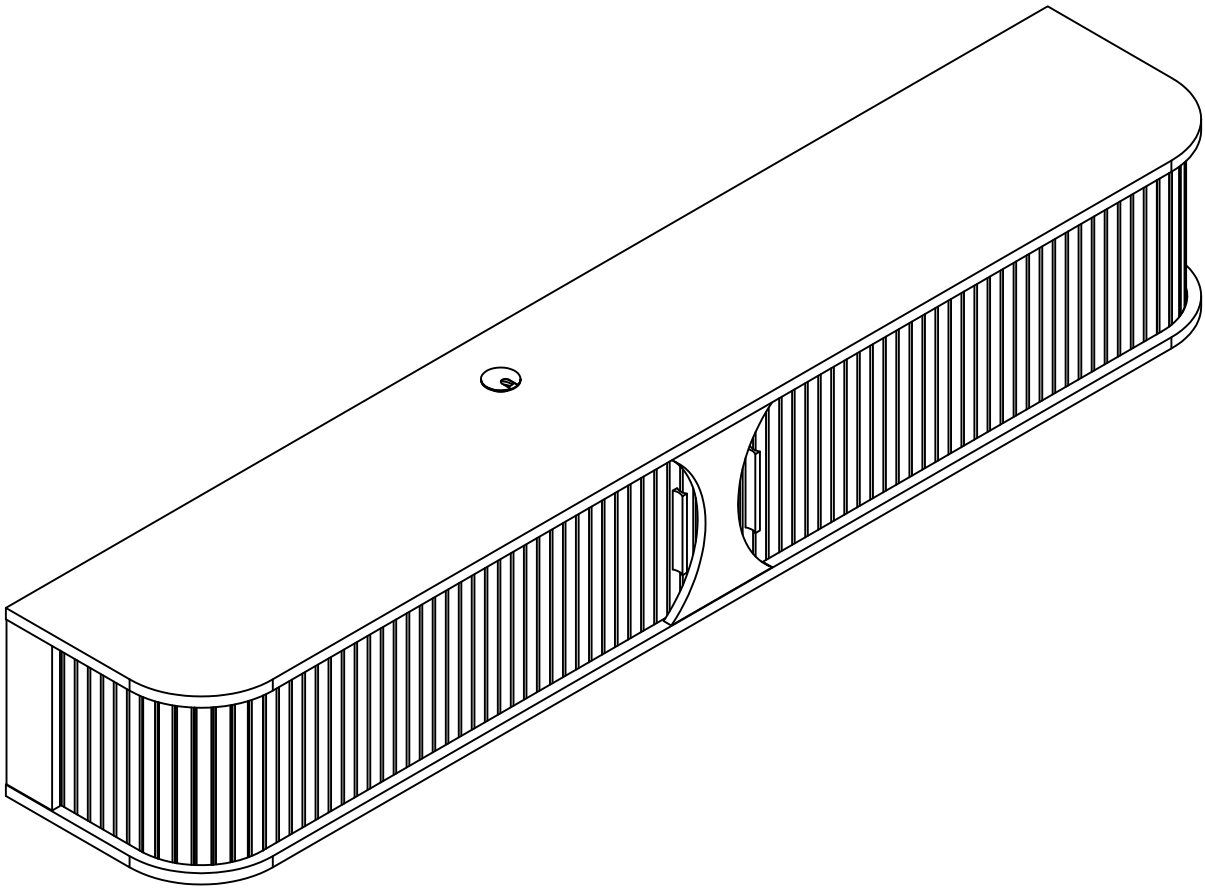


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

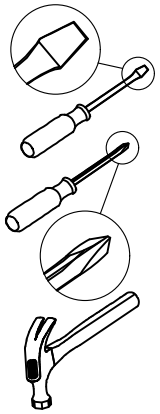

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screw driver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.




- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

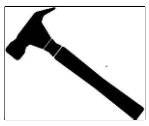

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

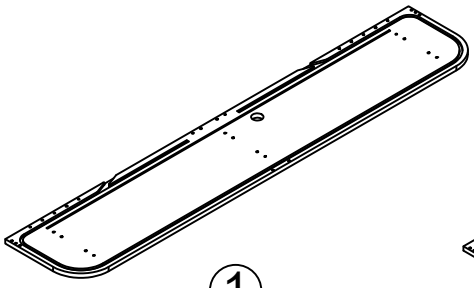


① PANEL
Qty:1

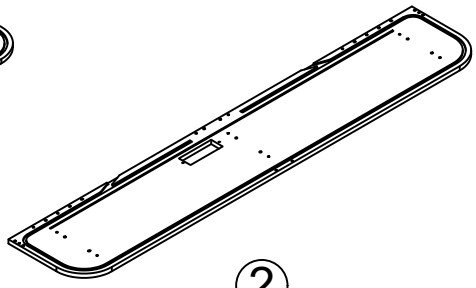


② BOTTOM PLATE
Qty:1

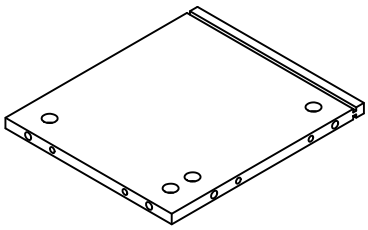


③ MIDDLE VERTICAL BOARD
Qty:1

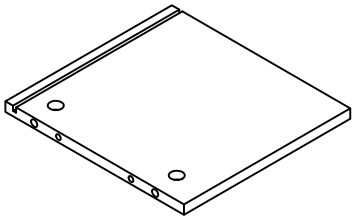


④ LEFT VERTICAL PANEL
Qty:1

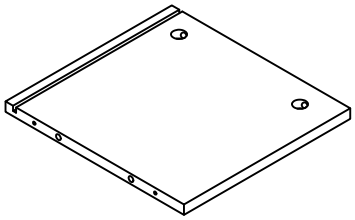


⑤ RIGHT VERTICAL PANEL
Qty:1

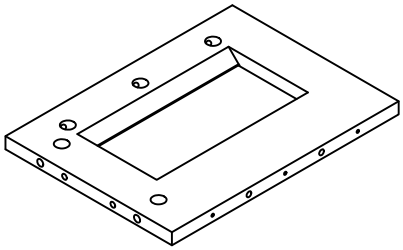


⑥ LEFT THICK BACK PLATE
Qty:1

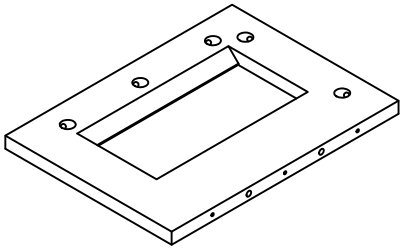


⑦ RIGHT THICK BACK PLATE
Qty:1

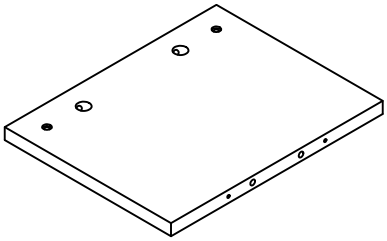


⑧ MEDIUM THICKNESS BACK PLATE
Qty:1

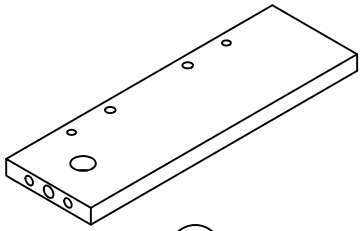


⑨ LEFT VERTICAL BAR
Qty:1

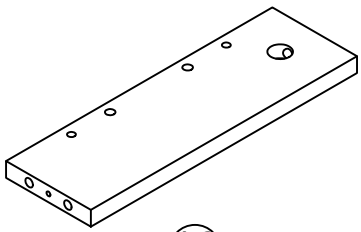

⑩ RIGHT VERTICAL BAR
Qty:1

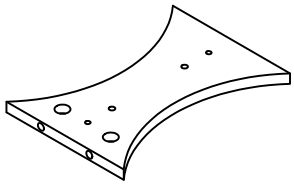


⑪ FRONT BUMPER
Qty:1

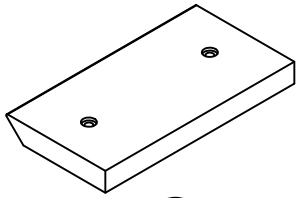

⑫ WALL PANEL
Qty:2


Board Identification

Not actual size

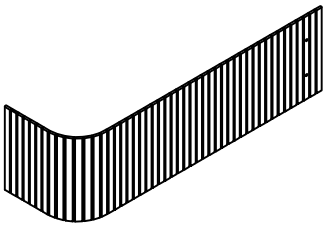

⑬

SIDE TO SIDE
ROLL-UP DOOR
Qty:2

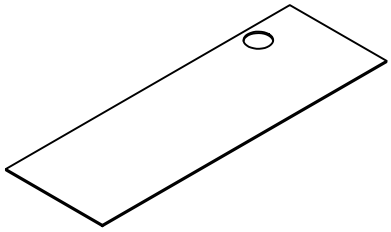

⑭

BACKPLANE
Qty:2


Part List



Ø15X9.5mm

A	X24

CAM LOCK
spare:2



Ø6.5X35mm

B	X24

CAM BOLT
spare:2



Ø6X30mm

C	X38


WOOD DOWEL
spare:3



Ø3X12mm

D	X3

SCREW
spare:1



Ø4X35mm

E	X18

SCREW
spare:2



M4X9mm

F	X4

SCREW
spare:1



20X10X6.7mm

G	X1


CRIMPING BUCKLE
spare:1



Ø21mm


H	X8

PERFECT STICKER
spare:2



I	X1


LINE HOLE COVER



162X55X40mm

J	X1

USB ON AC SIDE



105X15X7mm

K	X2

PULL HANDLES




L	X1set

LIGHT STRIP




M	X1set

ANTI-TIPPING



N	X5

SELF-ADHESIVE BUCKLE



70X30X5mm


O	X1

TOOL

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

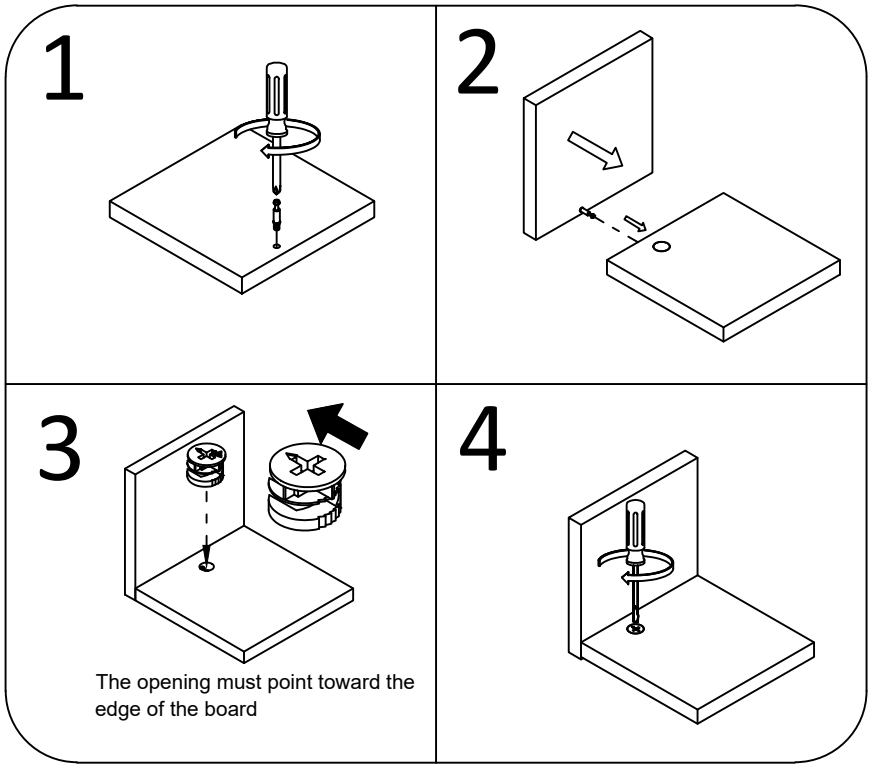



Board Identification


Not actual size

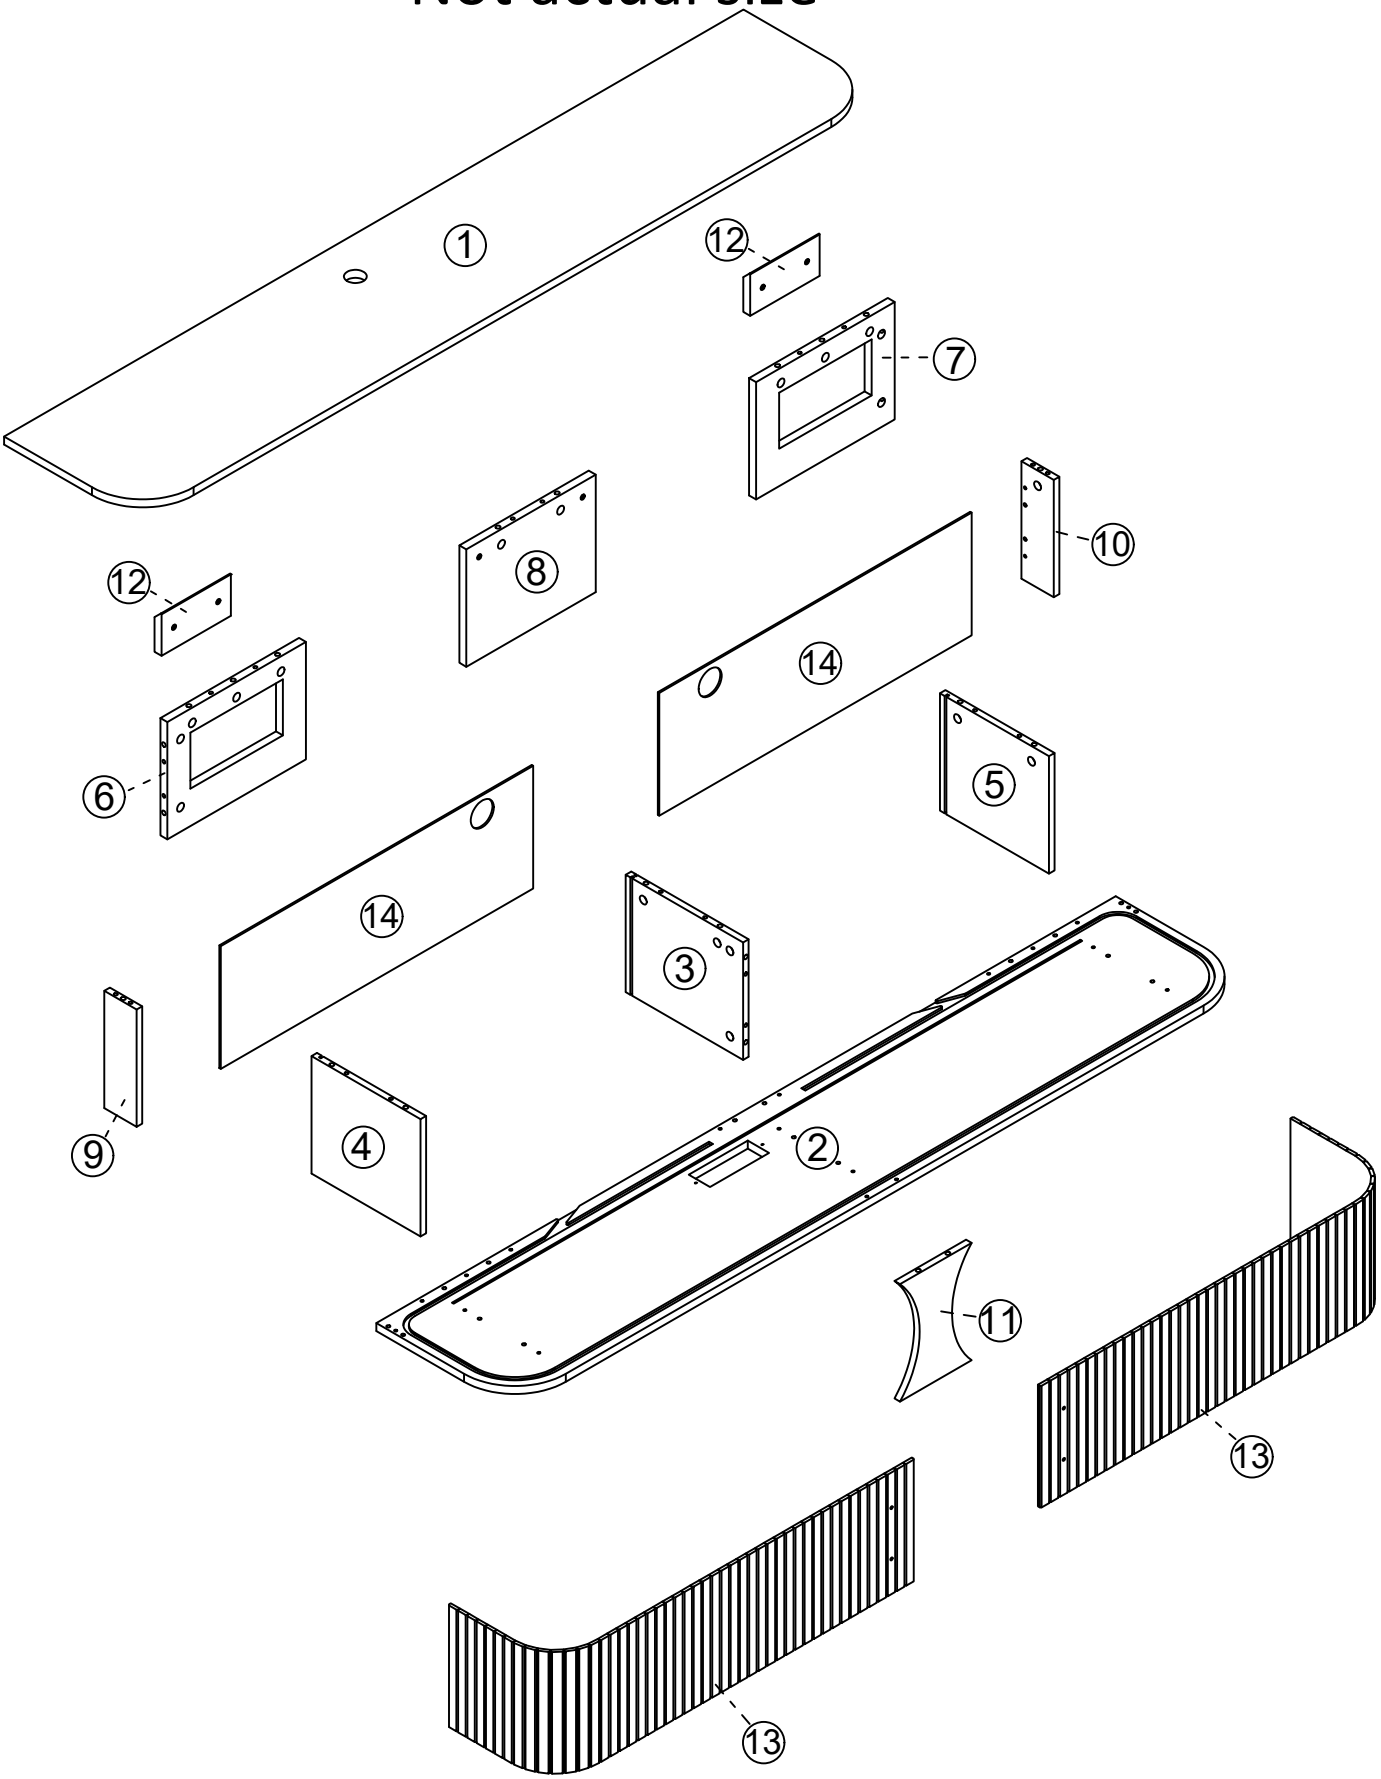


STEP1

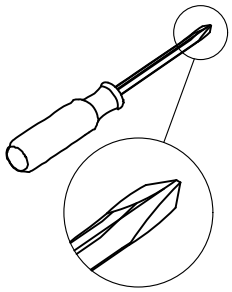


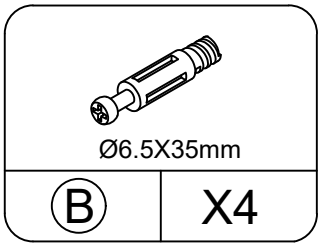


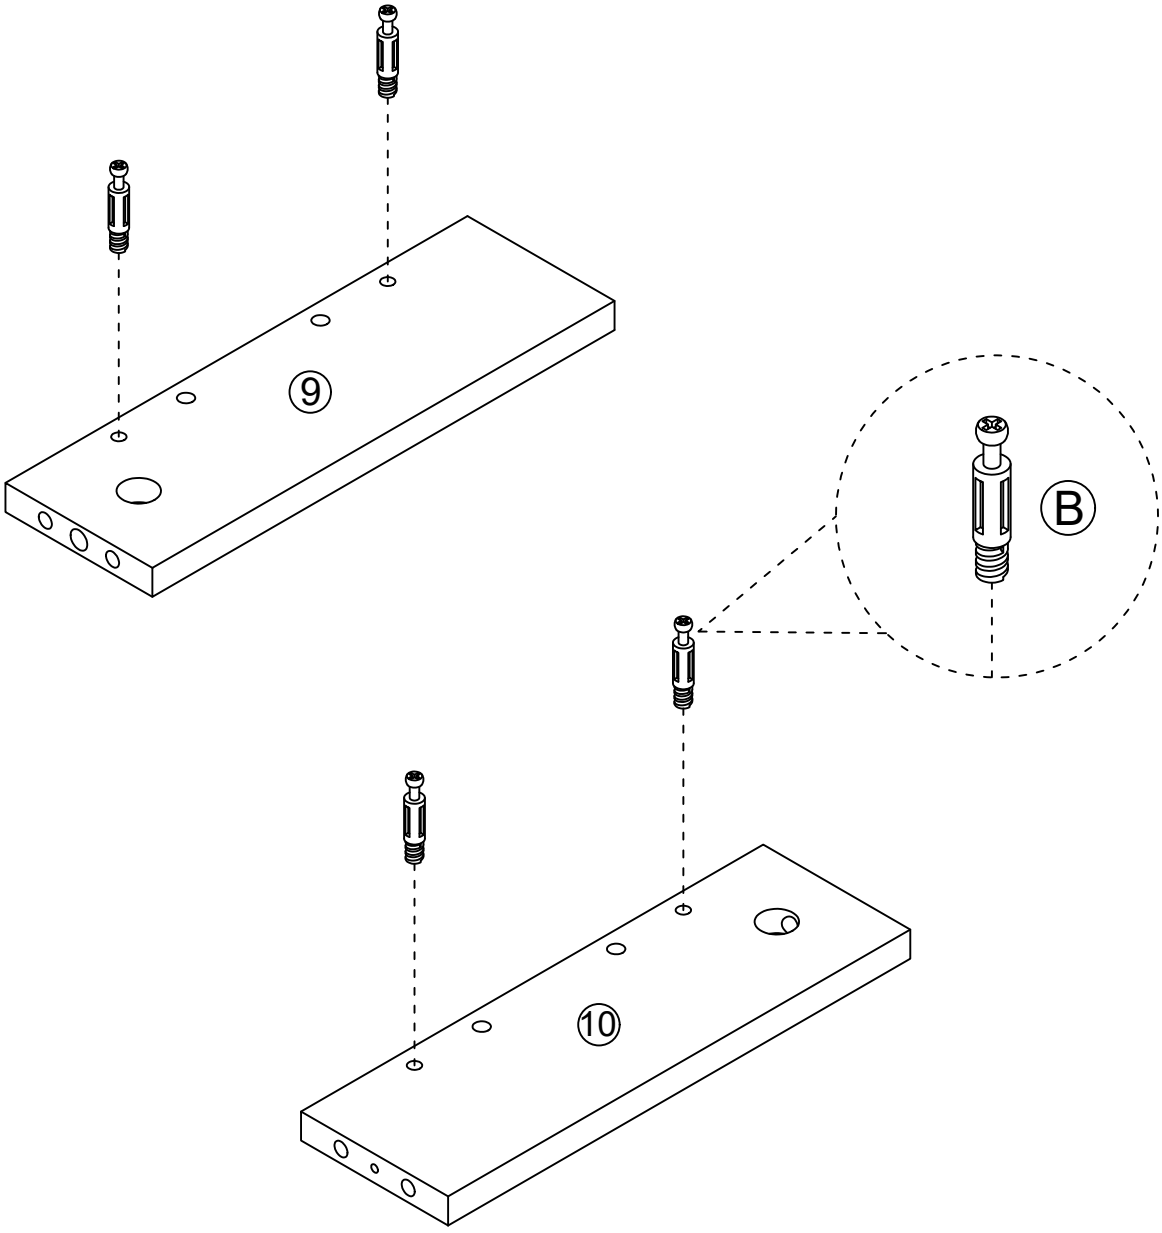


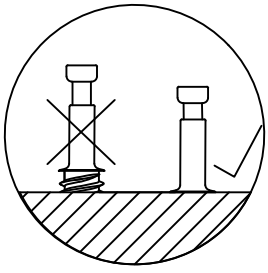



STEP2

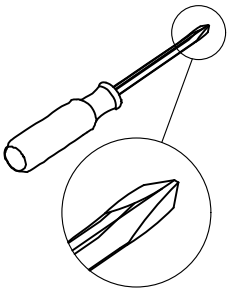

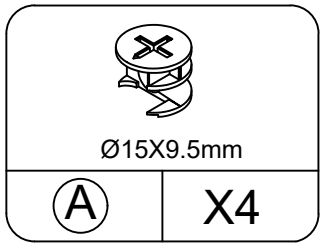


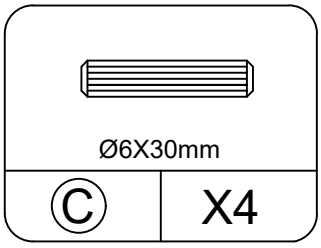

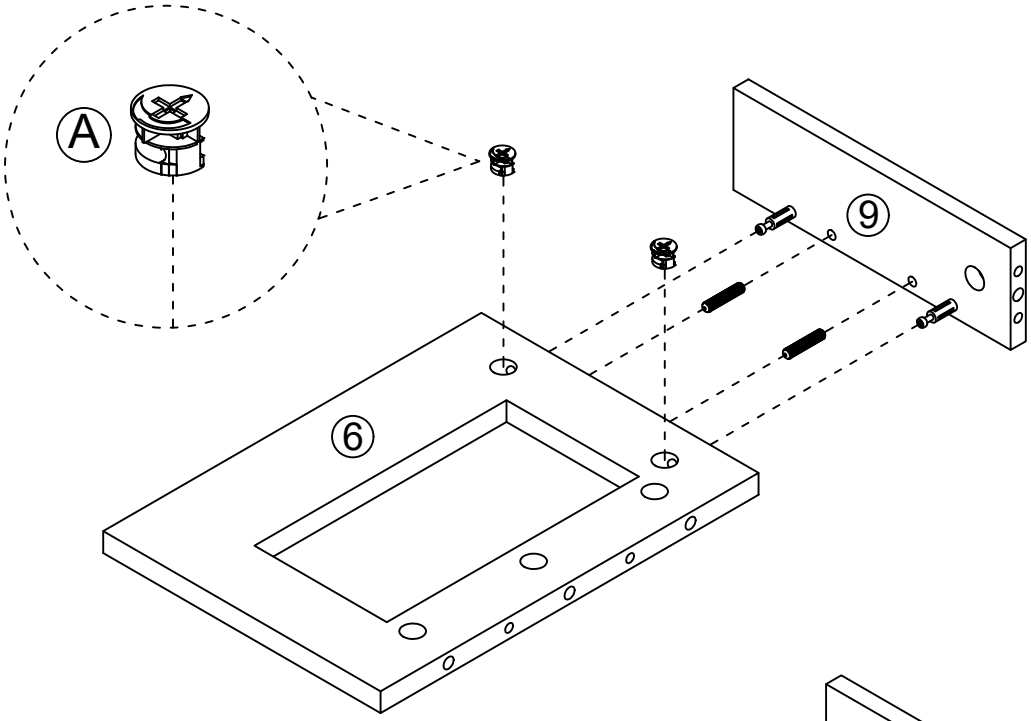

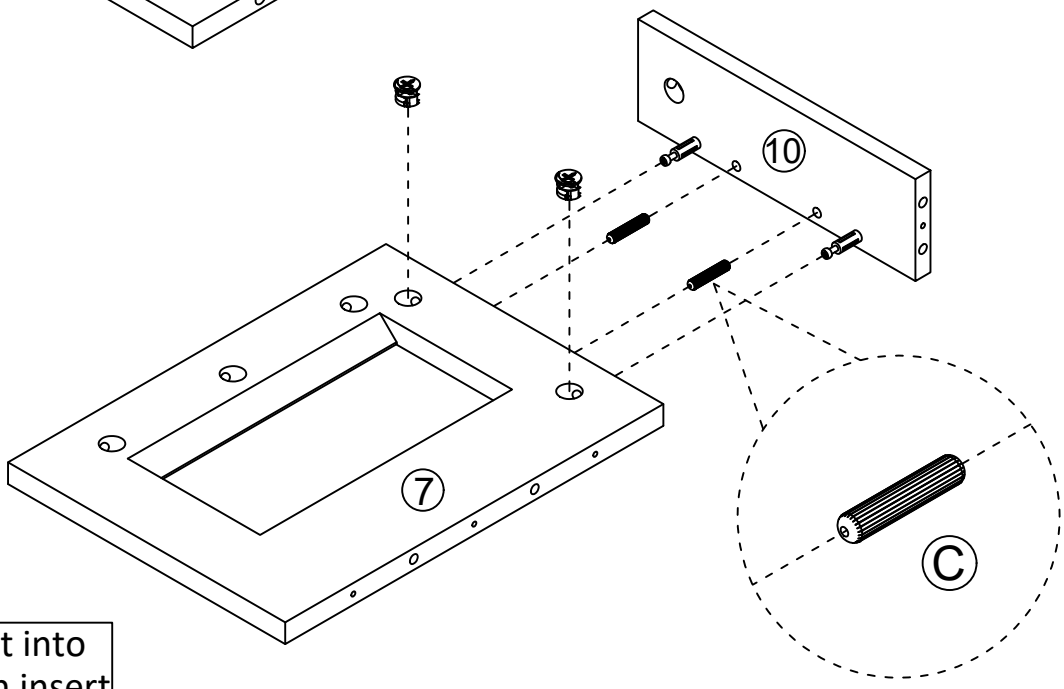


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

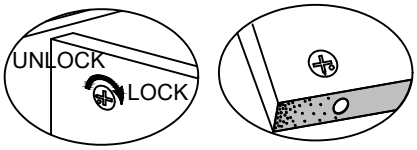



Proper orientation of CAM LOCK


STEP3

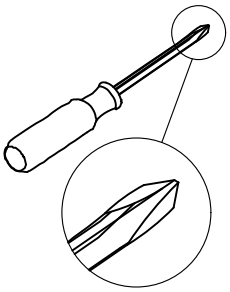


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm
A X2	B X2	C X2

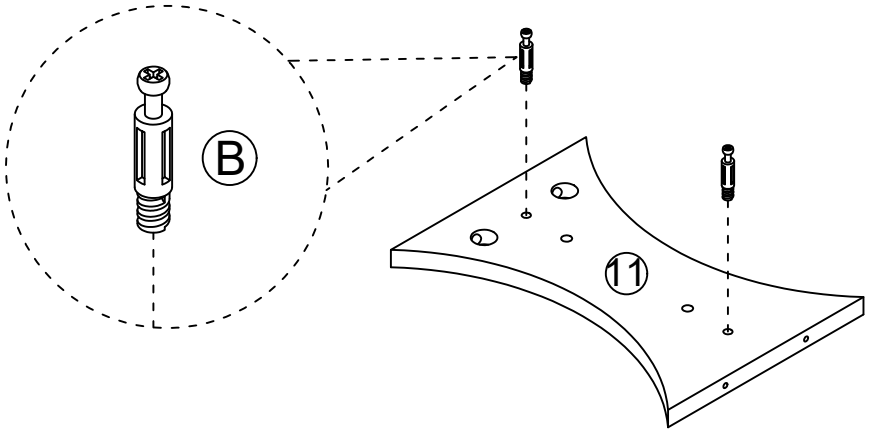

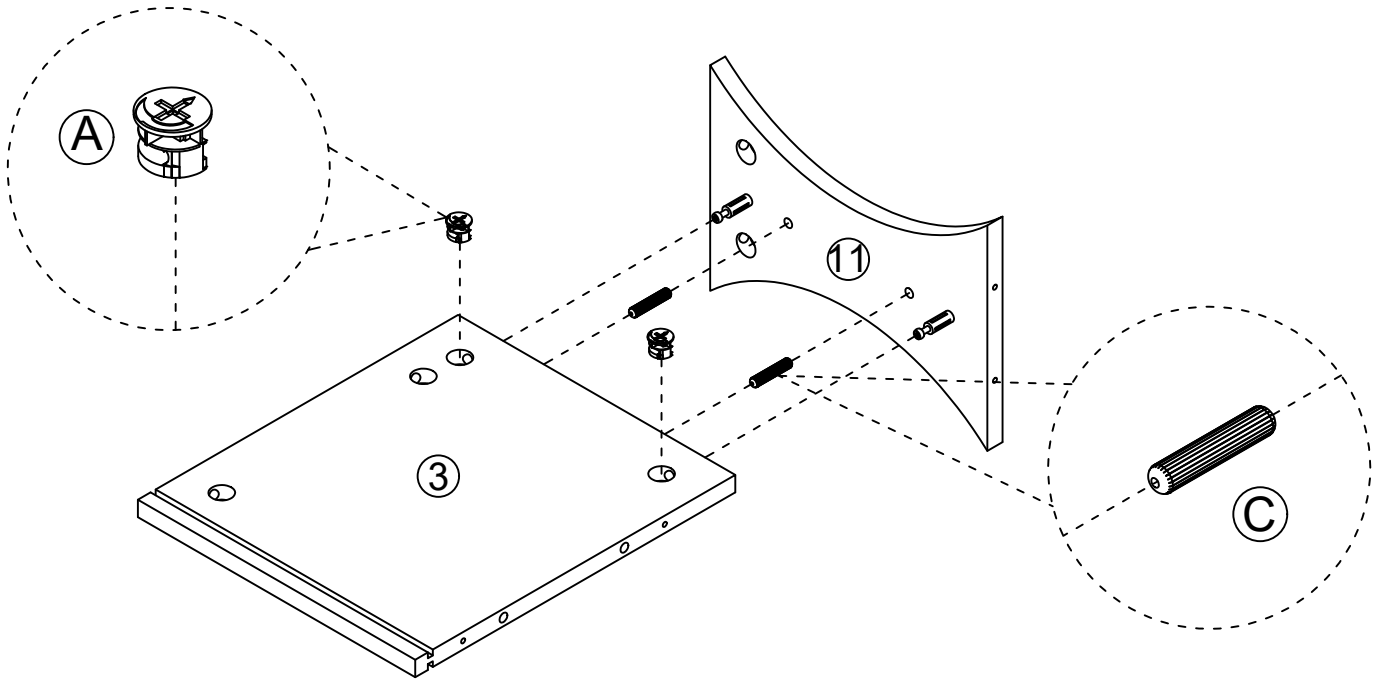

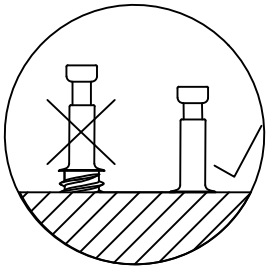



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

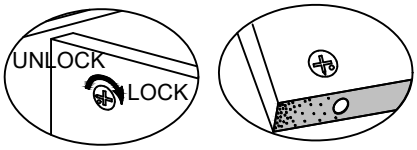



Proper orientation of CAM LOCK

STEP4

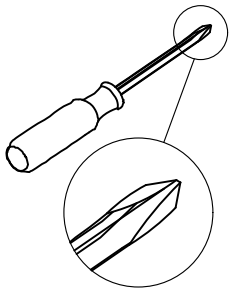


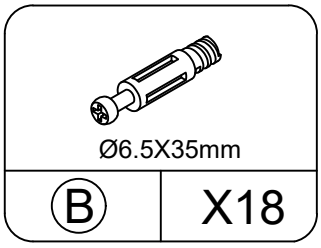


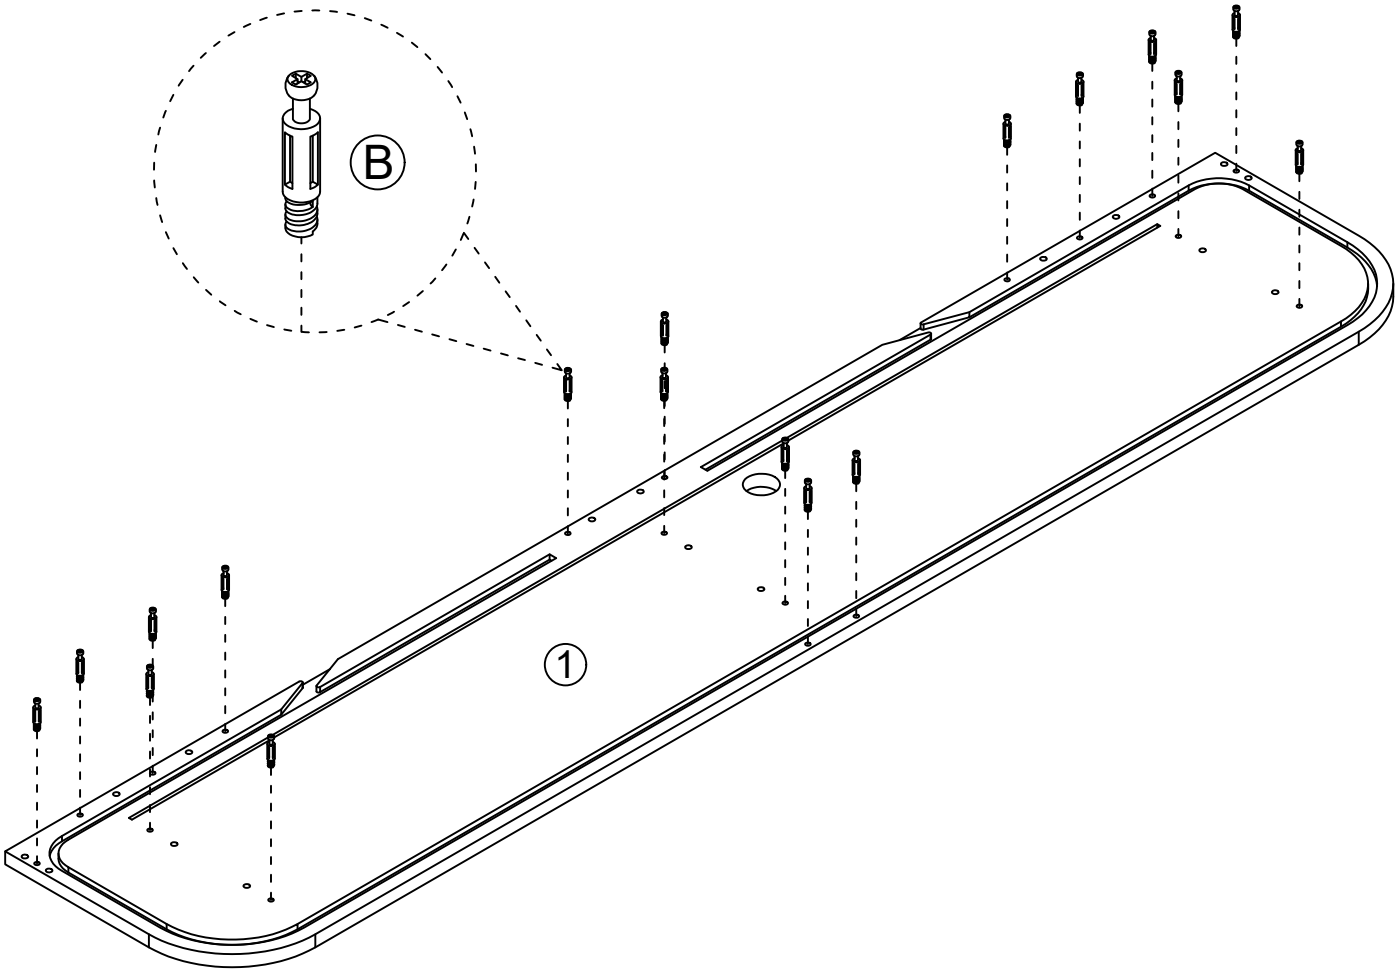


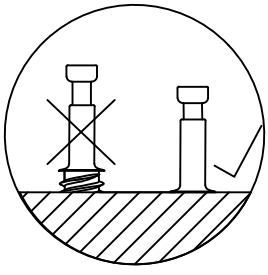


STEP5

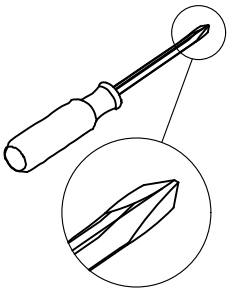


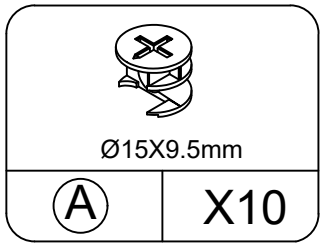

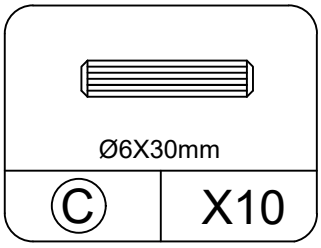

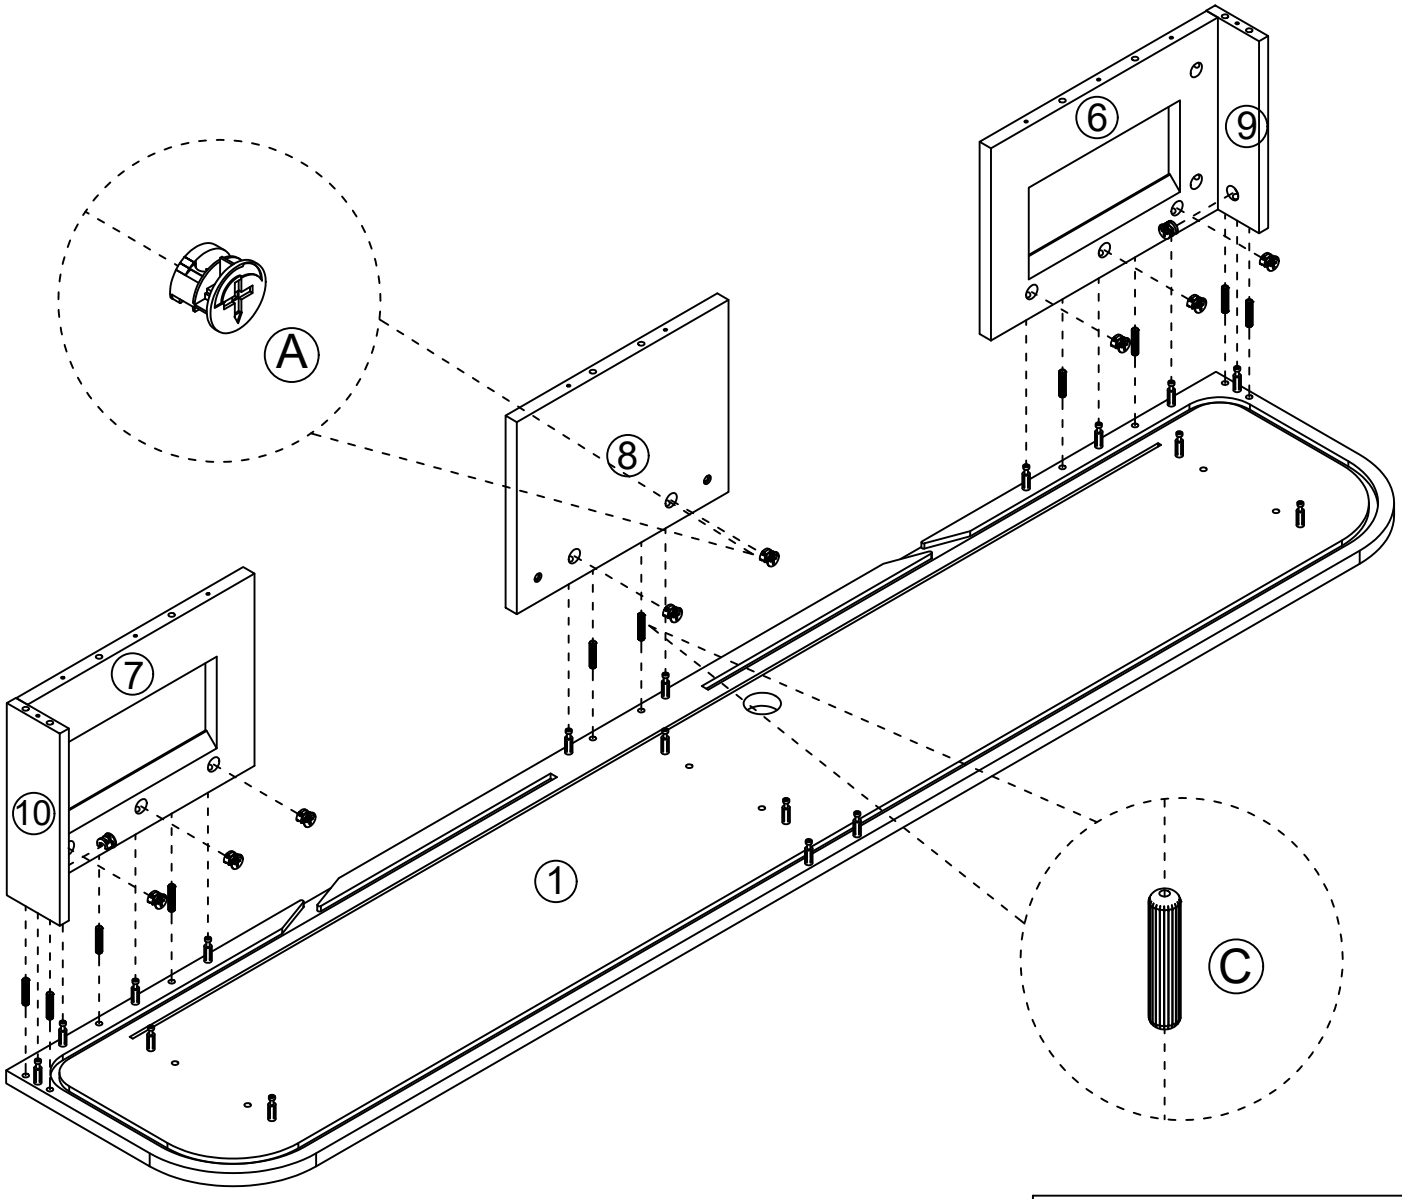



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

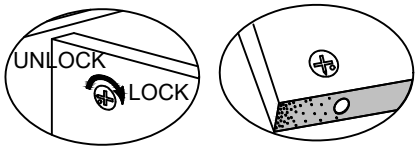



Proper orientation of CAM LOCK

STEP6

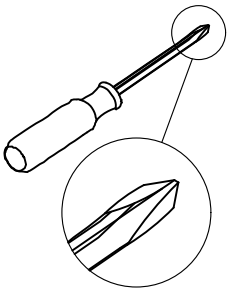


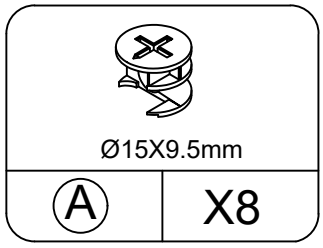

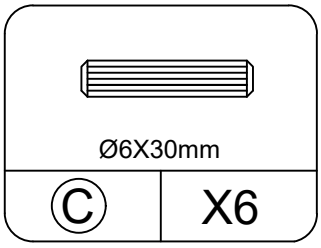

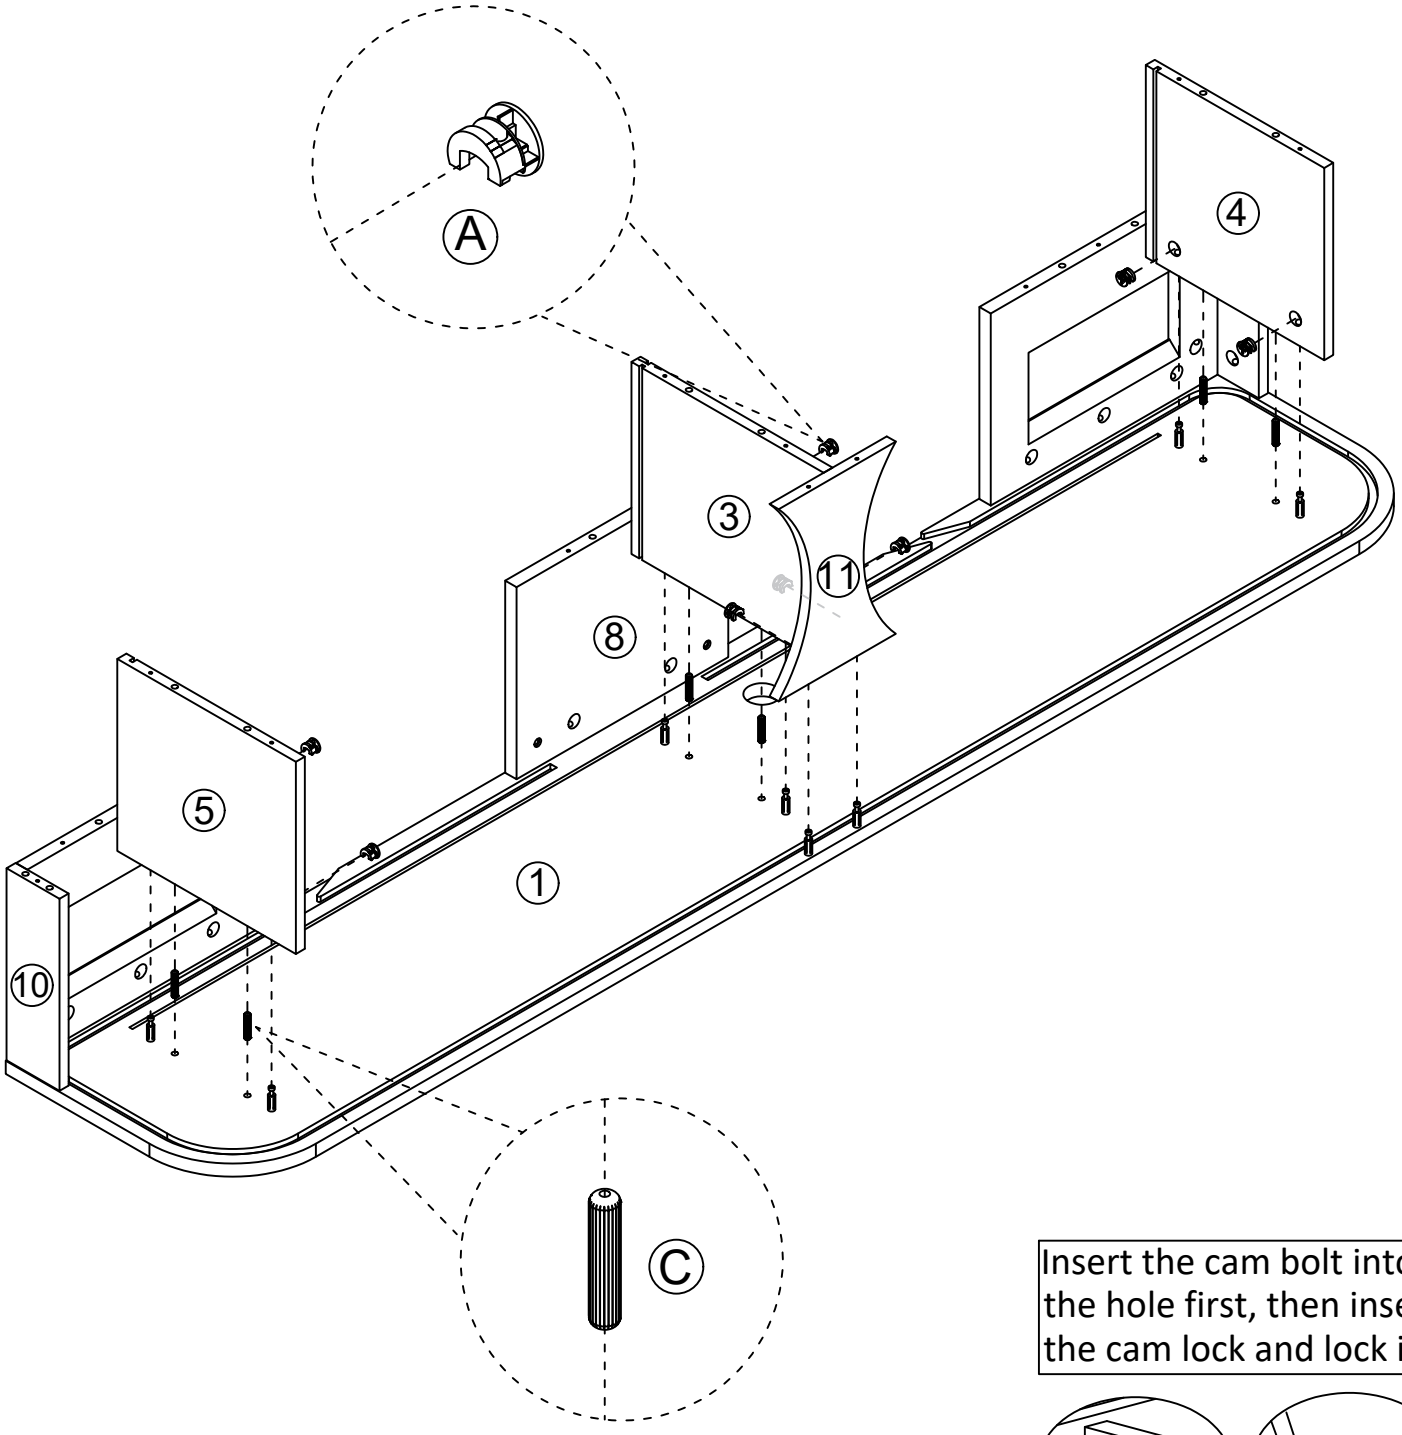



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

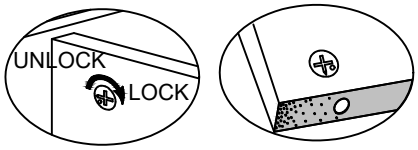


Proper orientation of CAM LOCK


STEP7

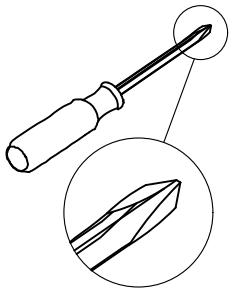


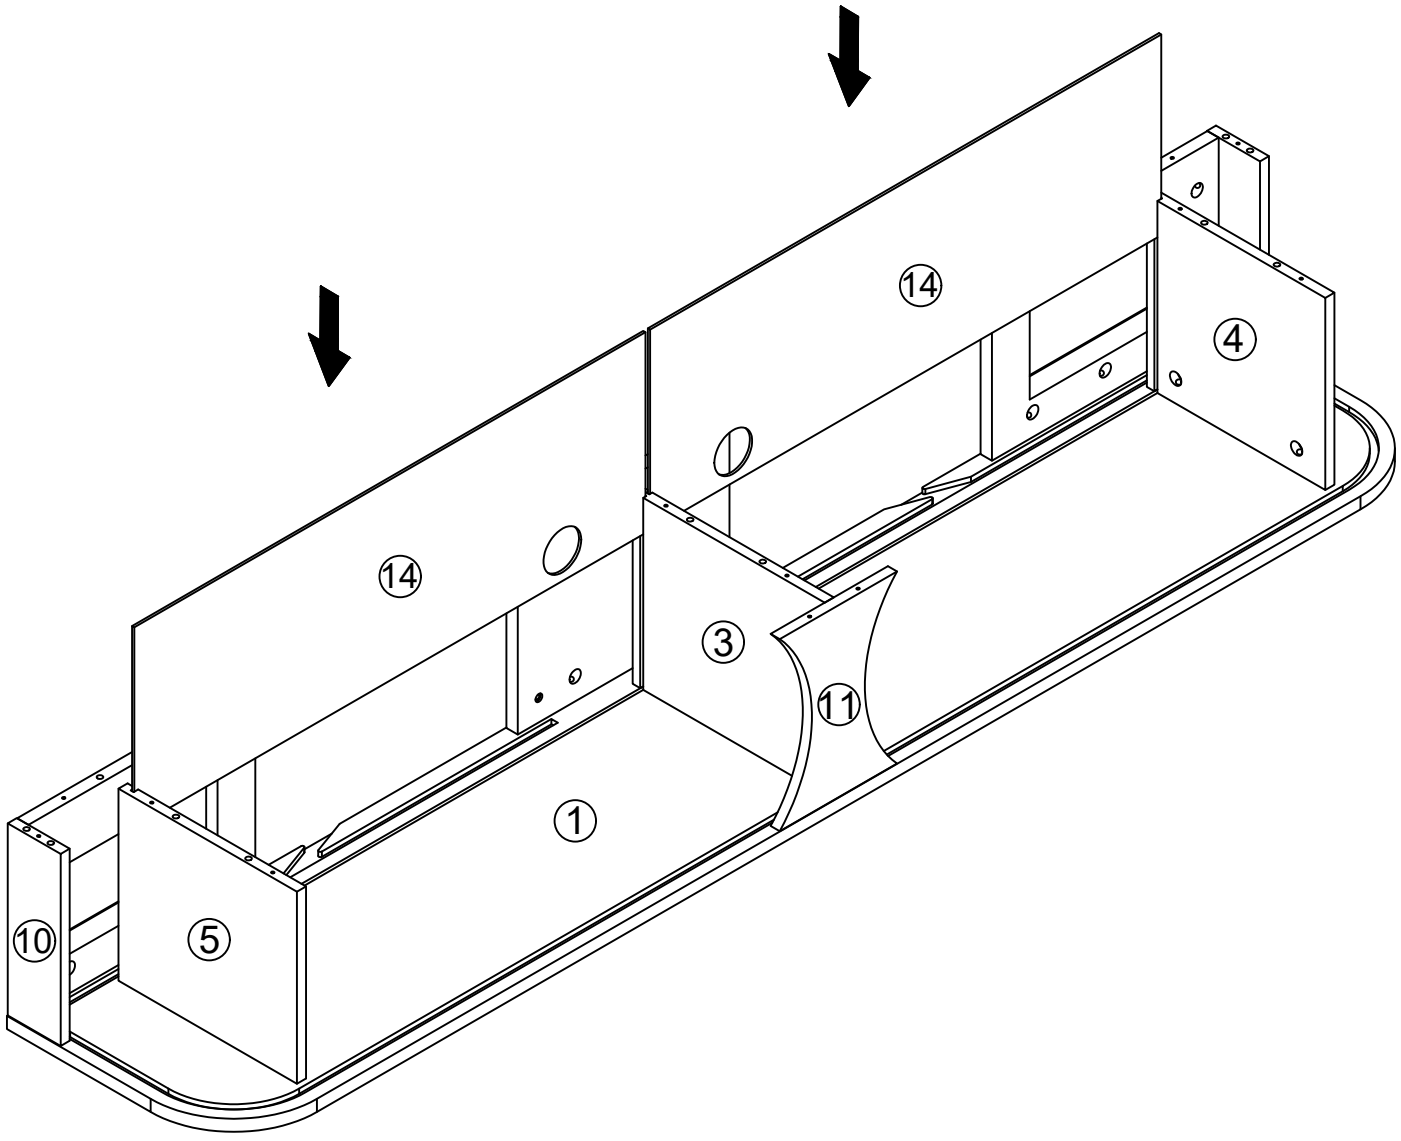



STEP8

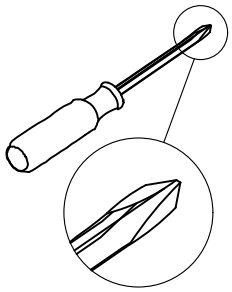

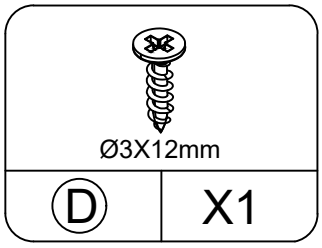


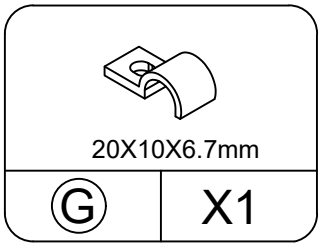


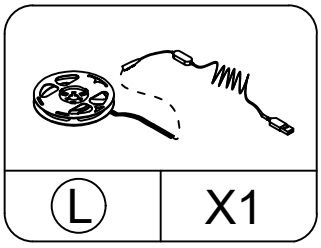


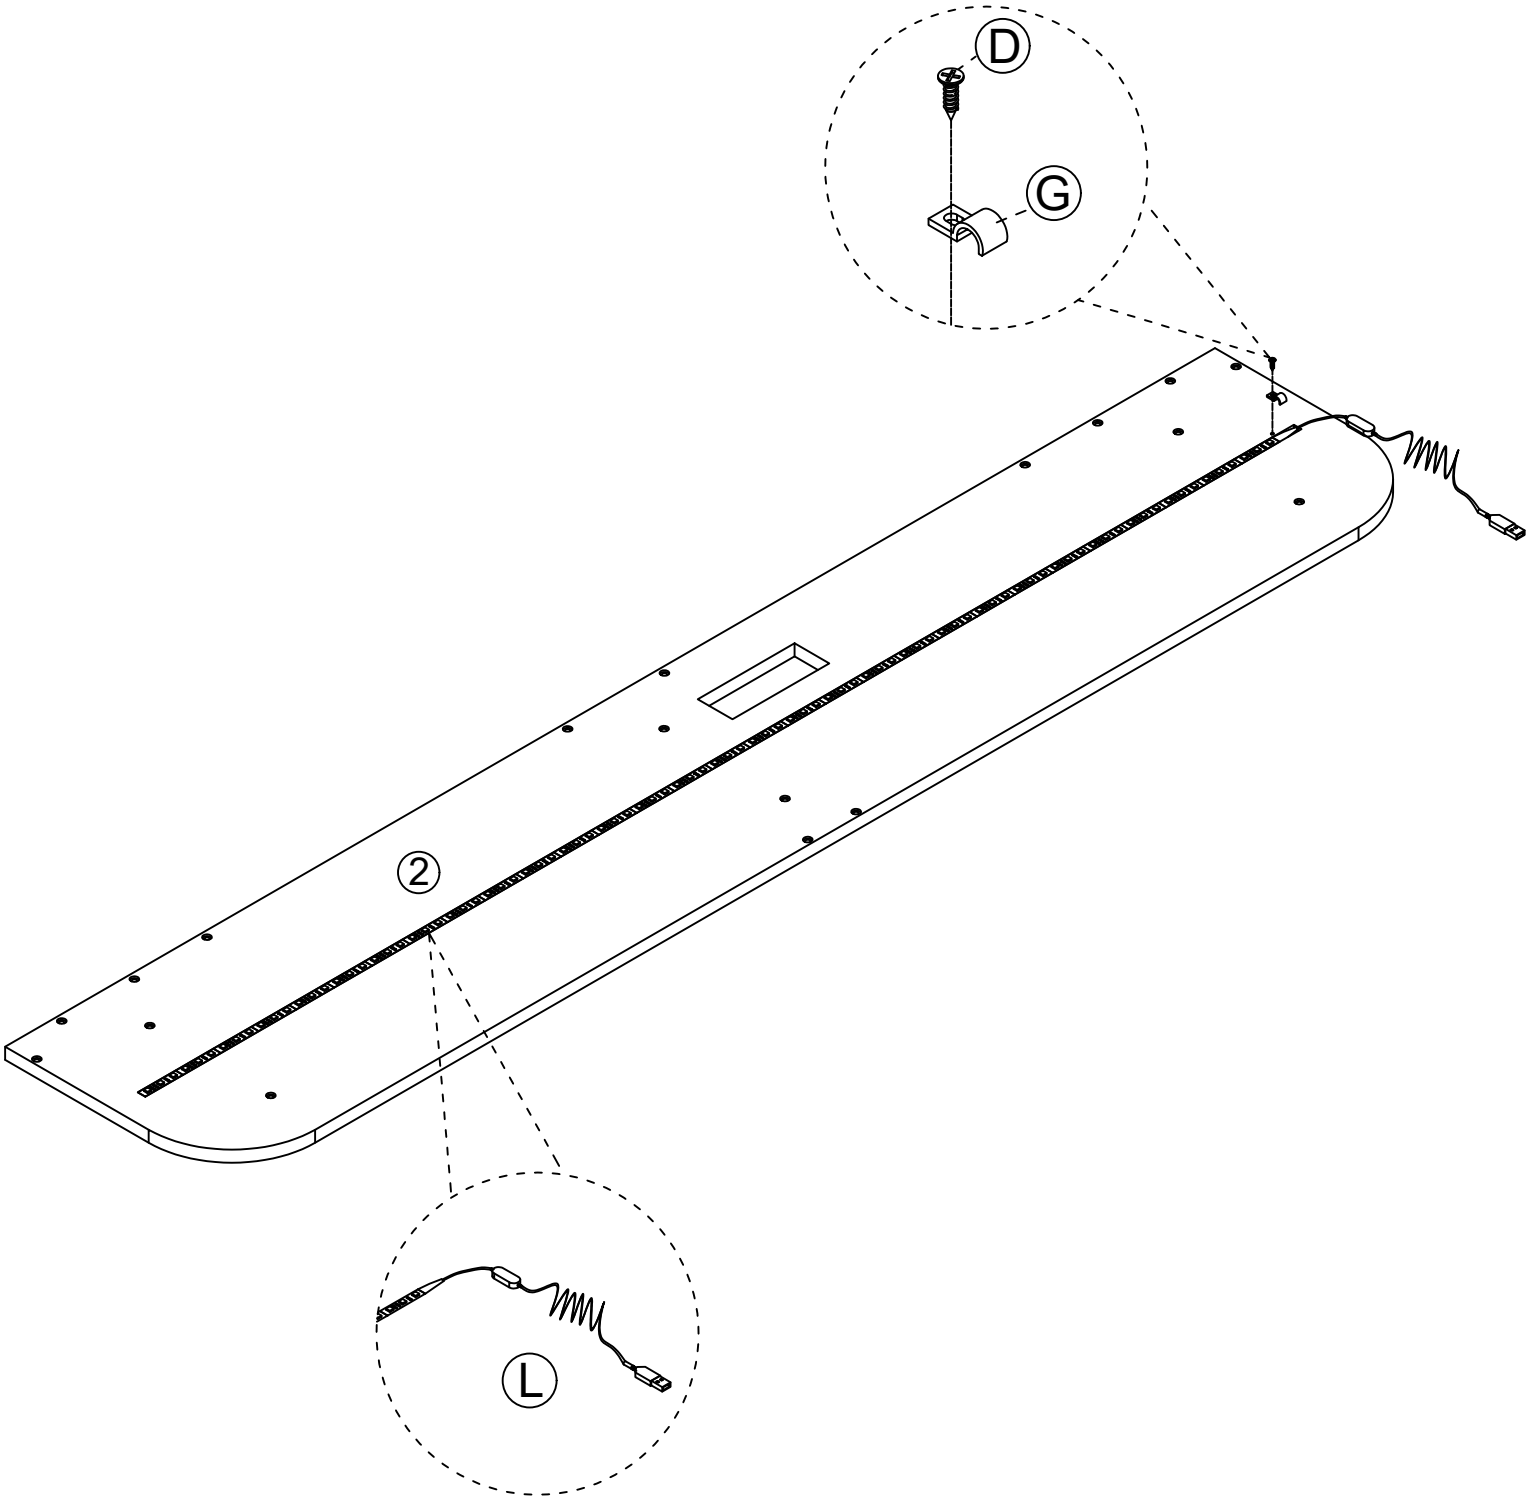


STEP9

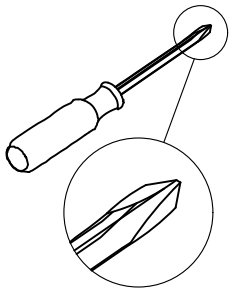


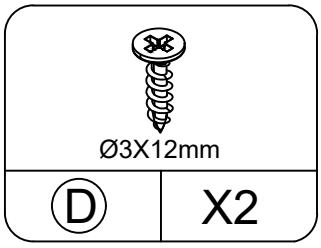


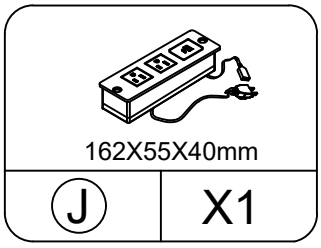


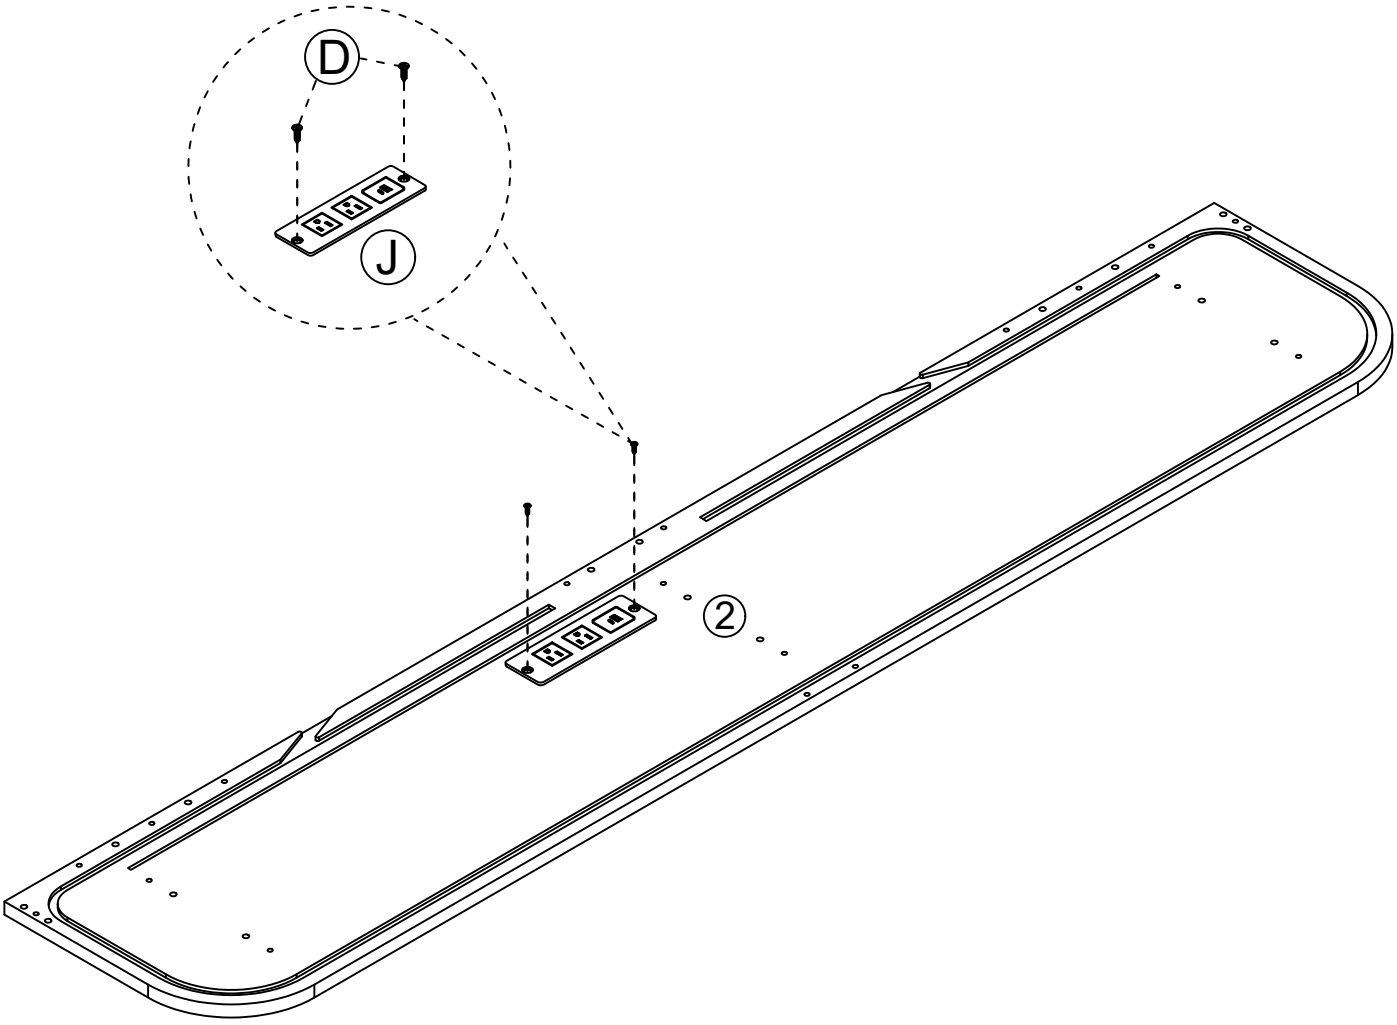



STEP10

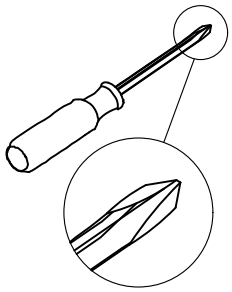

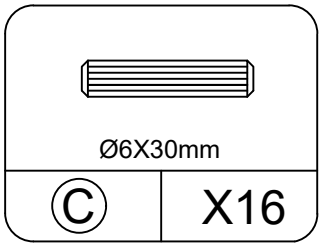


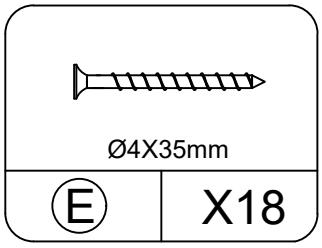

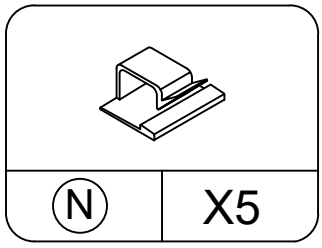


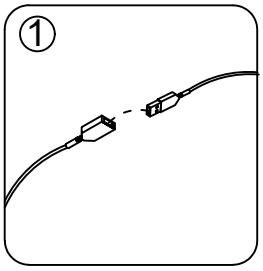


USB interface connection of the socket on the base plate and the USB interface of the LED strip

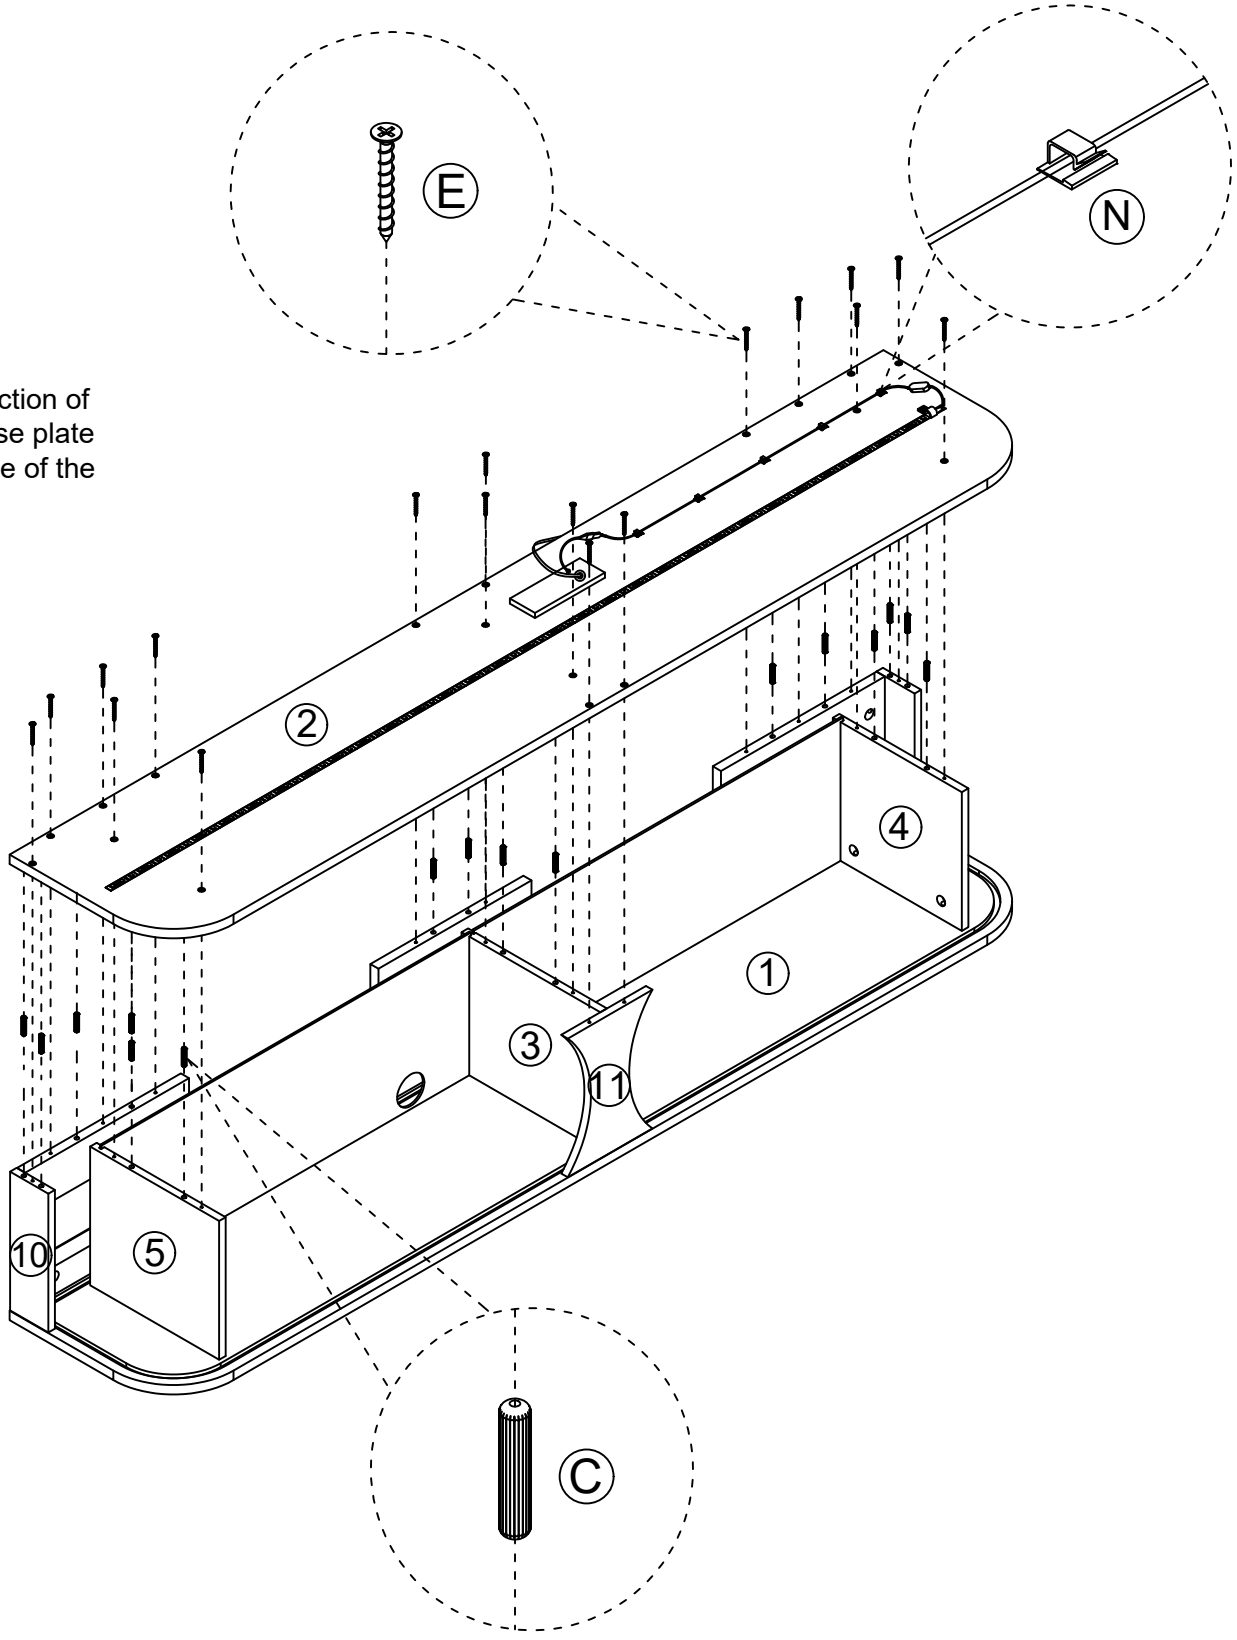


STEP11

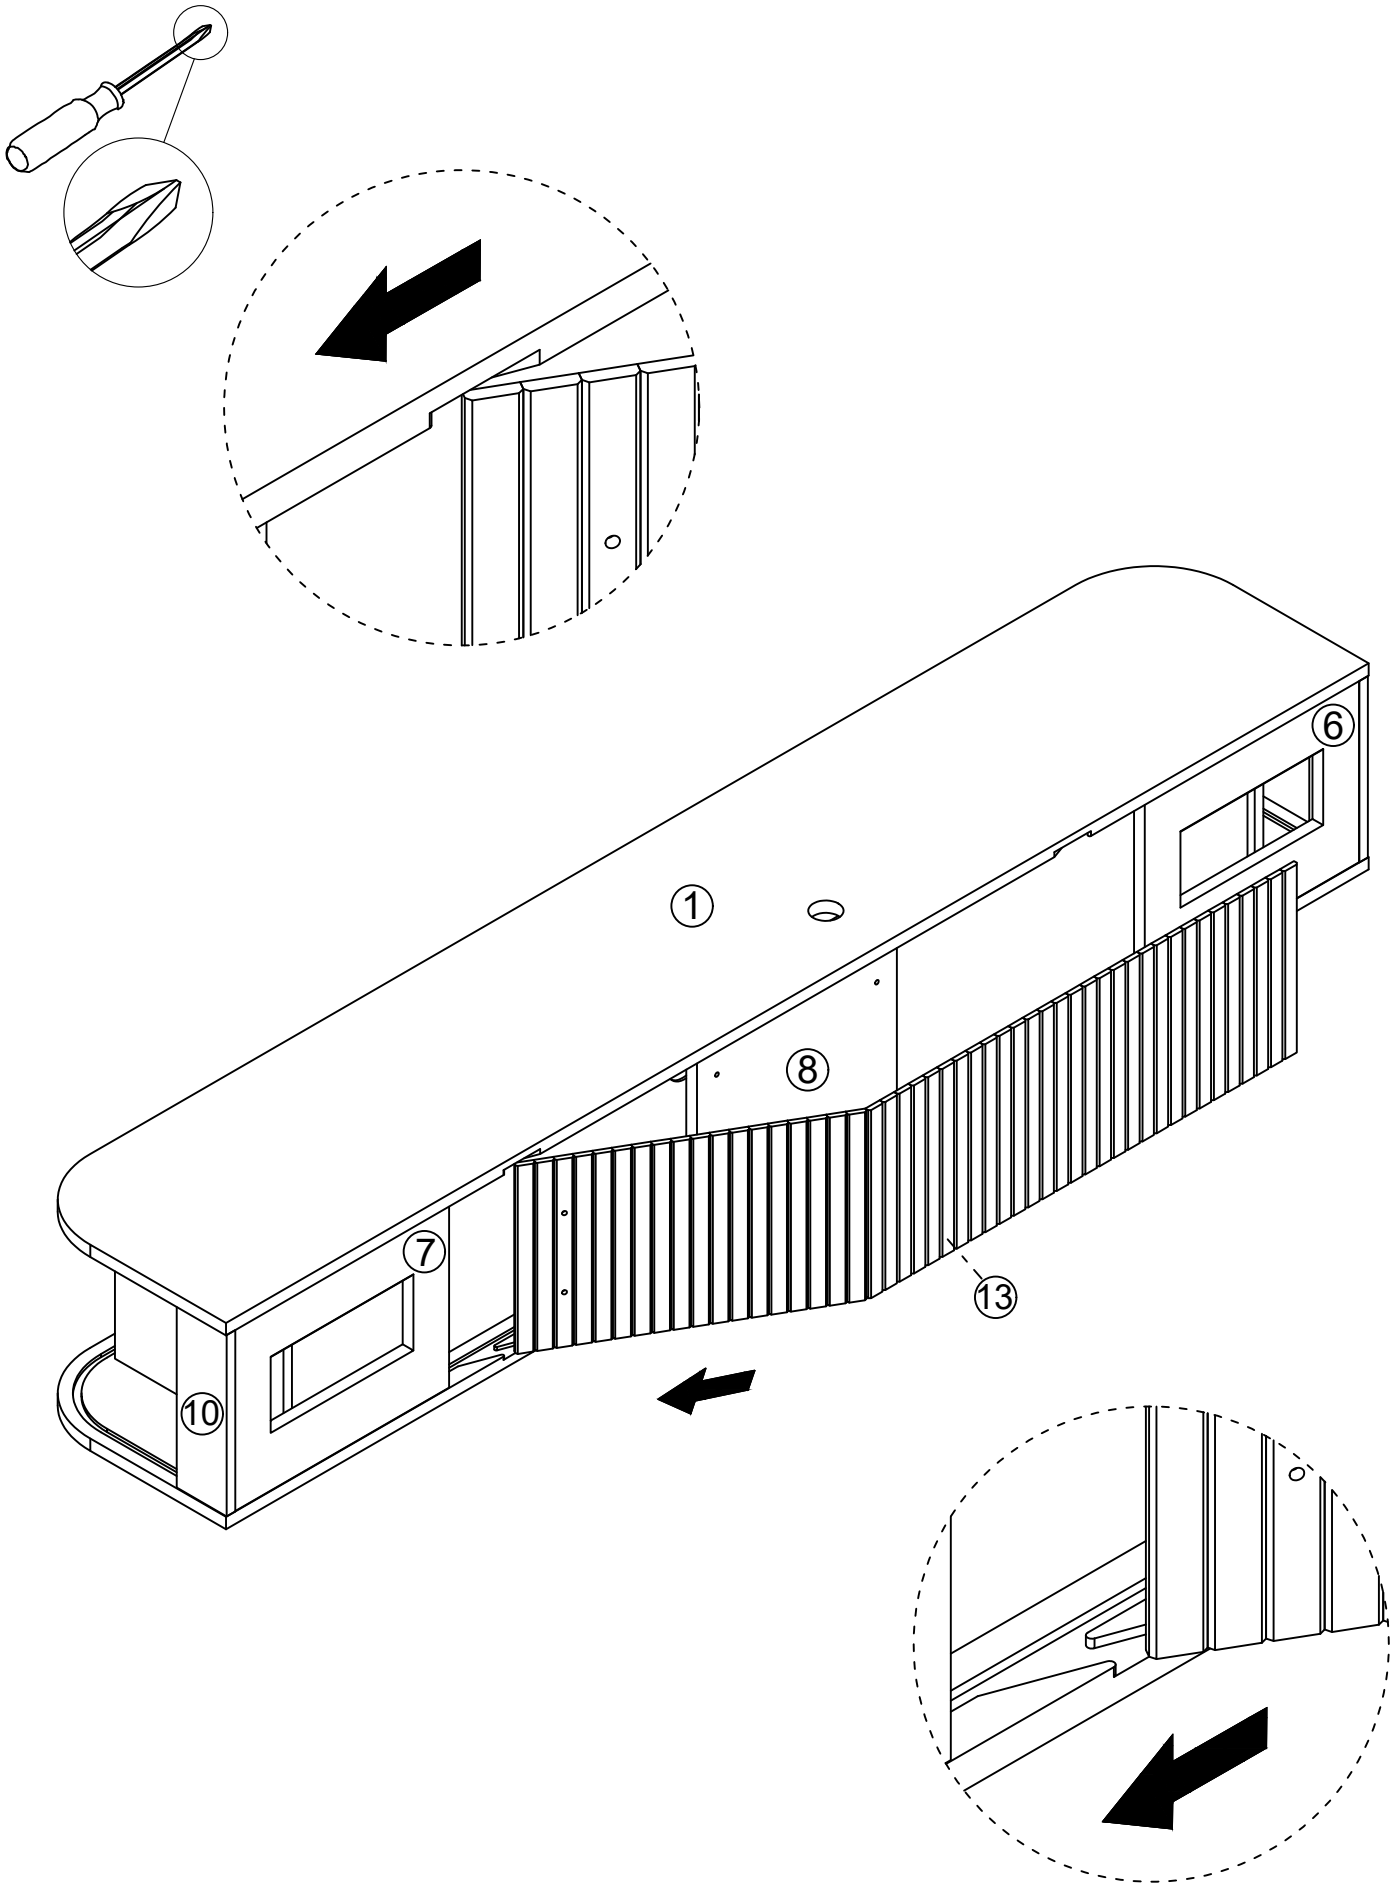



STEP12

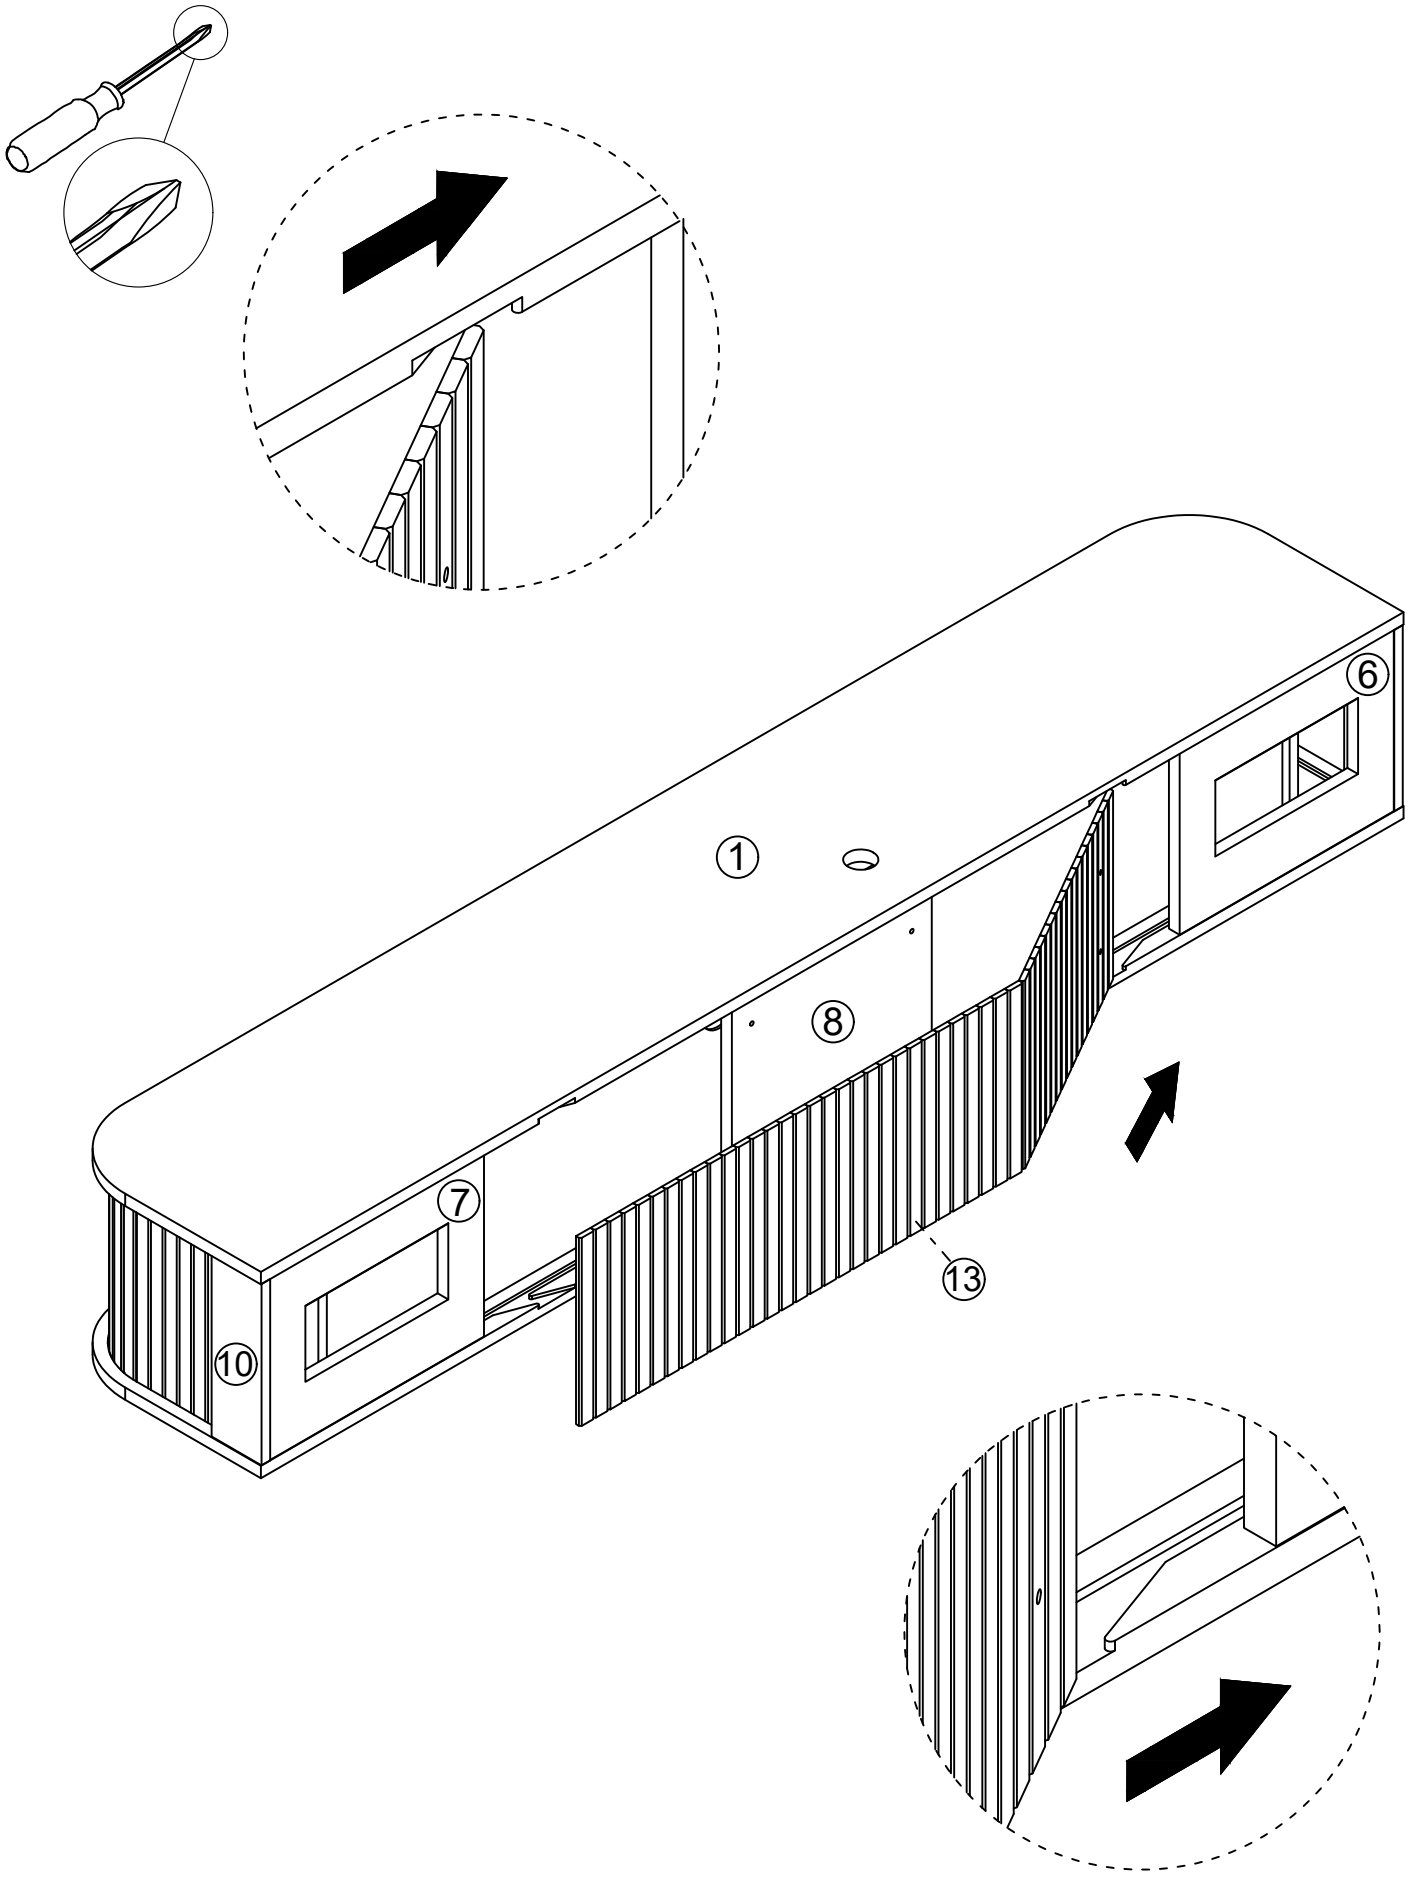


STEP13

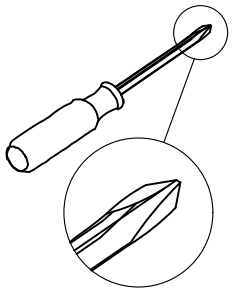


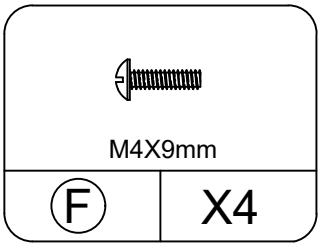


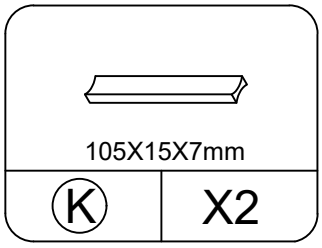


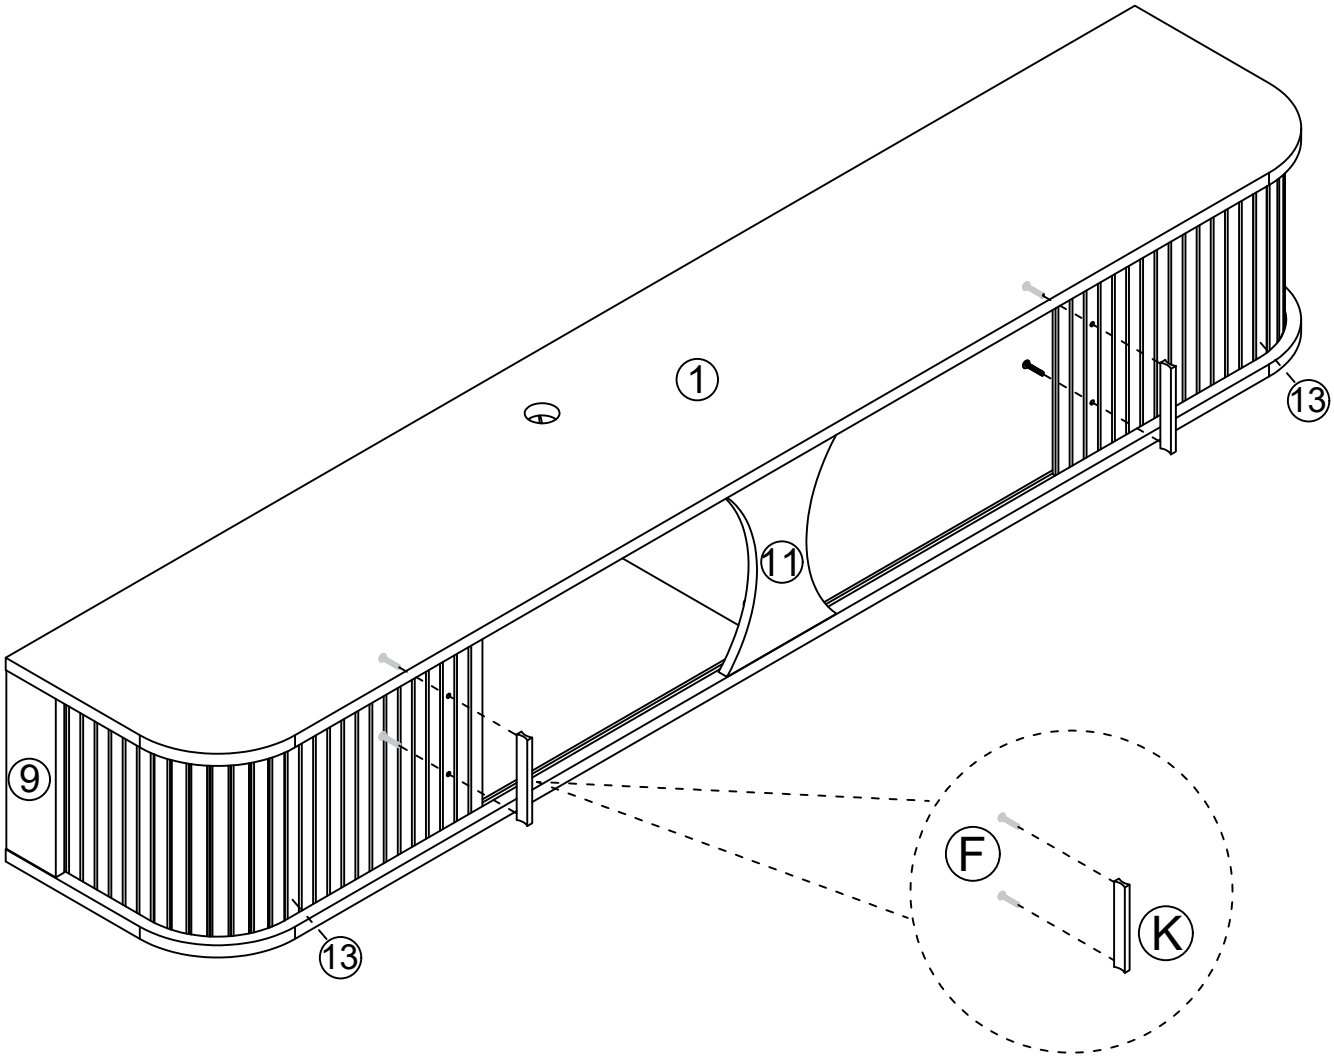


STEP14

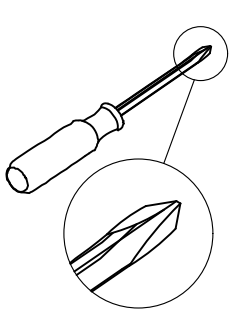


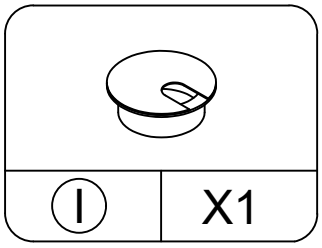


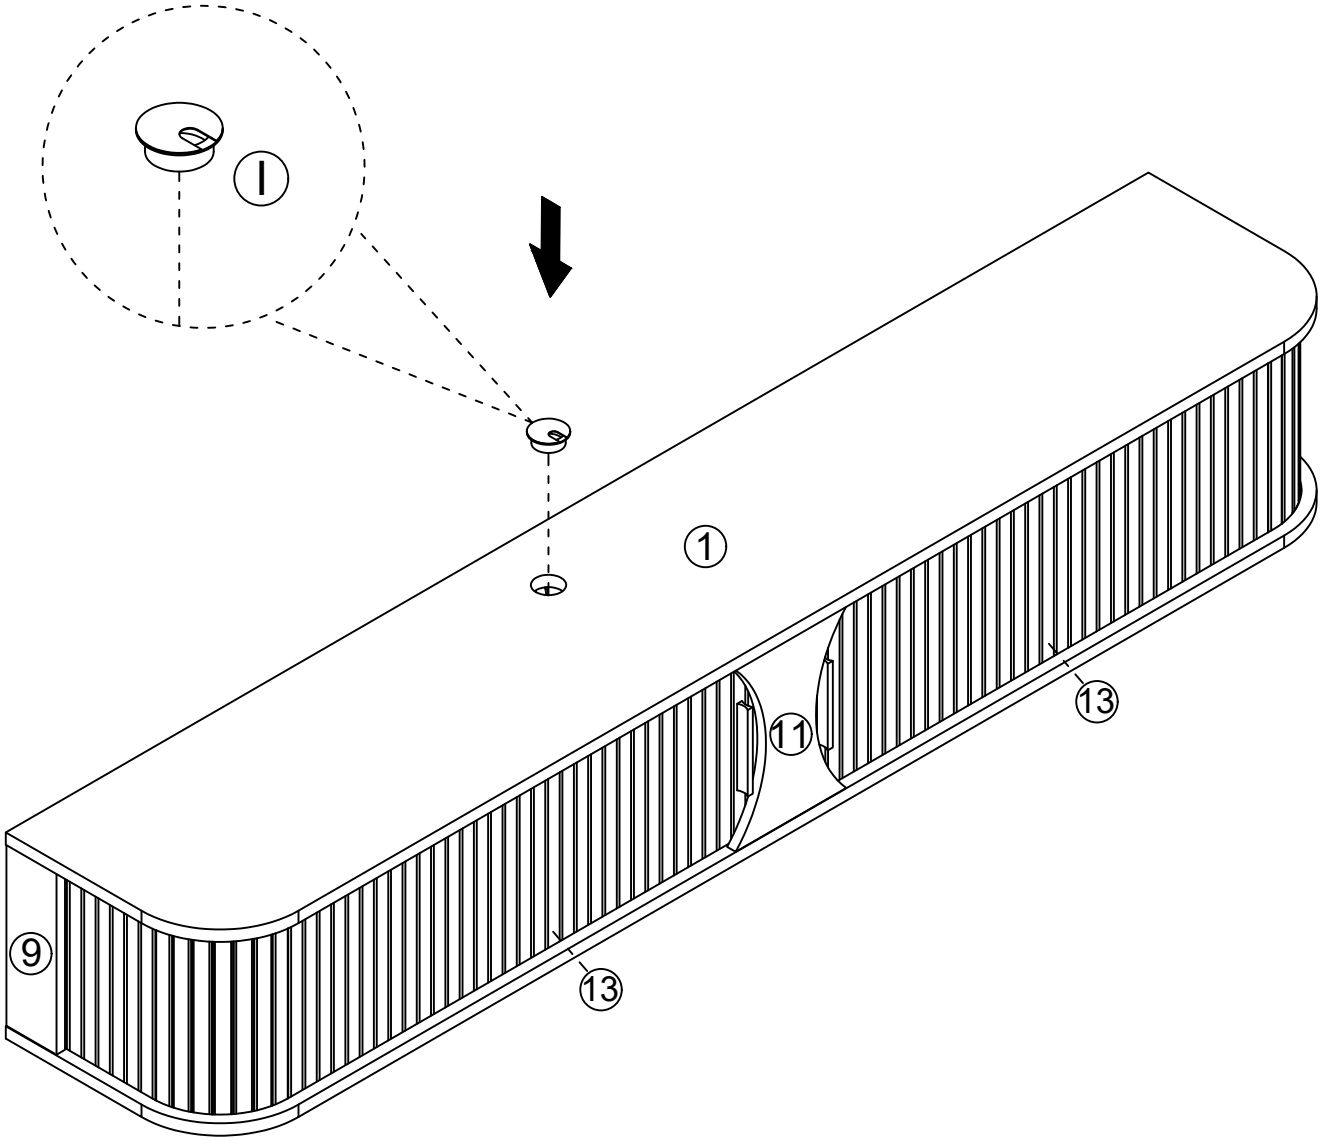


STEP15

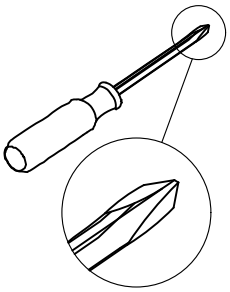

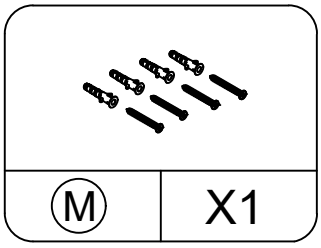

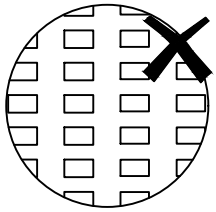


Cavity wall

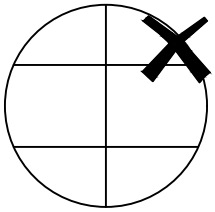


Gypsum board walls


Versatile Wall Mounted Option

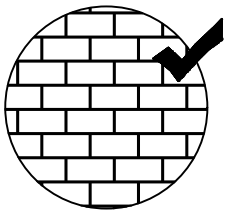

Brick walls

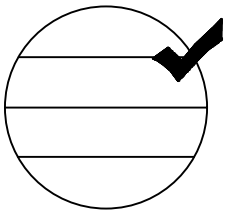


Wooden walls

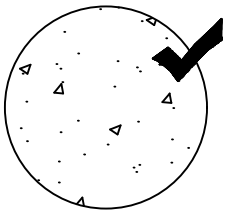


Concrete walls


Brick walls and
Concrete walls
Wall requirements

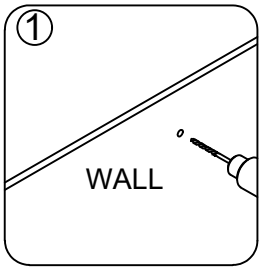


1.drill four Ø8
holes on the wall

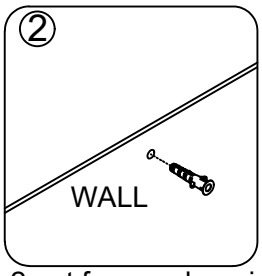


2.put four anchors in
the holes

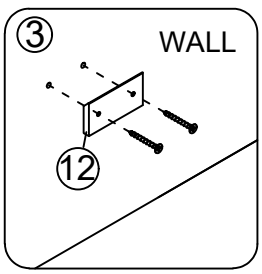

3.fix the wall panel on the
wall by the long screws

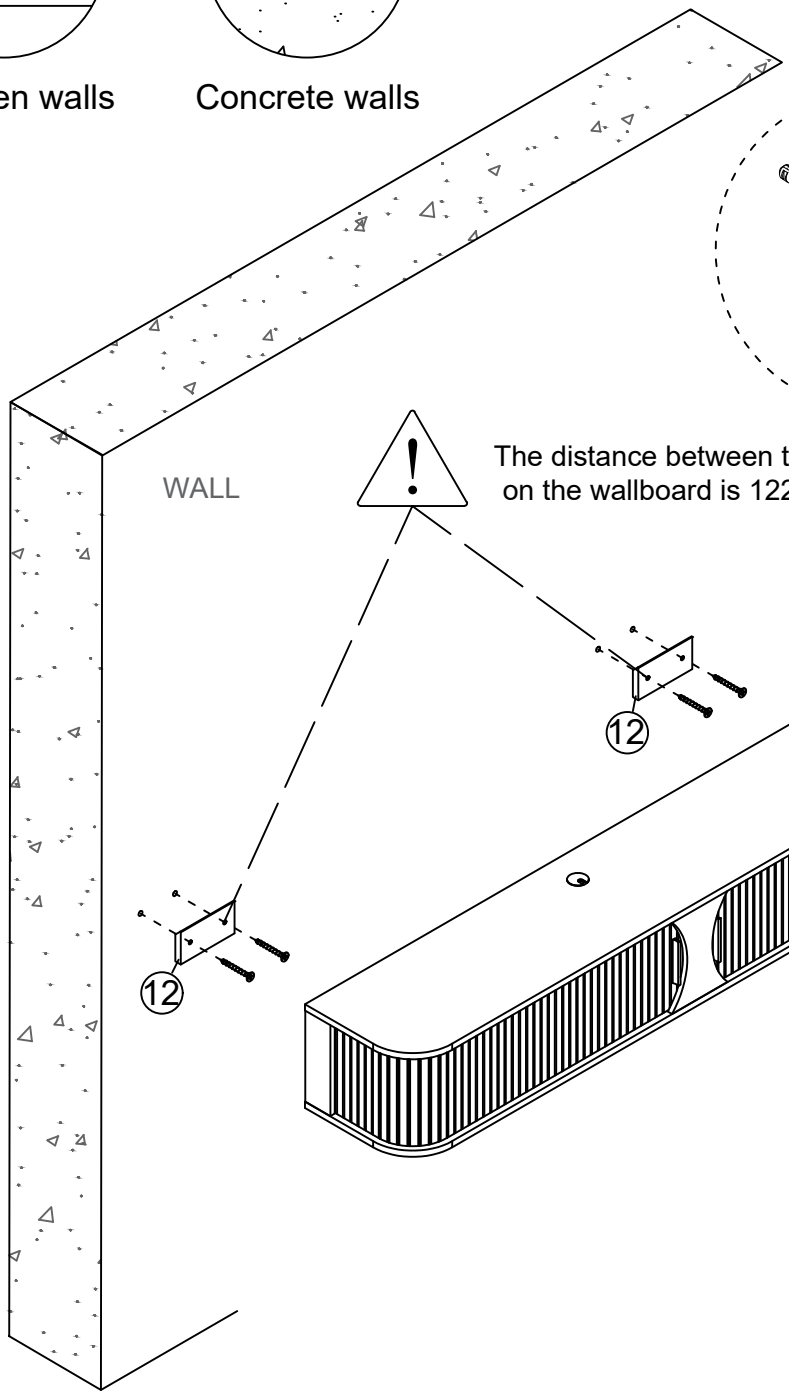



Wooden walls
Wall requirements

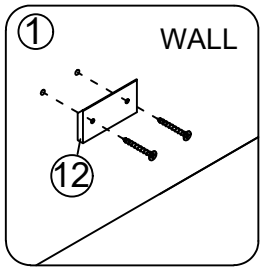


1.Fix the wall panel
directly to the wooden
wall with long screws


STEP16

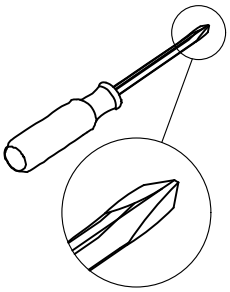


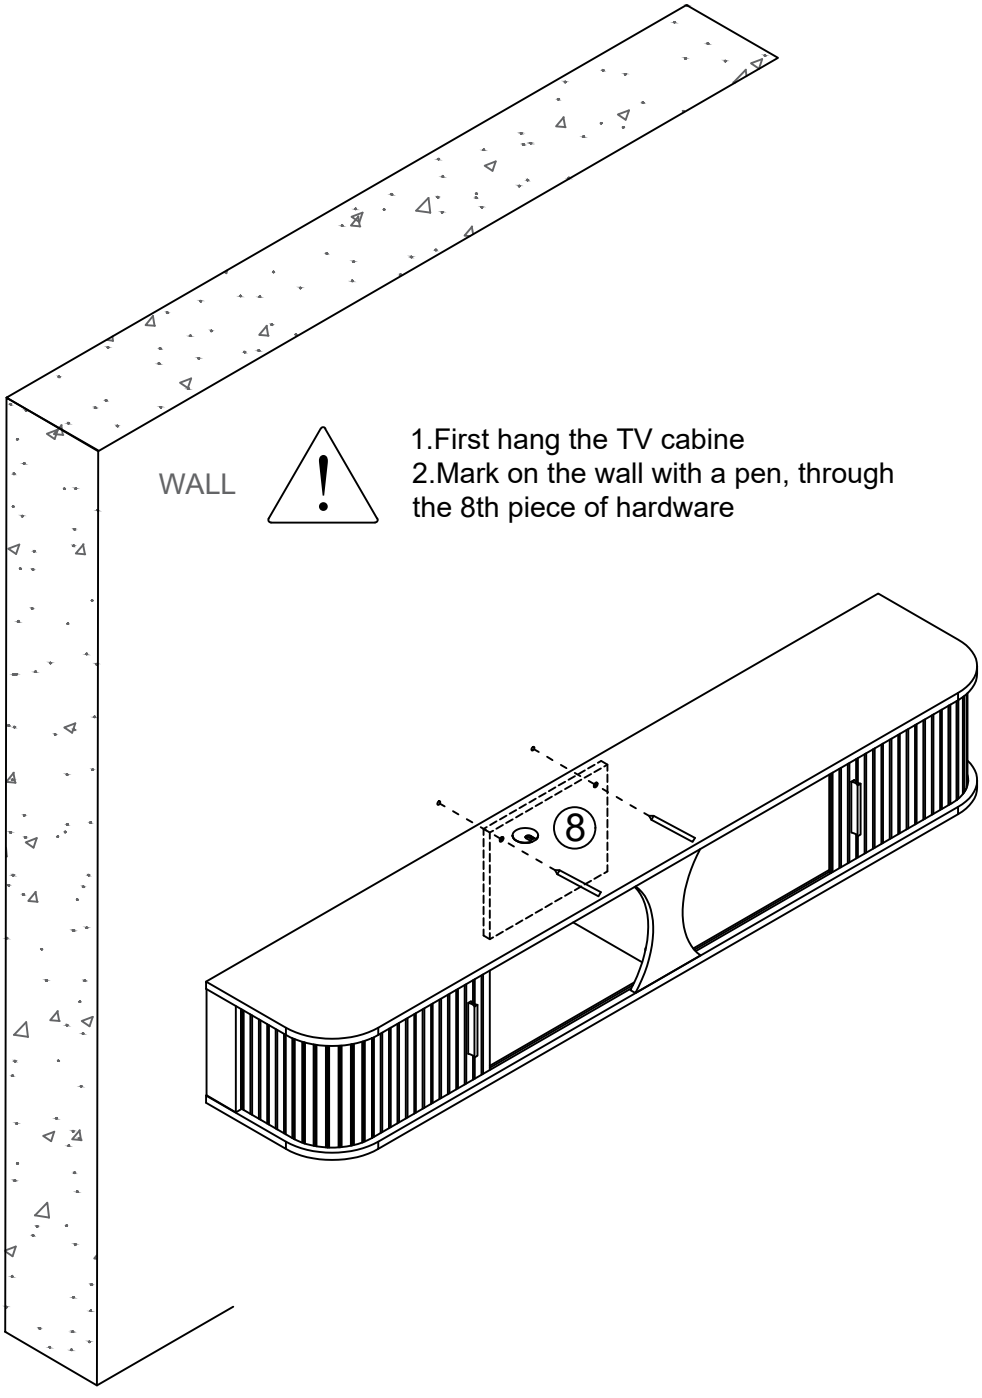
WALL
1.First hang the TV cabine
2.Mark on the wall with a pen, through the 8th piece of hardware
8


STEP17

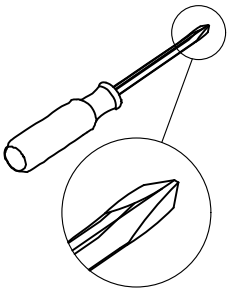

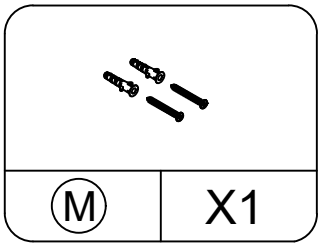

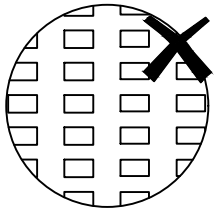


Cavity wall

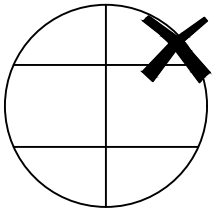


Gypsum board walls


Versatile Wall Mounted Option

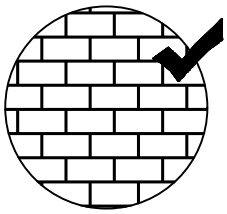

Brick walls

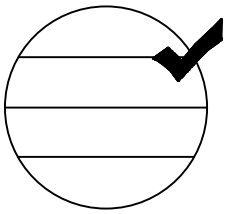


Wooden walls

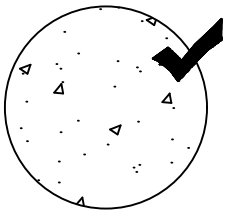


Concrete walls


Brick walls and
Concrete walls
Wall requirements

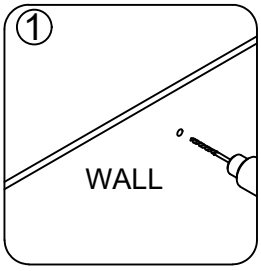


1.drill two Ø8
holes on the wall

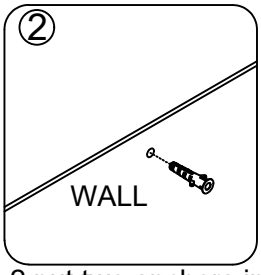


2.put two anchors in
the holes

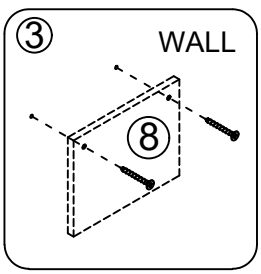


3.Fix the two holes of the
thick middle backboard on
the wall with long screws

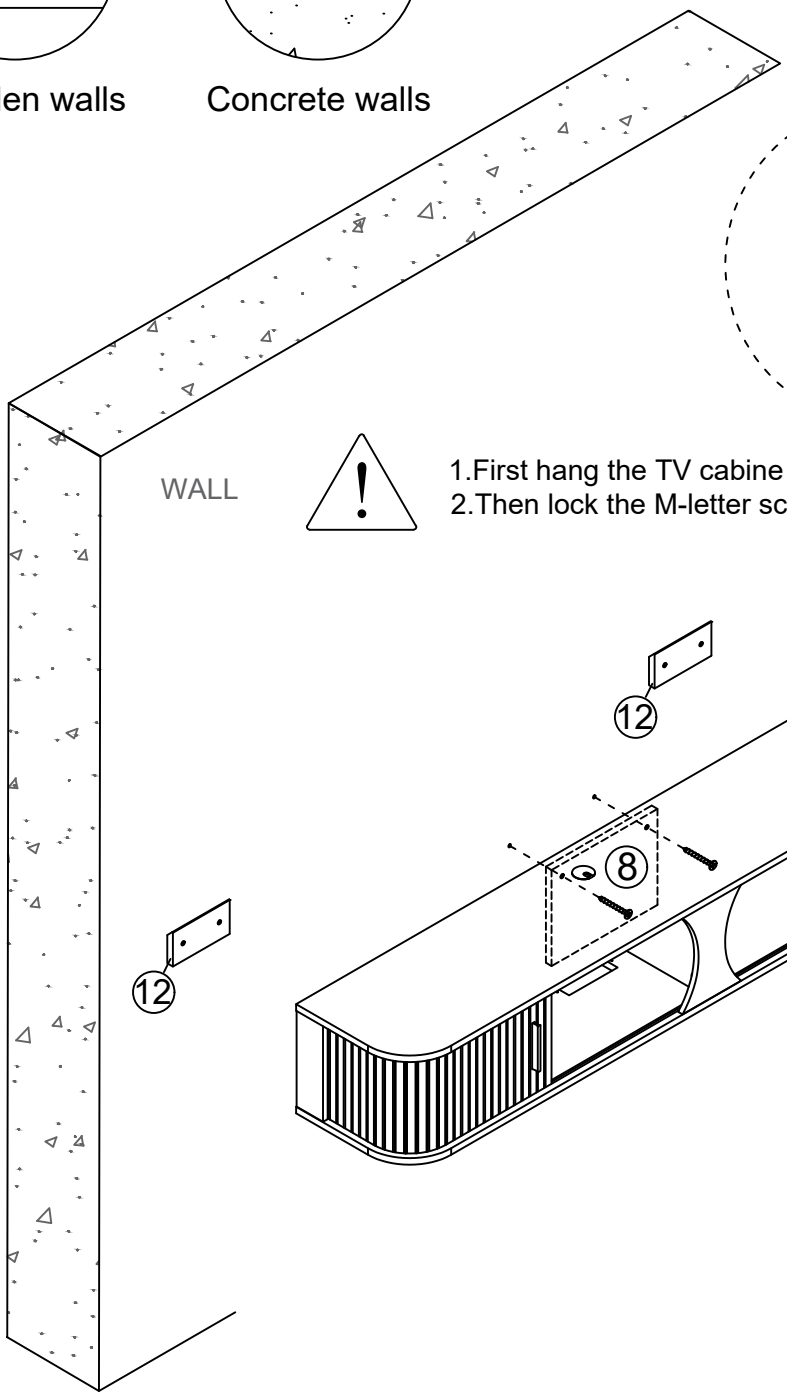

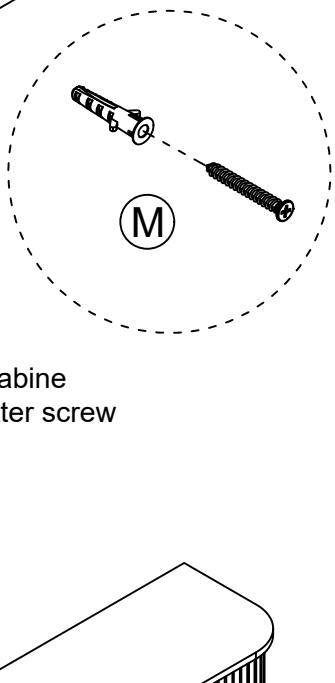

1.First hang the TV cabine
2.Then lock the M-letter screw

Wooden walls
Wall requirements

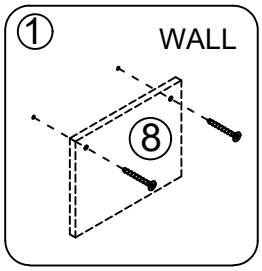

1.Fix the wall panel
directly to the wooden
wall with long screws

STEP18

