


Installation diagram for the bookcase G606B on the second floor

	
3.5CM self-tapping screws	Small nail
C*20	D*20

Caution: When installing, tighten the screws to a moderate degree. Finish the installation process and then fully tighten them!

Principle of eccentric component installation:

Board name and number:

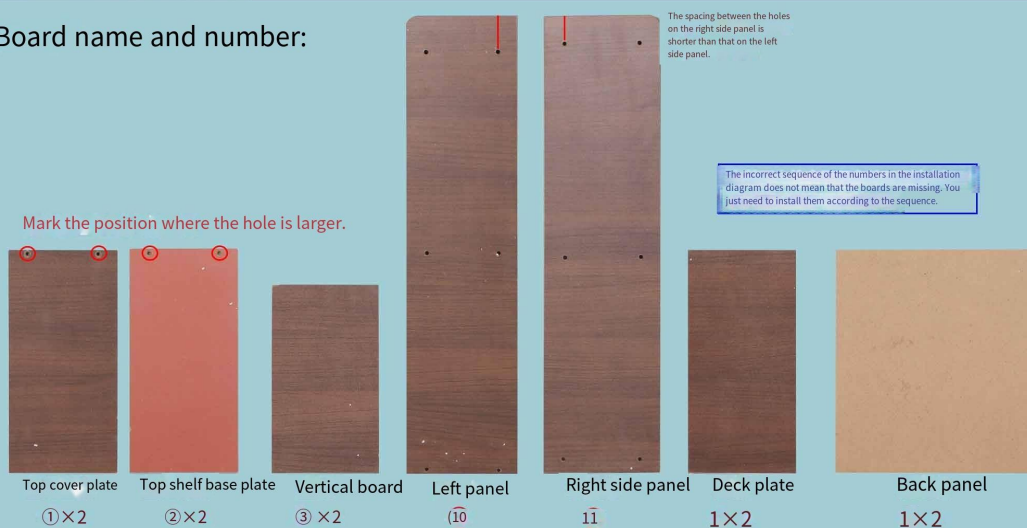


Step 1: Installation of the cabinet section

<1> The cabinet body section


The larger end faces outward, and the screws are inserted into the larger end.




<2> The right half portion

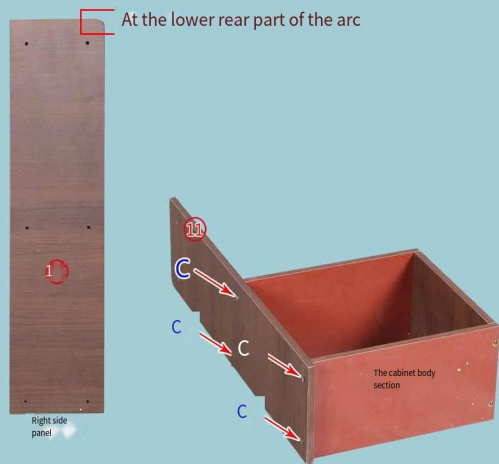


<3>

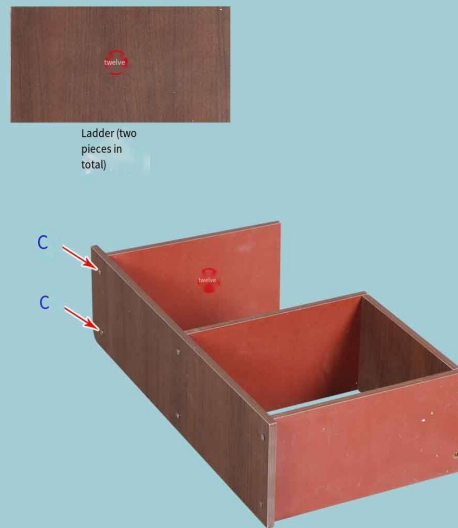


<4>

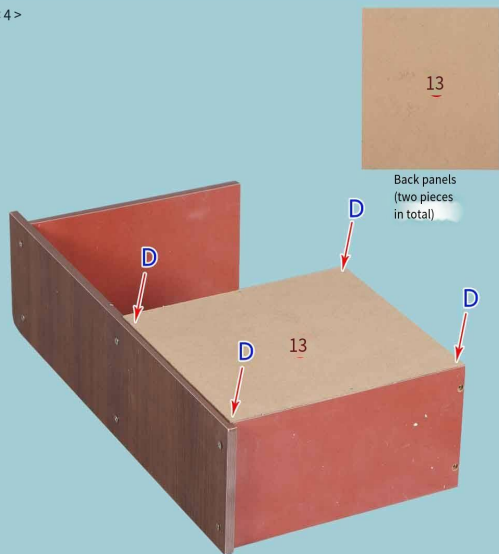


<5> The left half portion

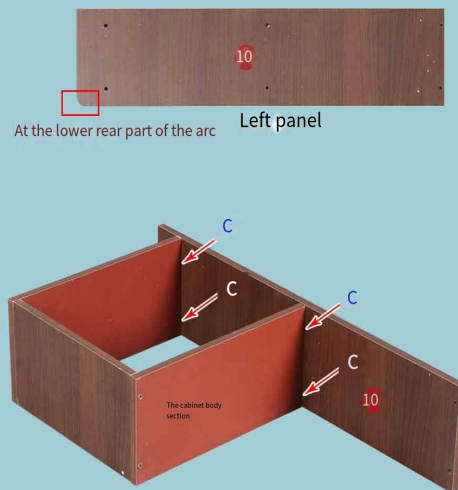


<6>

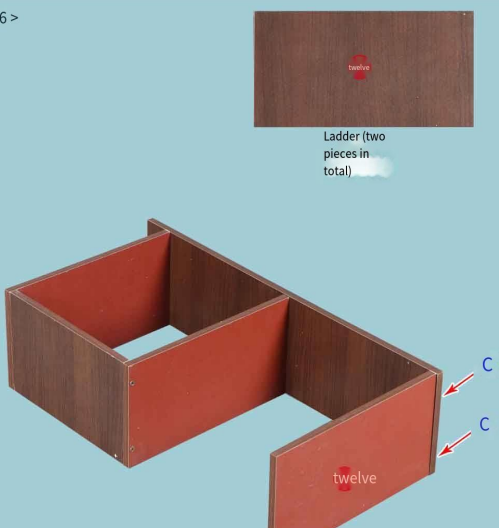

<7>

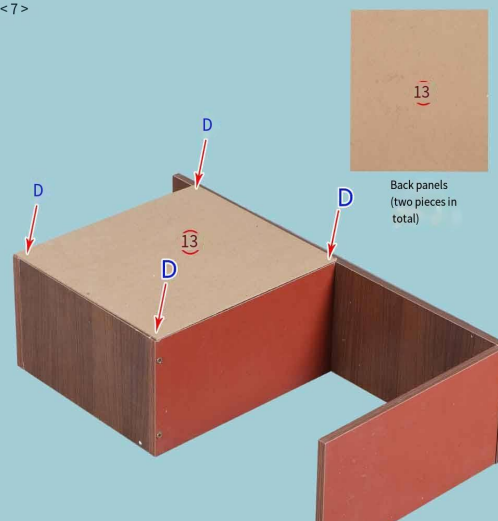

<4>

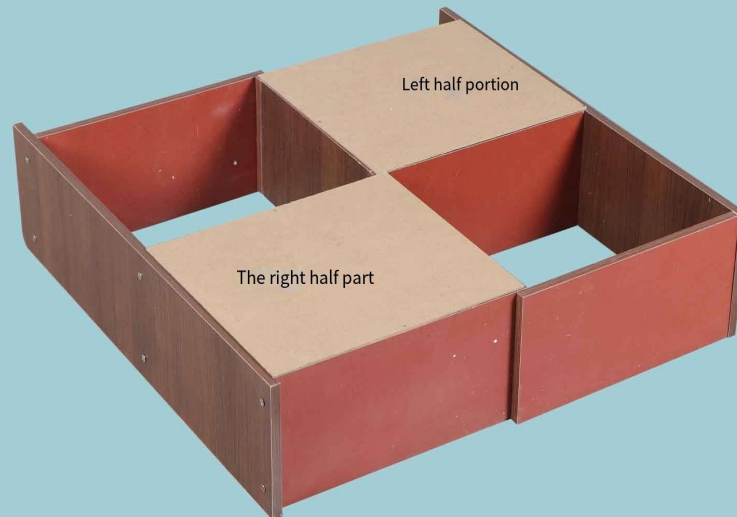

<9> Align the whole thing properly

Be careful and straighten it up!



Completed the picture!

