

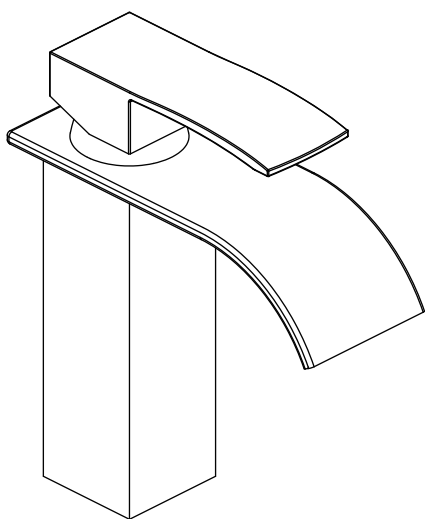
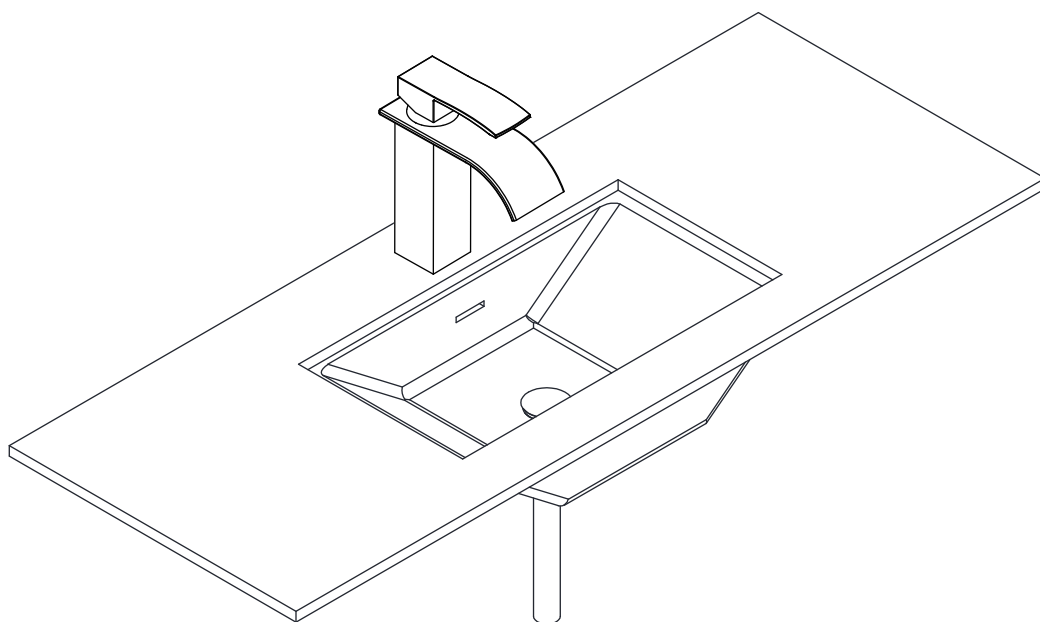
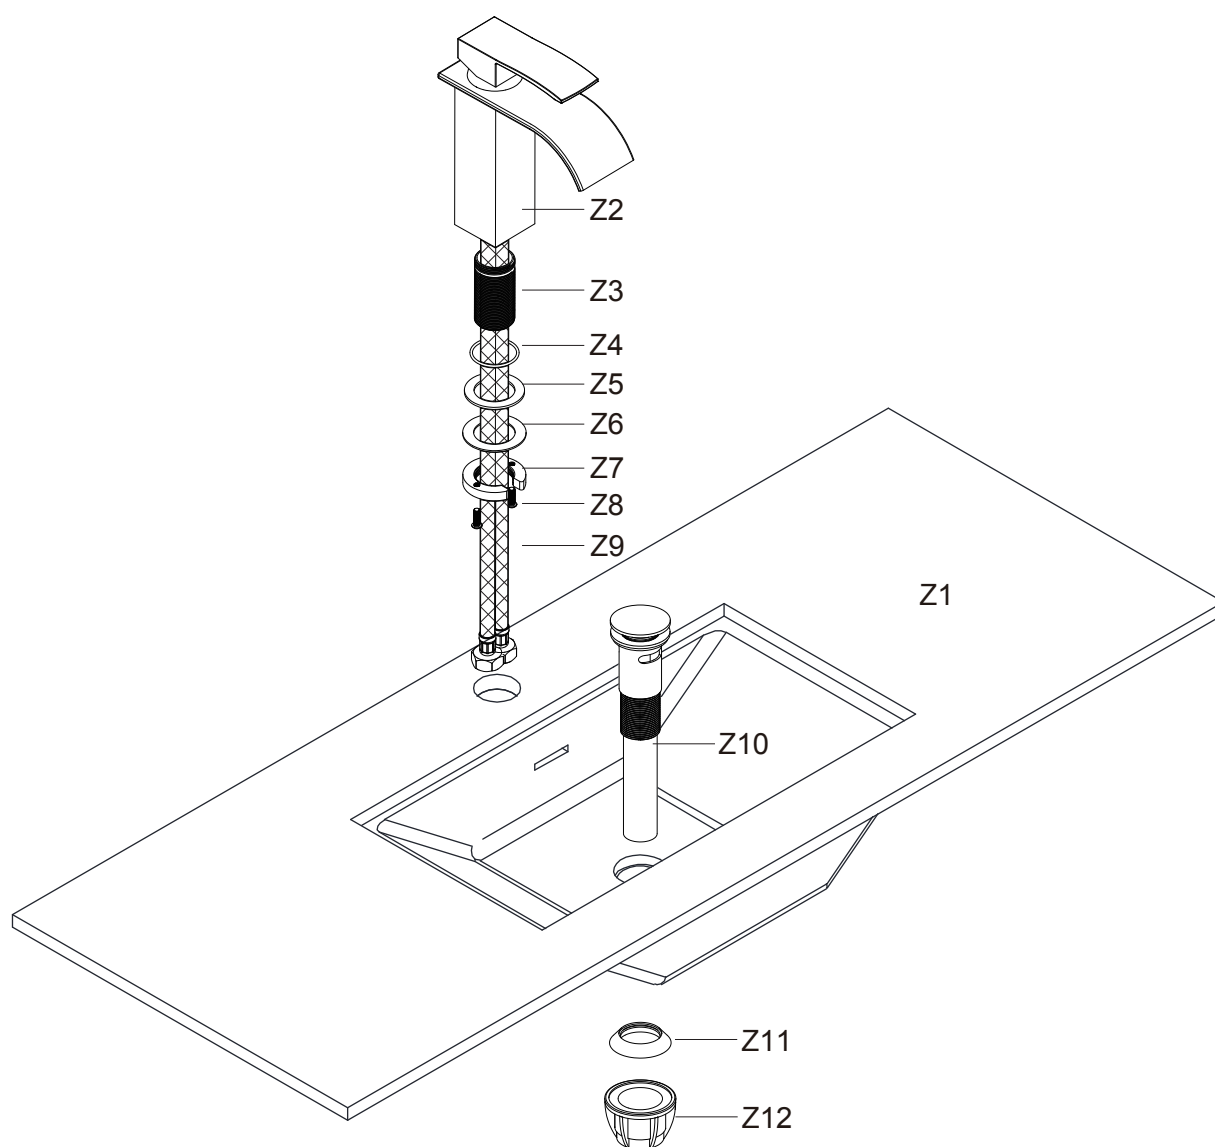
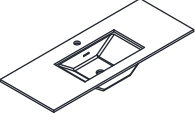

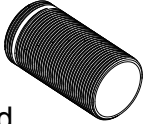


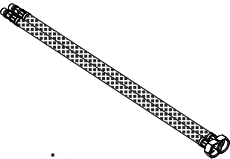


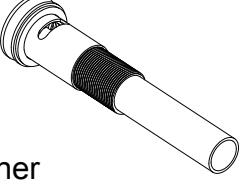



Hardware

 Sink Z1 1pc	 Faucet Z2 1pc	 Threaded rod Z3 1pc	 Plastic small waterstop ring Z4 1pc
 Plastic large waterstop ring Z5 1pc	 Metal gasket Z6 1pc	 Faucet nut Z7 1pc	 Screw Z8 2pcs
 Water pipe Z9 2pcs	 Drainer Z10 1pc	 Waterstop ring for drainer Z11 1pc	 Nut for drainer Z12 1pc

1


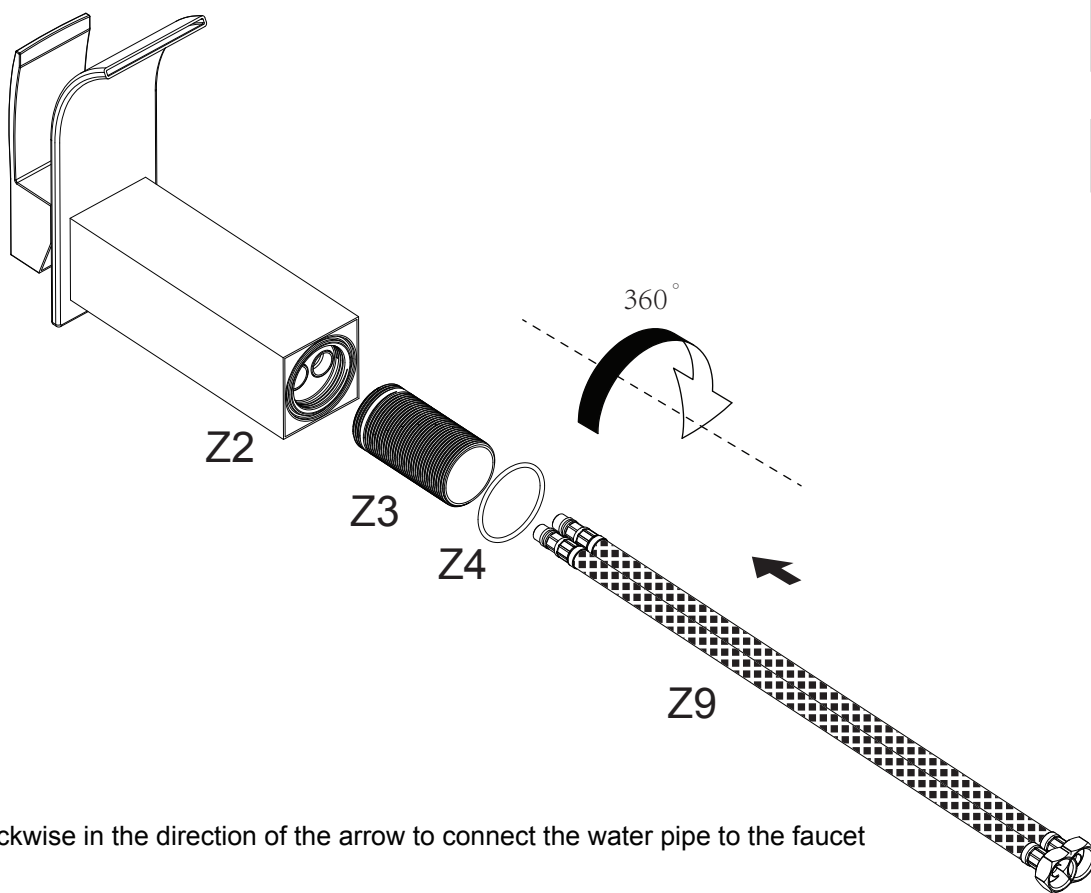


2

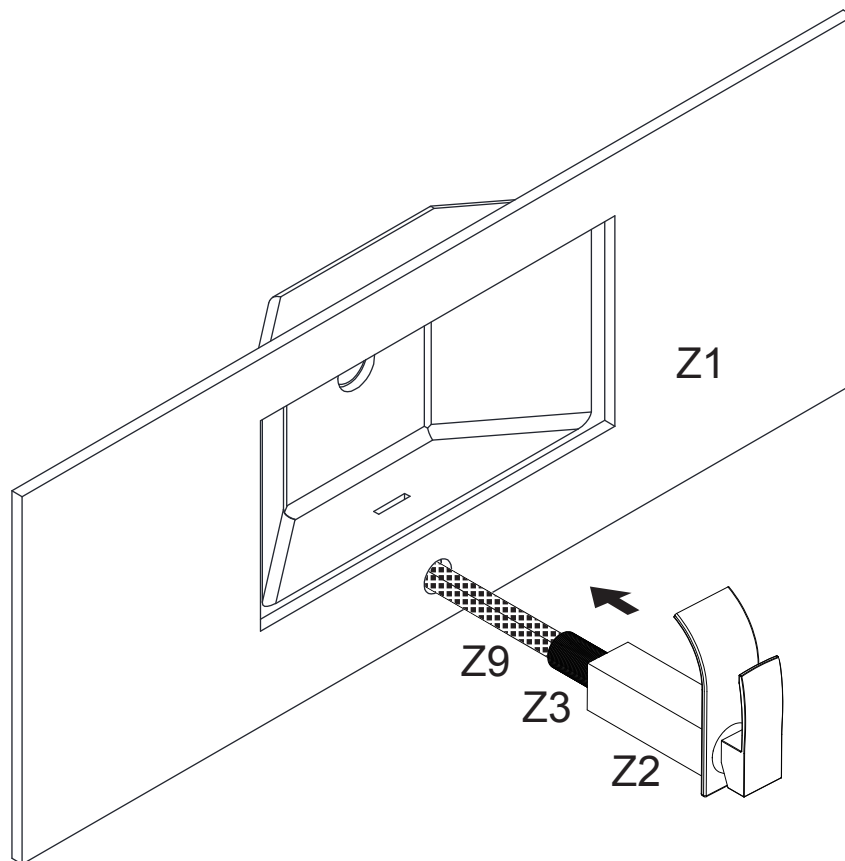



Put Z4 in the bottom of Z2, Then place the assembled Z9,Z3& Z2 vertically into the Z1 sink

3

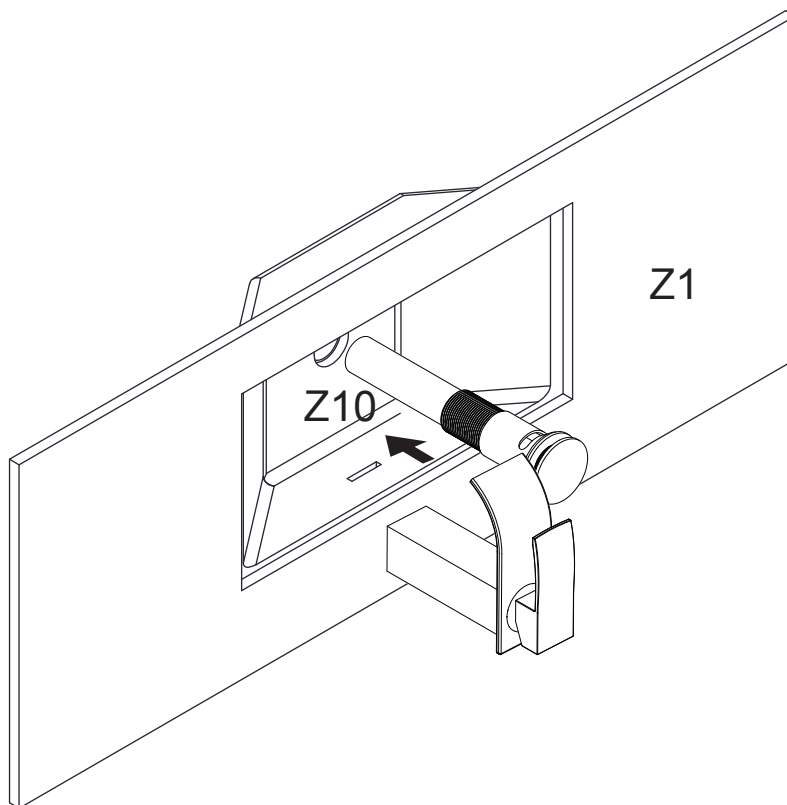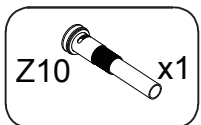


Insert Z10 into the sink

4

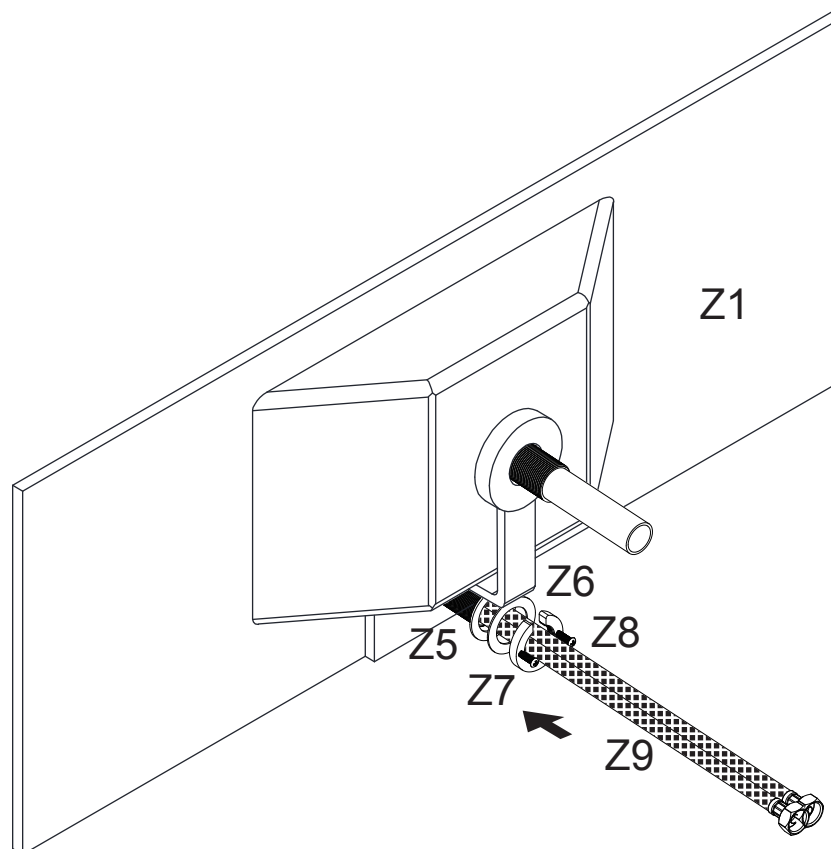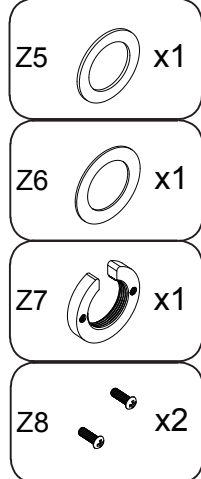

Tighten Z9 pipes with Z2 though Z3. Insert Z5,Z6 & Z7 along with Z3, then put Z8 into Z7 to fix all the parts with Z1

5

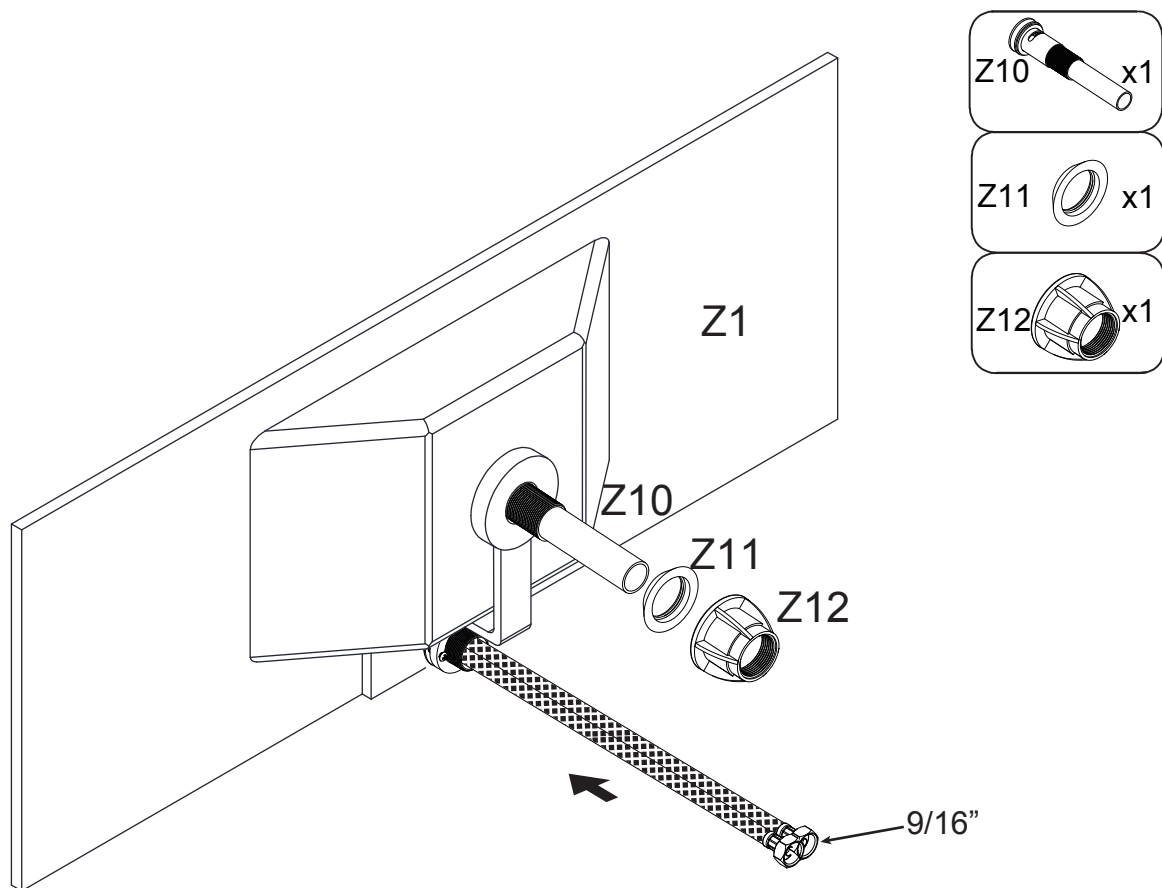

Insert Z10 to Z1, then connect Z11 with Z10, and tighten Z12 clockwise in Z10's body to fix with Z1 carefully

6

