
ModernMate

ASSEMBLY INSTRUCTION

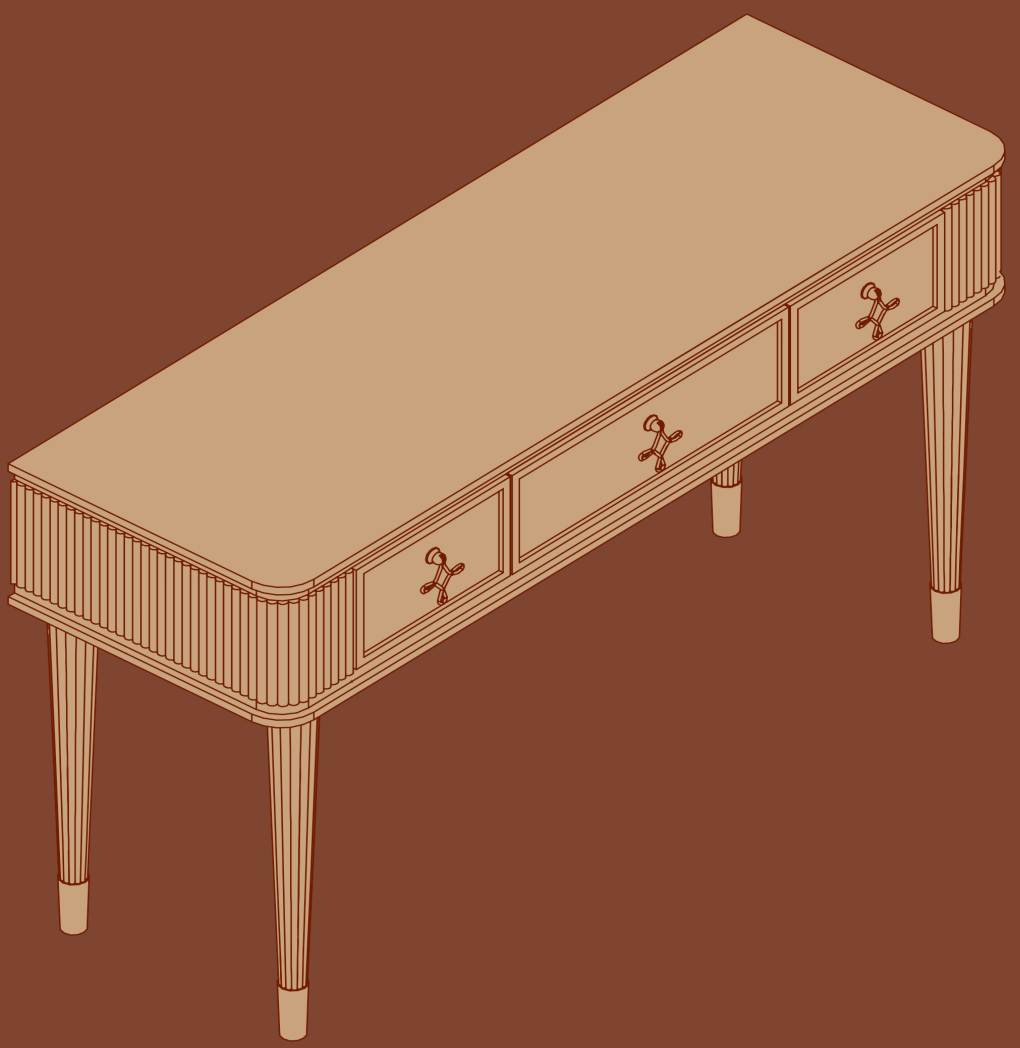

Sofa & Console Tables

CATALOGUE

Precautions 01

Parts List & Hardware List 02

Tool List 03

Assembly Process 04-09

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

This package contains numerous components and hardware pieces. Please identify and verify all parts against the parts list before you begin assembly.

WARNING: Choking Hazard. This product contains small items. Keep all parts and hardware out of the reach of children during assembly.

To prevent scratches, assemble the product on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard packaging.

Some components are heavy. For safety, we recommend this product be assembled by two adults.



The unit may be unstable until assembly is fully complete. Do not move the product until all steps are finished.

If you encounter any issues or have questions, please contact our customer service team for assistance.


* Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.
* If you need further assistance, please contact the customer service online.

  After-Sales Service Hotline: (800)661-5928



Parts List

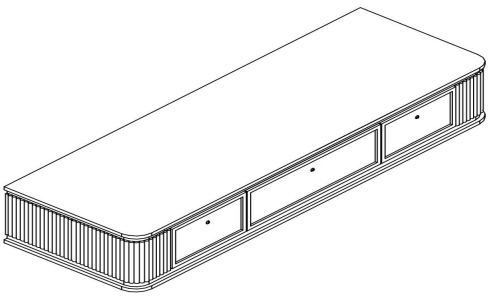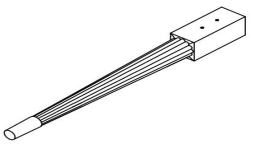ID	Parts	QTY
1		1
2		4



Name

ID	Parts	QTY
A	 5/16*1-1/4"	8+1
B		8+1
C		8+1
D		2
G		3
H		3+1


Tool List

ID	Parts	QTY
E	 5mm	1
F		1


Required Tools (Not Included)

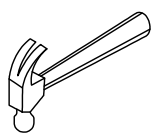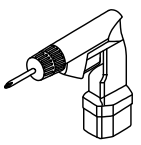Wall mounting only
These tools are not required for product assembly.

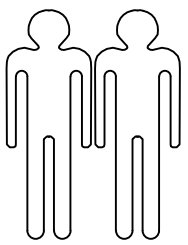


Multi-person installation

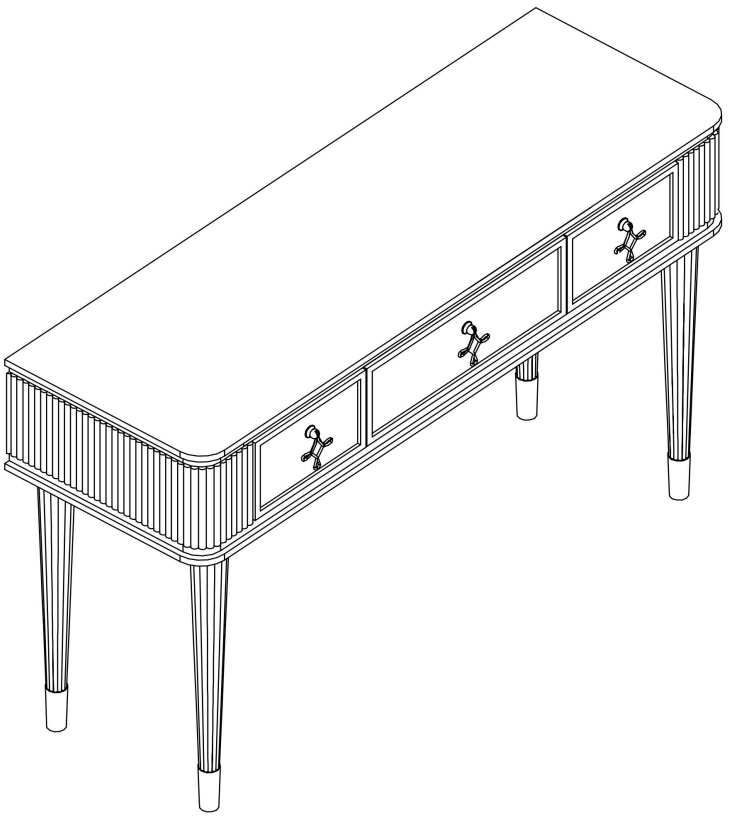


Slides Must Be Separated Before Assembly.
After being separated, set them aside until needed for assembly.


STEP 1: Extend Slide

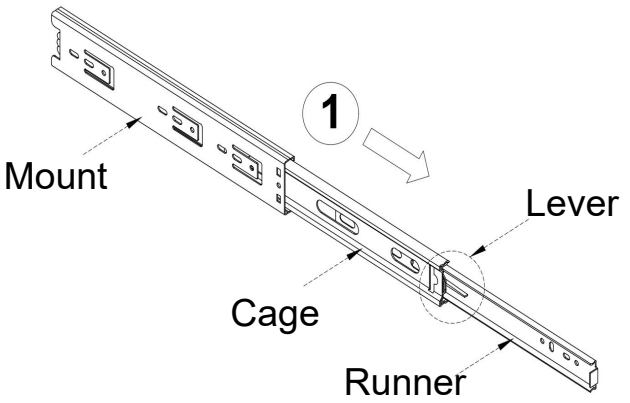

STEP 2: Push Lever Up

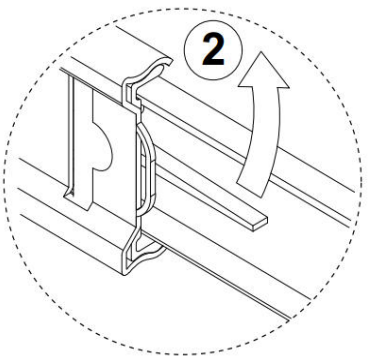

STEP 3: Remove Runner

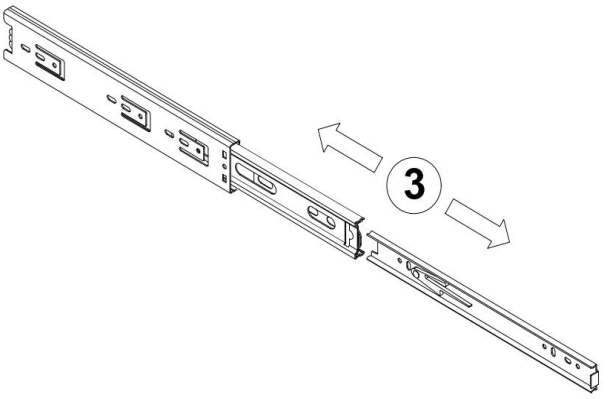

STEP 1



E X3




F X3


Installation Instructions

1.Handles are pre-installed inside the drawer.

2.Open the drawer and unscrew to release the handles.

3.Reposition handles to the outside and tighten screws to secure

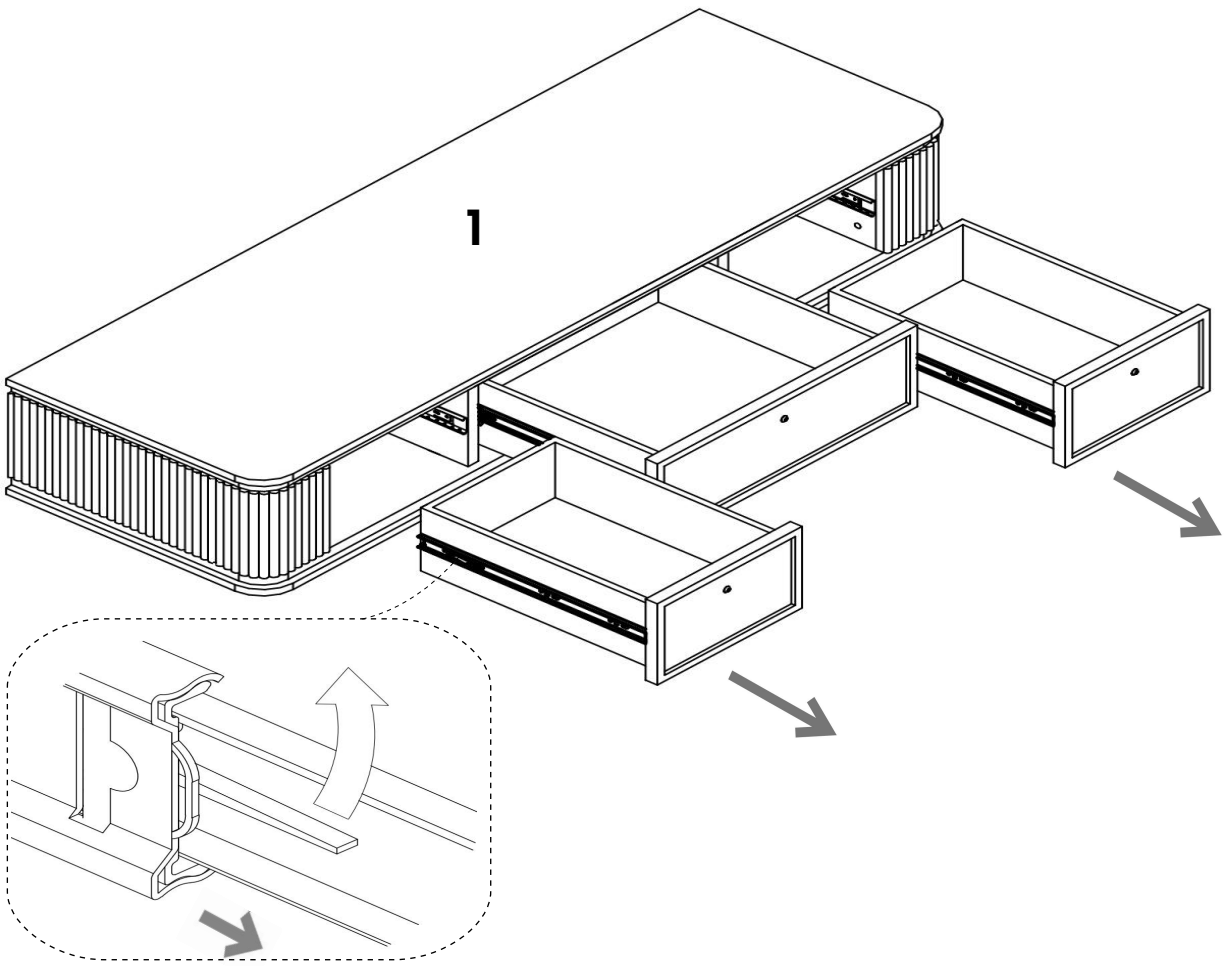

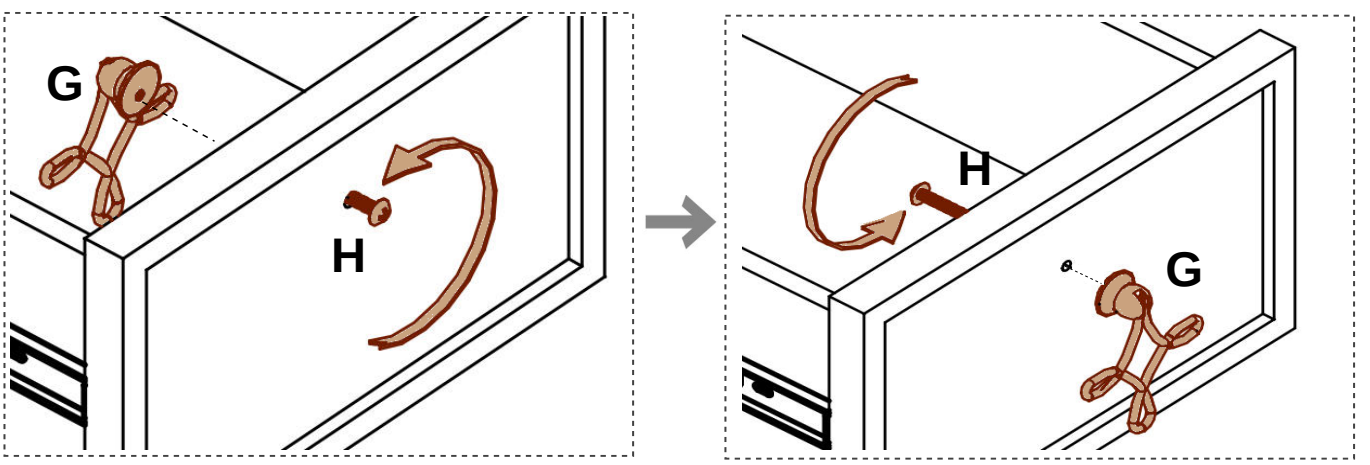

STEP 2




A X8




B X8




C X8

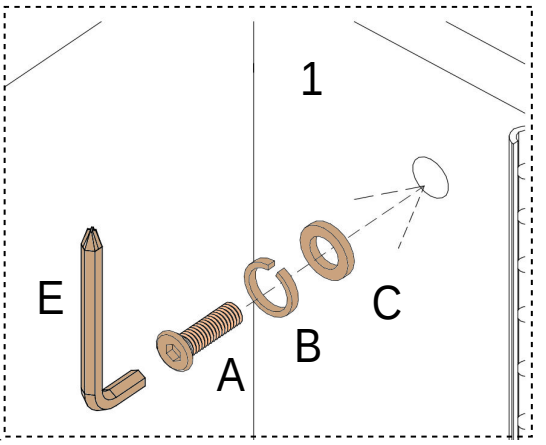

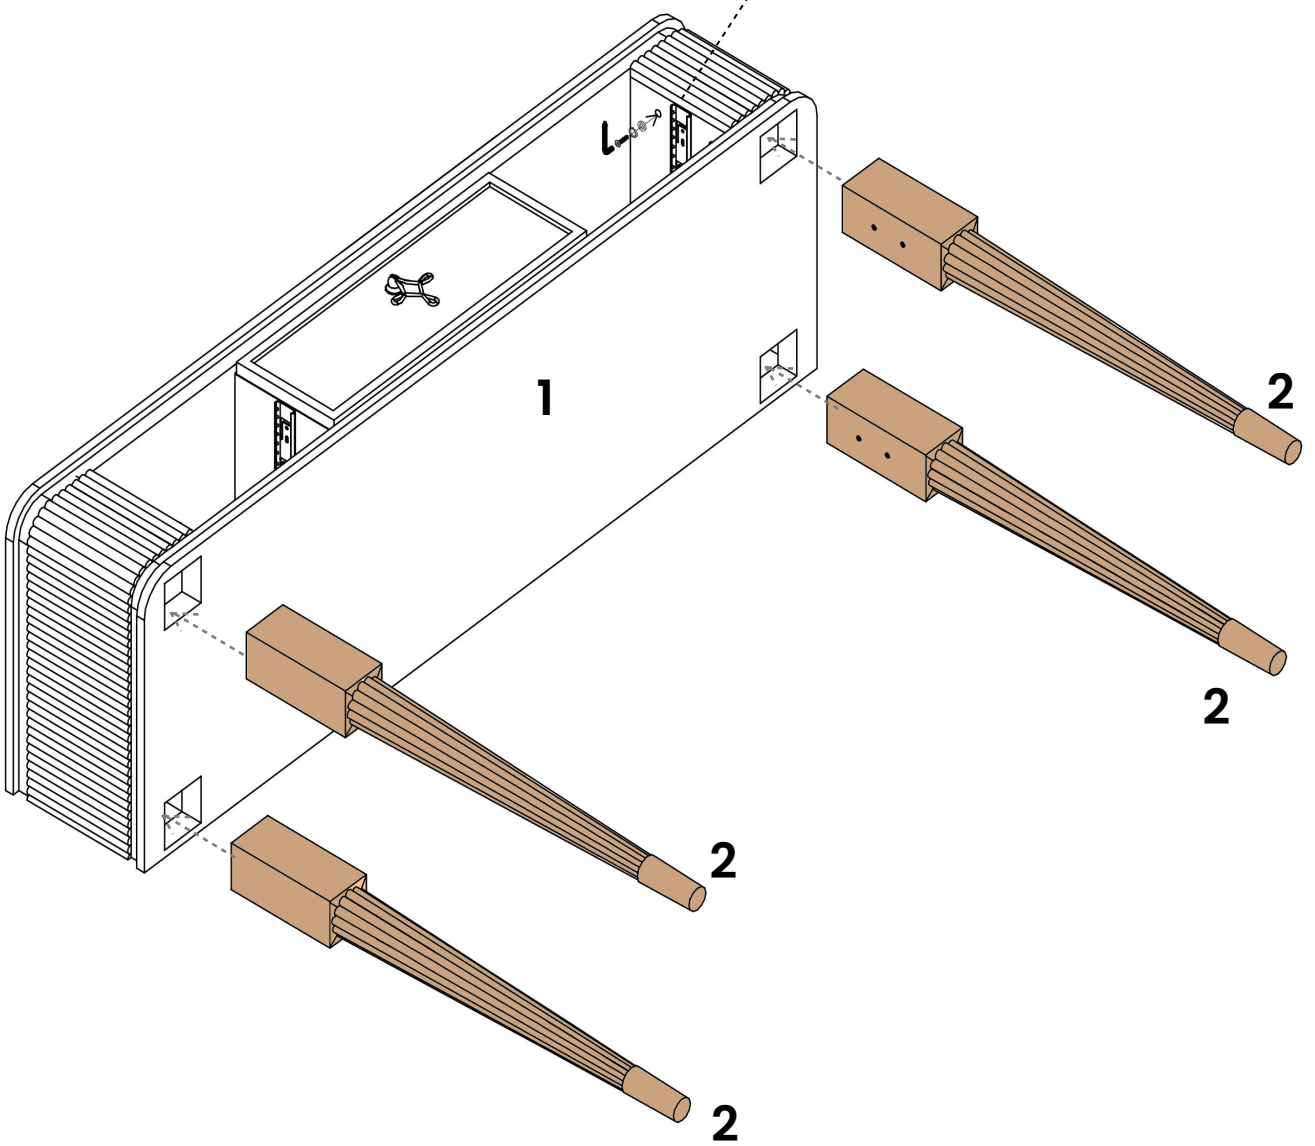


STEP 3

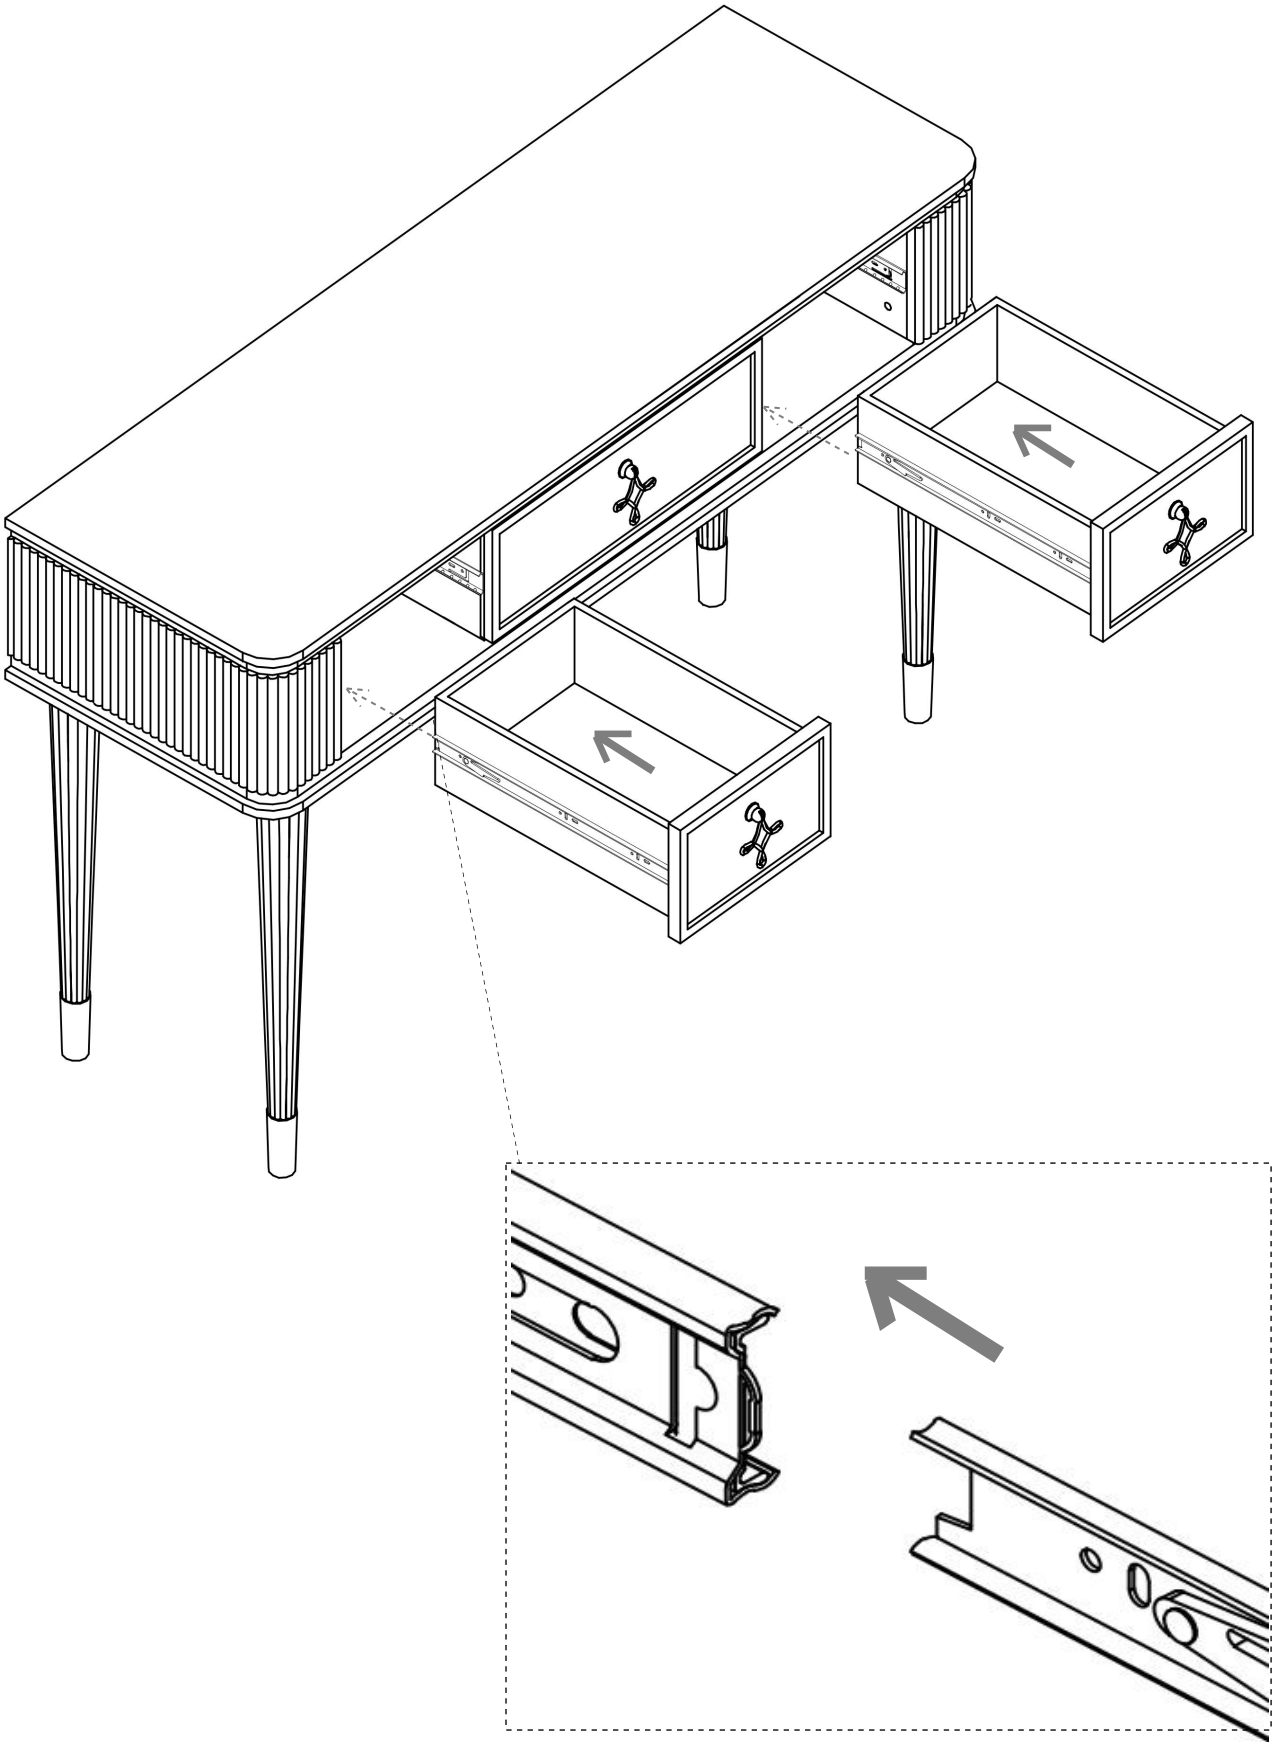


STEP 4



D X2

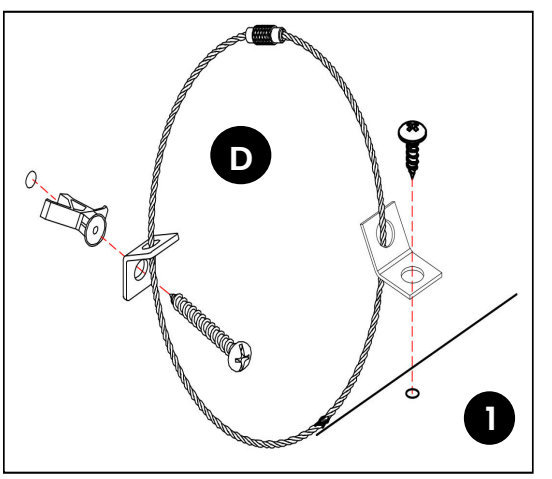

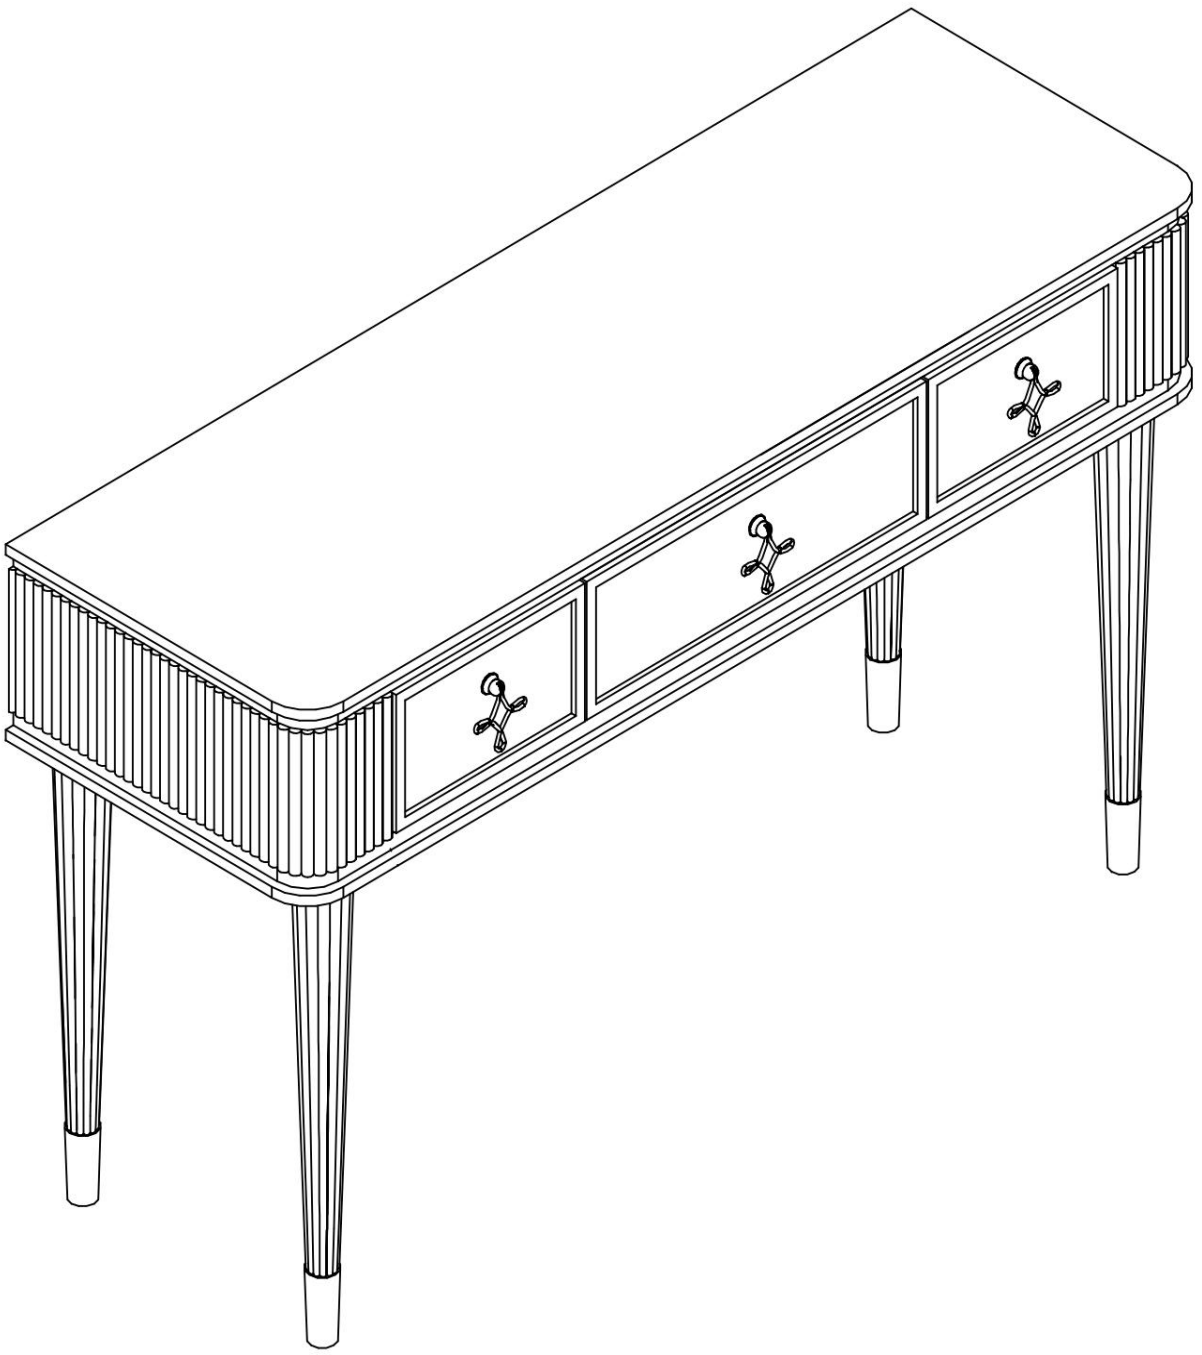

ModernMate

After-Sales Service Hotline：(800) 661-5928
Support Hours : Mon-Fri , 9:00 am-5:00 pm PST/PDT