


ASSEMBLY INSRTRUCTION

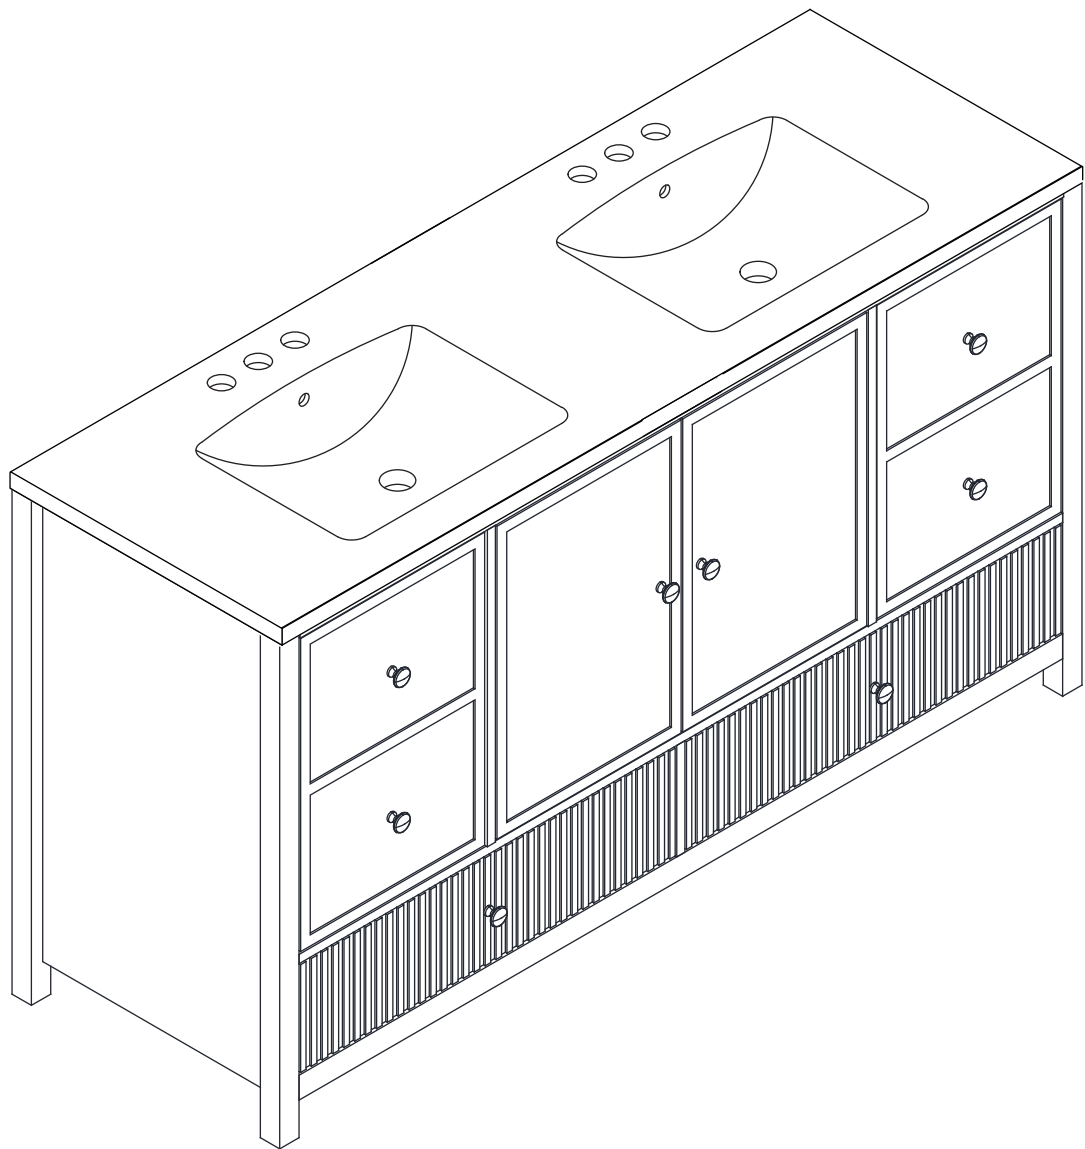







Before Installation




Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

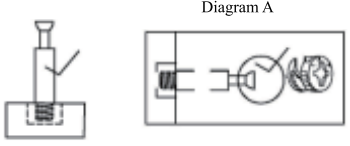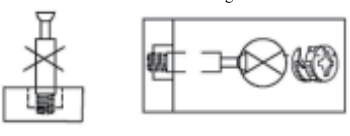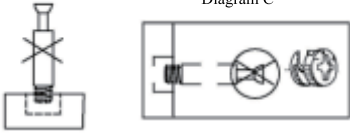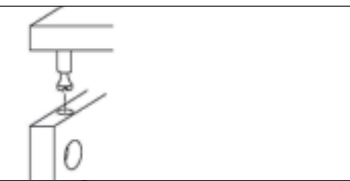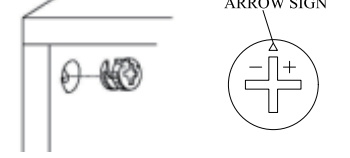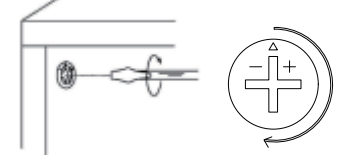Diagram A 	Insert Cam Bolt into hole as shown in diagram A.
Diagram B 	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
Diagram C 	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

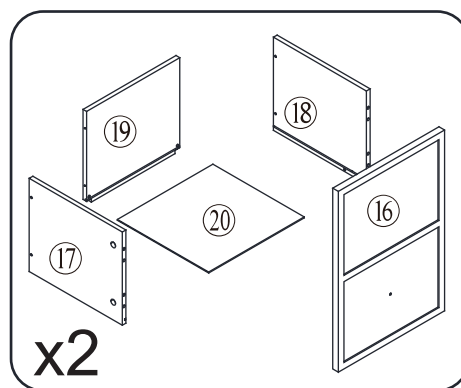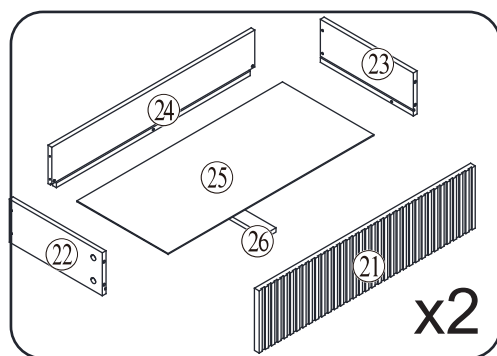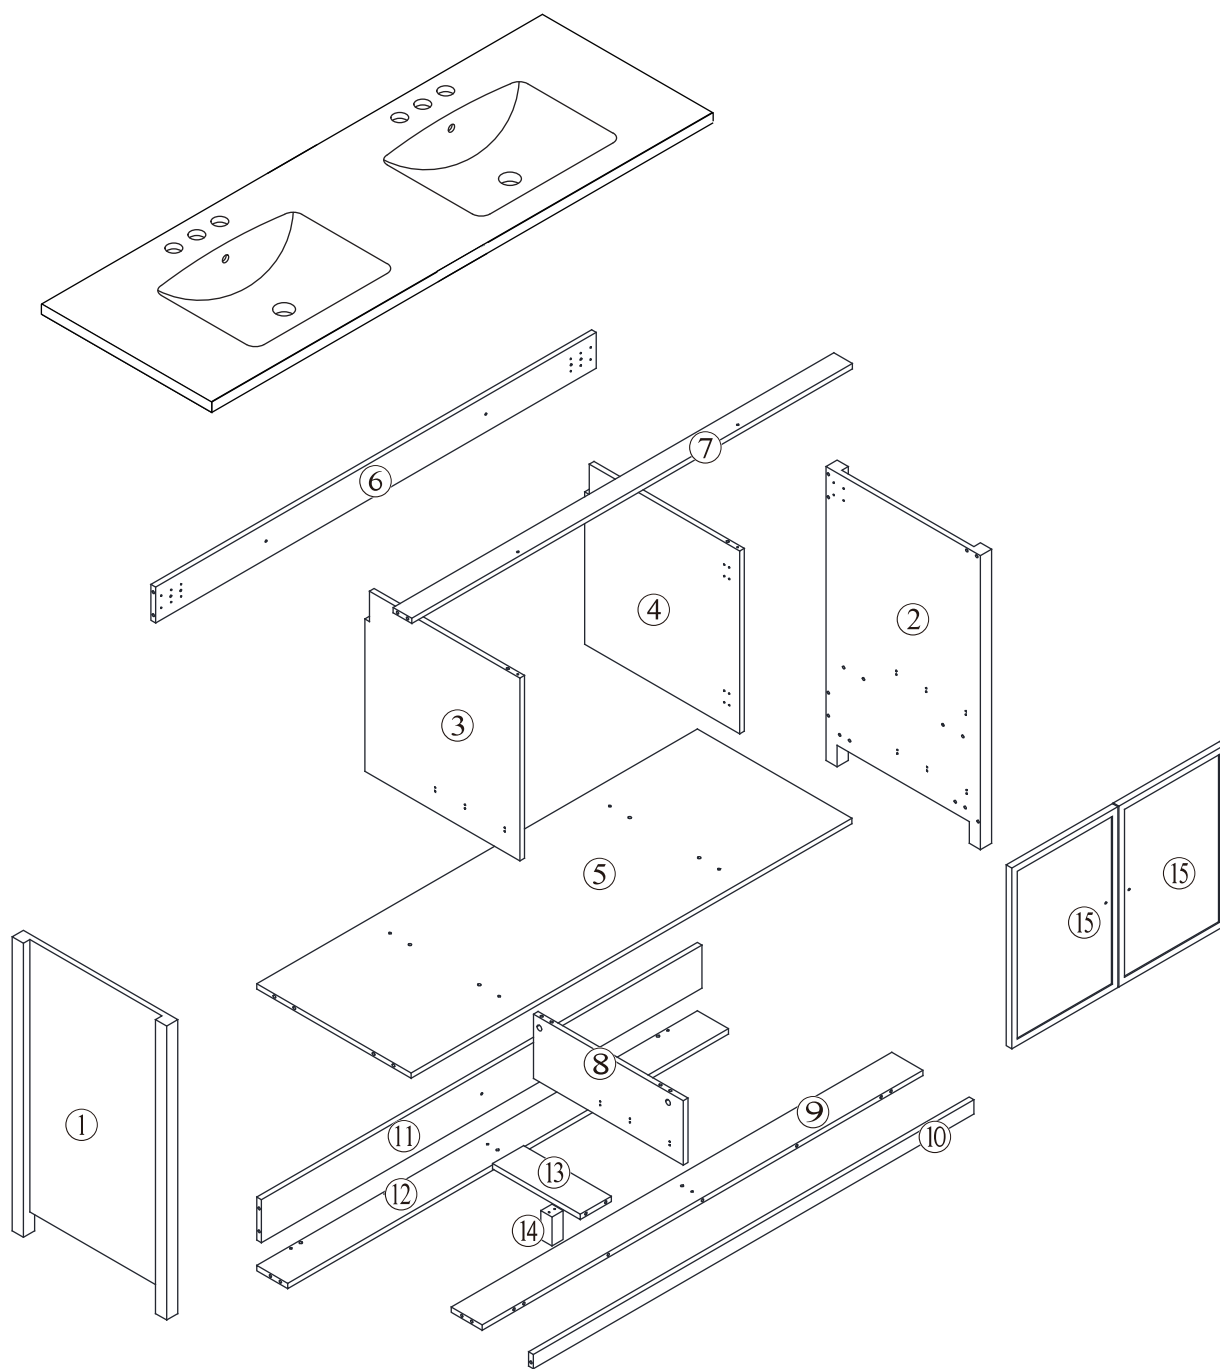


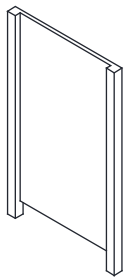


① x1

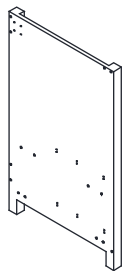


② x1

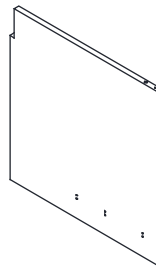


③ x1

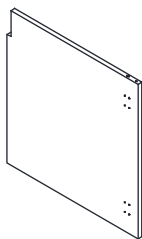


④ x1

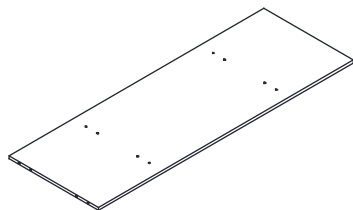


⑤ x1

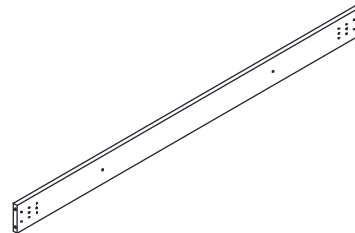


⑥ x1

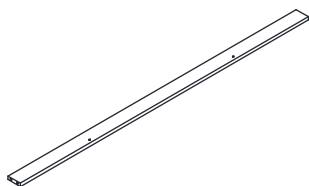


⑦ x1

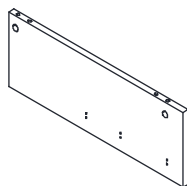


⑧ x1

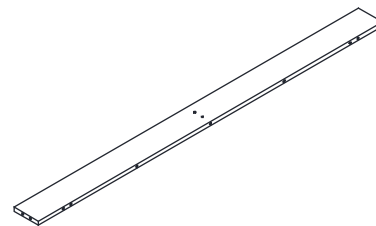


⑨ x1

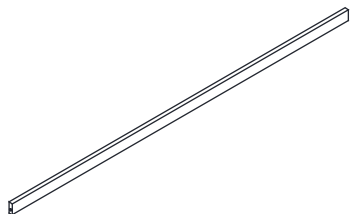


⑩ x1

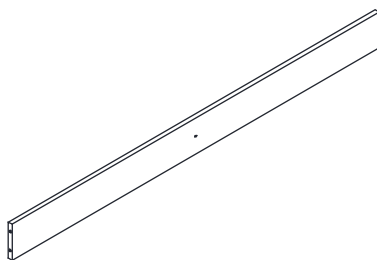


⑪ x1

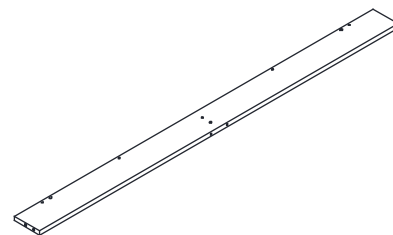


⑫ x1

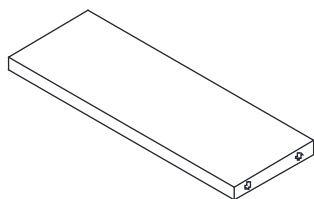













⑬ x1









⑭ x1






⑮ x2

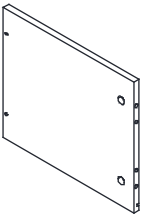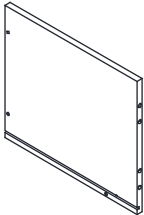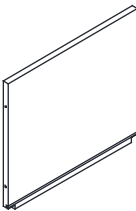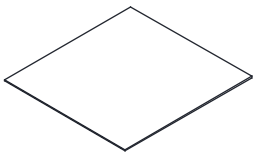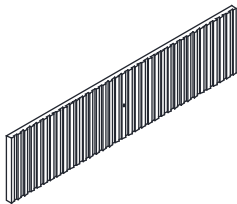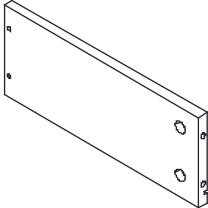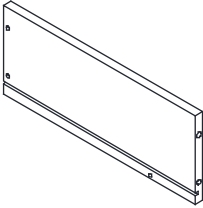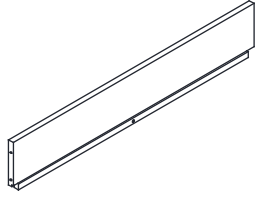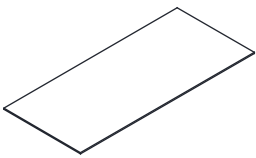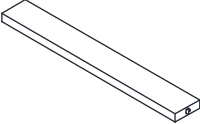
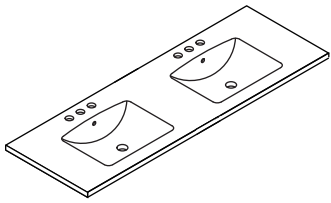
		
①⑥ x2	①⑦ x2	①⑧ x2
		
①⑨ x2	②⑦ x2	②① x2
		
②② x2	②③ x2	②④ x2
		
②⑤ x2	②⑥ x2	

 Φ6x35mm	 Φ15x10mm	 Φ8x30mm	 Φ4x35mm	 E x 1	 F x 4	 Φ4x14mm
A x 48+2	B x 48+2	C x 25+2	D x 35+2		G x 32+2	
 H x 1	 I x 8	 M4x20mm	 Φ6x60mm	 L x 2	 Φ4x14mm	 N x 4
 O x 4	 P x 4	 Q x 1	 R x 4	 Φ6x30mm		




Step 1

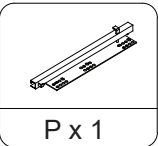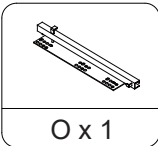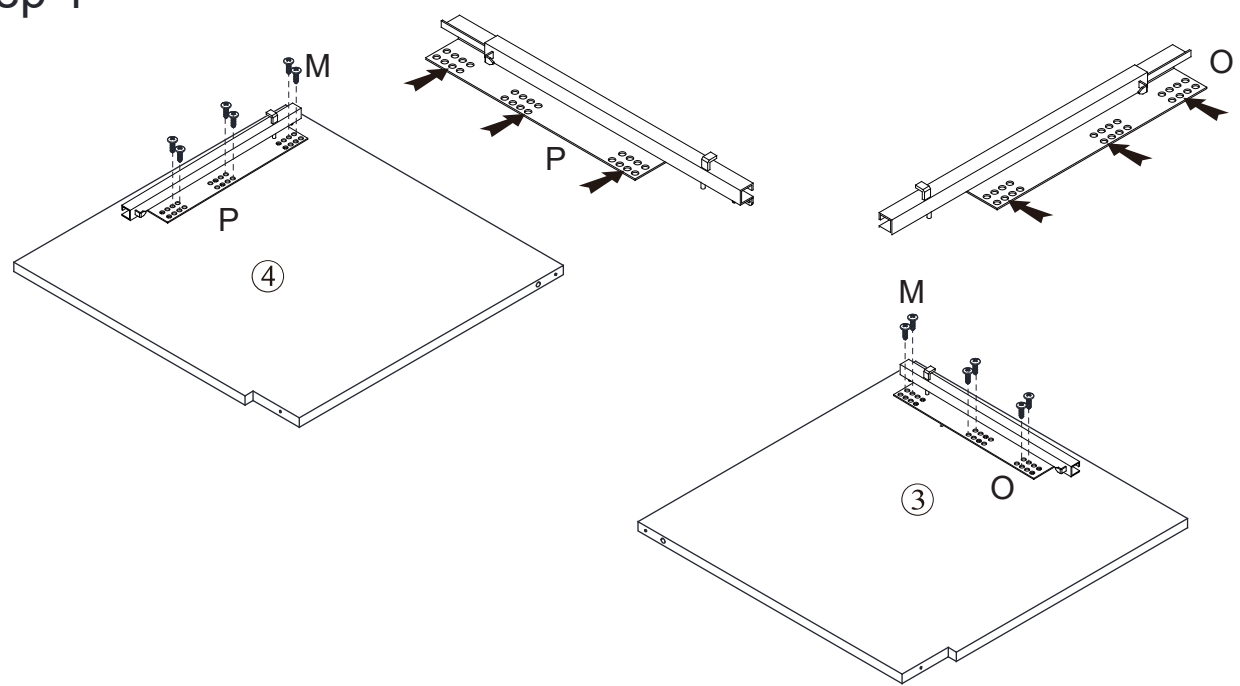





Step 2

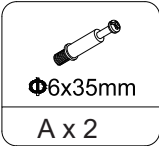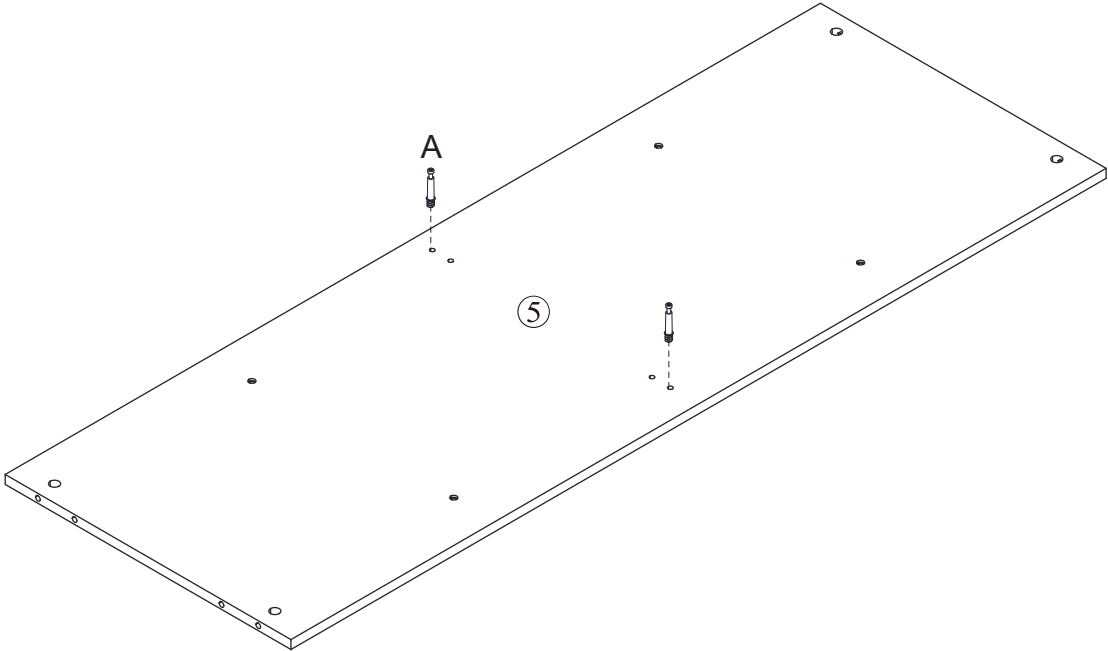





Step 3

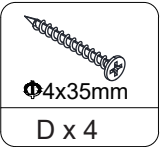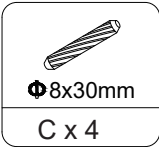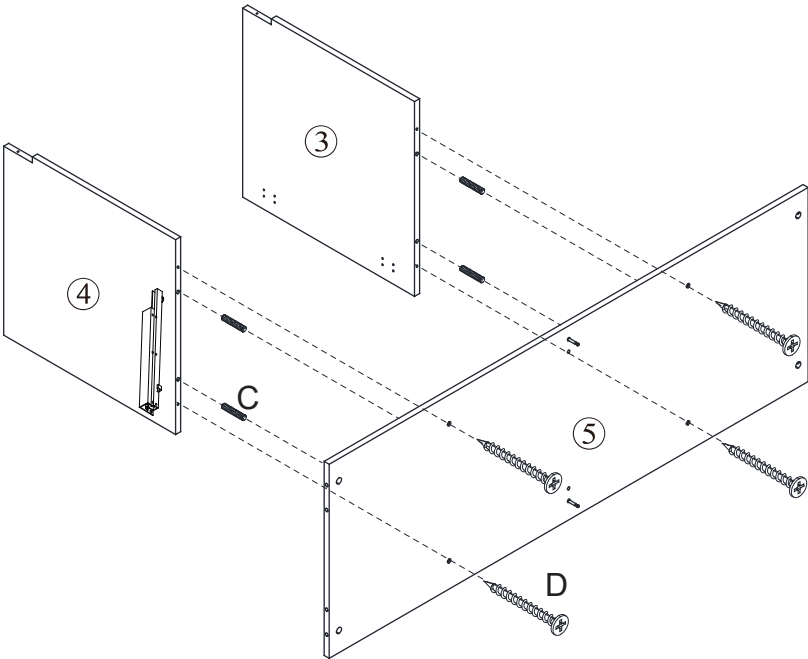





Step 4

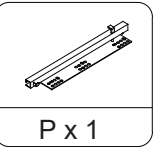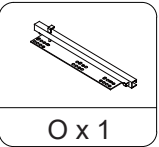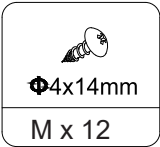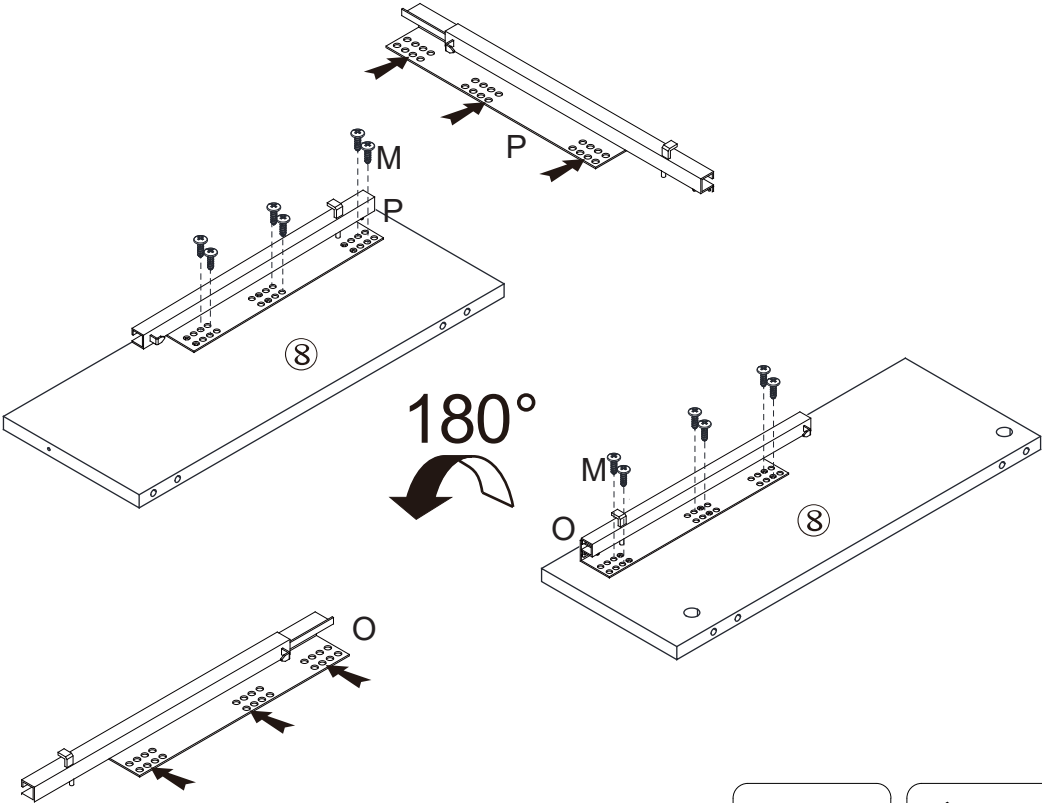




Step 5

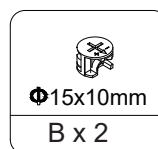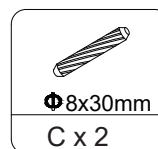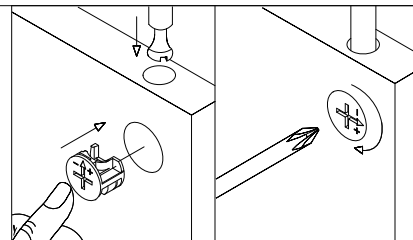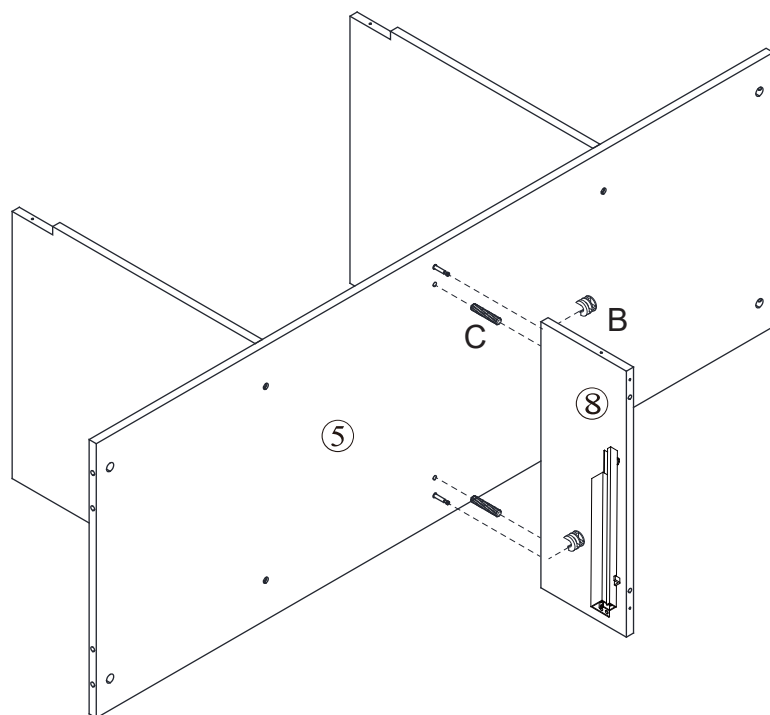



Step 6

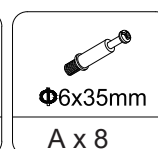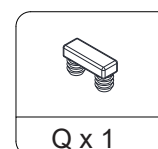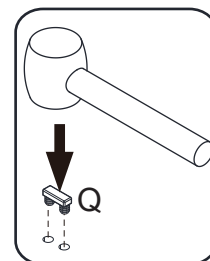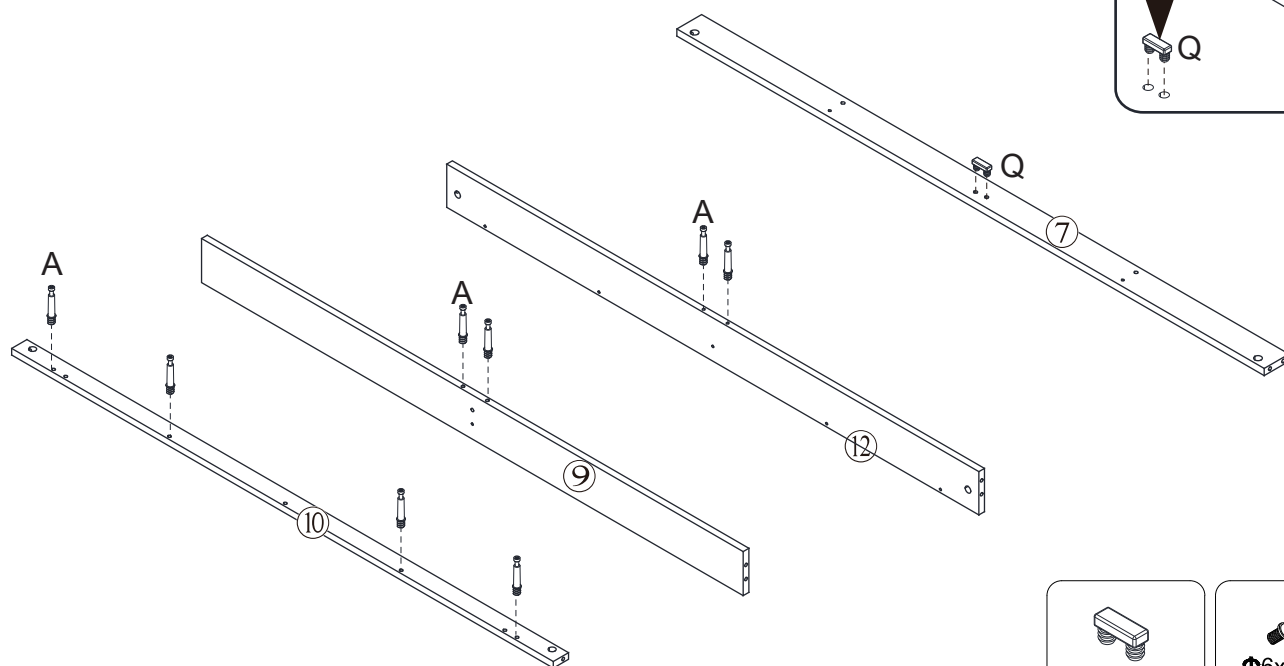




Step 7

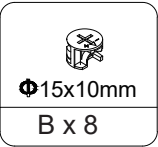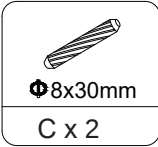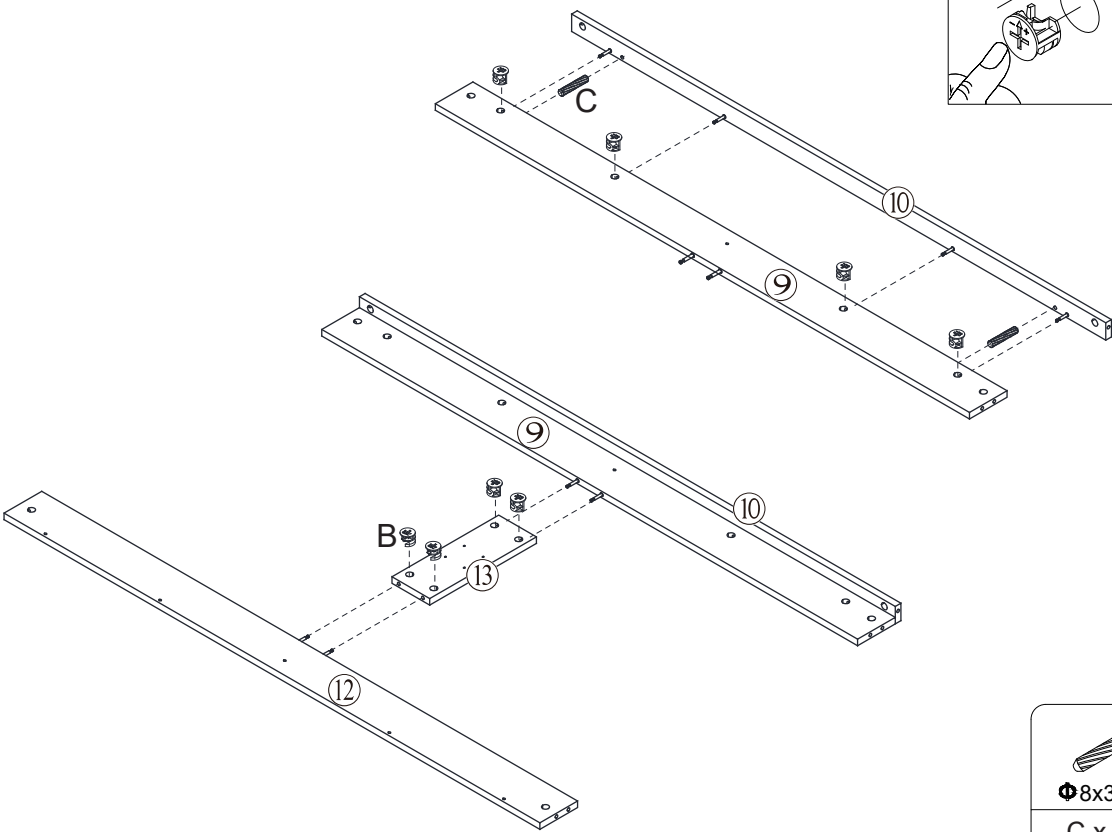







Step 8

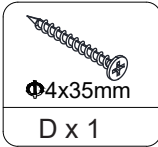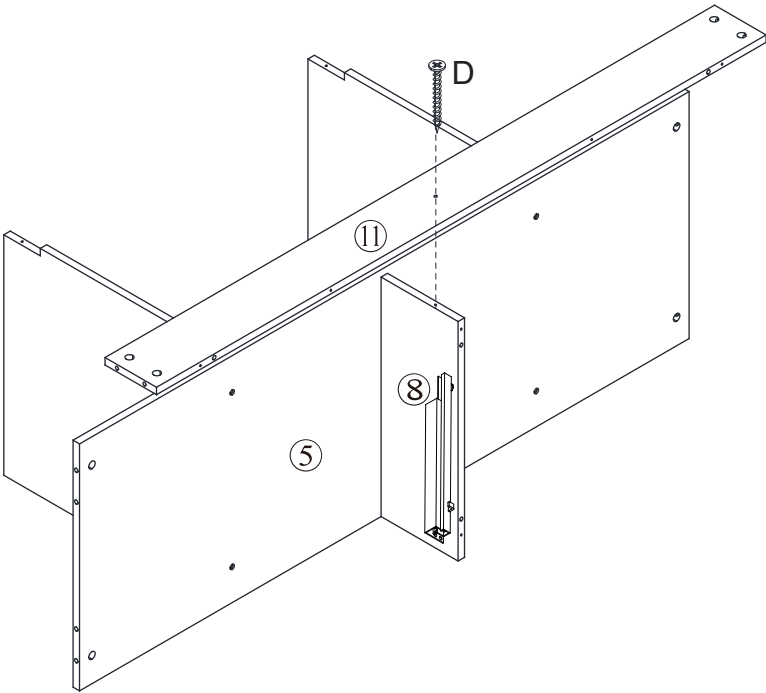




Step 9

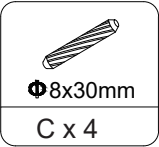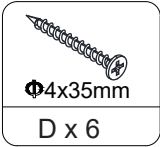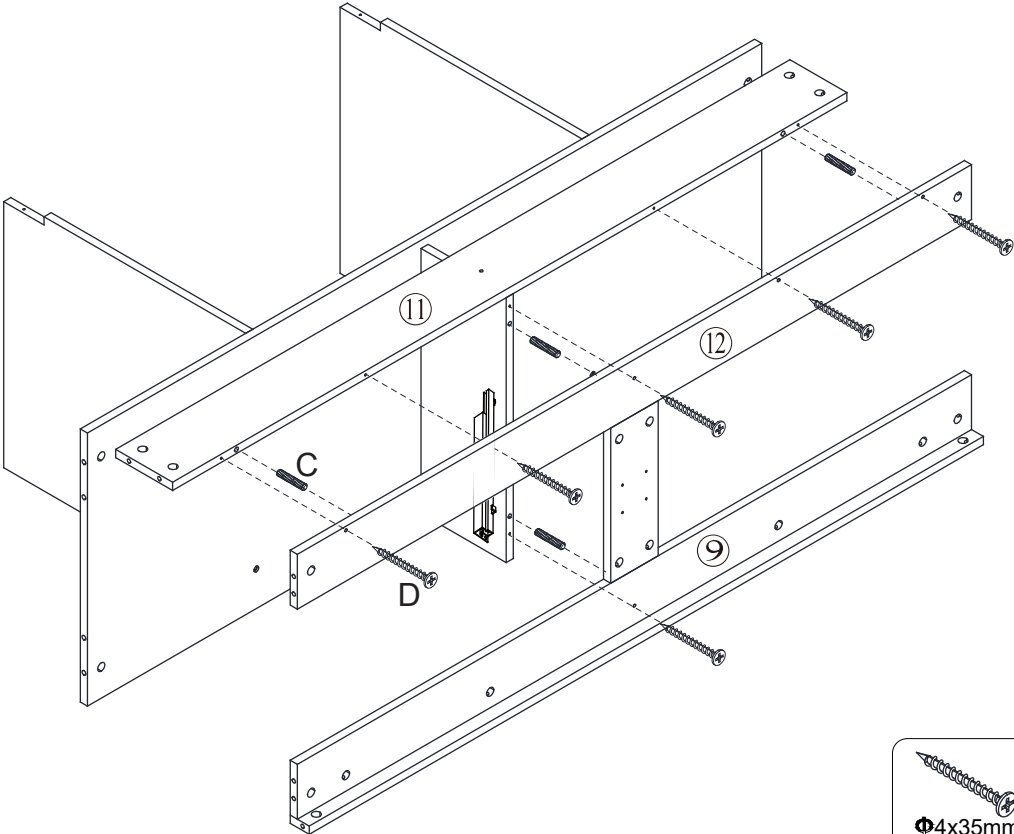





Step 10

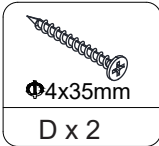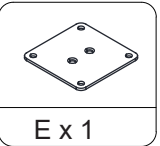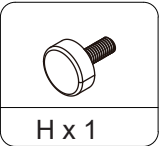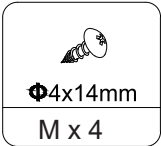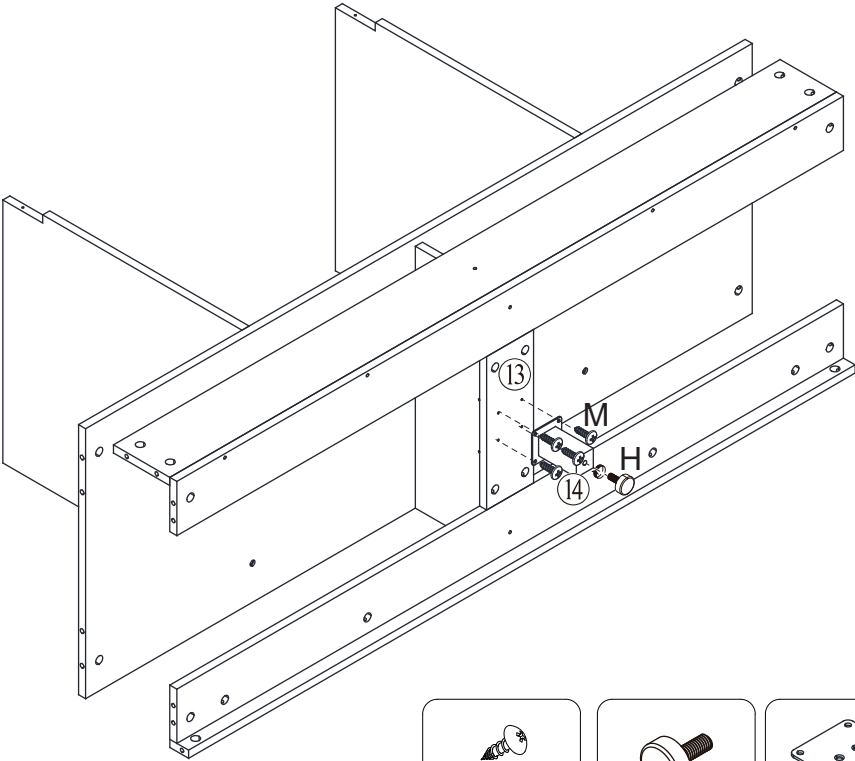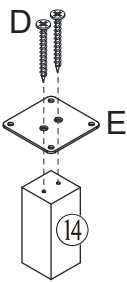




Step 11

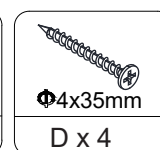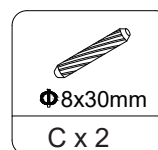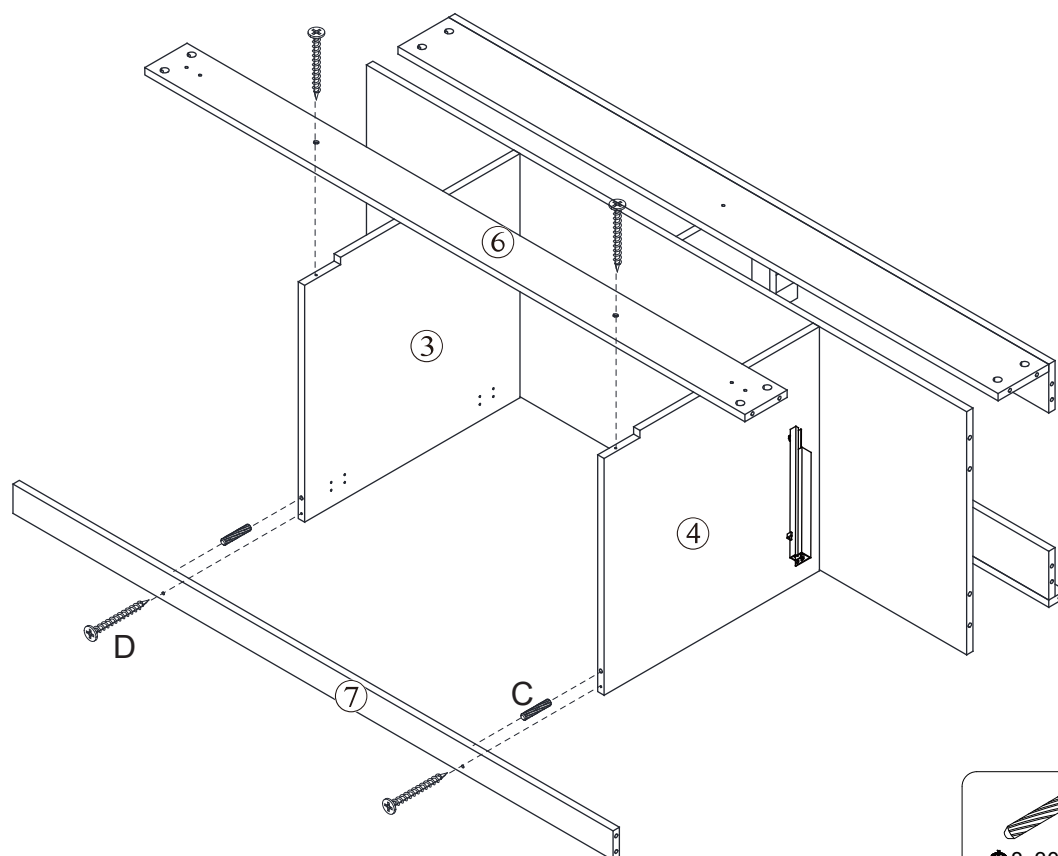




Step 12

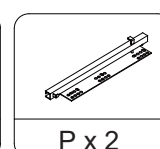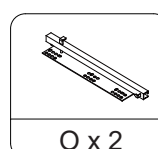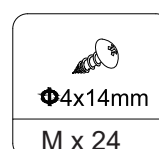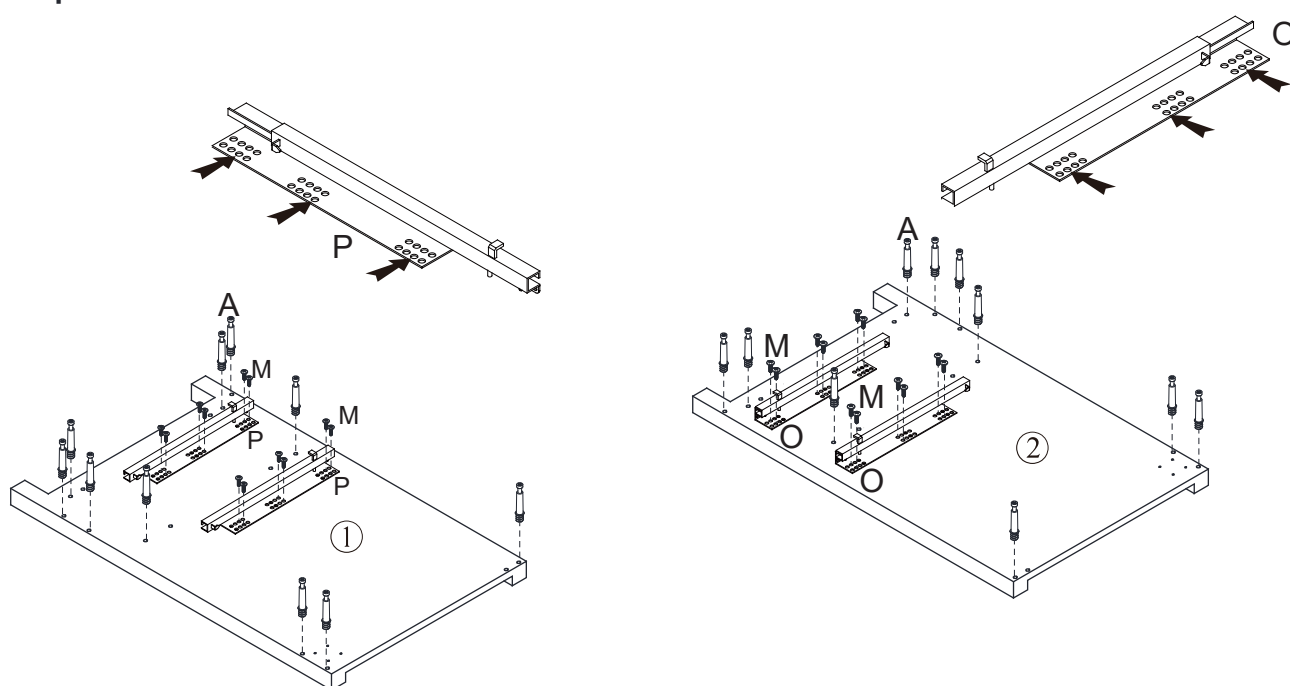


Step 13

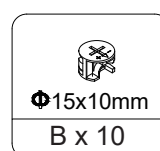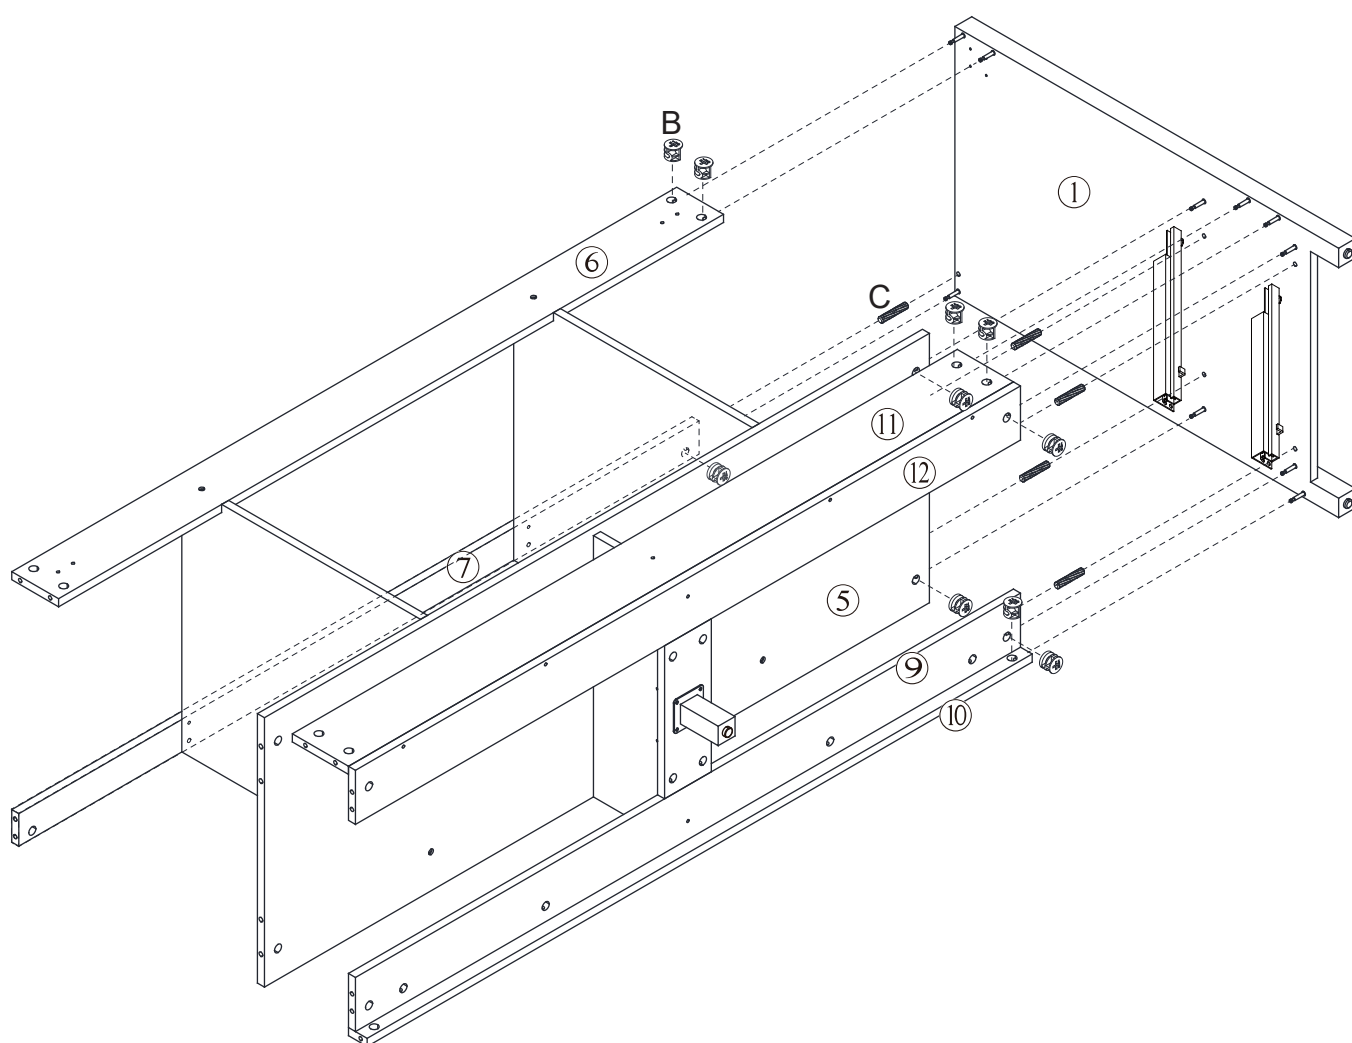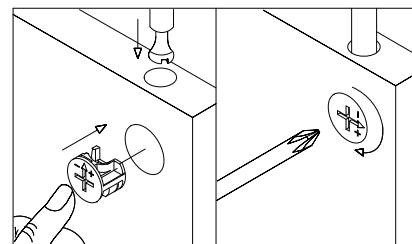


Step 14

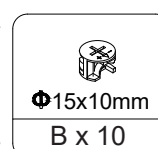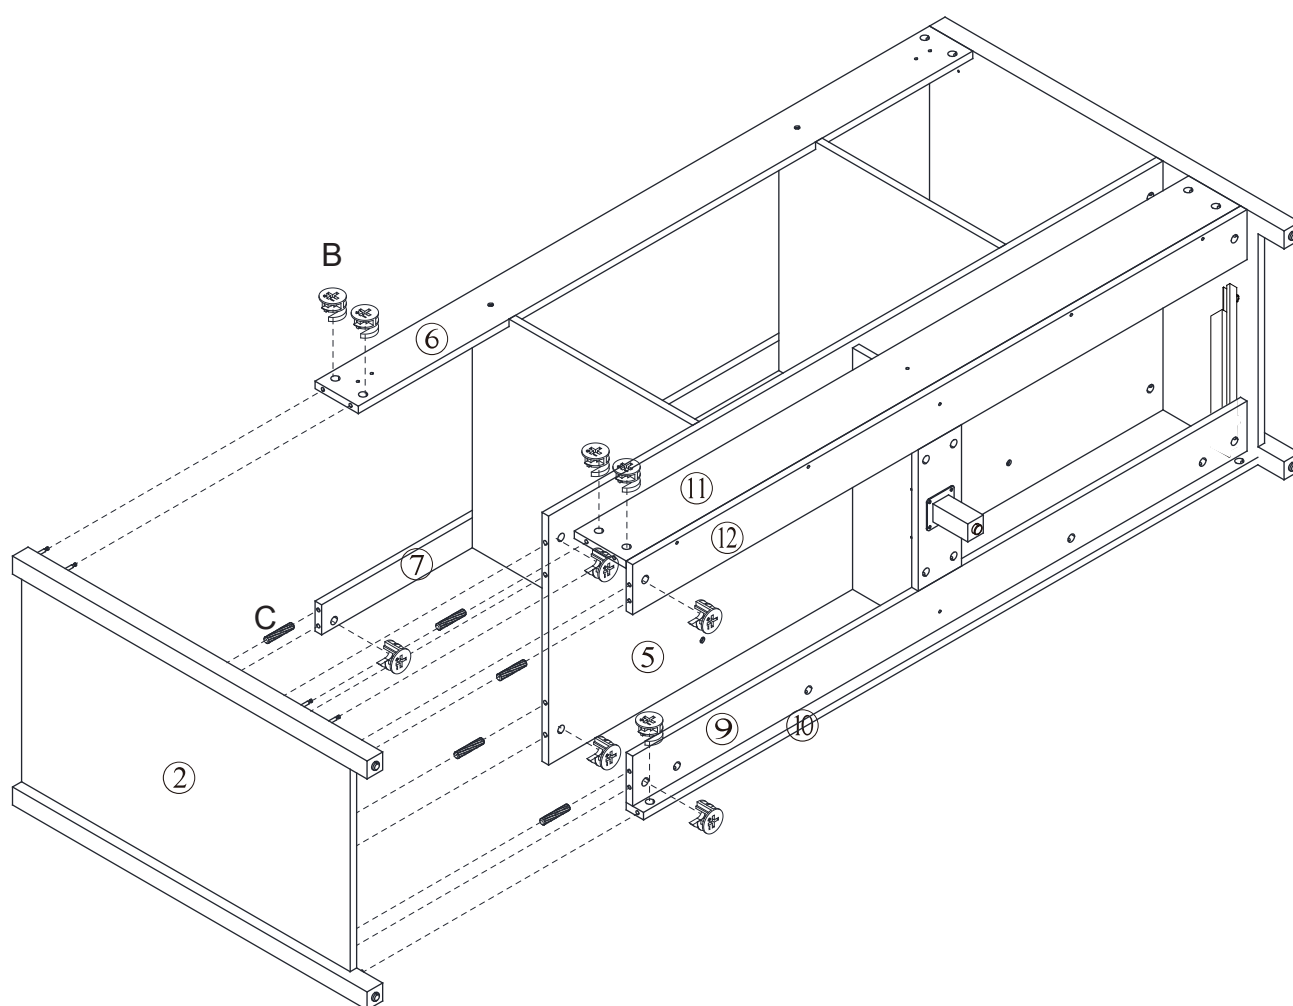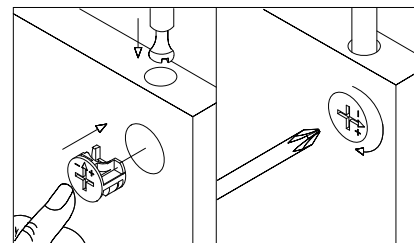

Step 15

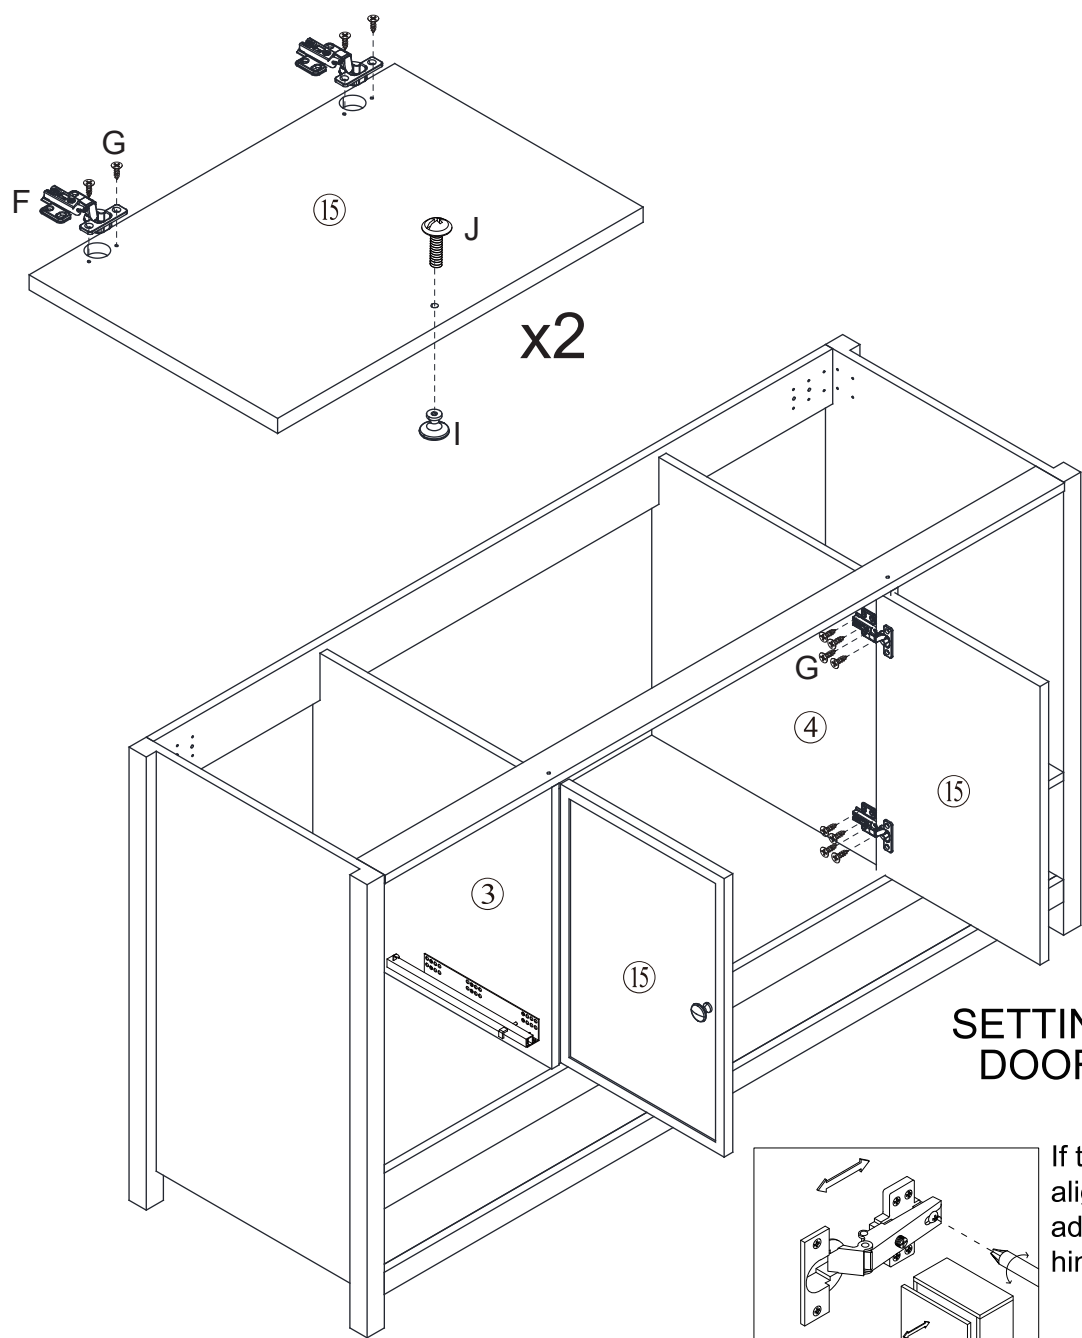

SETTINGS
DOORS




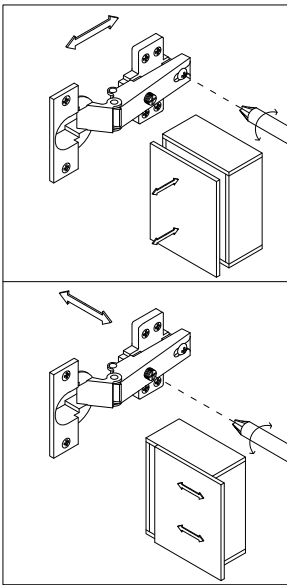


If the hinge holes are not aligned, you can try adjusting the front and rear hinges.

If the door gap is large, you can adjust the hinges left and right.


 Φ4x14mm G x 24	 I x 2	 M4x20mm J x 2	 F x 4
--	--	---	--

Step 16

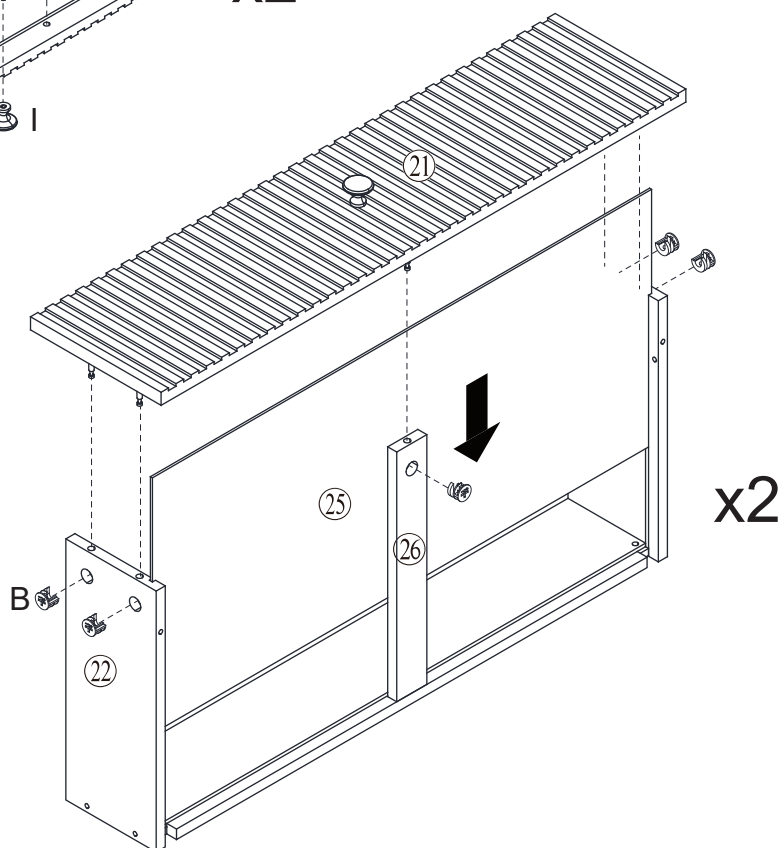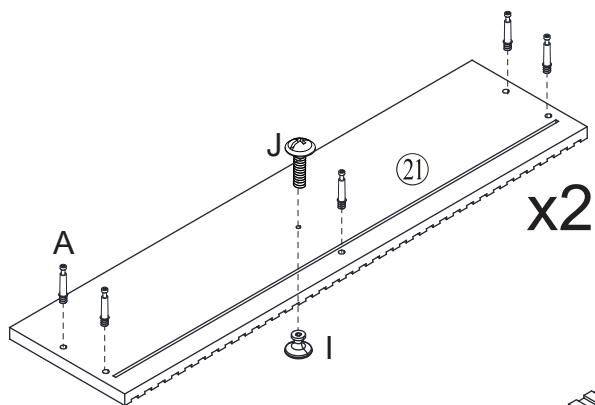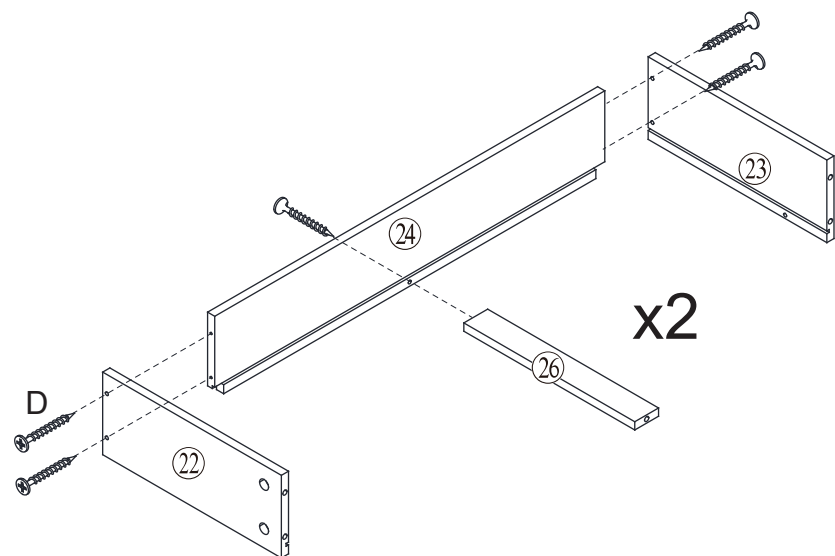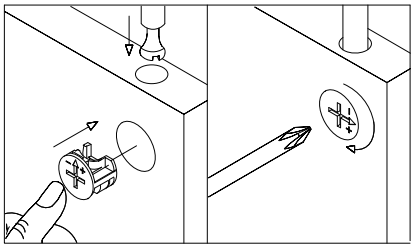


 Φ6x35mm A x 10	 Φ15x10mm B x 10	 Φ4x35mm D x 10	 M4x20mm J x 2	 I x 2
--	---	--	---	--

Step 17



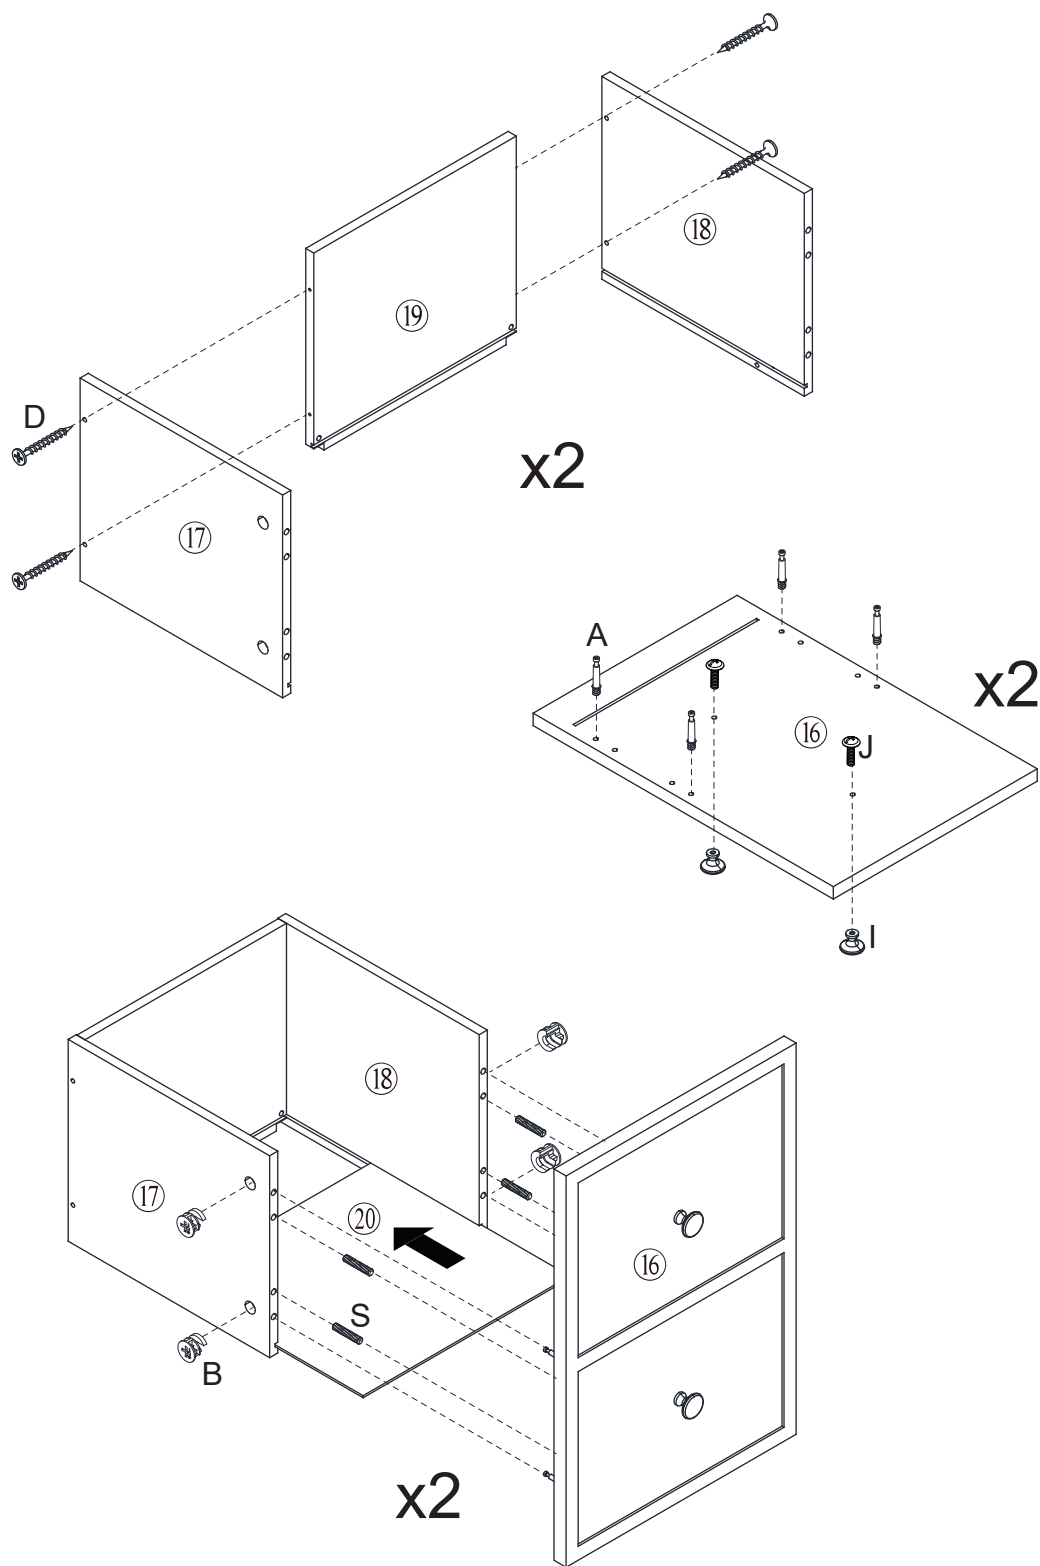


 Φ6x30mm S x 8	 Φ6x35mm A x 8	 Φ15x10mm B x 8	 Φ4x35mm D x 8	 M4x20mm J x 4	 I x 4
---	---	--	---	---	--




Step 18

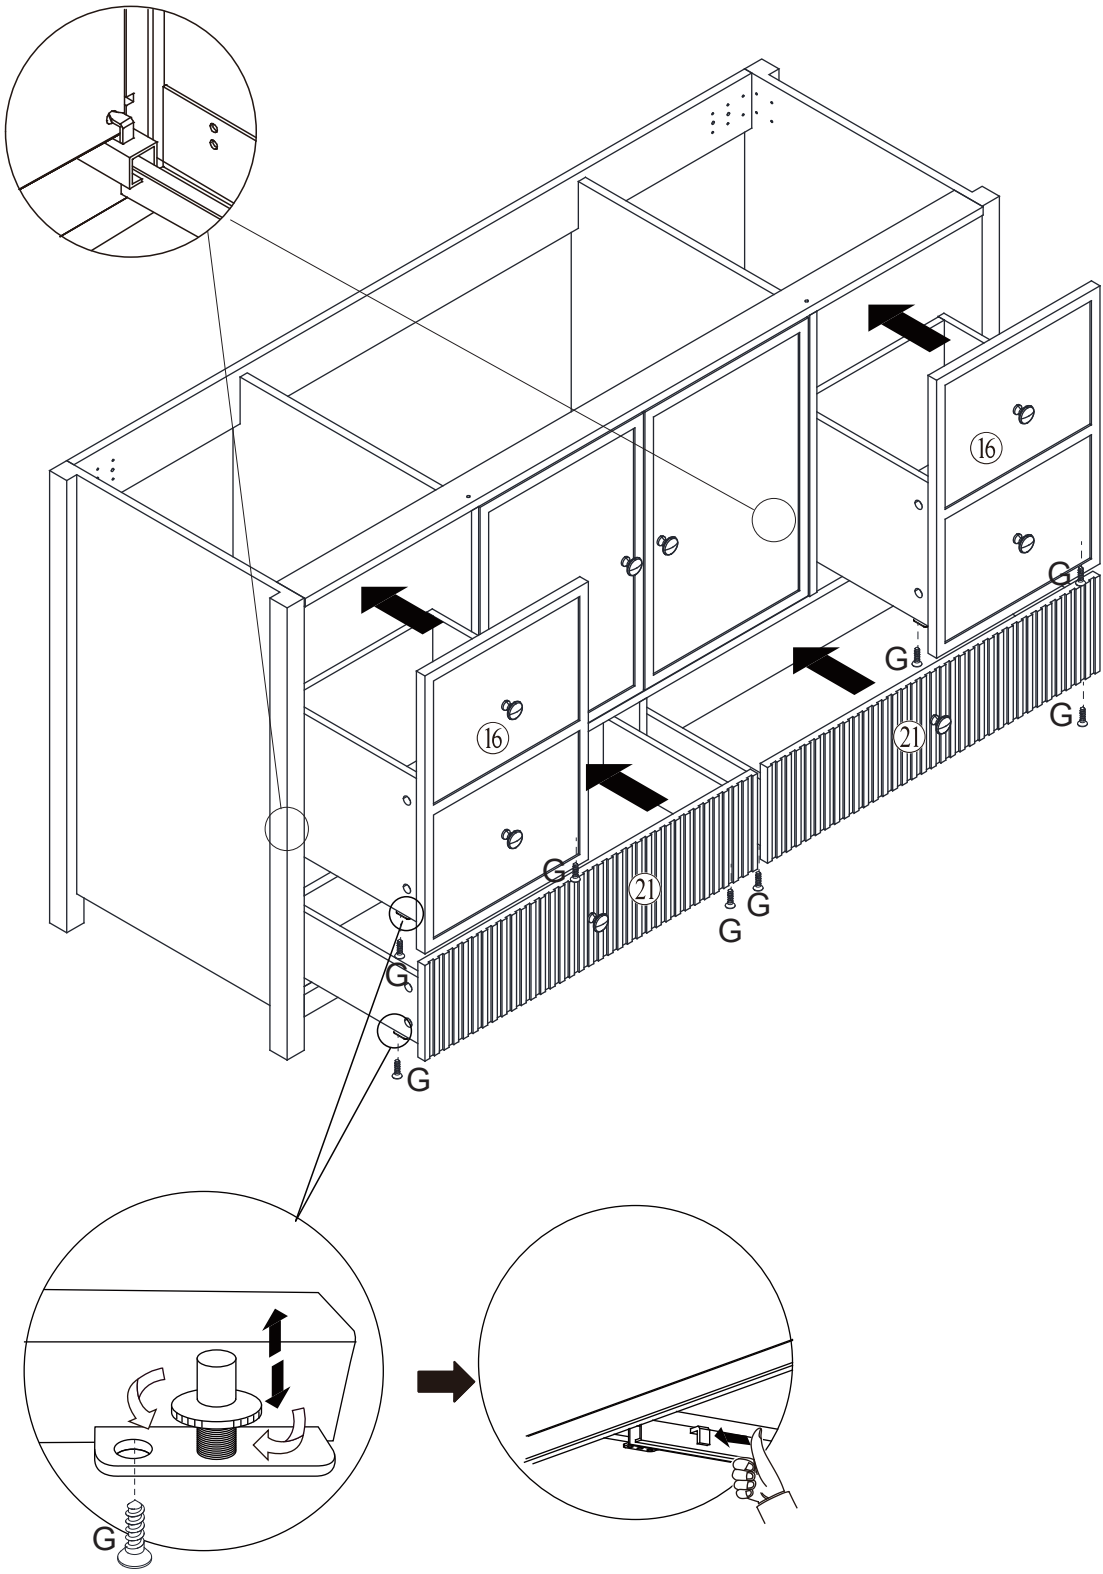



Step 19

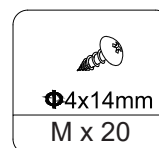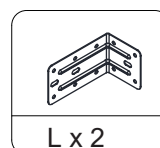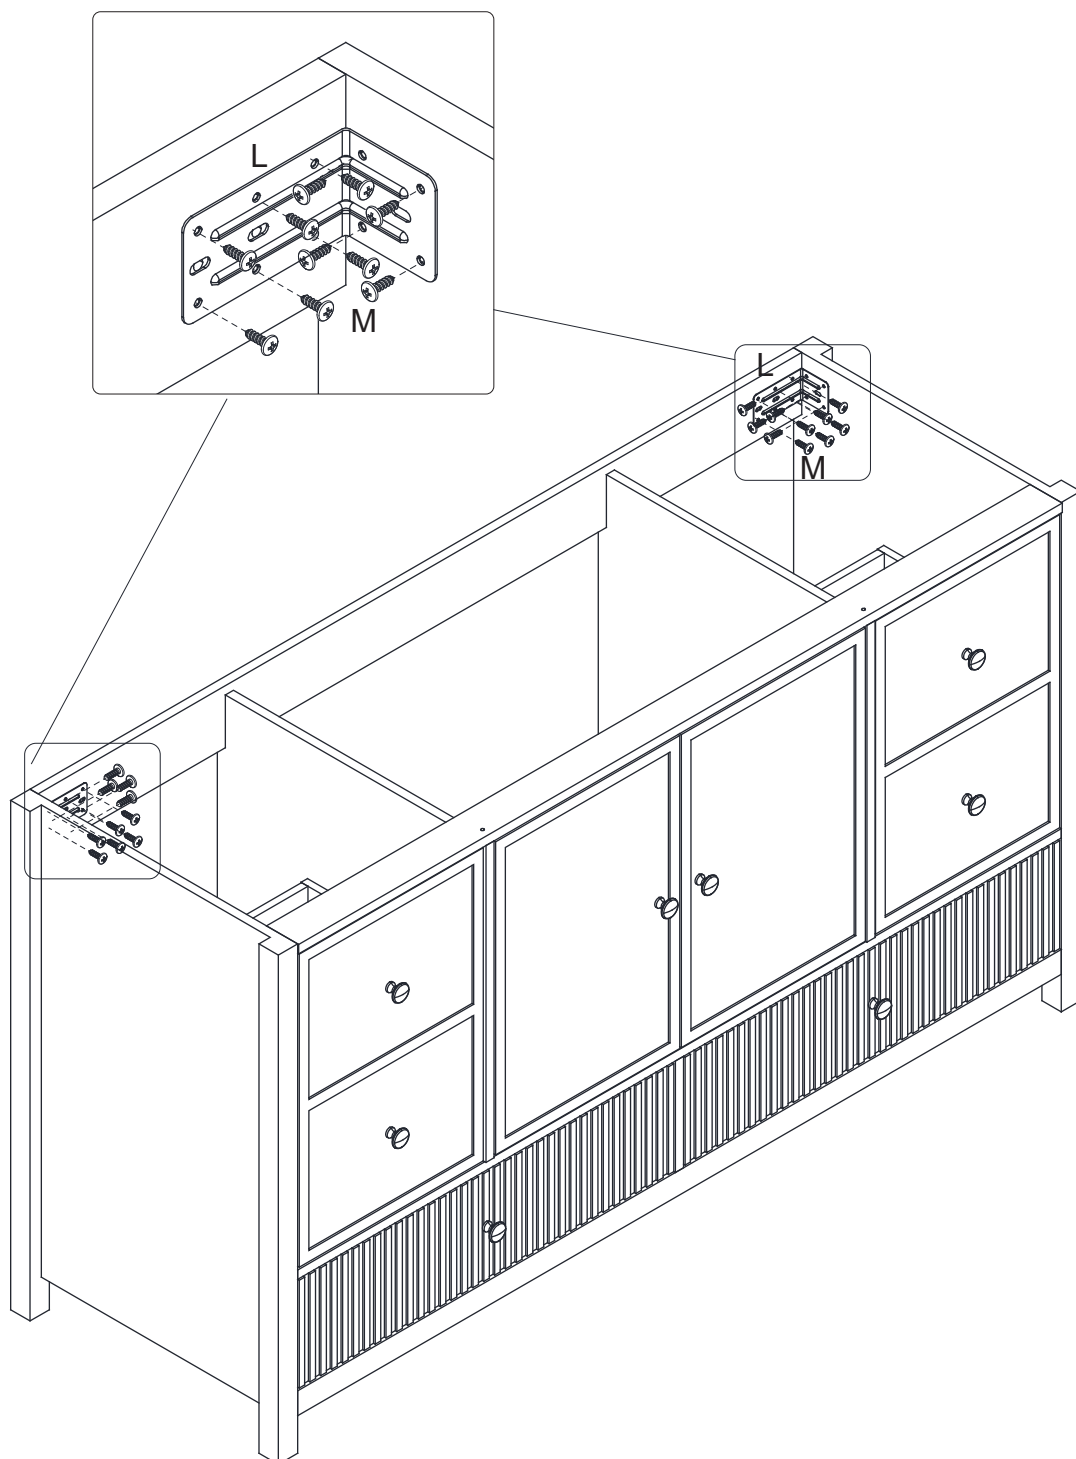

Step 20

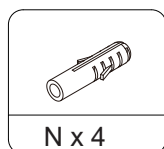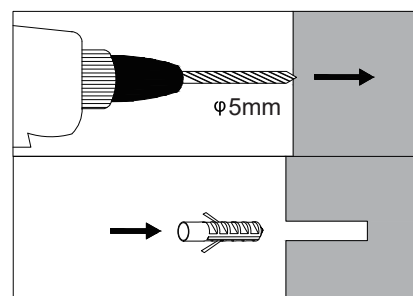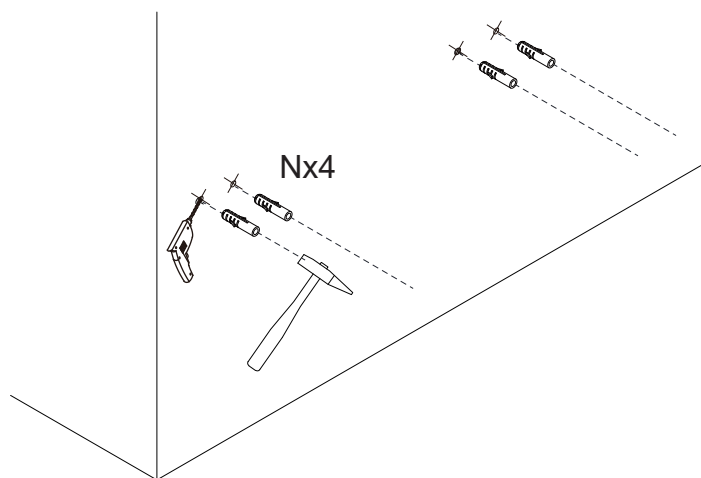

Step 21

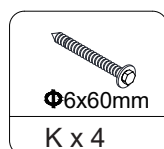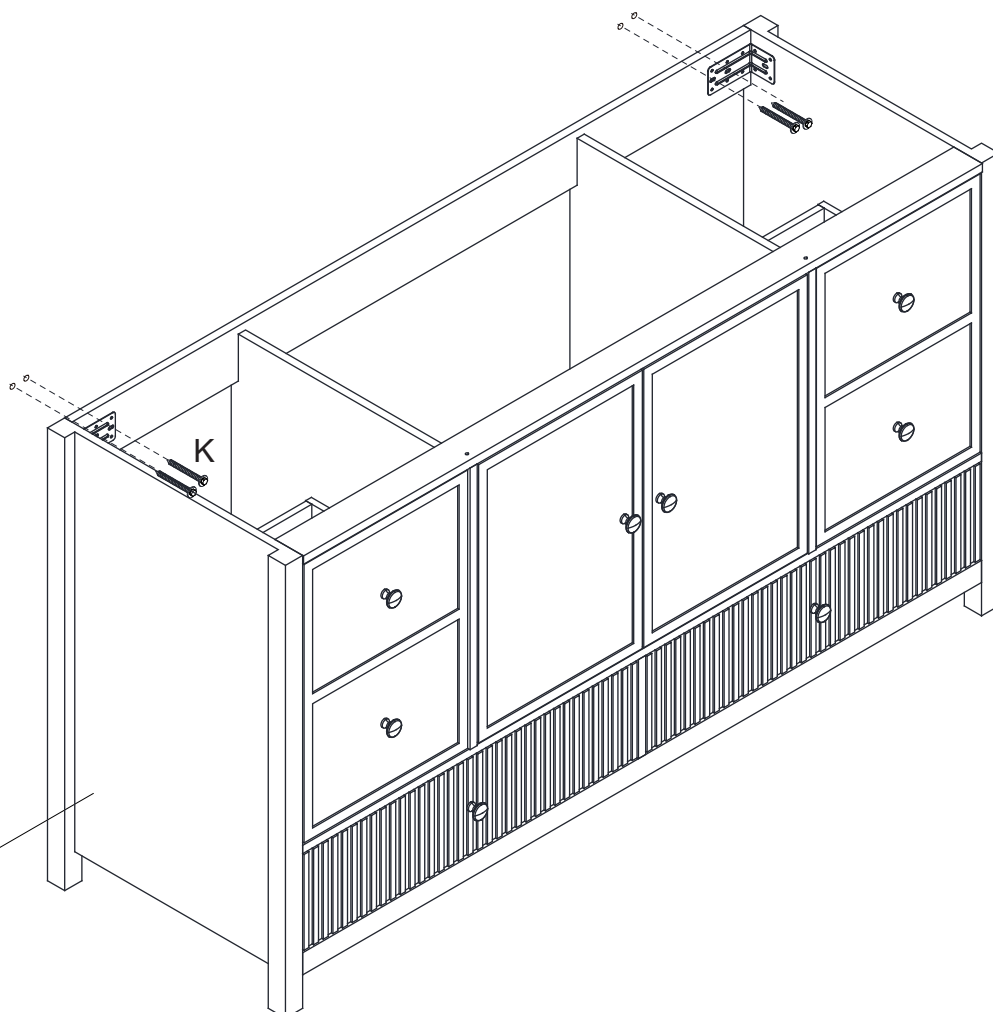

Step 22

