



Assembly Instructions

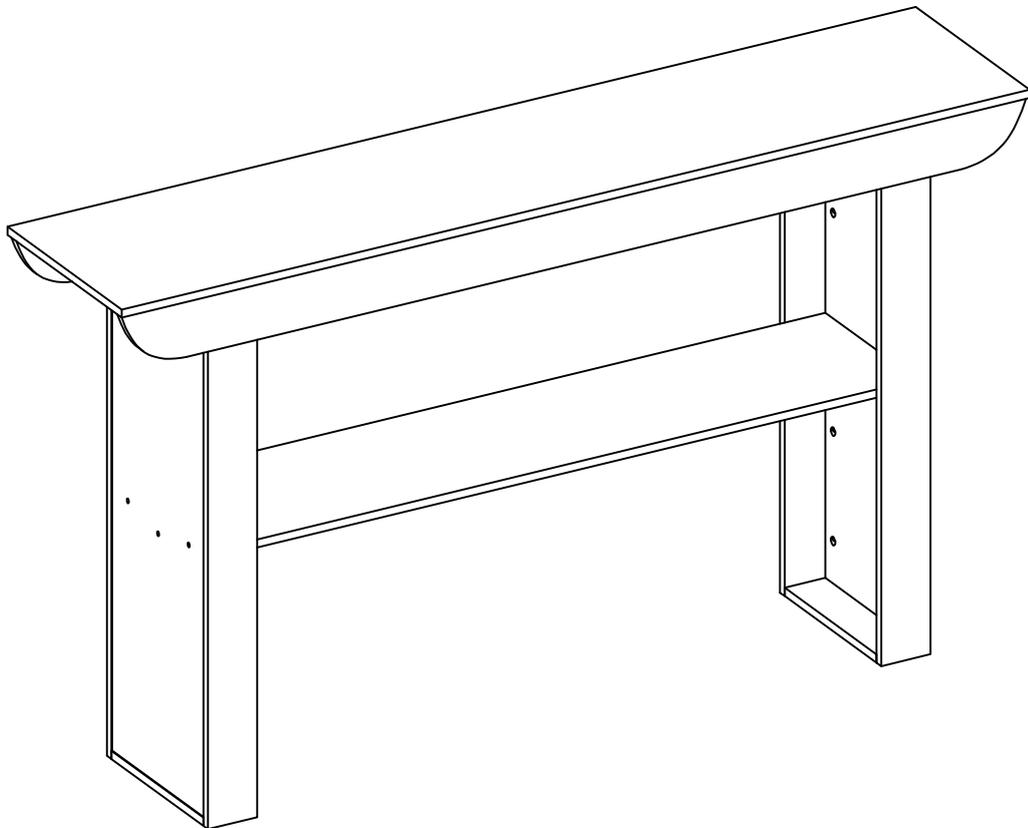


Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.

PART LIST

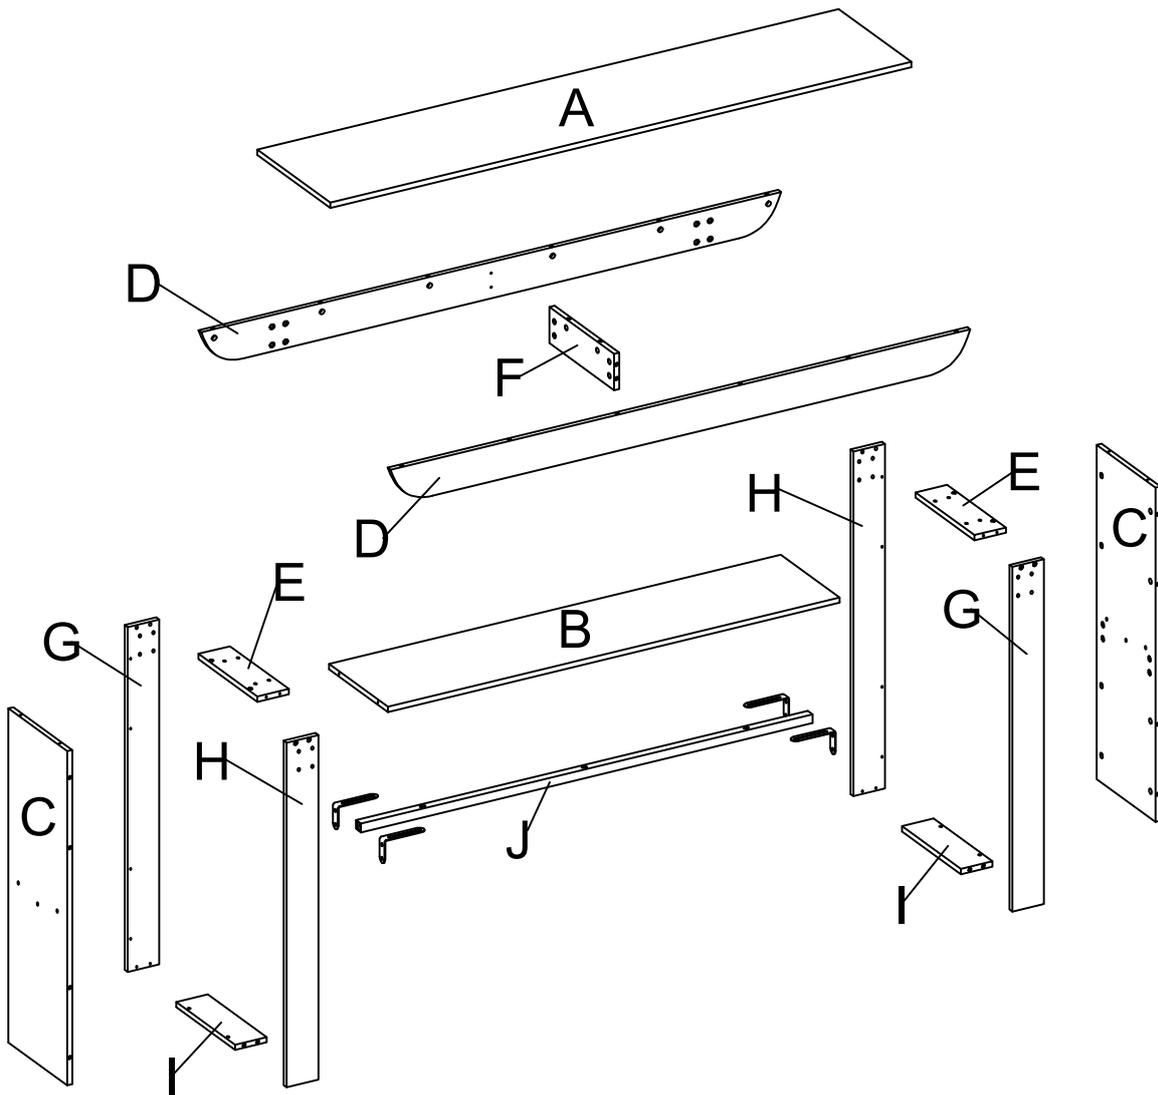


PART LIST


A x 1pc

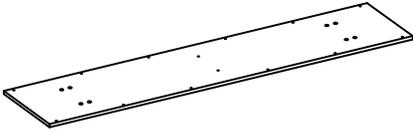


B x 1pc

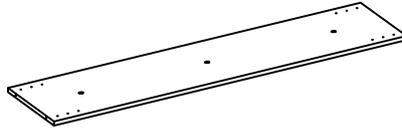


C x 2pcs

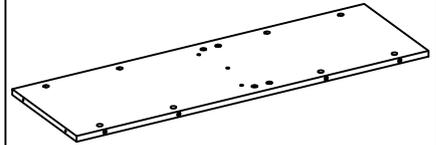


D x 2pcs




E x 2pcs

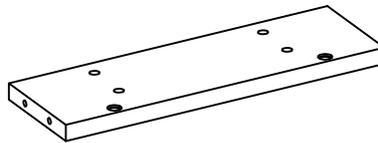


F x 1pc

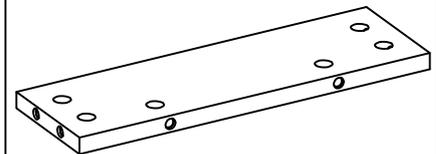


G x 2pcs




H x 2pcs



I x 2pcs









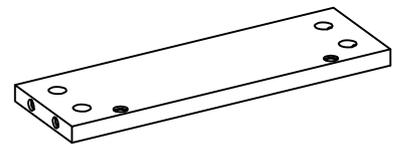


J x 1pc



1072mm

HARDWARE LIST
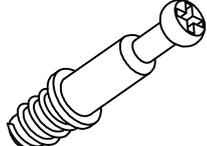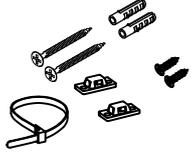
<p>①</p>  <p>M6x27</p> <p style="text-align: right;">5 pcs</p>	<p>②</p>  <p>M6x40</p> <p style="text-align: right;">20 pcs</p>	<p>③</p>  <p>M6x28</p> <p style="text-align: right;">42 pcs</p>
<p>④</p>  <p>Ø12</p> <p style="text-align: right;">42 pcs</p>	<p>⑤</p>  <p>M6x20</p> <p style="text-align: right;">24 pcs</p>	<p>⑥</p>  <p>100x55</p> <p style="text-align: right;">4 pcs</p>
<p>⑦</p>  <p>M4x12</p> <p style="text-align: right;">12 pcs</p>	<p>⑧</p>  <p>M6x8</p> <p style="text-align: right;">8 pcs</p>	<p>⑨</p>  <p>Ø20*3</p> <p style="text-align: right;">4 pcs</p>
<p>⑩</p>  <p>M4x40*2 M4x14*2</p> <p style="text-align: right;">1 pc</p>	<p>⑪</p>  <p>M4</p> <p style="text-align: right;">1 pc</p>	<p>⑫</p>  <p style="text-align: right;">1 pc</p>

Please count and verify all parts before assembly.

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN



Put the male camlock into the entry hole.


2

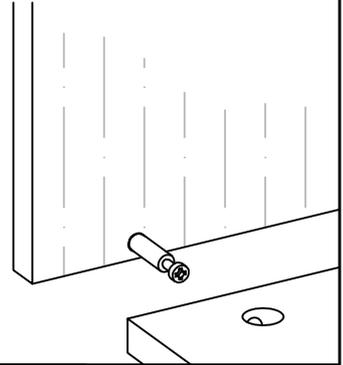

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

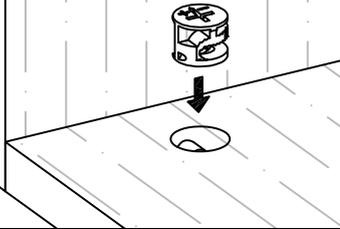


Screw the female camlock clockwise with a screwdriver.

You will feel a click when the camlock is locked in place.


The camlock is now completed.

4

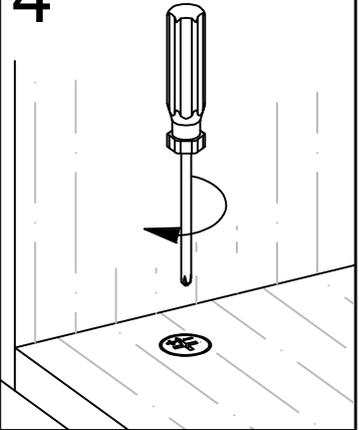


STEP 1

3  x14





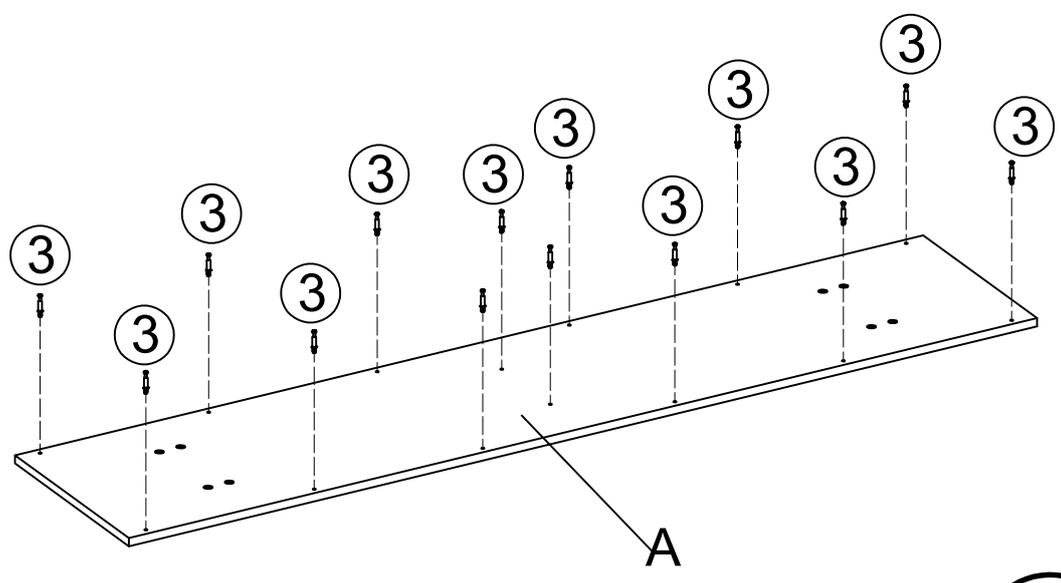


STEP 2


3  x4

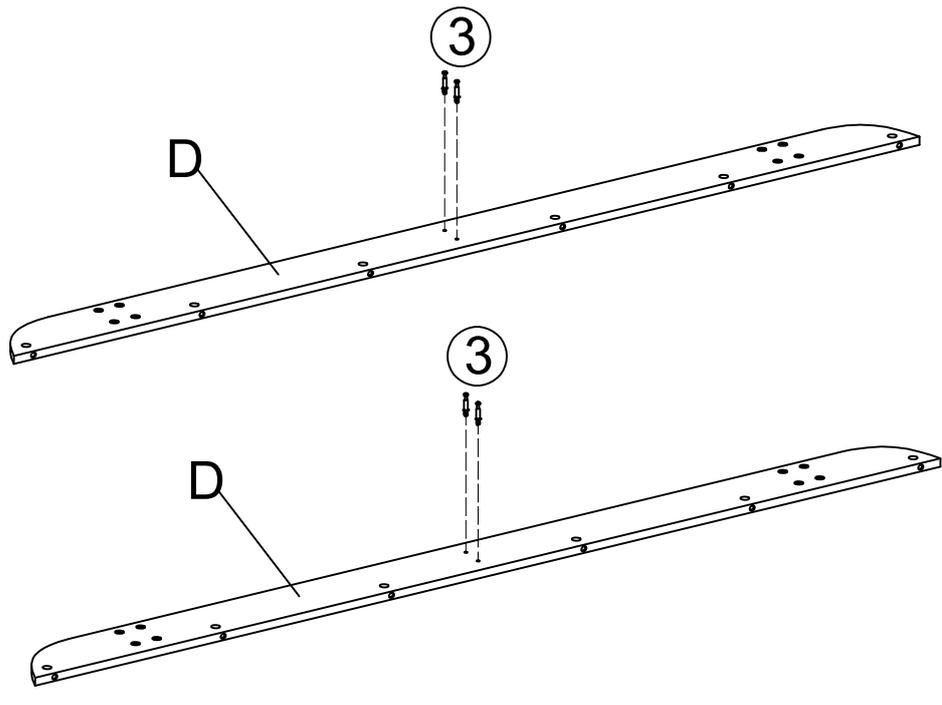


STEP 3

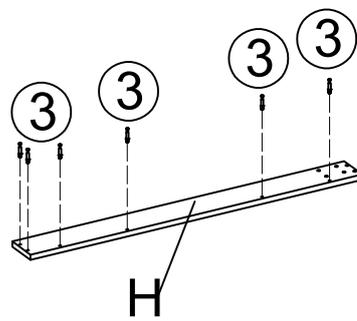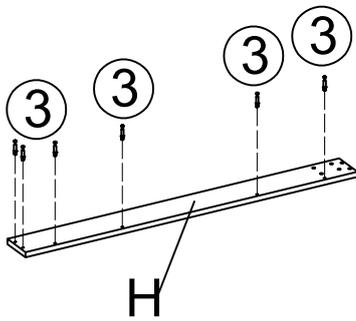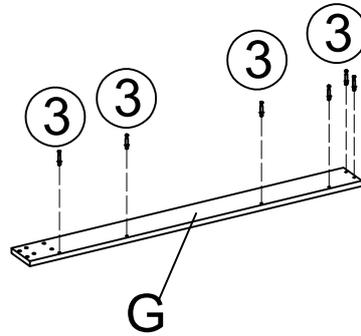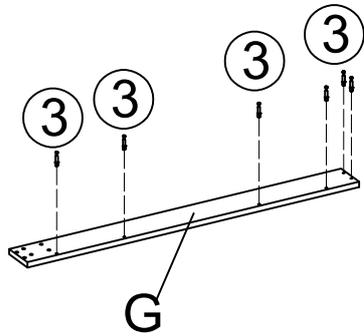


STEP 4




Keep the holes of the Part D and Part F toward this direction as shown

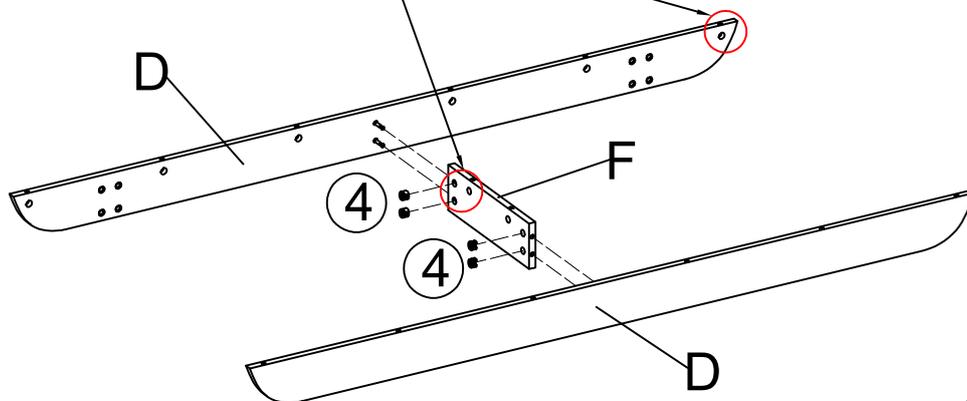


STEP 5

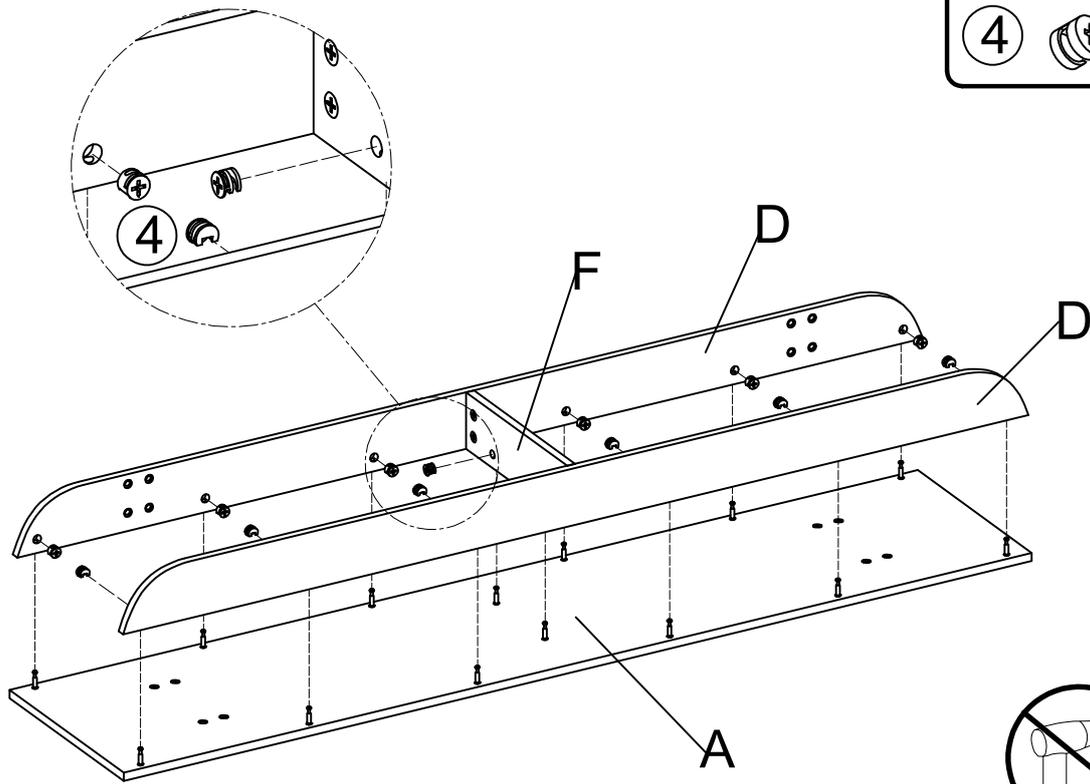


STEP 6

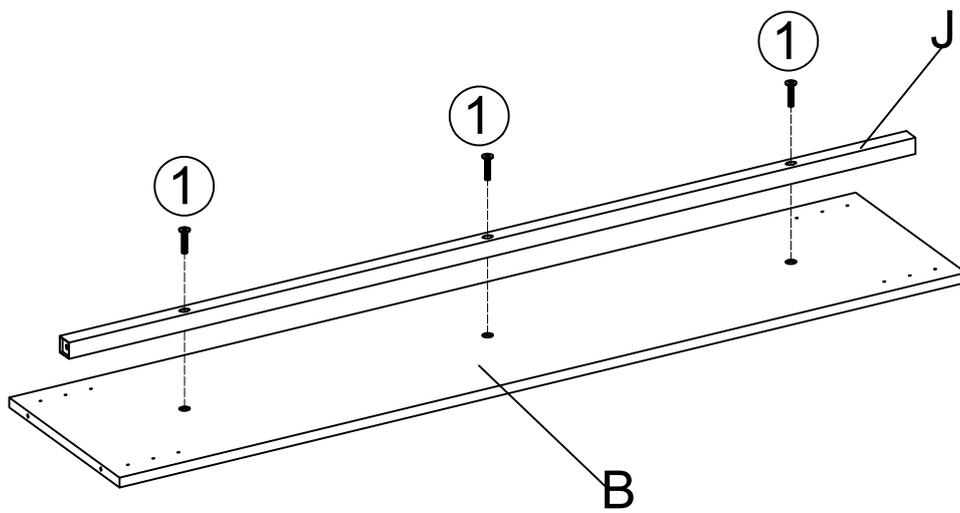


STEP 7

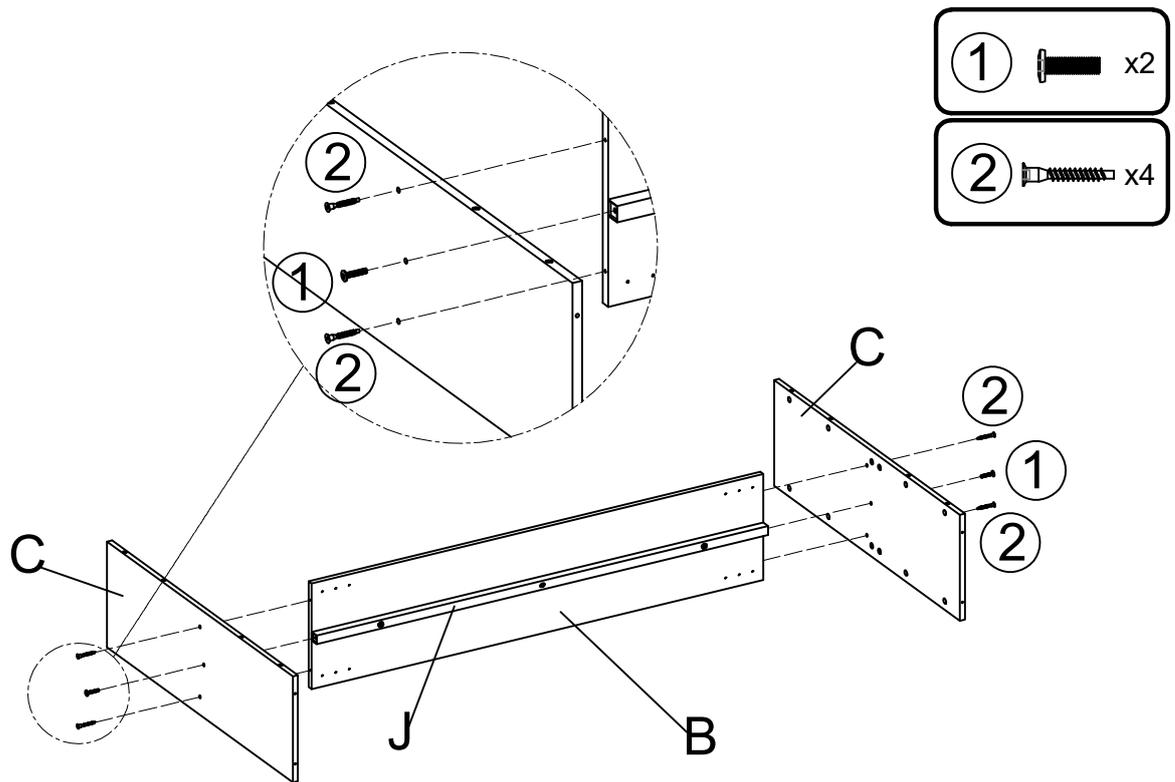


STEP 8

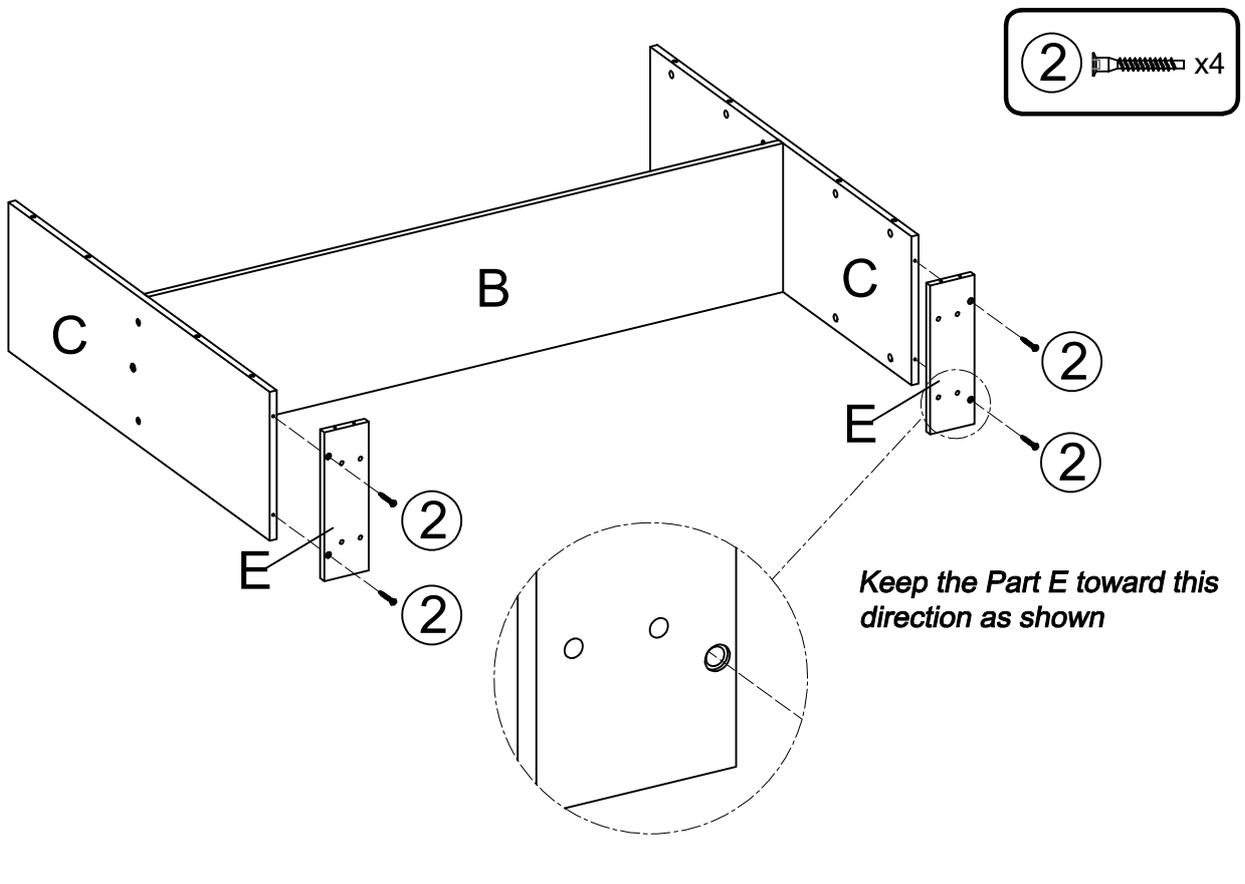


STEP 9

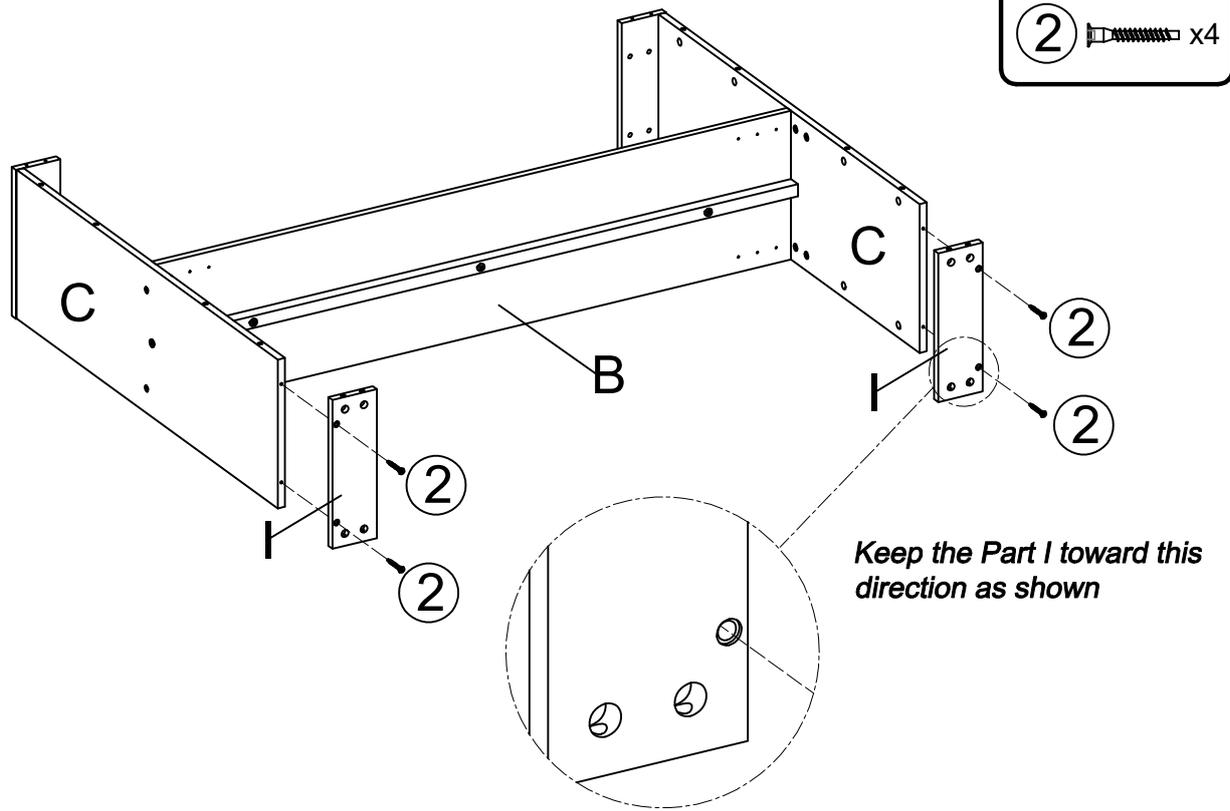


STEP 10

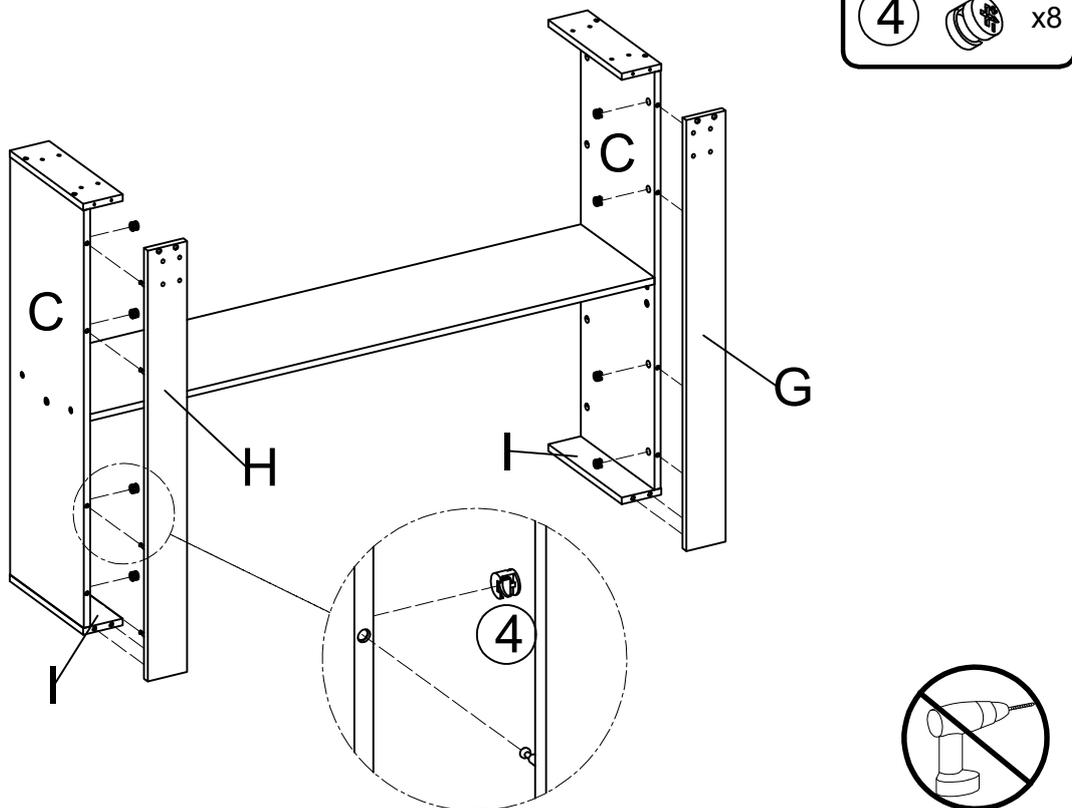


STEP 11

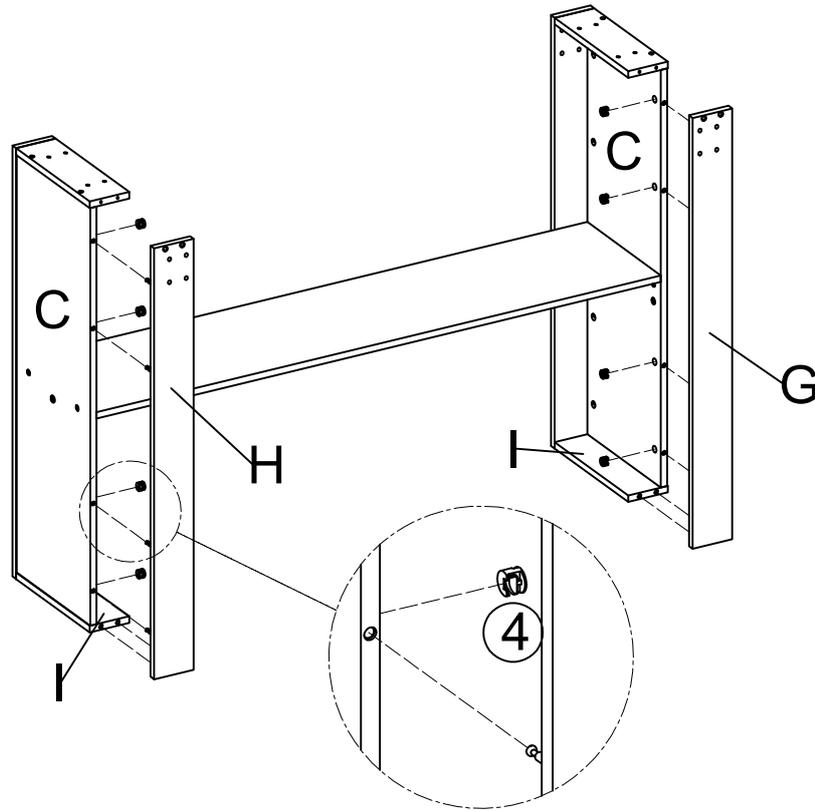


STEP 12

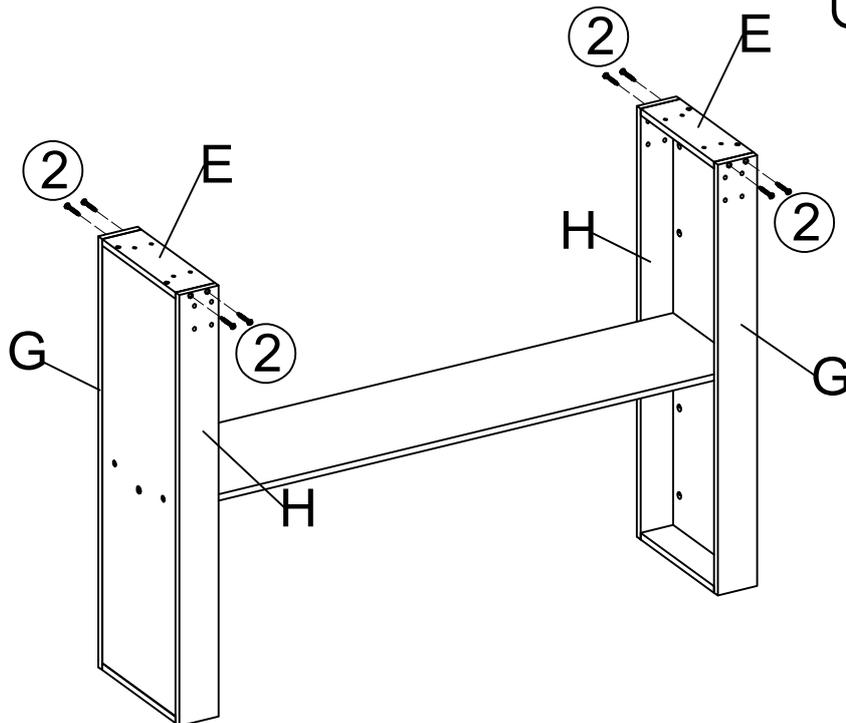


STEP 13

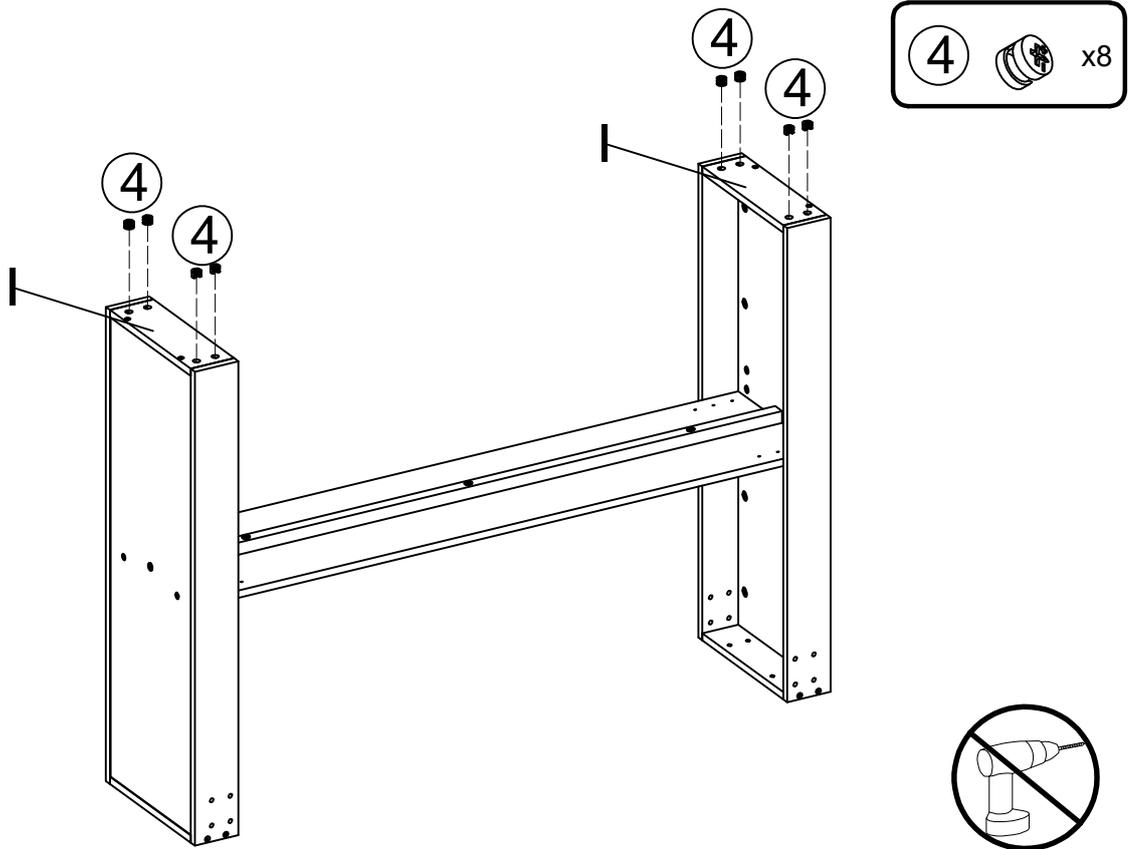


STEP 14

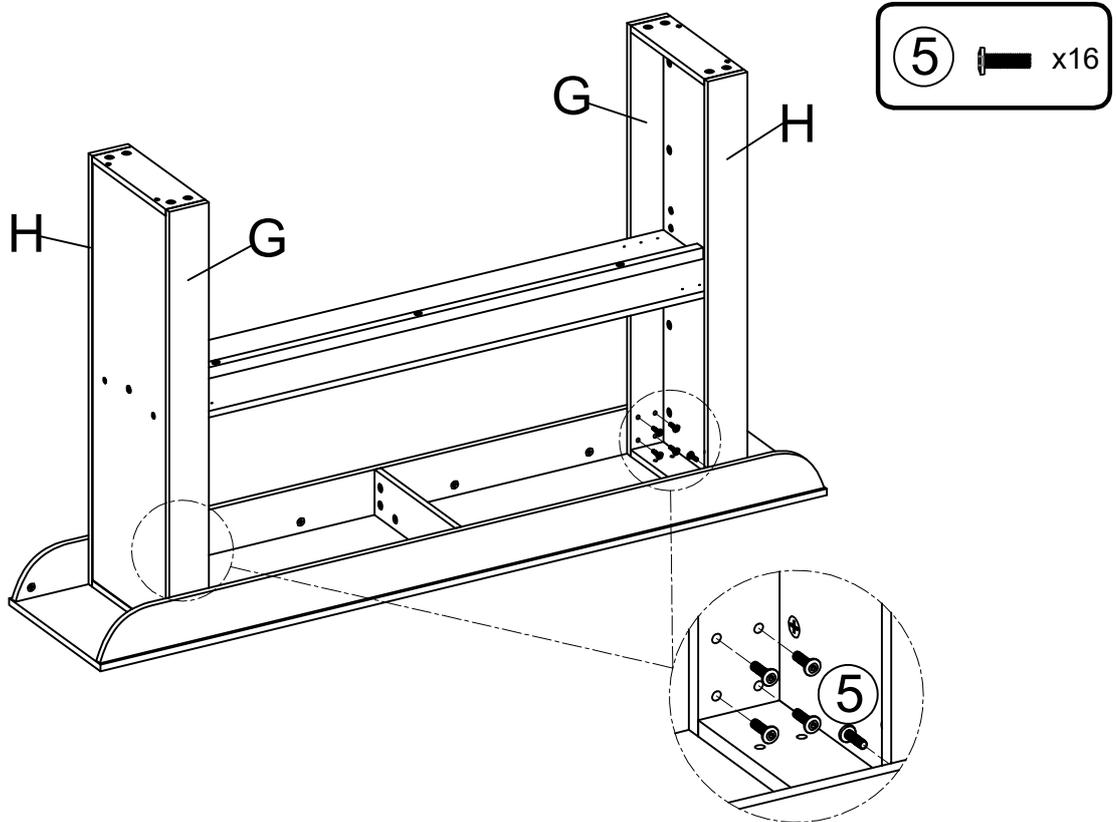

STEP 15

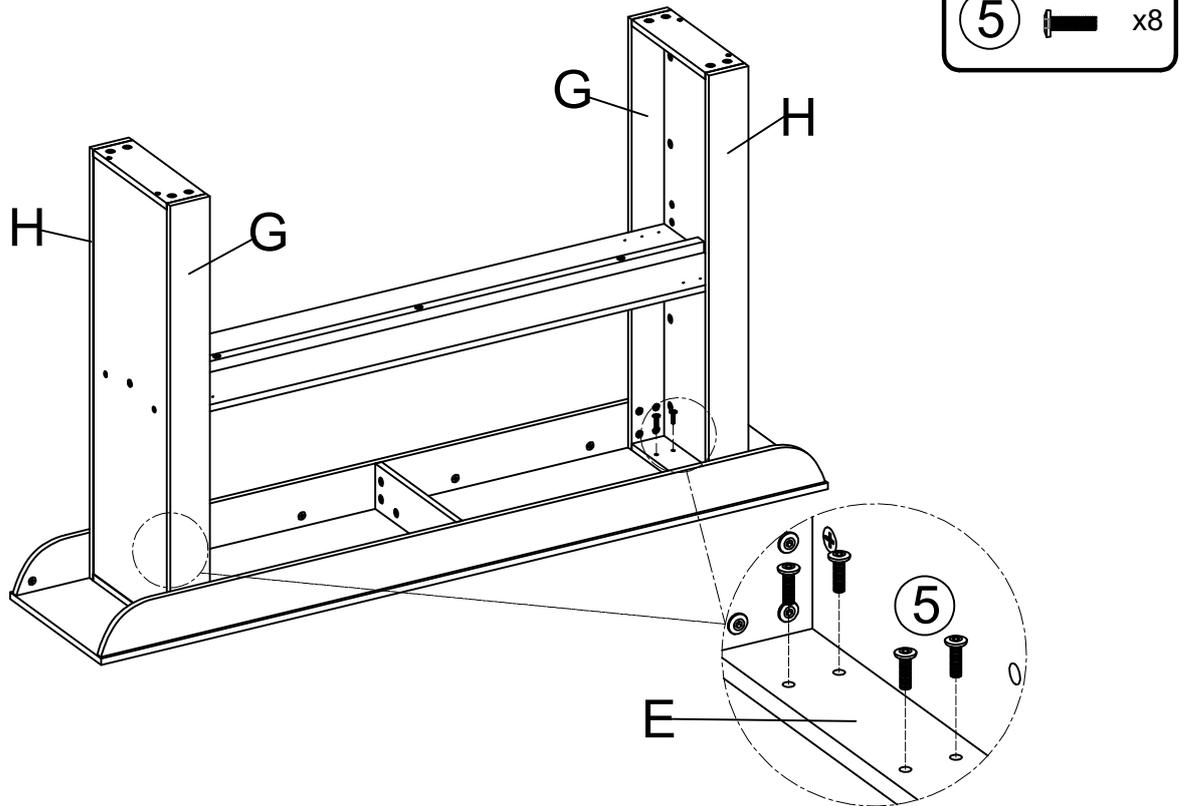


STEP 16

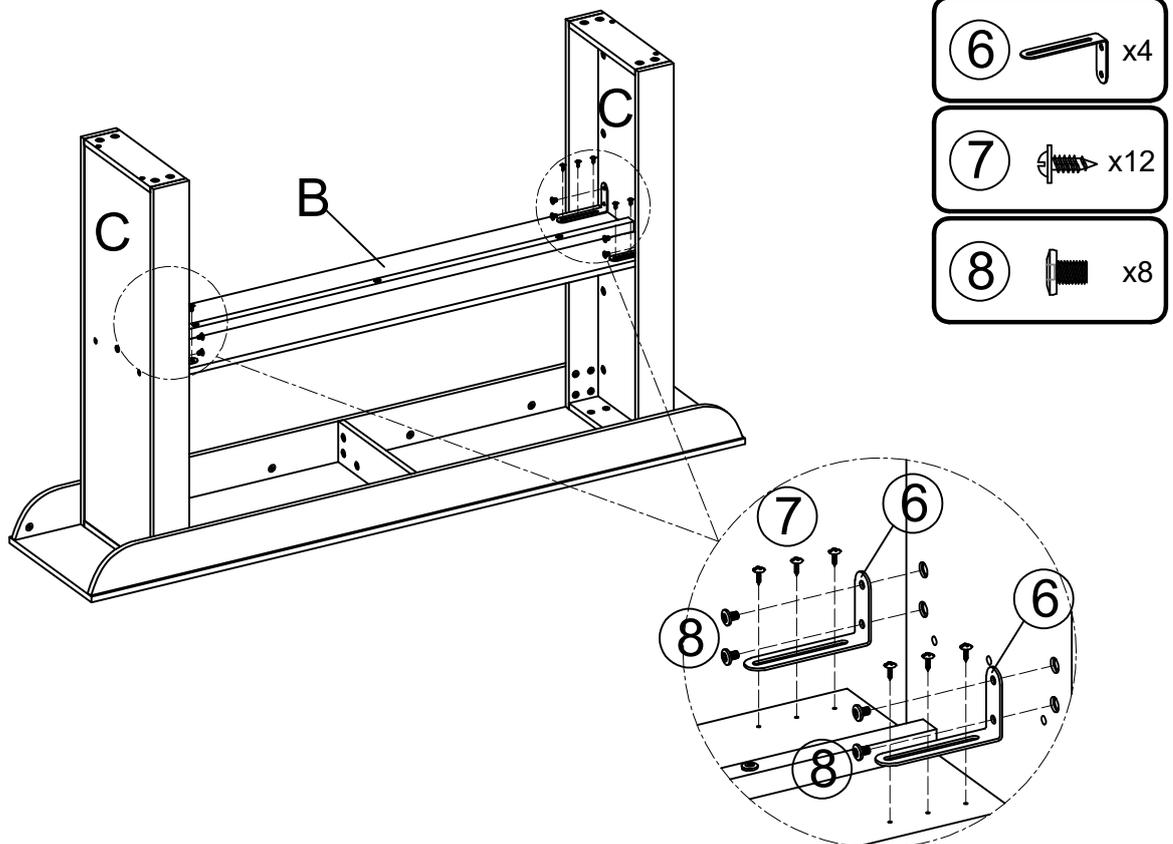


STEP 17

9 ○ x4

anti-slip plastic pad

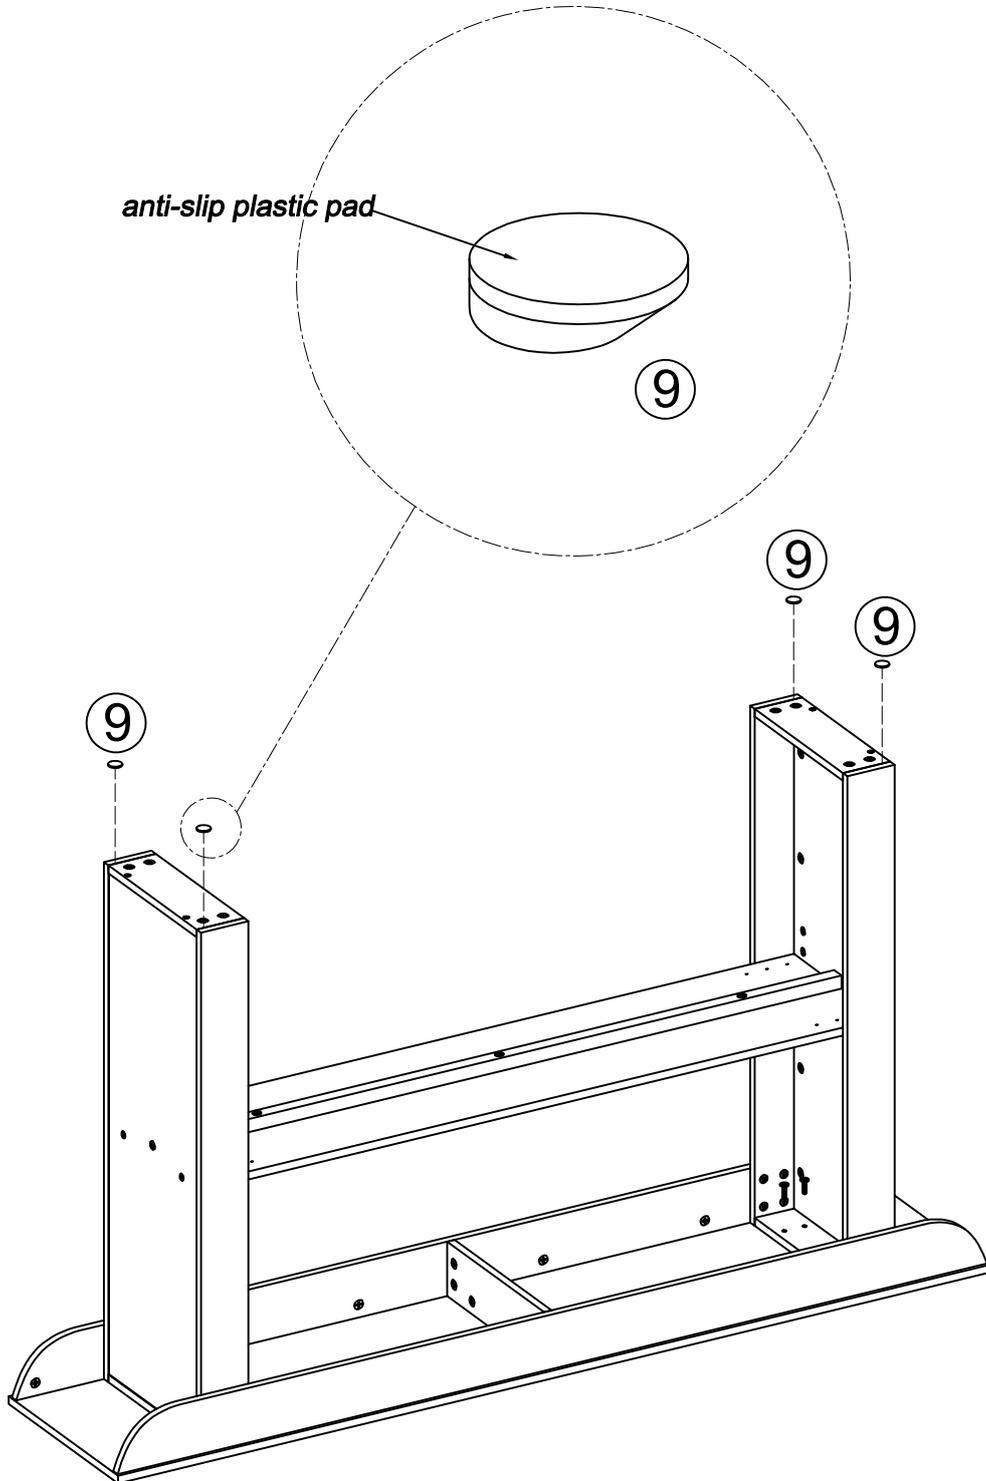

STEP 18

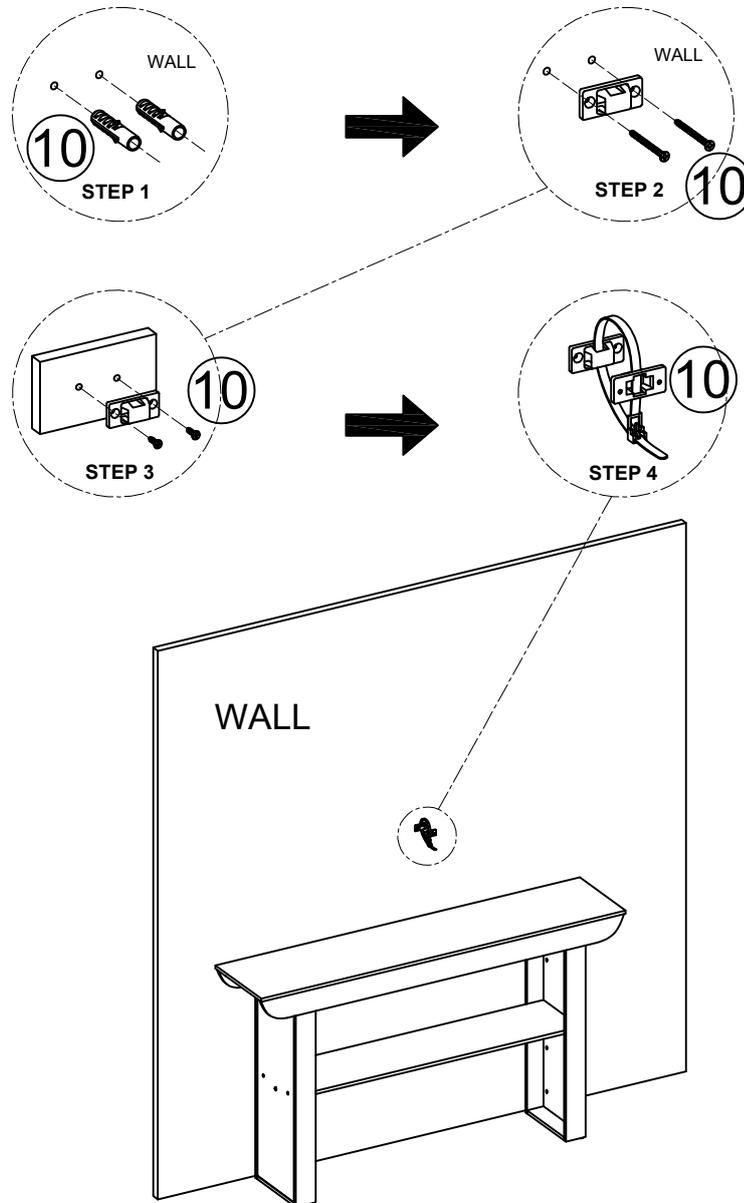

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt into the hole.

Installation Steps:

2. Secure one bracket into the expansion bolt using the screw.

3. Position the furniture in place. Attach another bracket (aligns with the bracket on the wall) to the back edge of unit top using the screw

4. Thread the male end of the steel cable through both brackets. Securely join the ends by turning the female connector clockwise.

Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.

For a concrete wall, ensure no steel b

(Anti-tipping accessories are not mandatory. You can consider whether to install them according to your home decoration)