
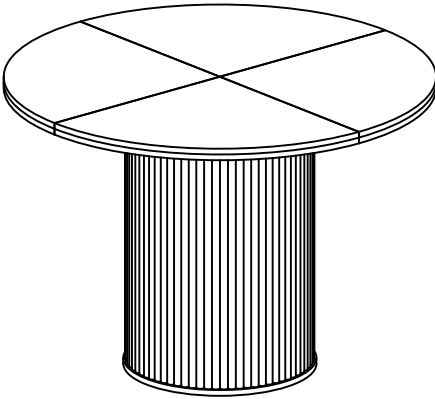

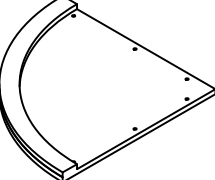
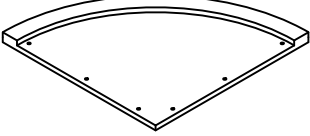
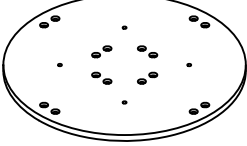



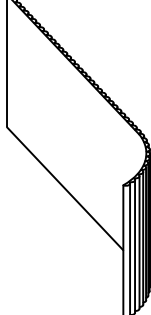


ASSEMBLY INSTRUCTION




A		B		C		D		E		F		G	
6*13	24pcs	8*30	4pcs	Ø25	6pcs	8*18	24pcs	M5	1pcs		4pcs	8*20	4pcs

H	
6*20	16pcs


①  2pcs	②  2pcs	③  1pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  4pcs	

ASSEMBLY INSTRUCTION


STEP1

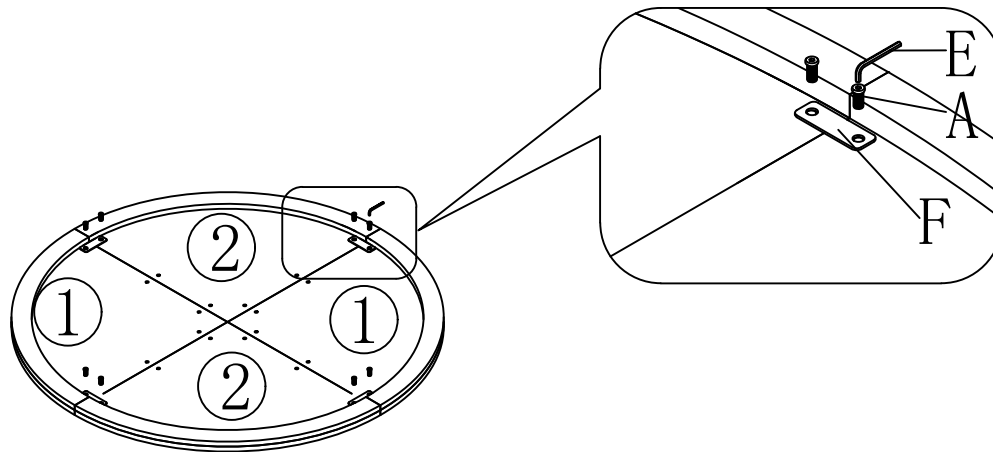

STEP2

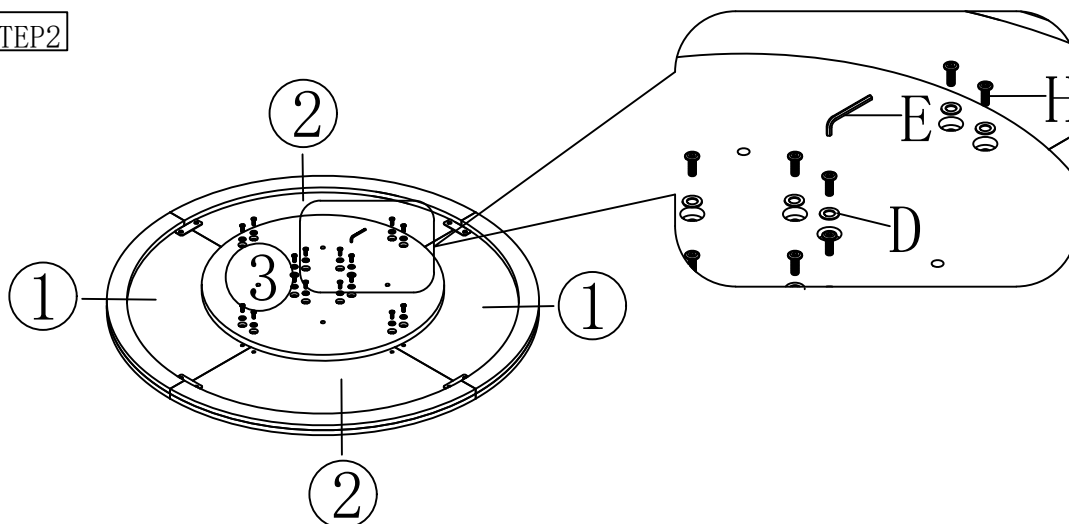


STEP3

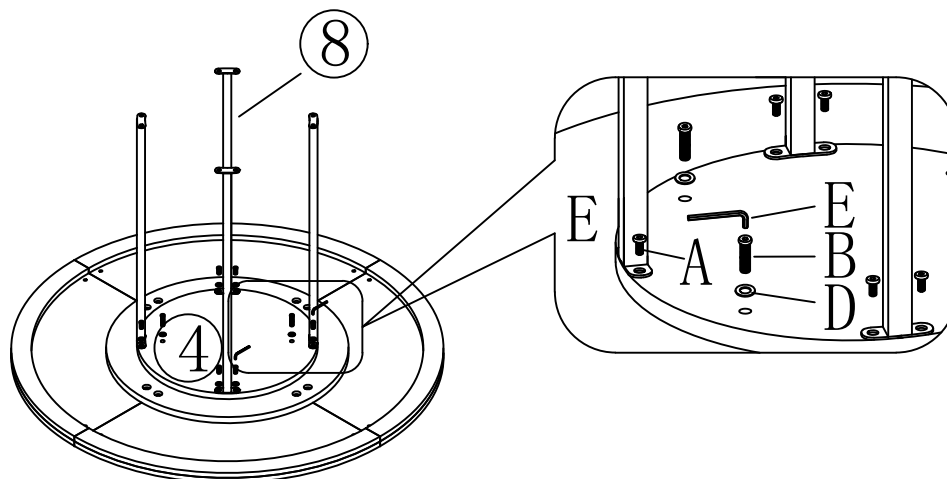


ASSEMBLY INSTRUCTION

STEP4

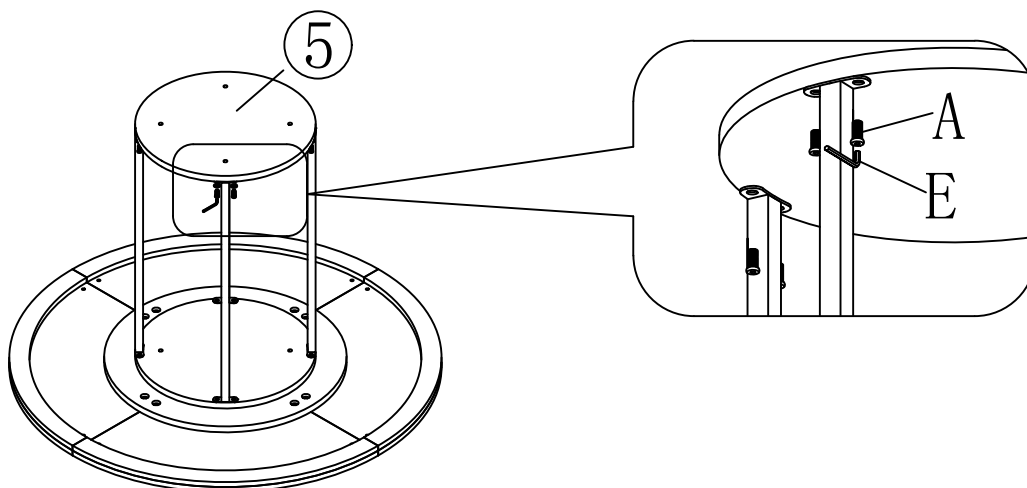


STEP5

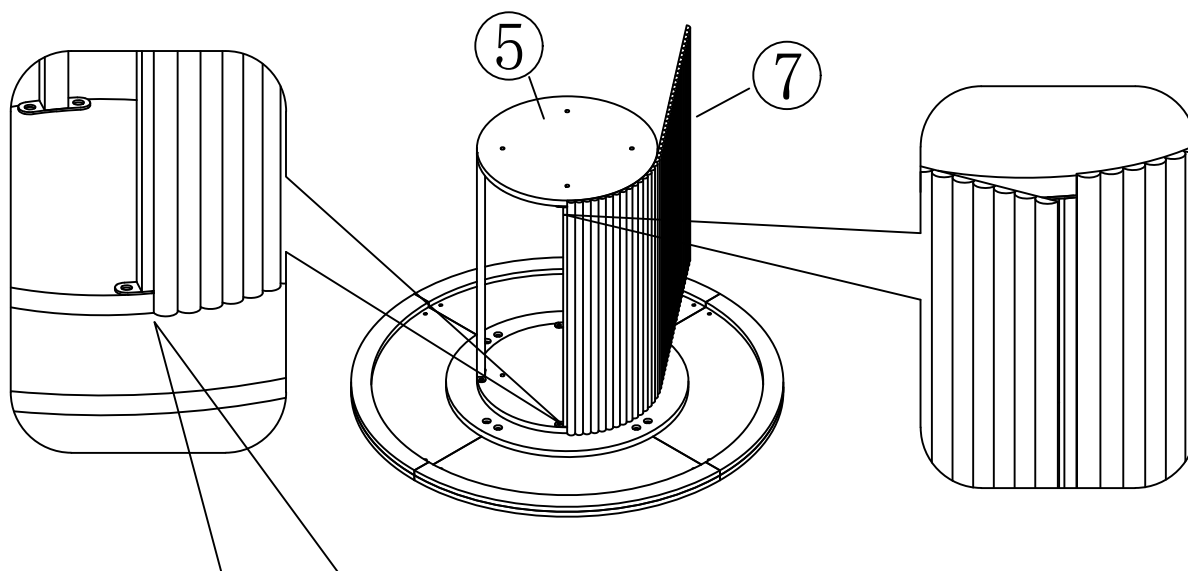

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

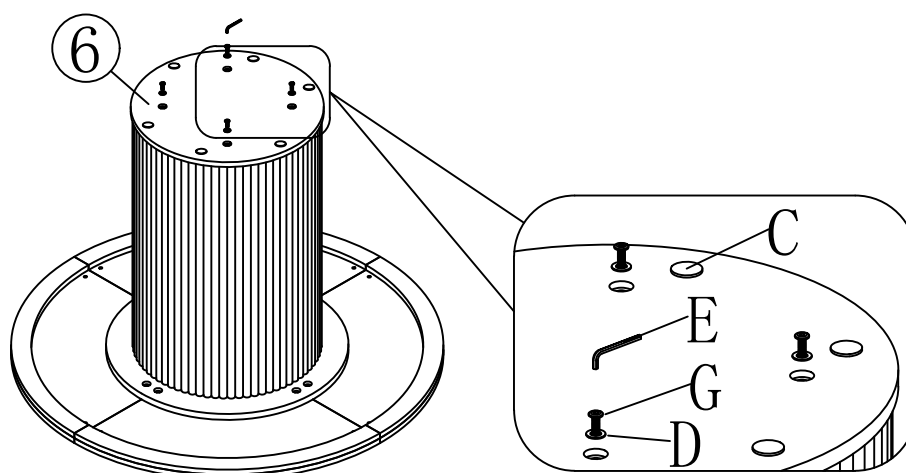

Location of hardware package



14