



12 x 16 FT



WQOT287TN

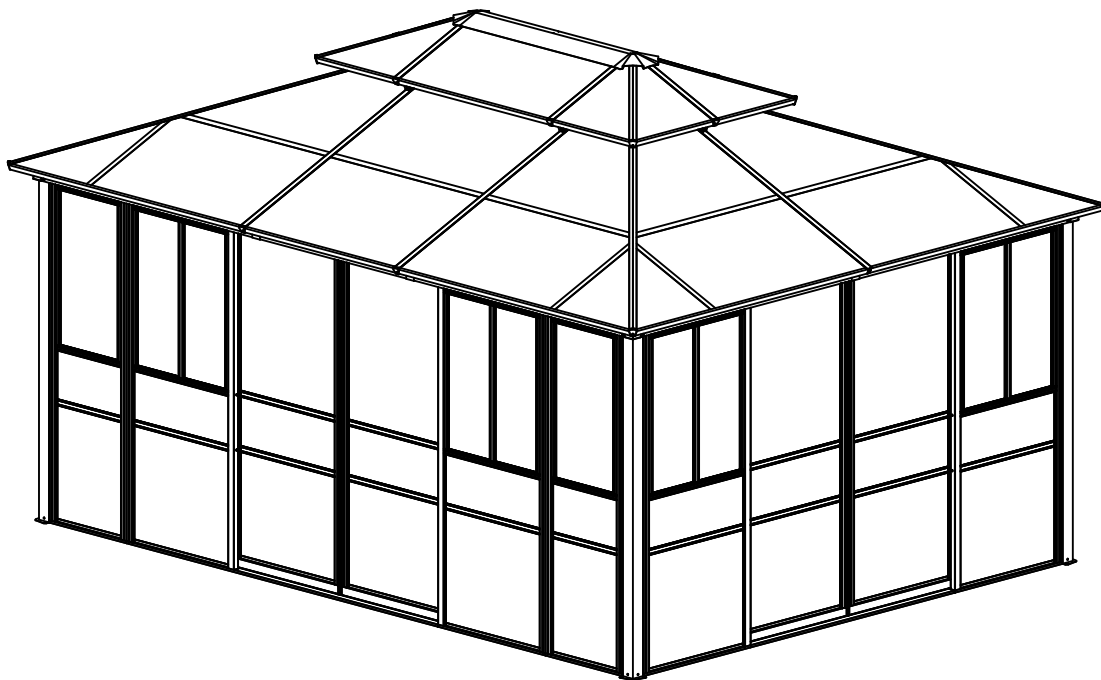


Note: The gazebo requires five people for assembly.
The following tools are required for assembly but are not included.



Pistol Drill



Tape Measure



Hammer




Screwdriver






Ladder



Scissor

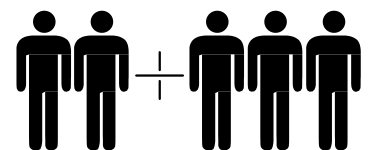

5 People

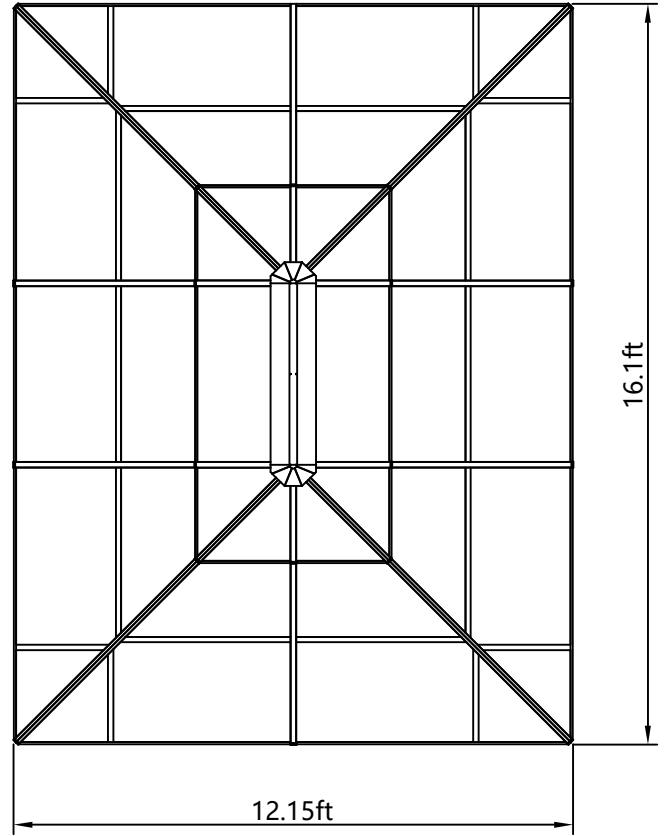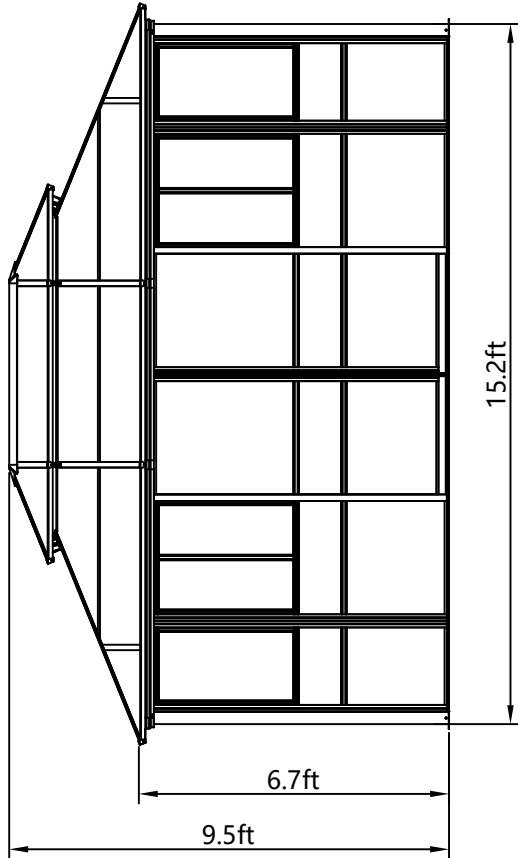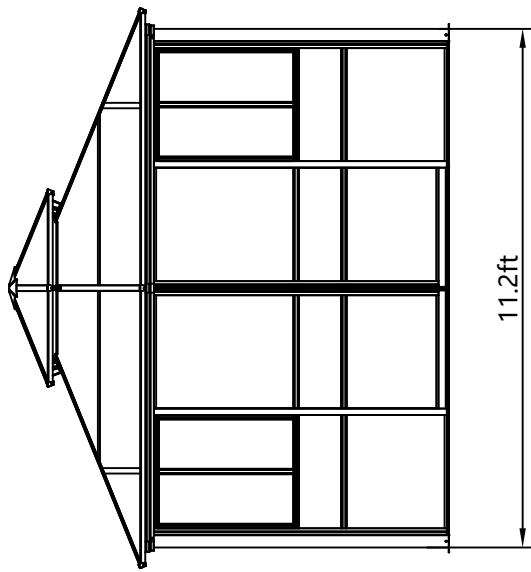



Box A		Box B		Box D	
Part #	Qty	Part #	Qty	Part #	Qty
B	4	C4	4	Z2	2
E2	4	C5	4	Z5	2
G9	2	F2	6	Z6	2
G5	4	F3	4	M5B	4
G6	4	M5G	32	M6B	4
G7	4	L1	1	M1D	4
G8	4	M1	1	M2D	4
H9	4			M4H	8
H5	4	Box C		M4M	8
H6	4			M4K	8
H7	4			M4P	8
H8	4			E3	4
I2	2	Part #	Qty		
I3	2	M1B	8	Box E	
I4	2	M2B	8		
I6	2	M1C	4		
M1A	4	M2C	4		
M2A	4	M1G	8	Part #	Qty
M1F	4	M8G	8	C6	2
M1Q	4	M7K	4	F3	2
		M7L	8	M4V	2
		M7P	4	M7V	2
				M4L	16
				M4N	4
				J1	4
				K	6
				R	10
				P	4
				Q	6
				T	4
				MQ2	28







(X)	6	Box F		Box G																																							
(N)	12	Part #	Qty	Part #	Qty																																						
(N1)	12	(M1E)	24	(MS15)	4																																						
(U1)	4	(1R-1)	24	(W6)	2																																						
(U2)	4	(1R-2)	16	(W4)	4																																						
(U3)	4	(1R-4)	8	(W5)	4																																						
(U4)	4	(MS2)	8	(V13)	4																																						
(MD1)	48	(MS3)	8	(V7)	4																																						
(MD2)	96	(MS4)	8	(V8)	4																																						
(MD3)	24	(MS20)	8	(V9)	4																																						
(MD4)	16	(MS13)	4	(V10)	4																																						
(MD5)	16	(M1S)	8																																								
(3-1)	16	(M4S)	4																																								
(4-1)	16	(V11)	4																																								
(5-1)	2	(V12)	4																																								
(MS1)	16																																										
(MS2)	8																																										
(MS14)	4																																										
(23)	1																																										
Instructions	1																																										
Bags for screws: 1-26	1																																										
<table><tr><td colspan="8">12x16</td></tr><tr><td>AB</td><td>AB</td><td>AB</td><td>AB</td><td>AD</td><td>AD</td><td>AD</td><td>AD</td></tr><tr><td>AE</td><td>AE</td><td>AE</td><td>AE</td><td>AG</td><td>AG</td><td>AG</td><td>AG</td></tr><tr><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td></tr><tr><td>BA</td><td>BA</td><td>BA</td><td>BA</td><td>DA</td><td>DA</td><td>DA</td><td>DA</td></tr></table>	12x16								AB	AB	AB	AB	AD	AD	AD	AD	AE	AE	AE	AE	AG	AG	AG	AG	AF	AF	AF	AF	AF	AF	AF	AF	BA	BA	BA	BA	DA	DA	DA	DA	1		
12x16																																											
AB	AB	AB	AB	AD	AD	AD	AD																																				
AE	AE	AE	AE	AG	AG	AG	AG																																				
AF	AF	AF	AF	AF	AF	AF	AF																																				
BA	BA	BA	BA	DA	DA	DA	DA																																				


Remove the plastic packing blocks from both ends of profiles M1E, M1G, M5G, M7G, M4L, M6L, M4H, and M6H.




Remove the plastic packing blocks from both ends of profiles M1E, M1G, M5G, M7G, M4L, M6L, M4H, and M6H.

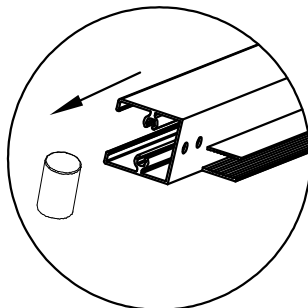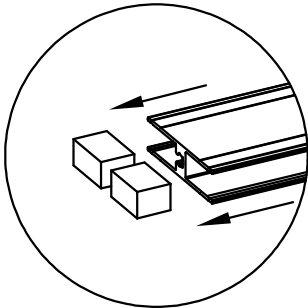


5	 (B) 4x	 (C4) 4x
	 (C5) 4x	 (C6) 2x
	 (E2) 4x	 (E3) 4x
	 (F2) 6x	 (F3) 6x
	 (G9) 2x	 (G5) 4x
	 (G6) 4x	 (G7) 4x
	 (G8) 4x	 (H9) 4x
	 (H5) 4x	 (H6) 4x




(H7) 4x



(H8) 4x



(I2) 2x




(I3) 2x




(I4) 2x




(I6) 2x




(Z2) 2x




(Z5) 2x



(Z6) 2x



(M1A) 4x



(M2A) 4x




(M1B) 8x



(M2B) 8x



(M5B) 4x











































(M6B) 4x














(M1C) 4x

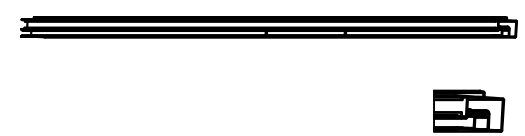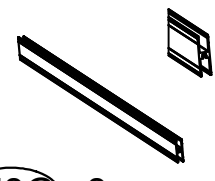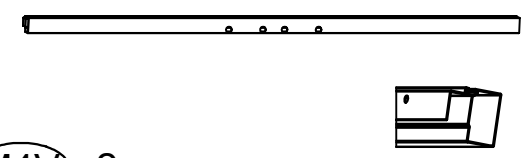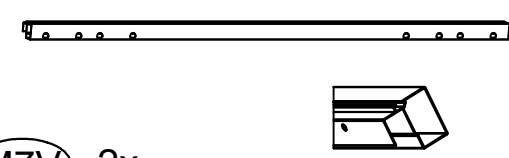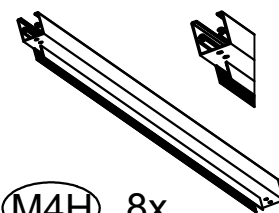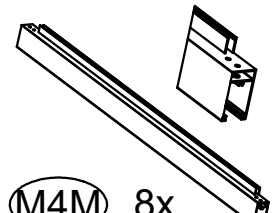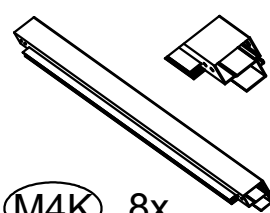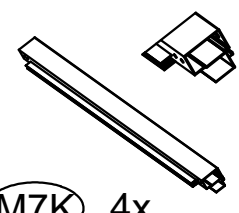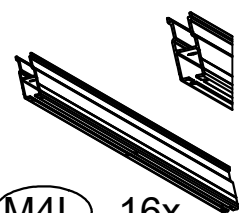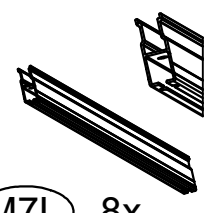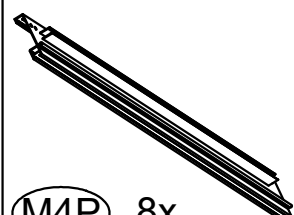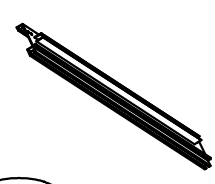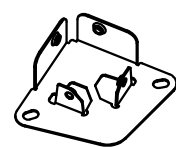




 (M2C) 4x	 (M1D) 4x		
 (M2D) 4x	 (M1F) 4x		
 (M1E) 24x	 (M1G) 8x	 (M5G) 32x	 (M8G) 8x
 (M4V) 2x	 (M7V) 2x		
 (M4H) 8x	 (M4M) 8x	 (M4K) 8x	 (M7K) 4x
 (M4L) 16x	 (M7L) 8x	 (M4N) 4x	
 (M1Q) 4x		 (M4P) 8x	 (M7P) 4x
 (J1) 4x	 (K) 6x	 (L1) 1x	 (M1) 1x

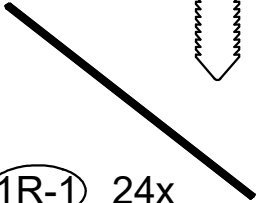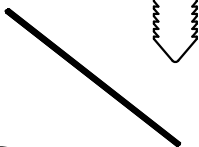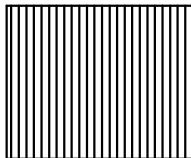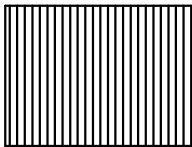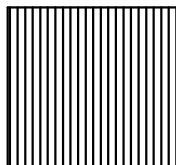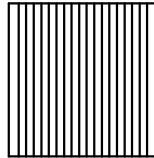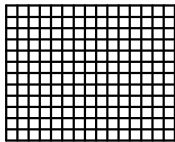			
(R) 10x	(P) 4x	(Q) 6x	(T) 4x
			
(MQ2) 28x	(X) 6x	(N) 12x	(N1) 12x
			
(U1) 4x	(U2) 4x	(U3) 4x	(U4) 4x
			
(MD1) 48x	(MD2) 96x	(MD3) 24x	(MD4) 16x
			
(MD5) 16x	6.2*11*15 (3-1) 16x	(4-1) 16x	(5-1) 2x
			
(1R-1) 24x	(1R-2) 16x	(1R-4) 8x	(MS1) 16x
			
(MS2) 16x	(MS3) 8x	(MS4) 8x	(MS20) 8x
			
(MS13) 4x	(MS14) 4x	(MS15) 4x	(M1S) 8x

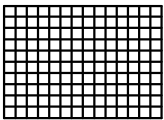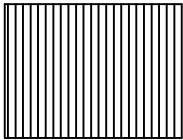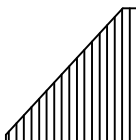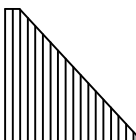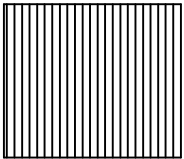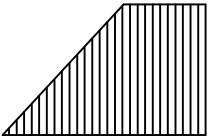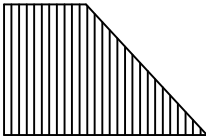 (M4S) 4x	 (W6) 2x	 (W4) 4x	 (W5) 4x
 (V13) 4x	 (V7) 4x	 (V8) 4x	 (V9) 4x
 (V10) 4x	 (V11) 4x	 (V12) 4x	

Bags of Screws

 M6x15 (1) 243x	 (2) 16x	 ST4.8x12 (3) 44x	 M5x12 (4) 52x
 (5) 2x	 (6) 1x	 M6x10 (7) 10x	 M6 (8) 26x
 M4x20 (9) 192x	 M4x35 (10) 80x	 M4x50 (11) 80x	 (12) 36x
 M5x6 (13) 144x	 M5 (14) 56x	 M5x12 (15) 56x	 (20) 8x




M5x15

21 16x




M4x12

22 4x

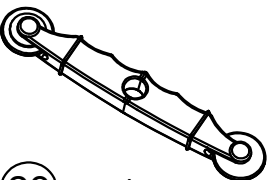

23 1x

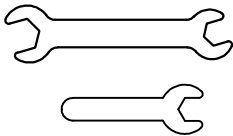

24 1x





4mm

25 2x



2.5mm

26 2x



12x16							
AB	AB	AB	AB	AD	AD	AD	AD
AE	AE	AE	AE	AG	AG	AG	AG
AF	AF	AF	AF	AF	AF	AF	AF
BA	BA	BA	BA	DA	DA	DA	DA

letter sticker 1x


<1>

x4

(B) 4x




(J1) 4x

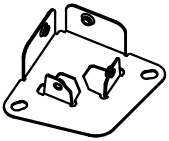


M6x15



(1) 8x

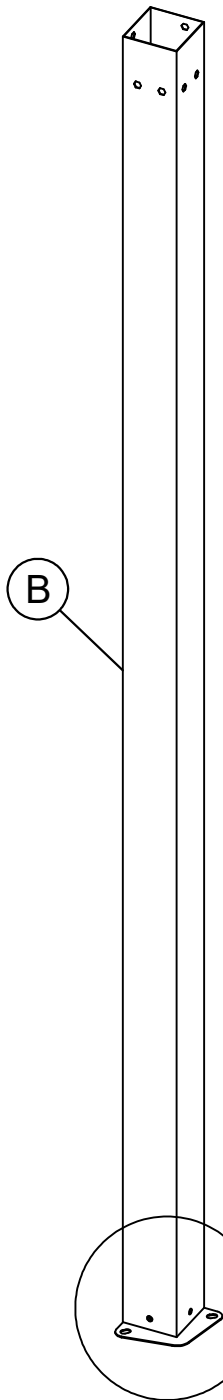


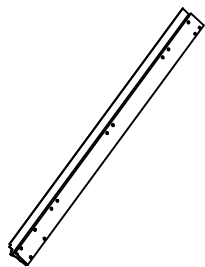


<2>

x2



C4 4x

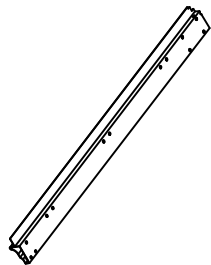

C5 4x

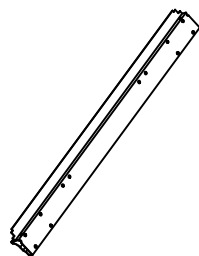

C6 2x

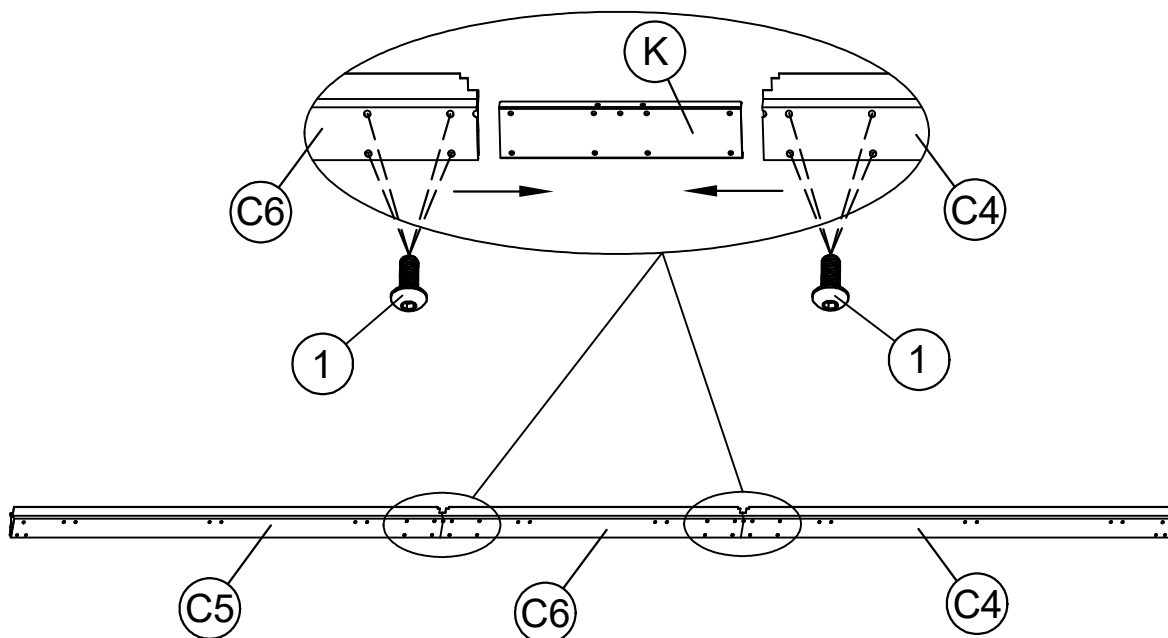


K 6x

x2



M6x15

1 48x

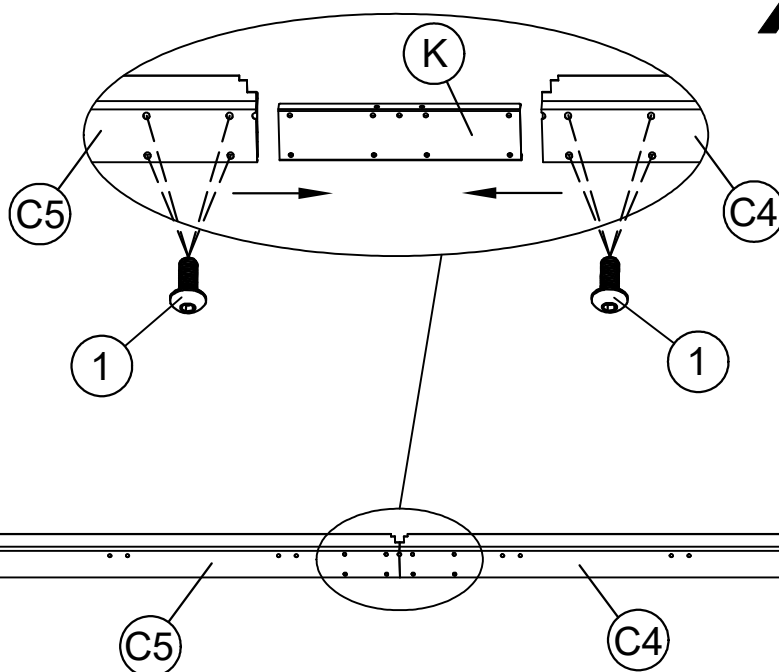




② 16x




M6x15


① 8x

<3>

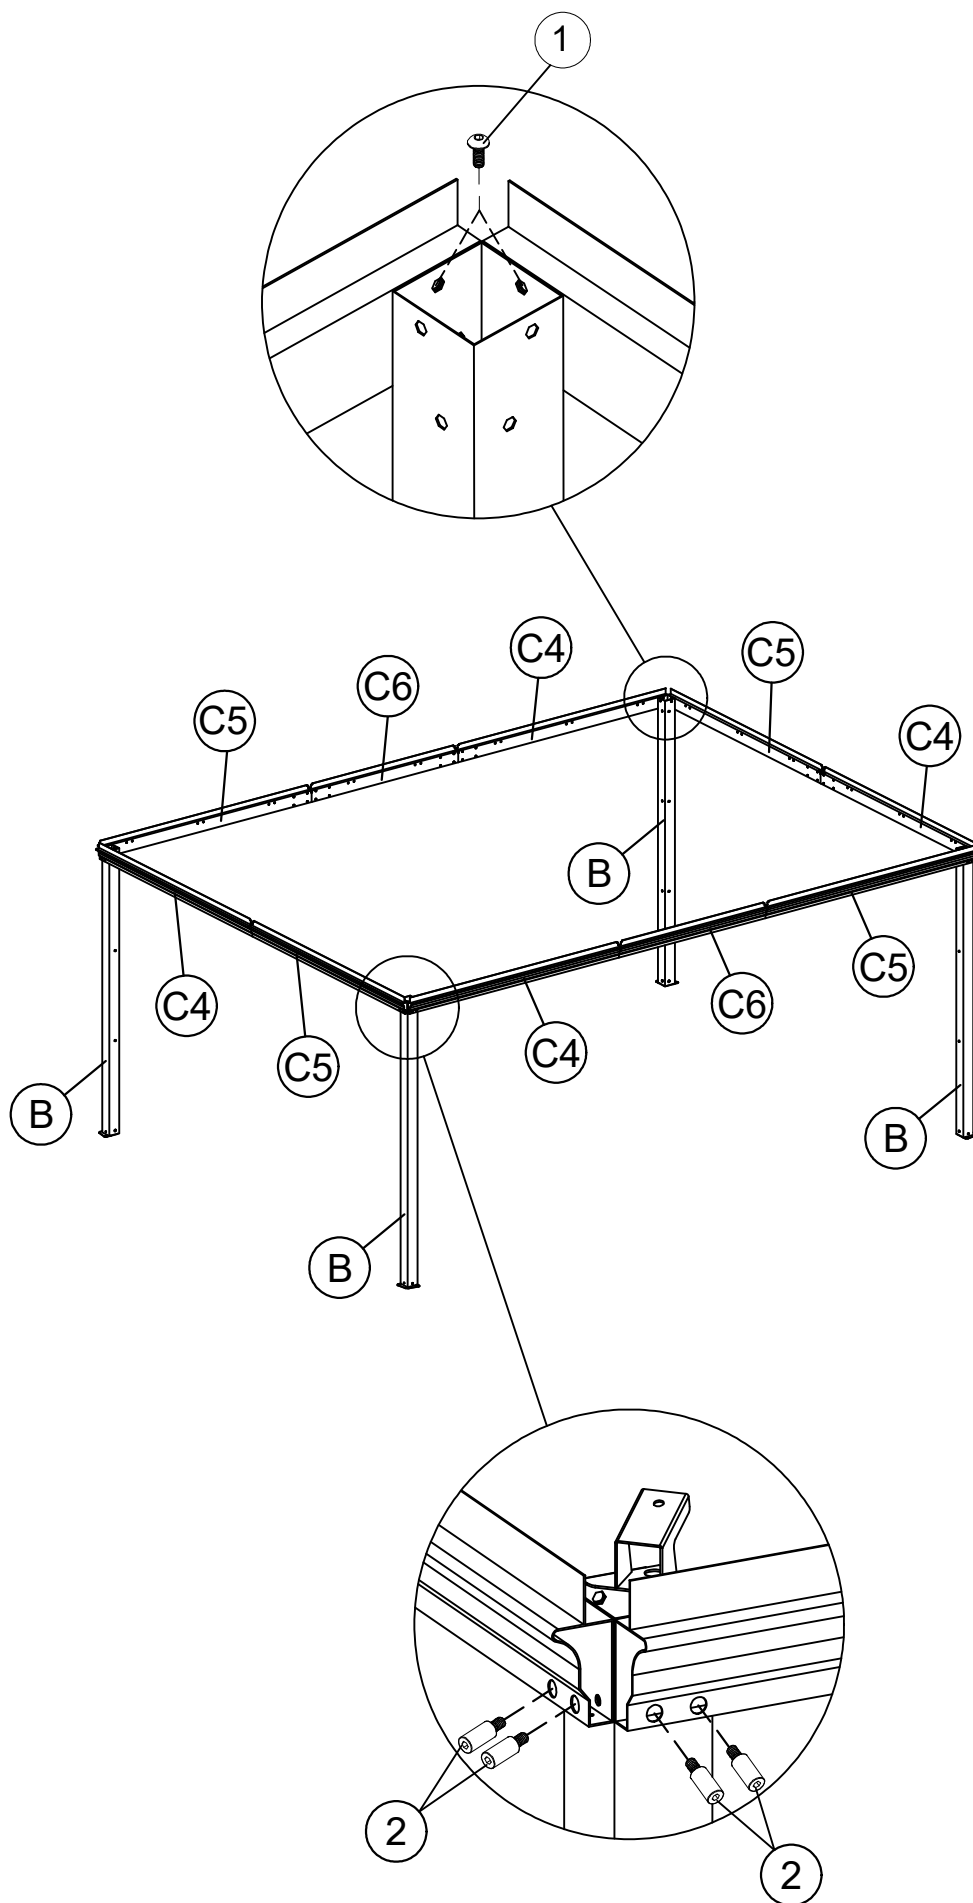




(T) 4x



(Q) 6x

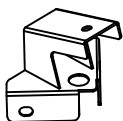

(P) 4x







M6x15
(1) 14x









ST4.8x12
(3) 28x



<4>

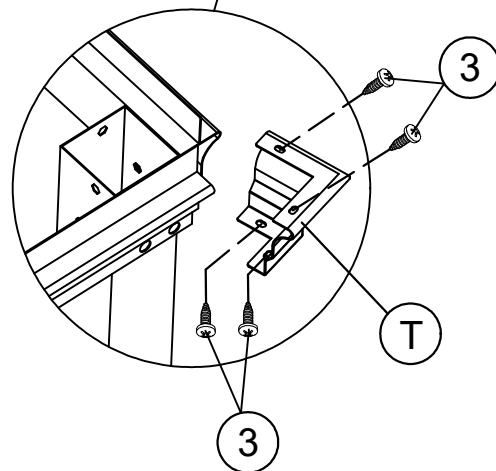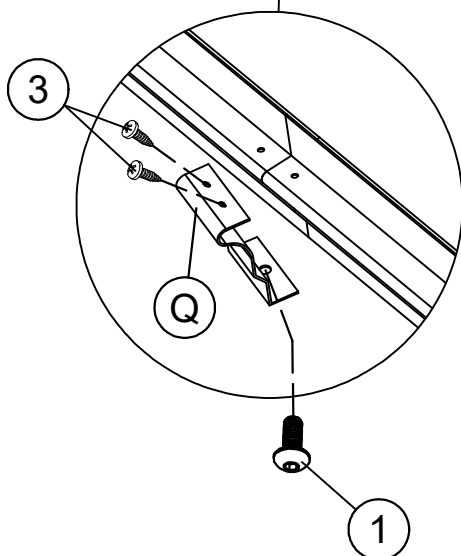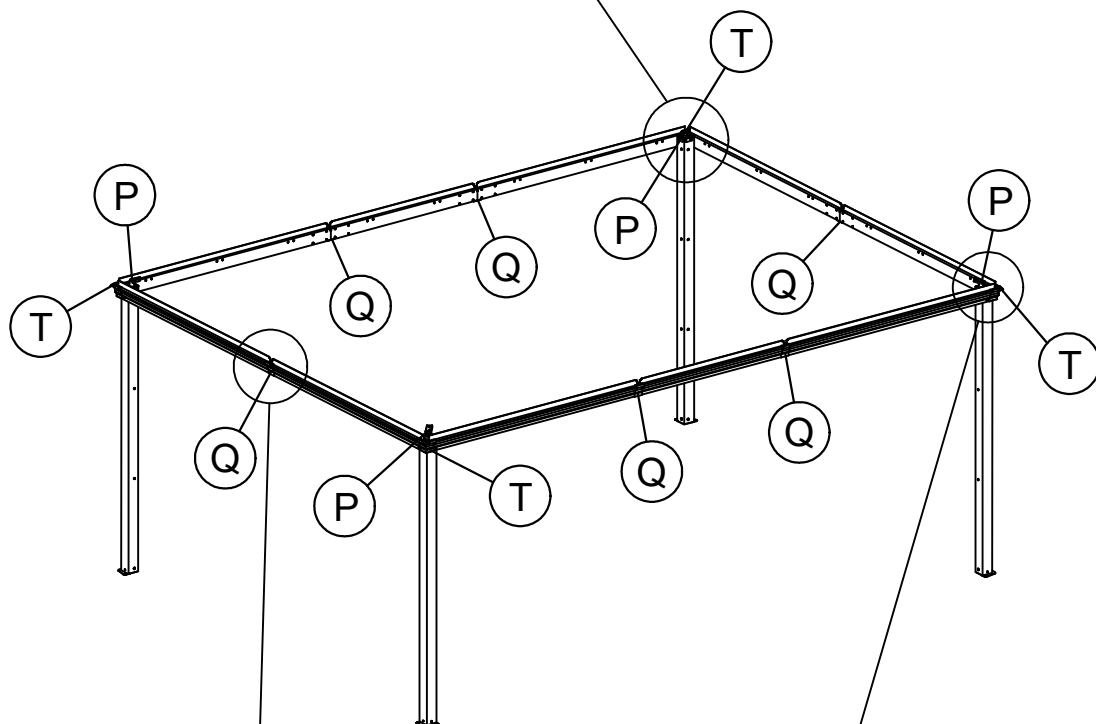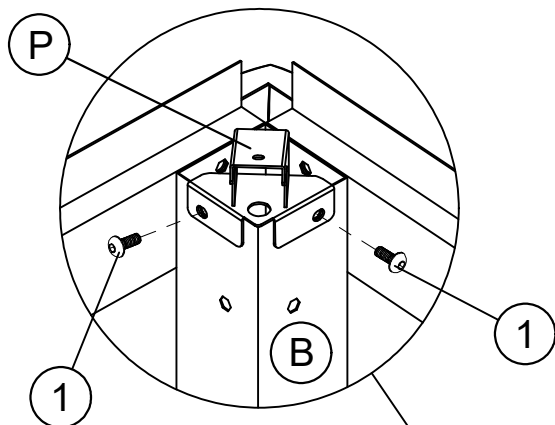


<5>

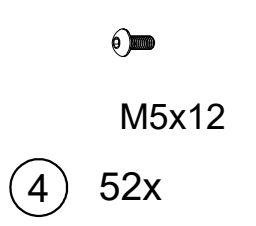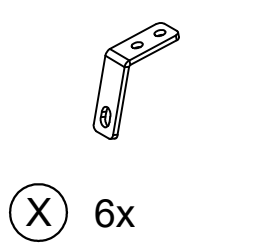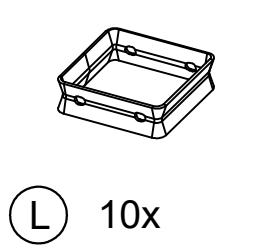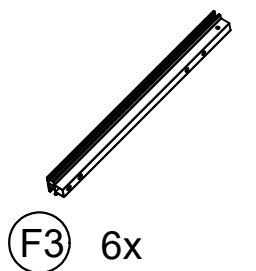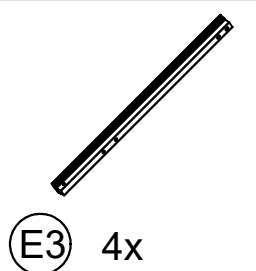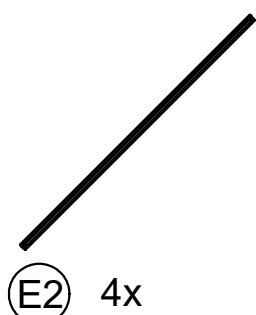


15

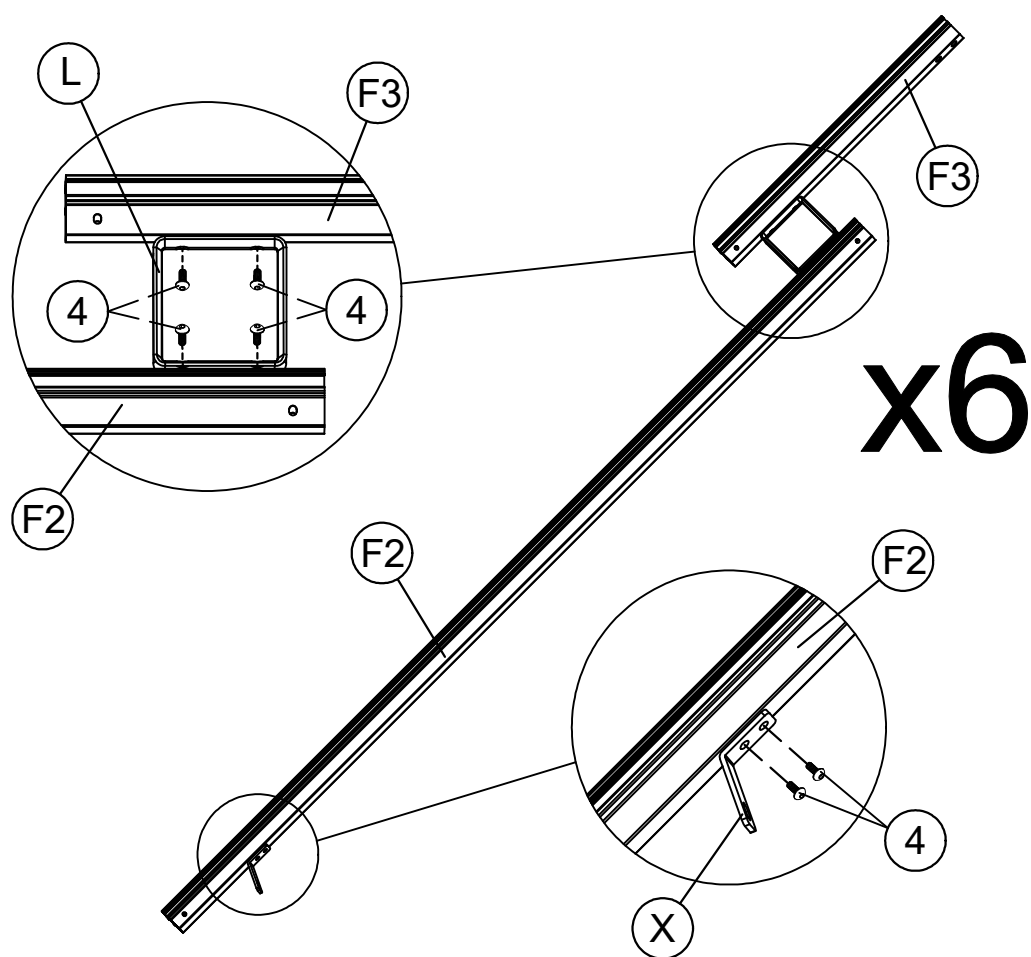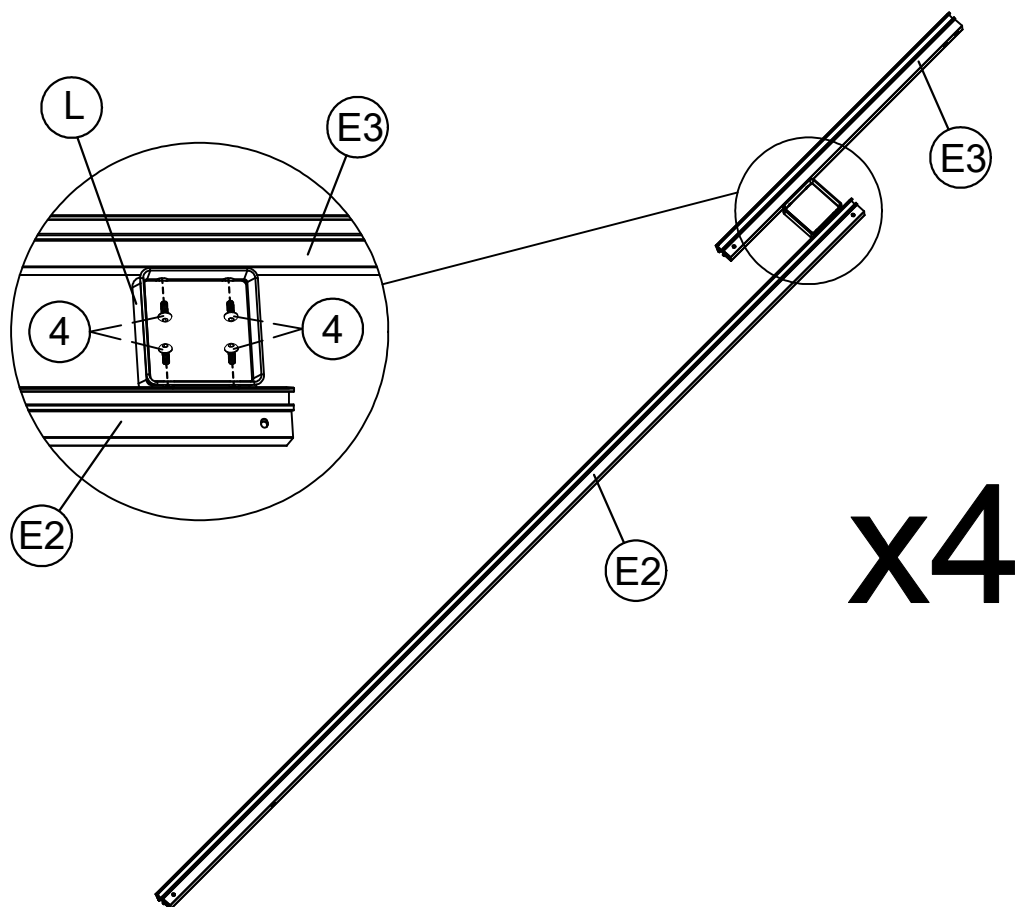

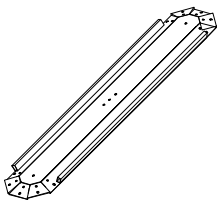

(L1) 1x






(6) 1x



M6x15

(1) 8x

<6>

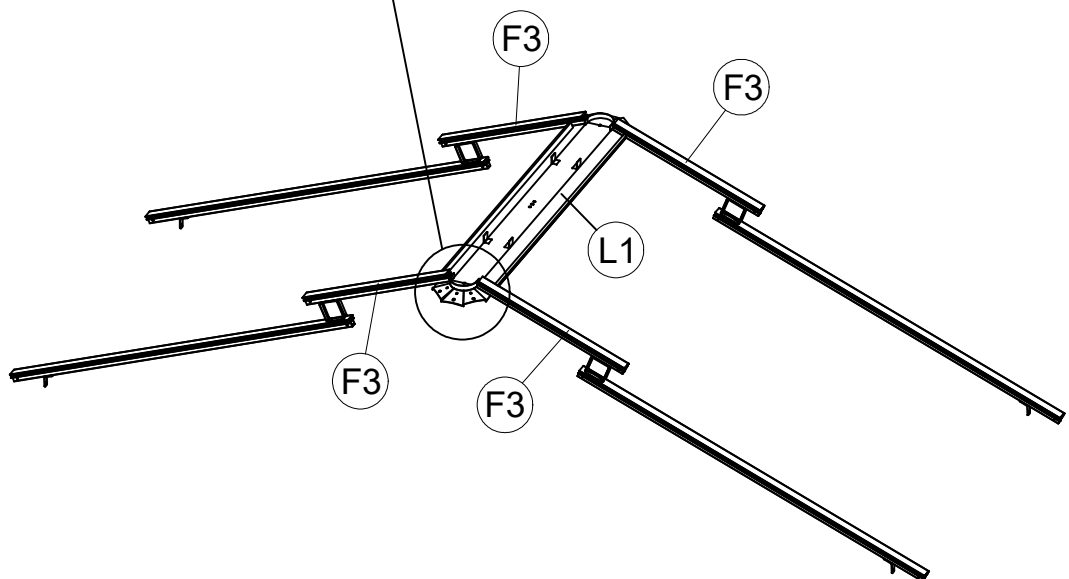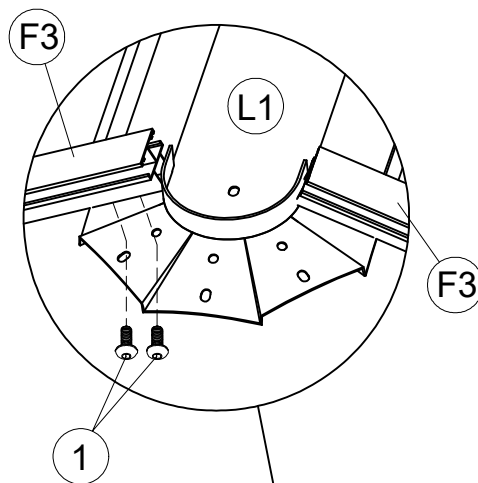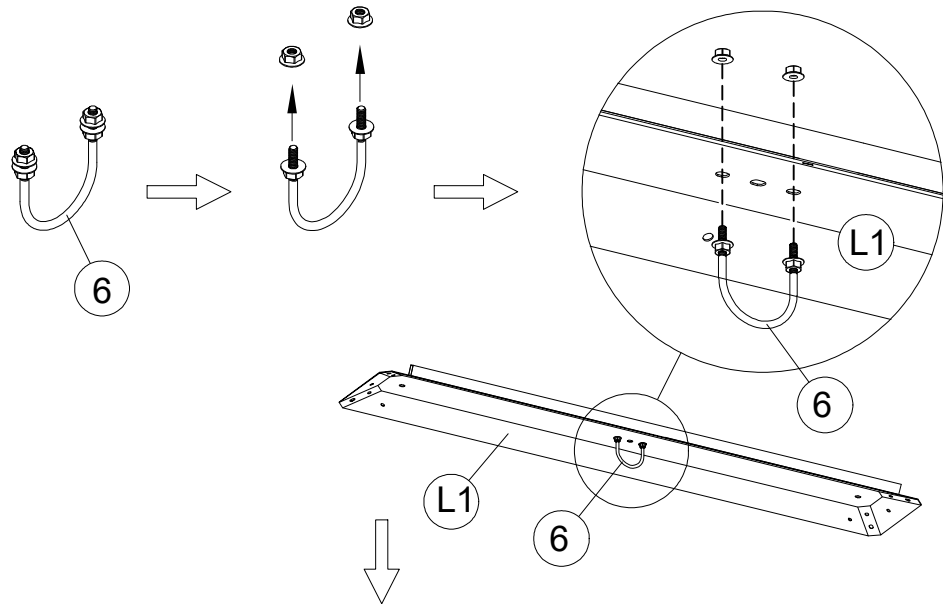




M6x15

<7>

① 4x

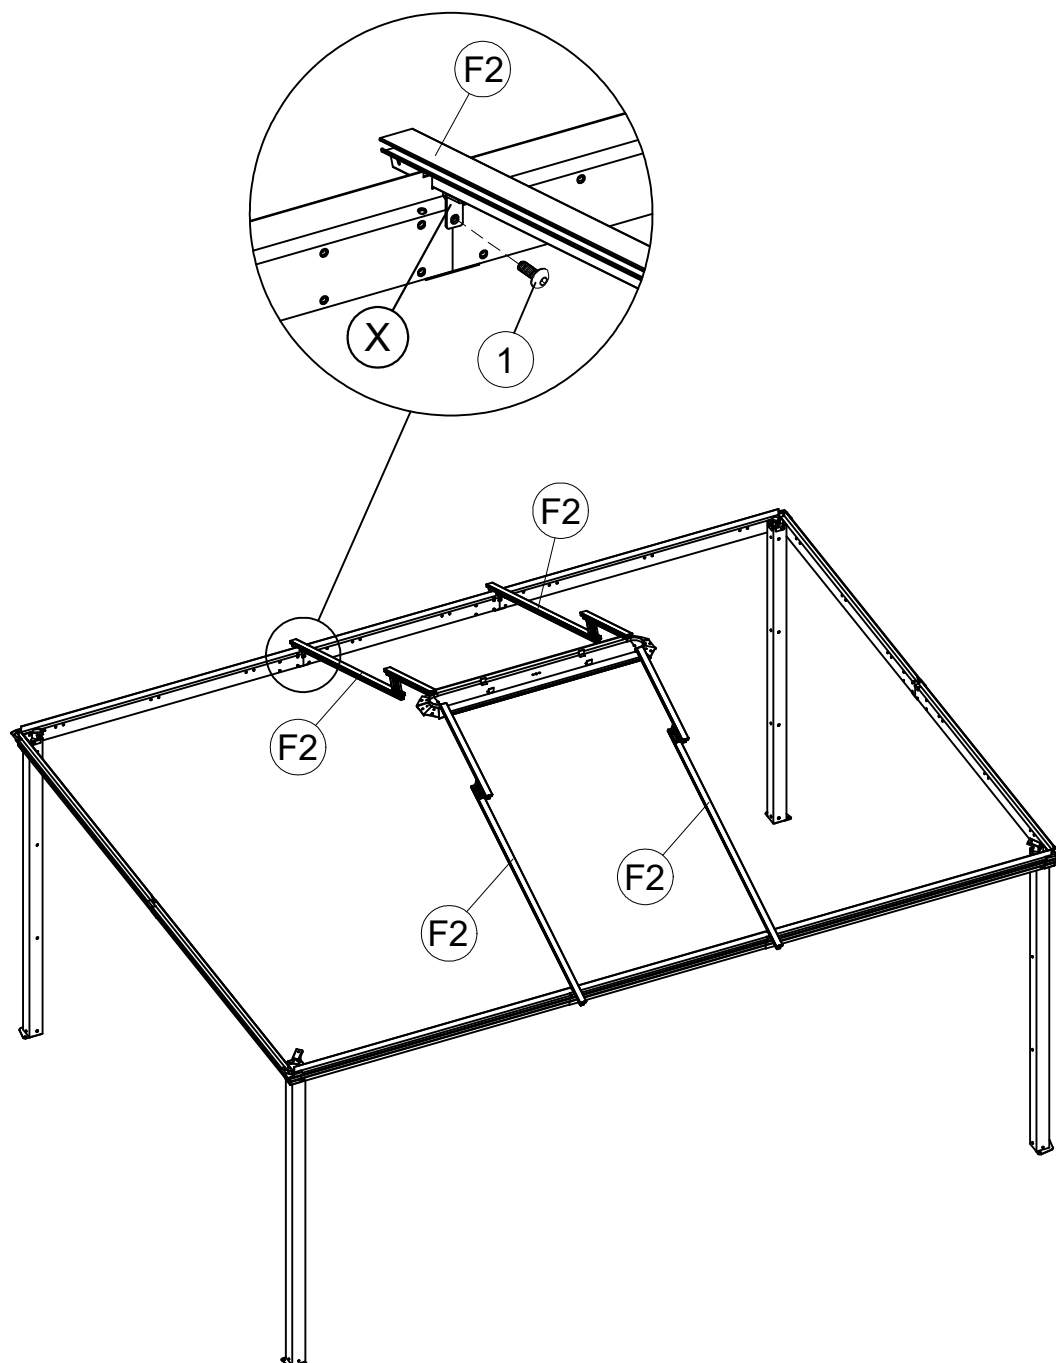





M6x15

<8>

1 18x

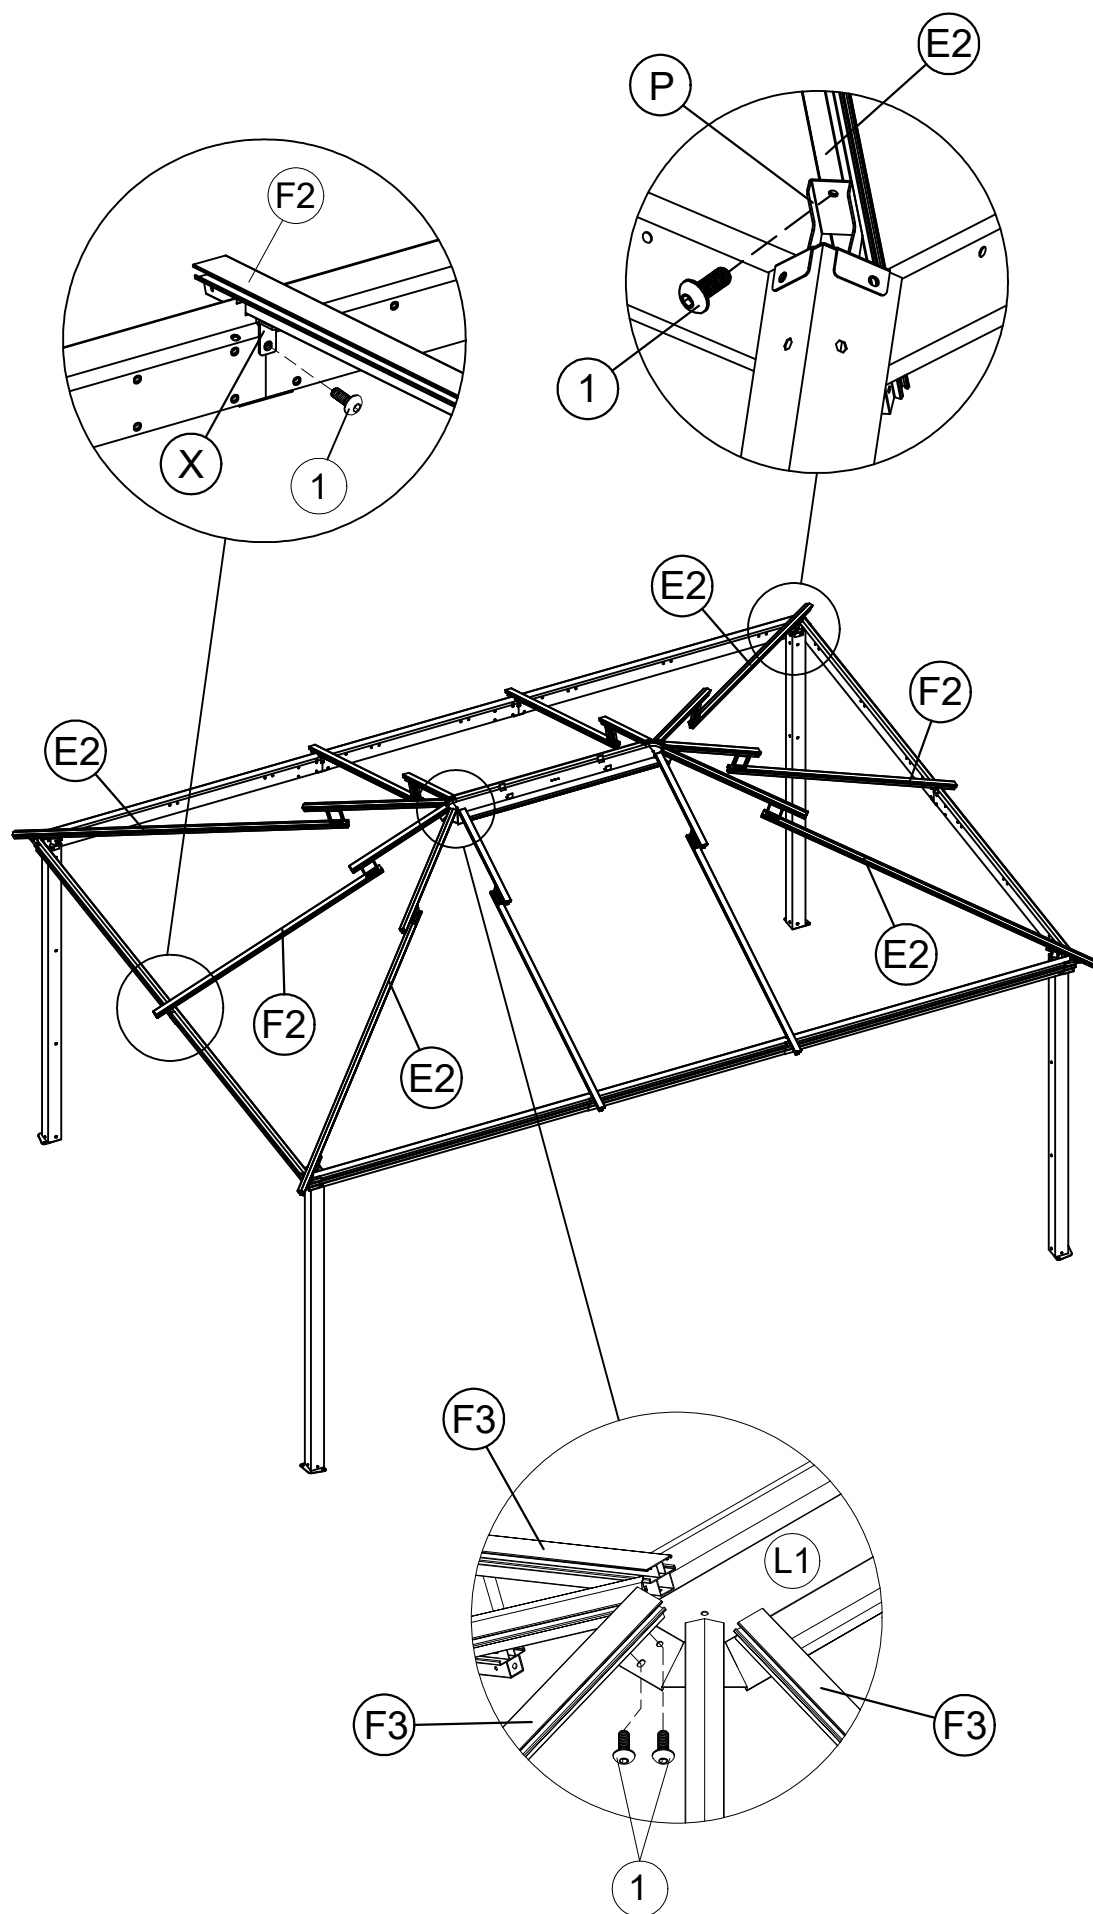

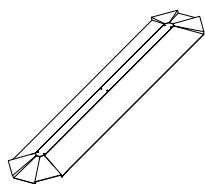

M1 1x





5 2x




M6x15


1 1x

<9>

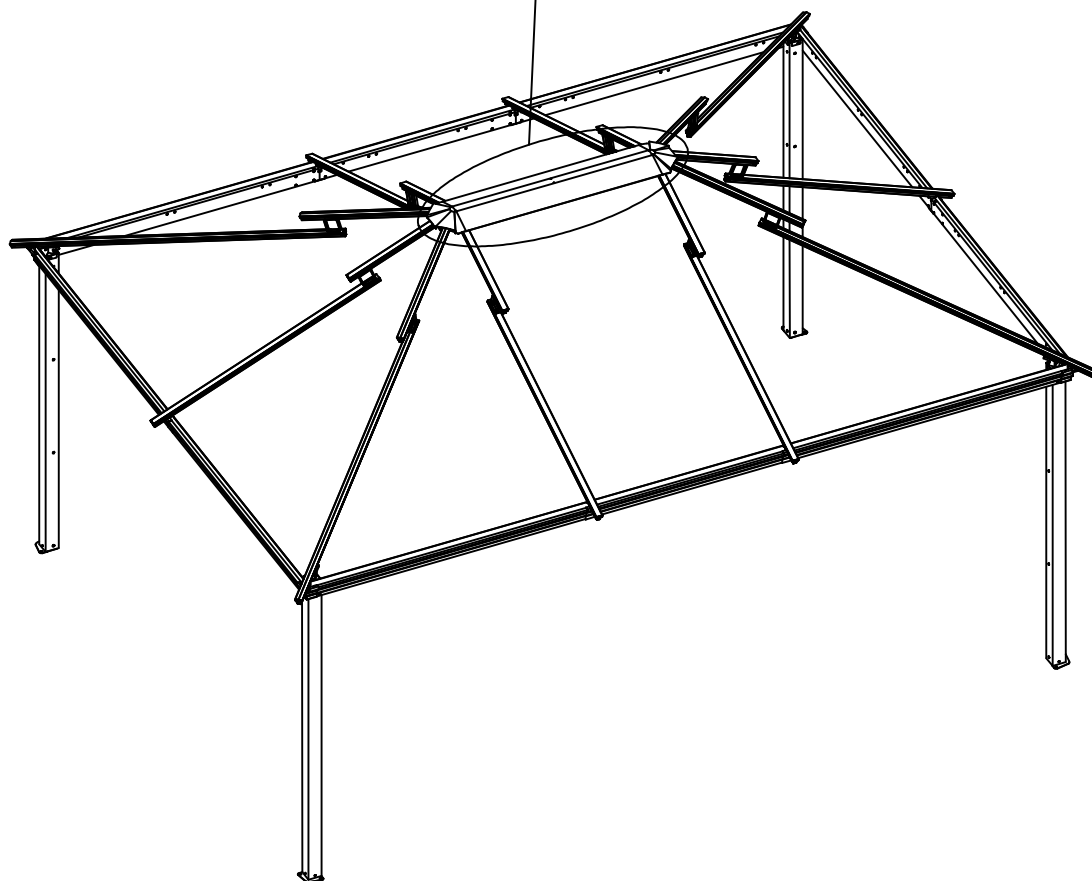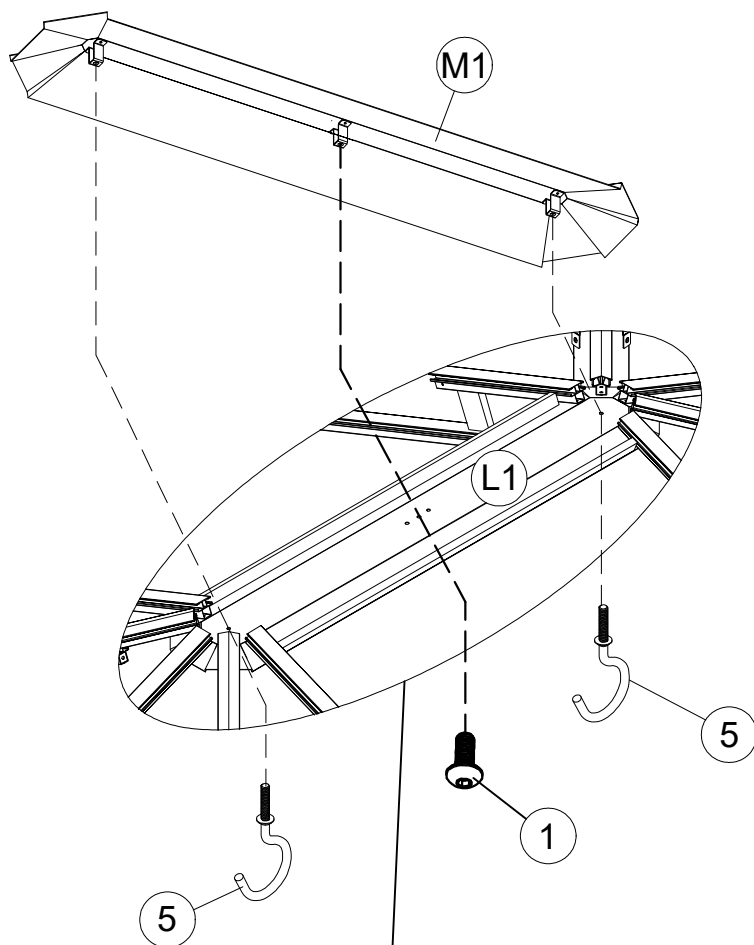


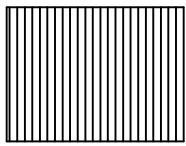

W6 2x



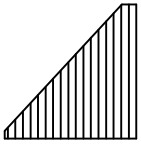


W4 4x

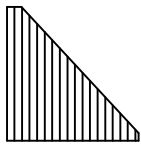

W5 4x


<10>

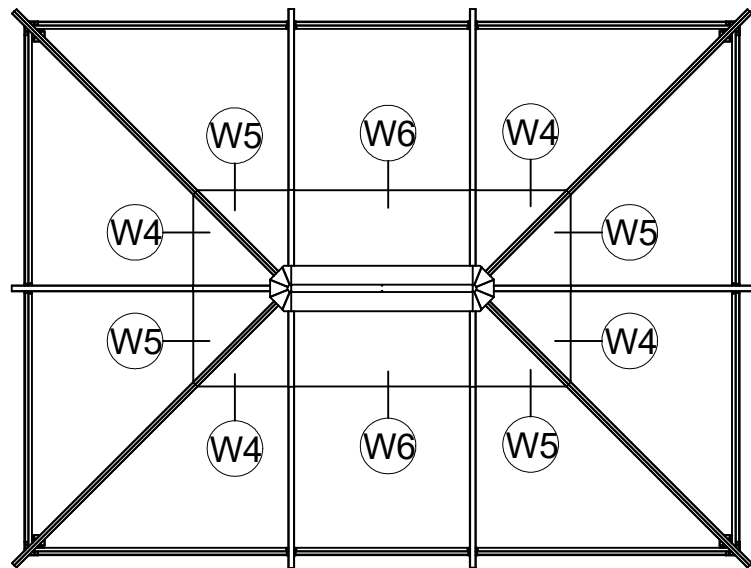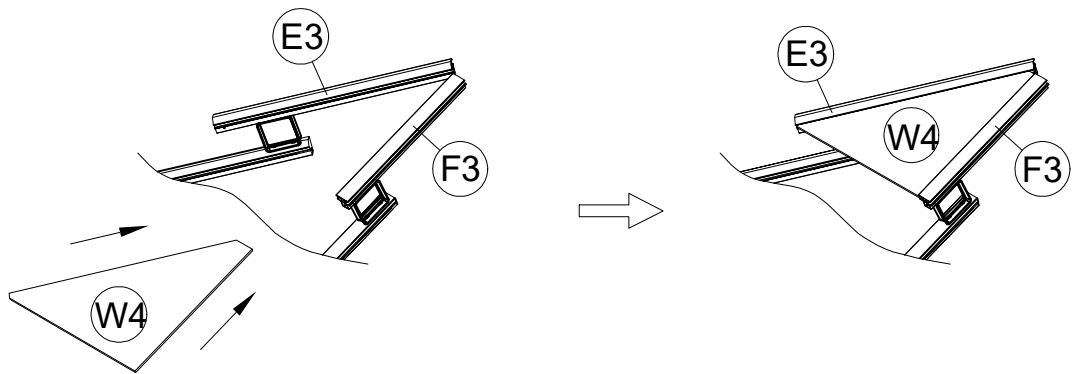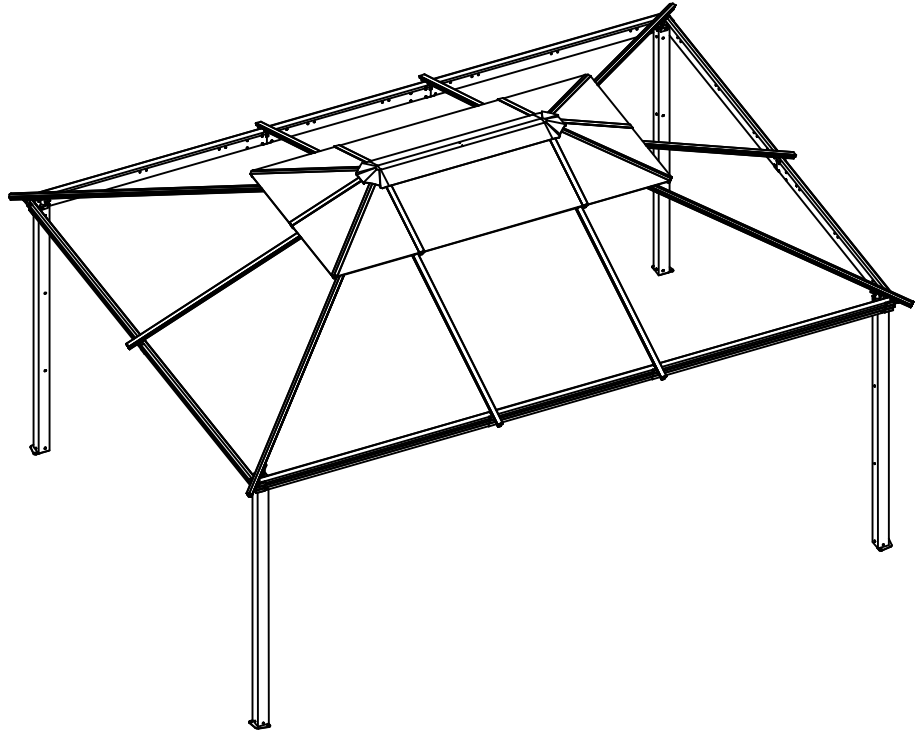


<11>




(H9) 2x

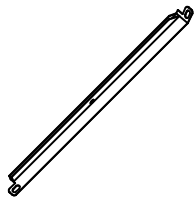


(H7) 4x

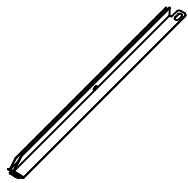

(H8) 4x



(N) 4x







(N1) 6x



M6x15

(1) 10x

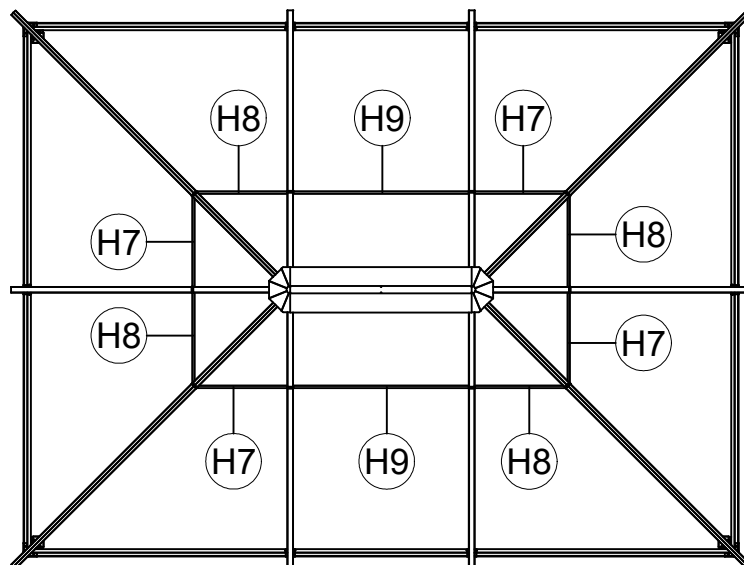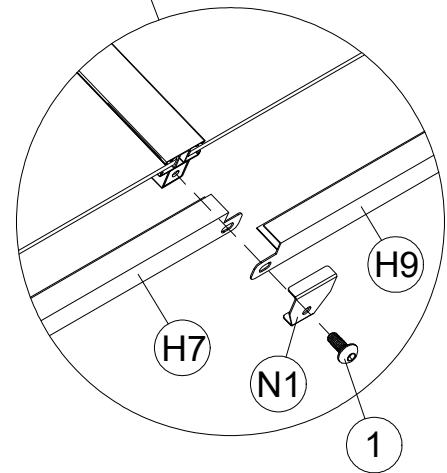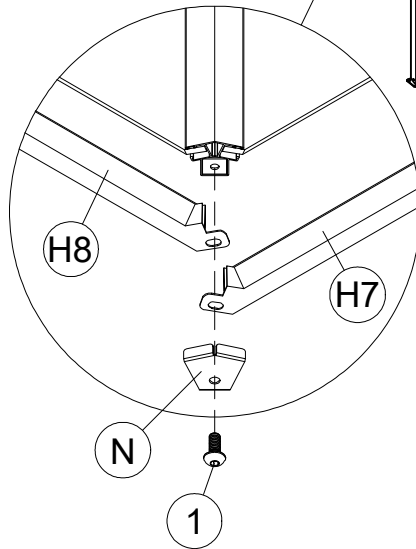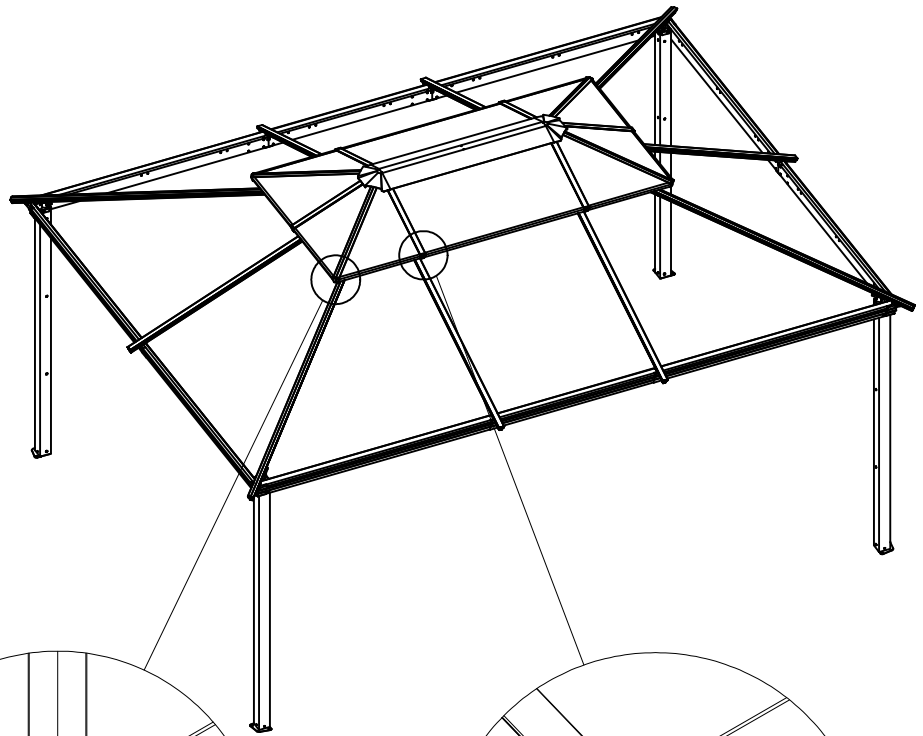

<12>

G9 2x




G5 4x

G6 4x



V13 2x

V7 4x












V8 4x

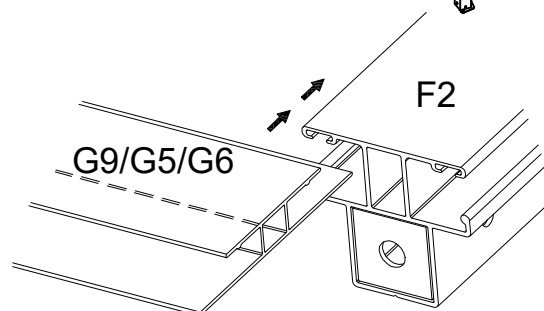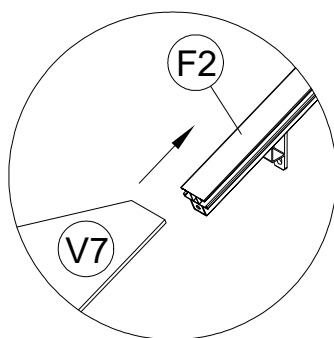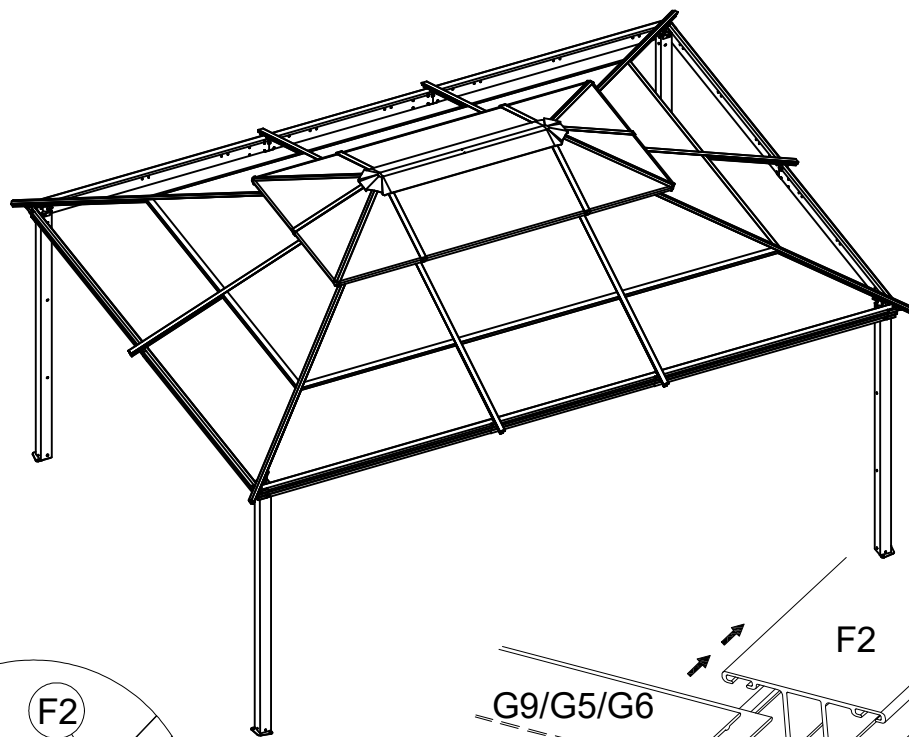

Note: When G5, G6, or G9 are inserted into F2, the wide side must face downward and the narrow side upward; otherwise, it may cause water leakage.

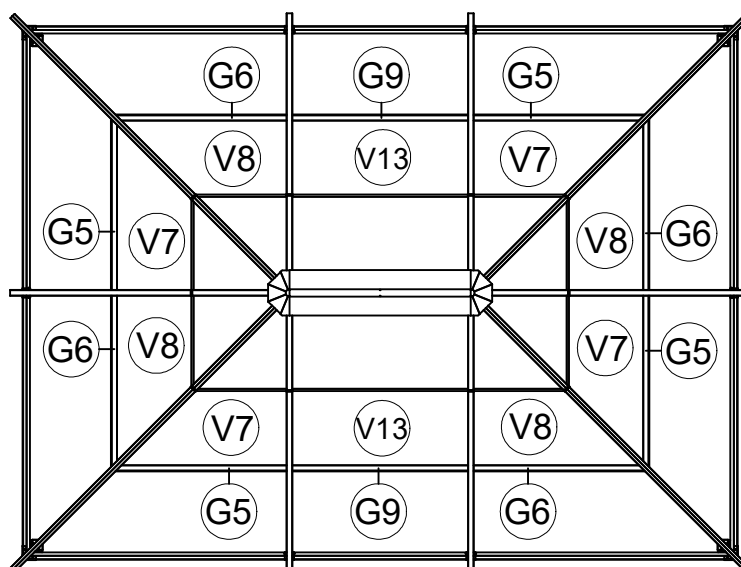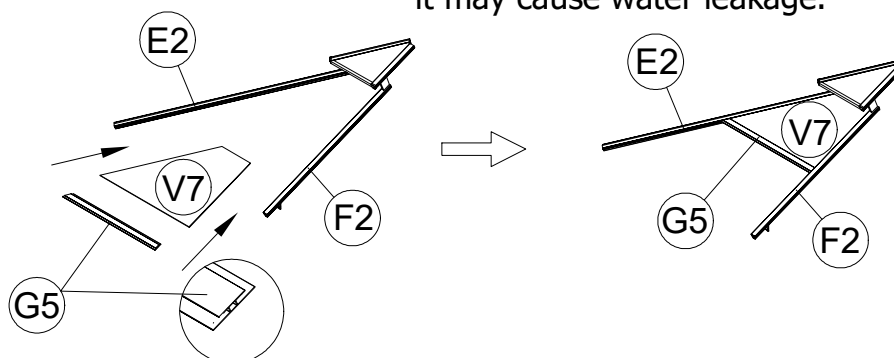

<13>

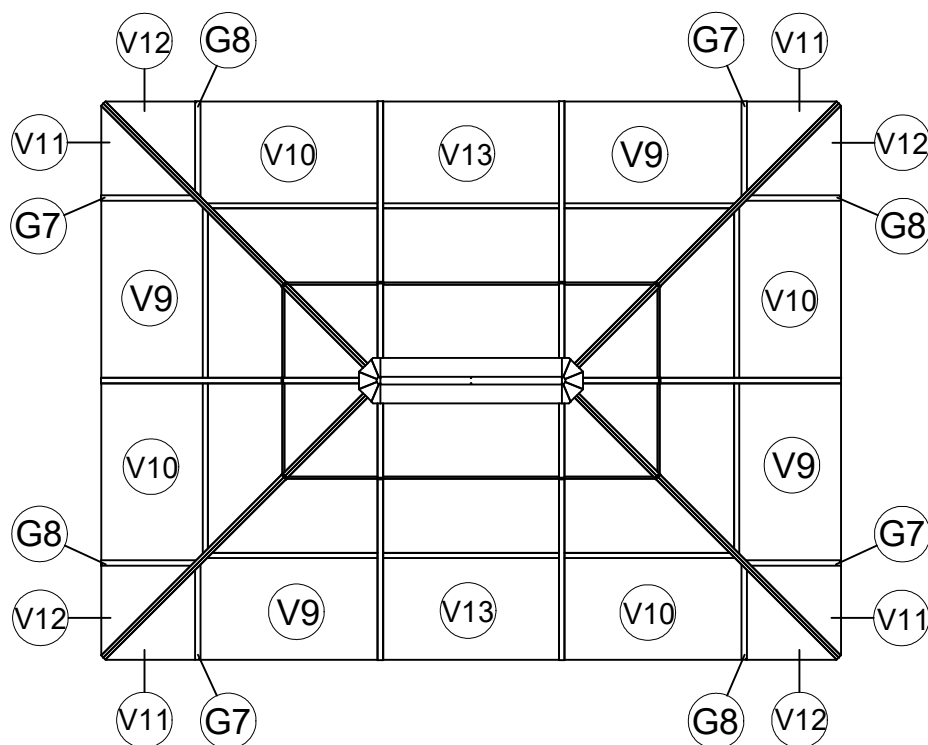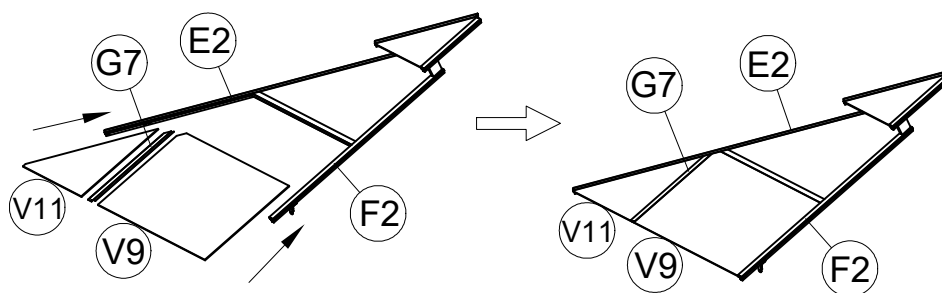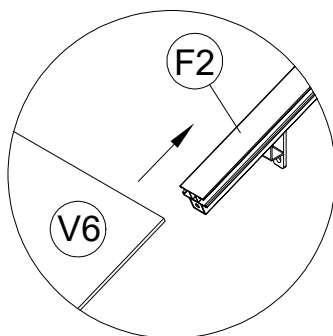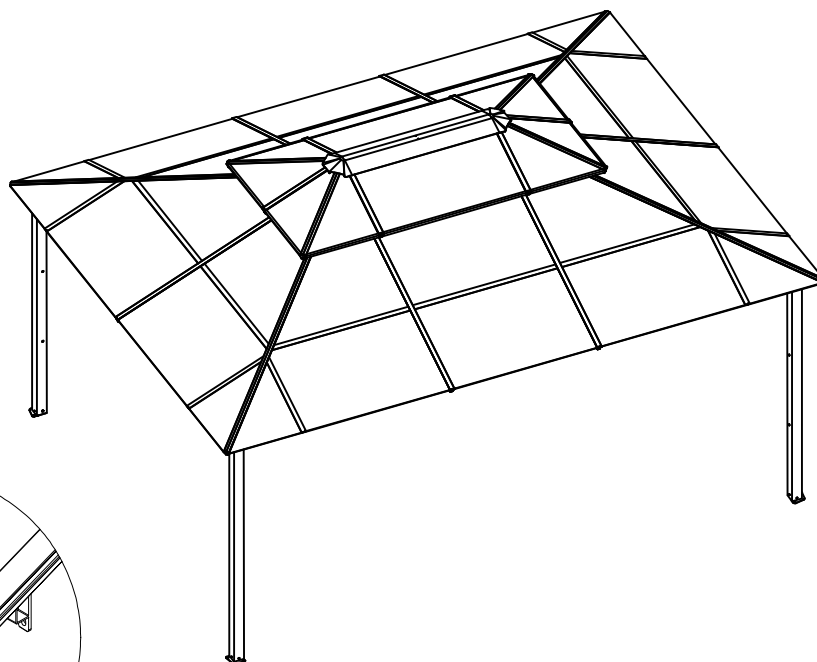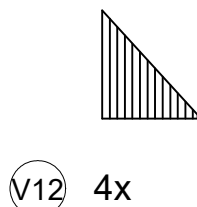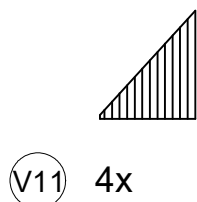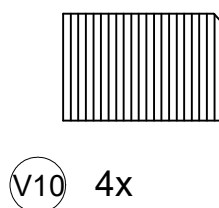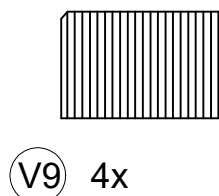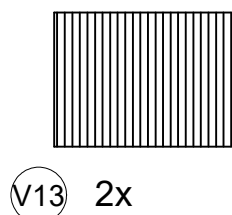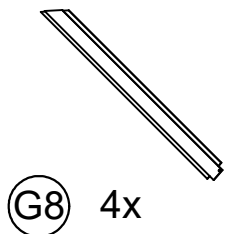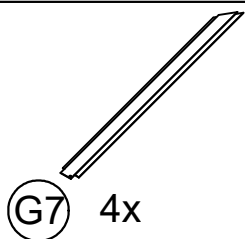


<14>




(H9) 2x



(H5) 4x

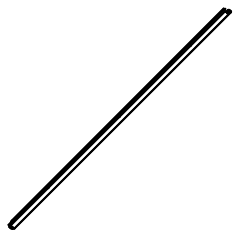

(H6) 4x



(N) 4x







(N1) 6x



M6x15

(1) 10x

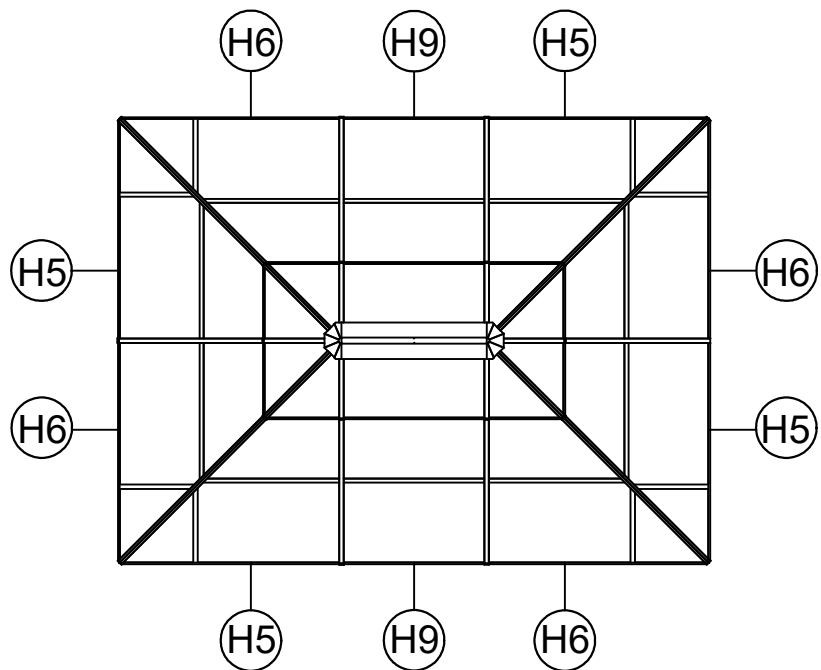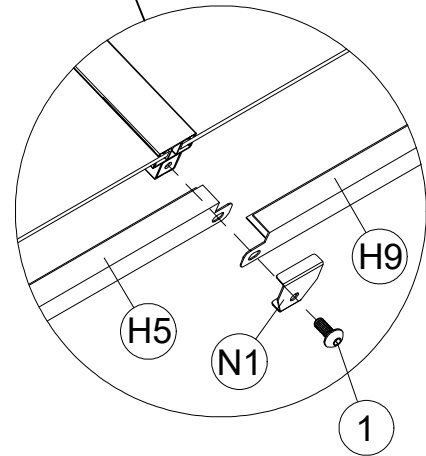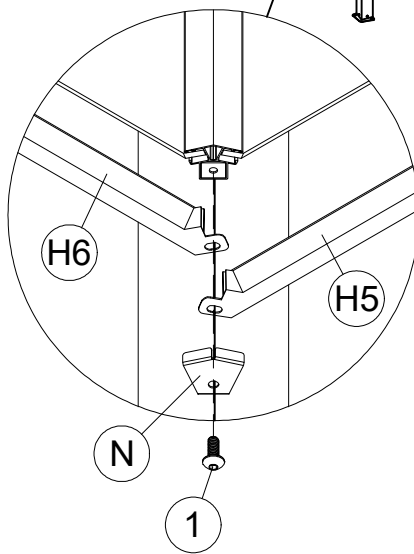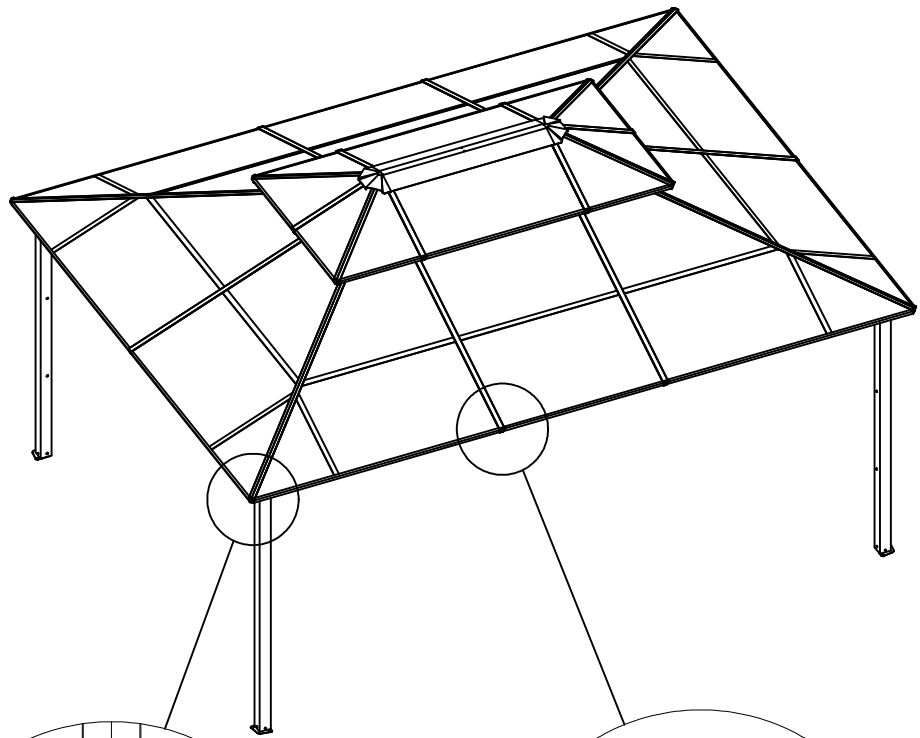

<15>



I2 2x



I3 2x



I4 2x



I6 2x



N 4x


M6x15
1 10x



Z2 2x



Z5 2x







Z6 2x

M6x10
7 10x



M6
8 10x


25

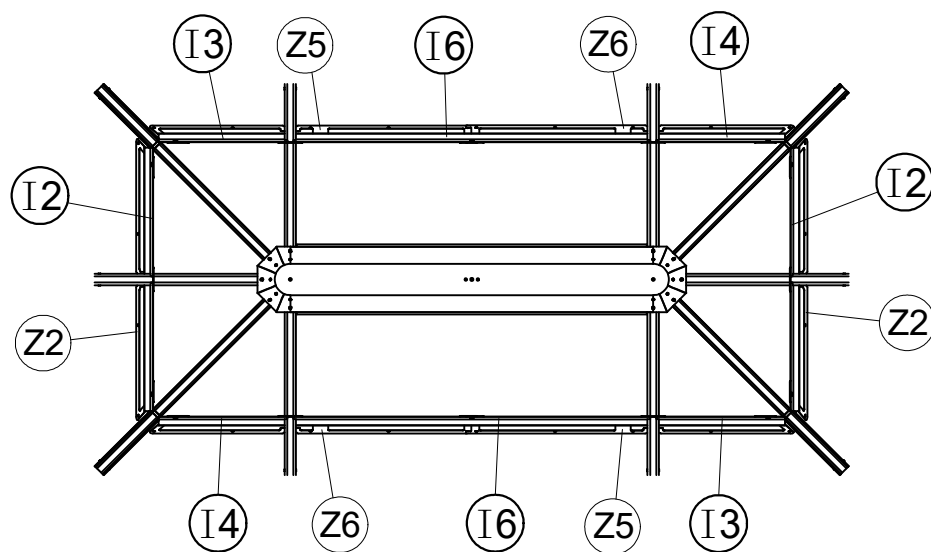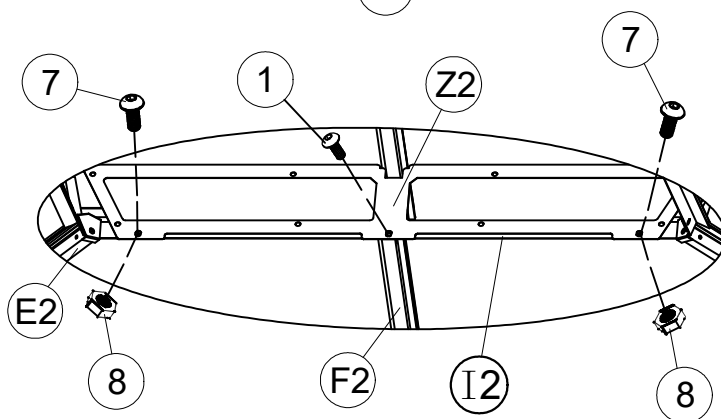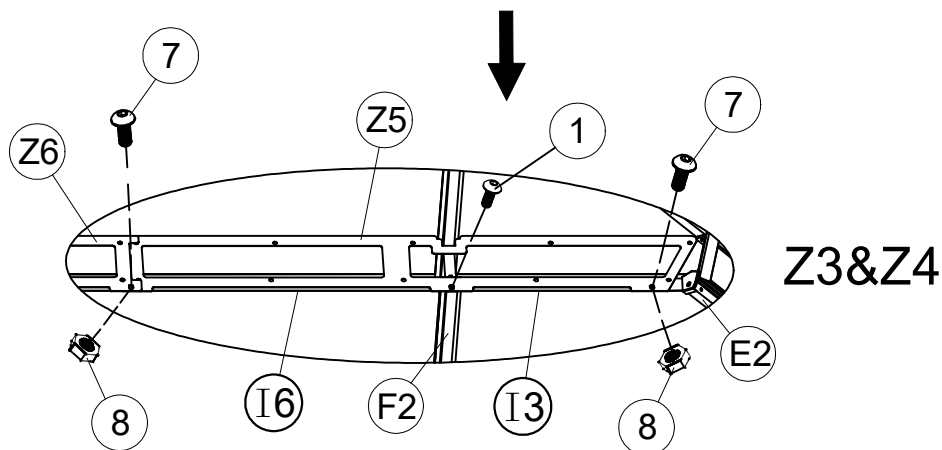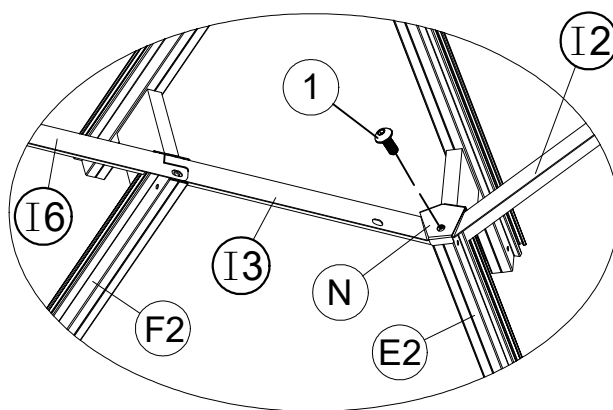


Top view of the roof

<16>


(AB) 4x

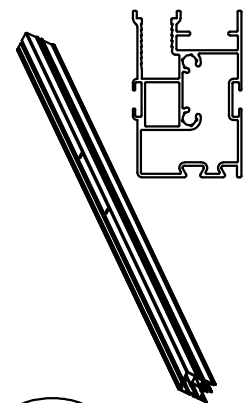


(M1B) 4x

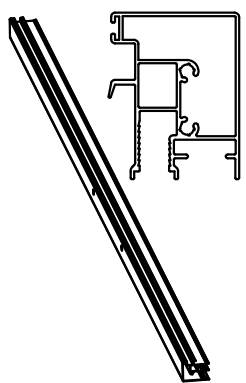


(M1C) 4x

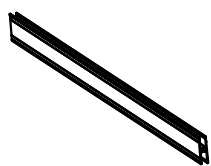

(M5G) 8x






(MS2) 4x

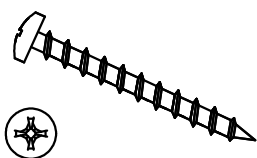


M4x50

(11) 16x

For component AB,
repeat four times.

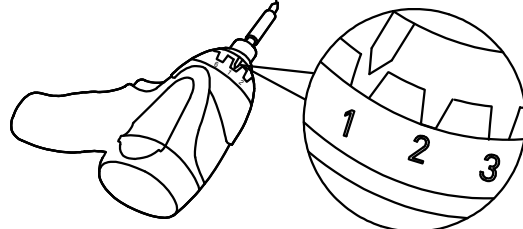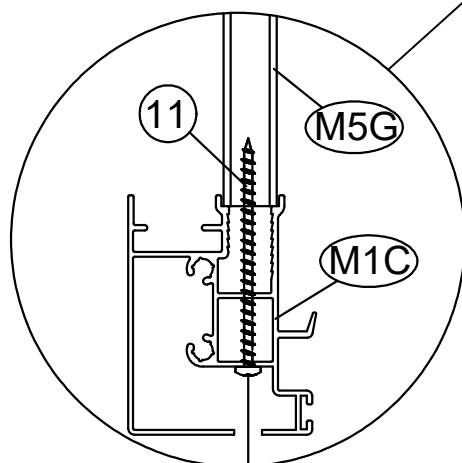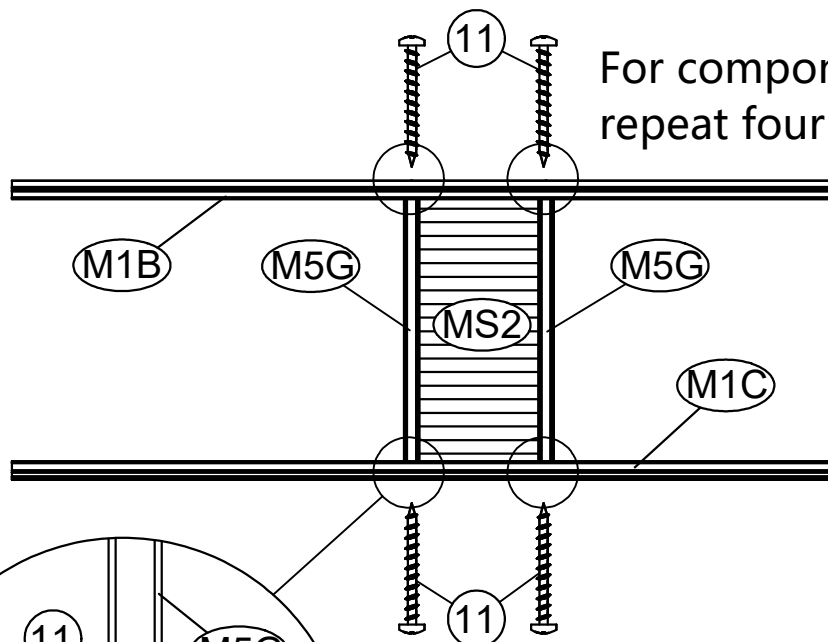


Select the
low gear.

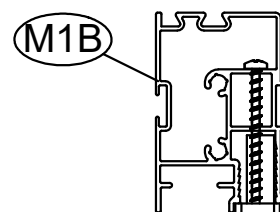

(MS2)

With the side of the
PC panel that has
text facing outward,
remove the
protective film before
installation.

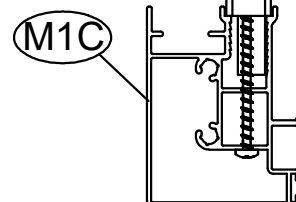


The door frame installation template is provided
on pages 25 to 29. All following door frames
should be installed according to this template.


<17>

For component AB,
repeat four times.



AB 4x

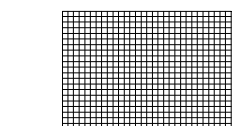

M1S 4x

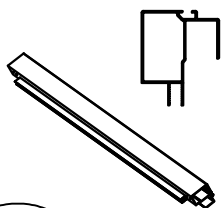


M4K 4x

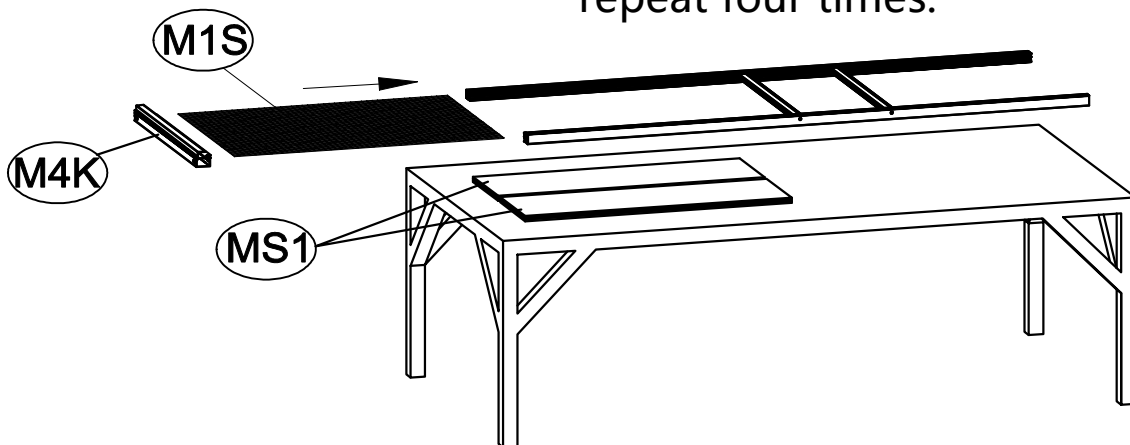


M4x20

9 16x

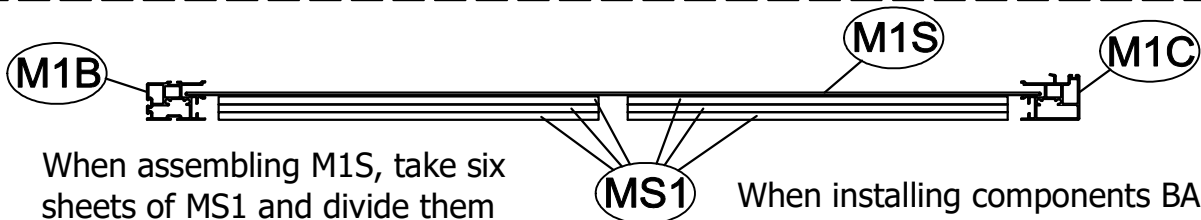


When assembling M1S, take six sheets of MS1 and divide them into two piles. Place the piles under the bottom to lift M1S.

When installing components BA, and AE, use the MS1 PC panel as a pad in the same way.

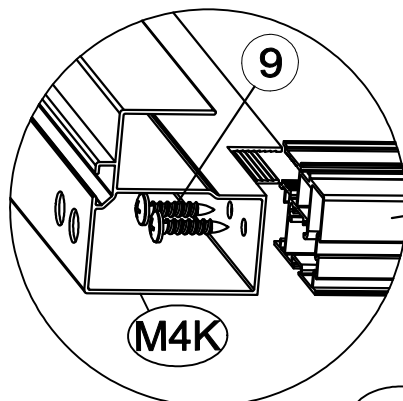

Please pay attention
to the details.

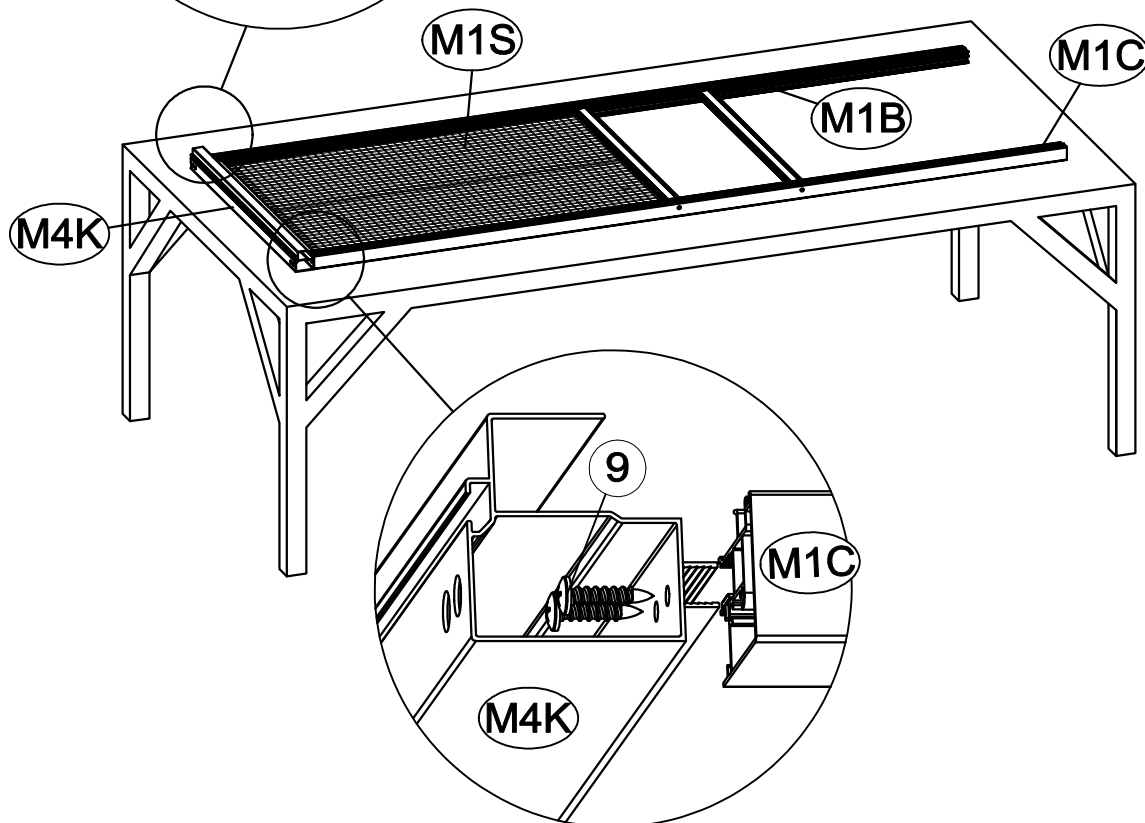

<18>





For component AB,
repeat four times.

AB 4x


1R-1 8x

1R-2 8x

Before installing parts 1R-1 and 1R-2, move the mesh by hand
to ensure there is enough space around it.

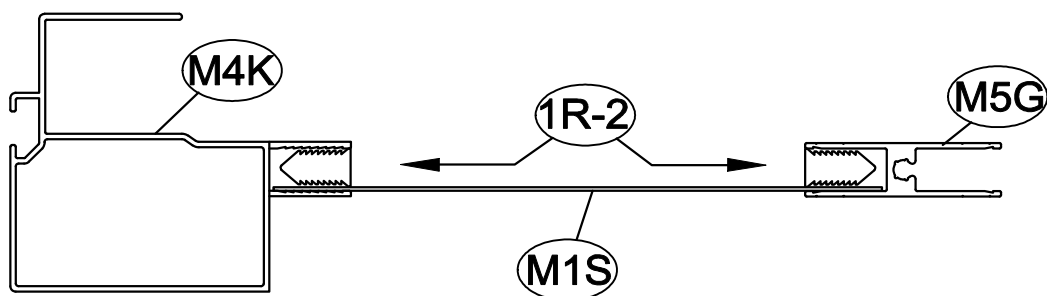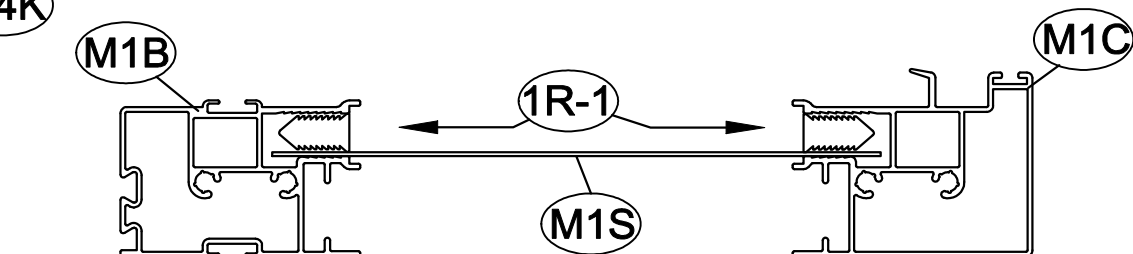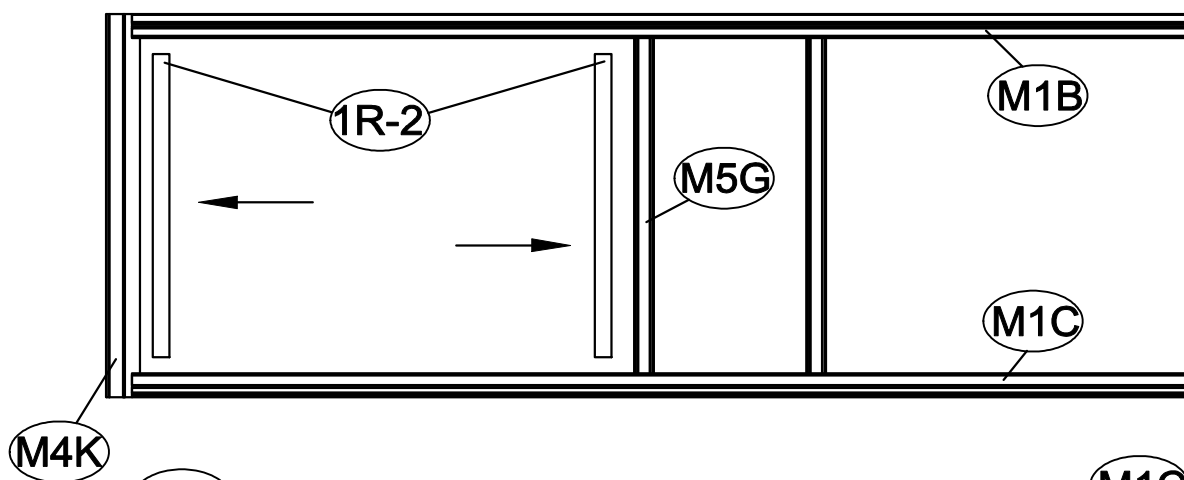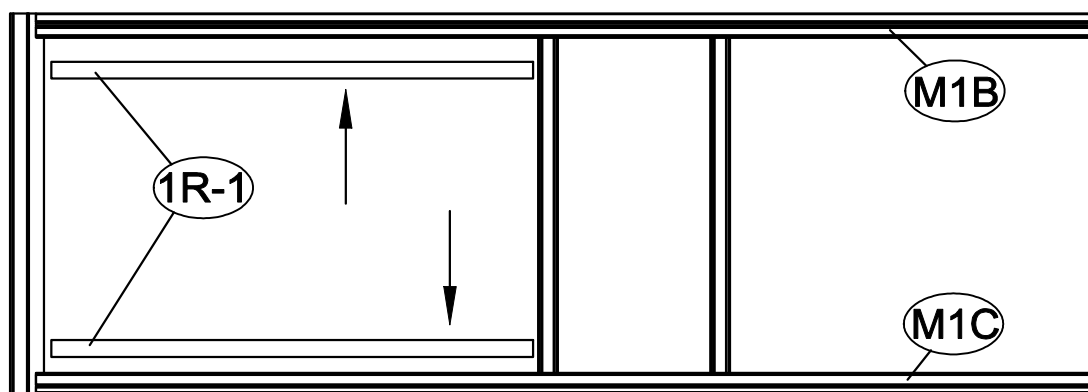


This picture is provided for subsequent reference.

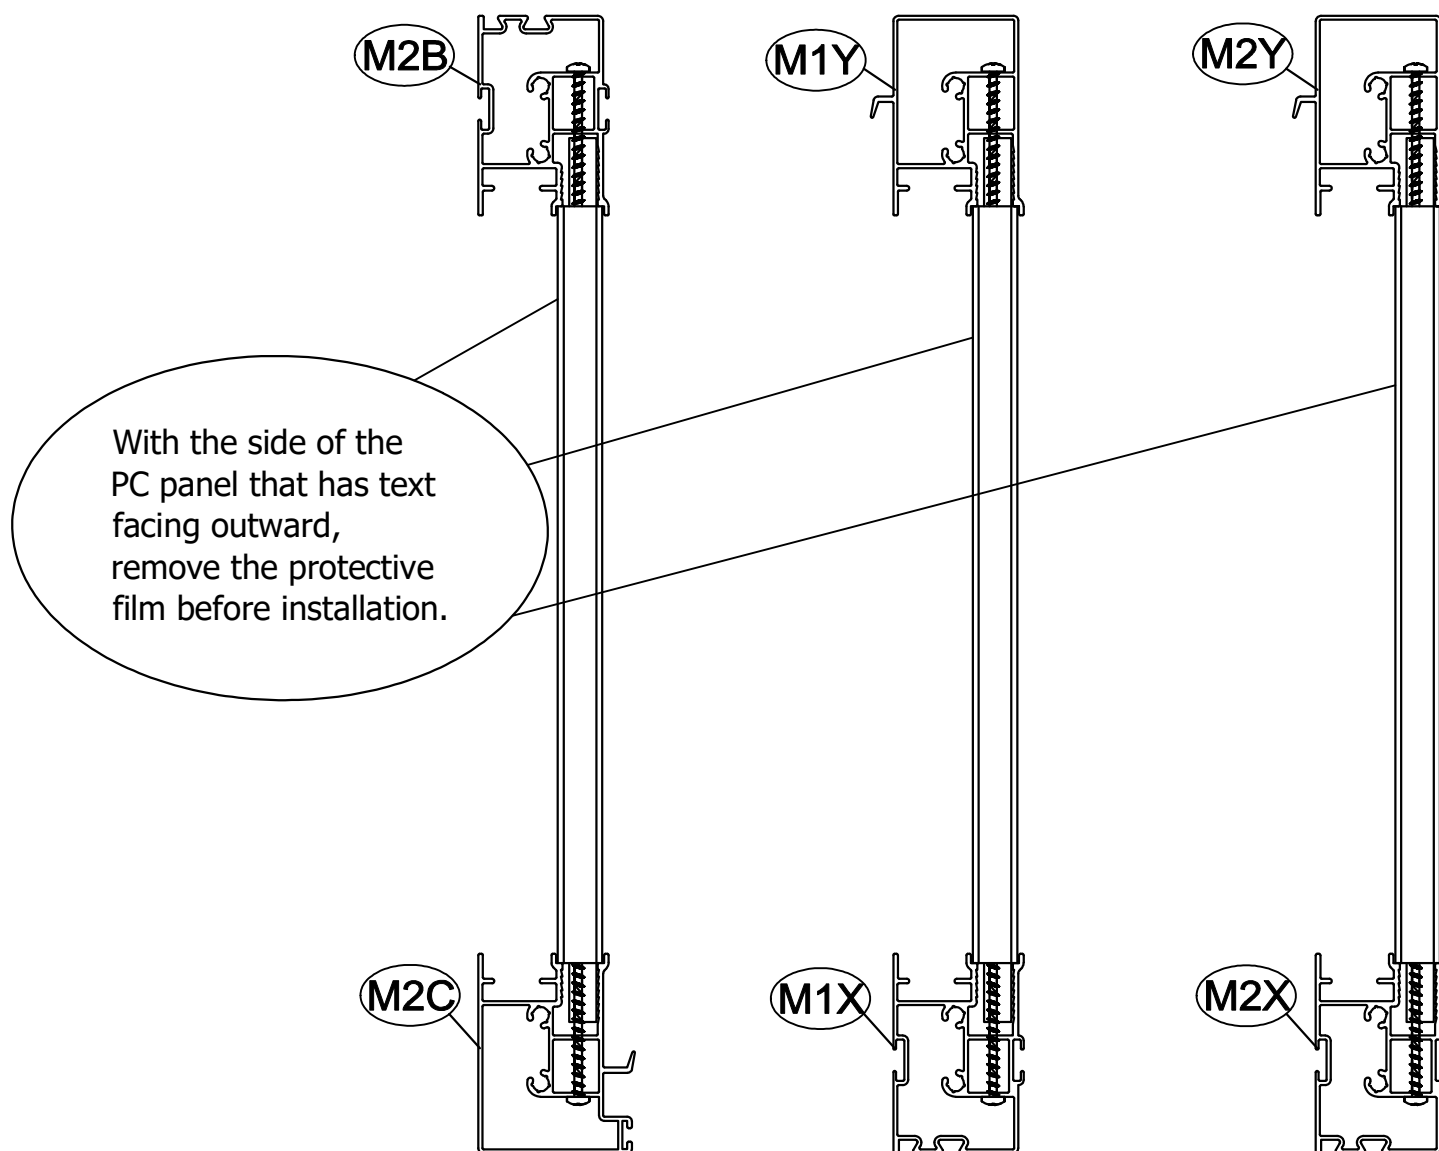

Door frame BA and AE
installation: see pages
25–29.


- M4K 4x
- 1R-1 8x
- 1R-2 8x
- M5G 8x
- M1S 4x
- MS2 4x
- M2B 4x
- M2C 4x
- 11 16x
- 9 16x

For component BA, BA 4x
repeat four times.

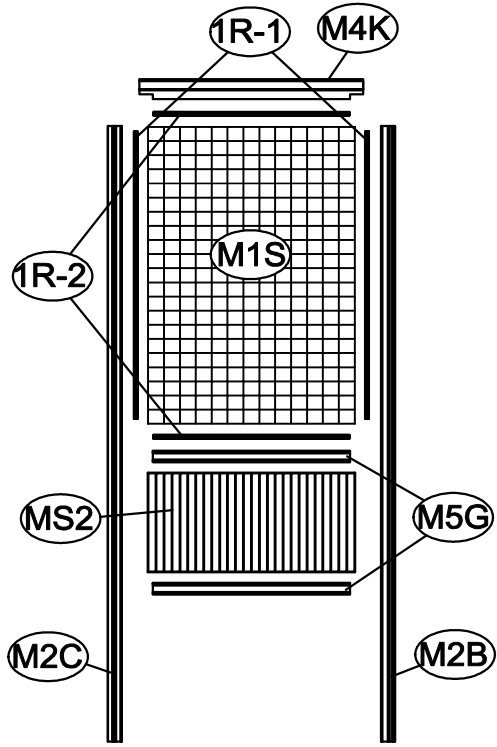

- M7K 4x
- 1R-1 8x
- 1R-4 8x
- M8G 8x
- M4S 4x
- MS14 4x
- M1B 4x
- M2B 4x
- 11 16x
- 9 16x






For component AE, AE 4x
repeat four times.

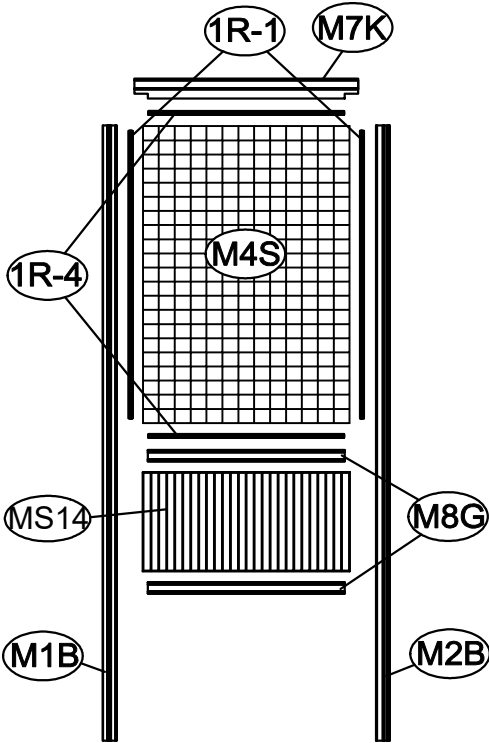


AB and BA are symmetrical components.


<21>

For component AF, **AF** 8x repeat eight times.

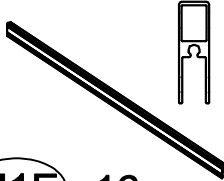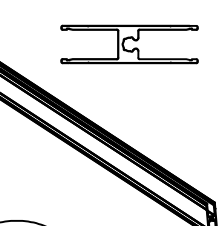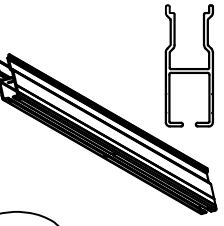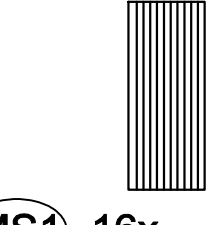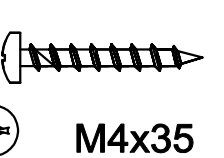-  **M1E** 16x
-  **M1G** 8x
-  **M4L** 16x
-  **MS1** 16x
-  **M4x35**
-  **10** 48x

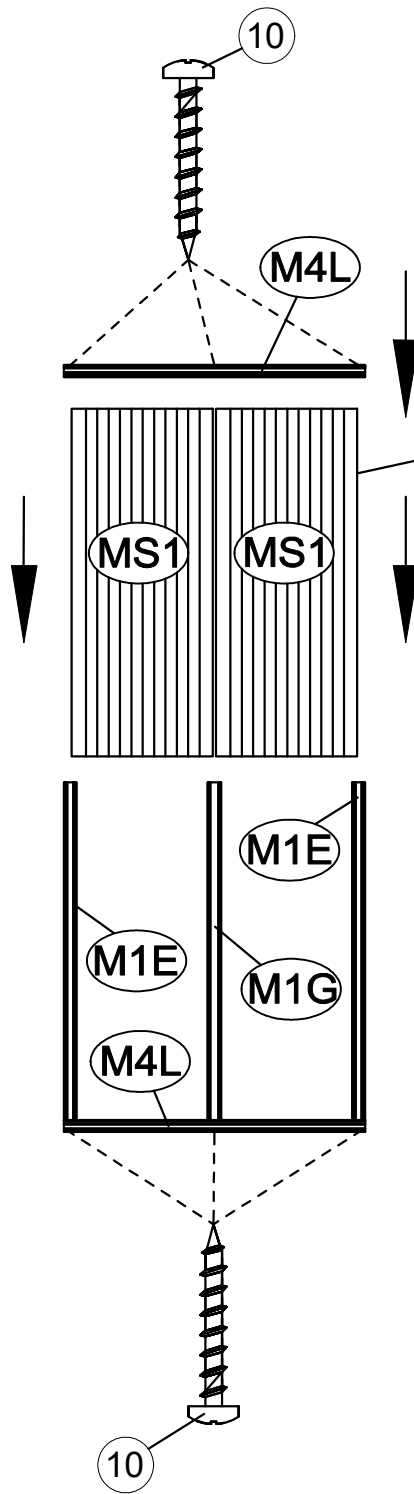






With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

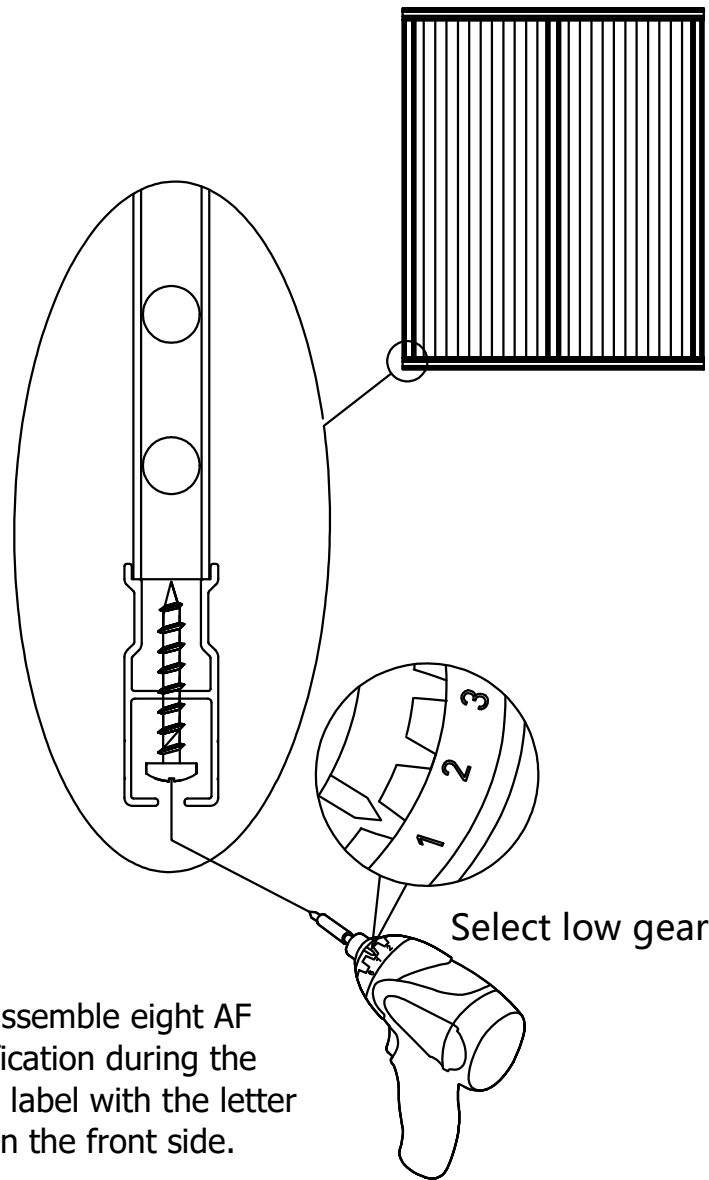



Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AF" to a prominent position on the front side.

<22>

For component AF, **AG** 4x repeat four times.

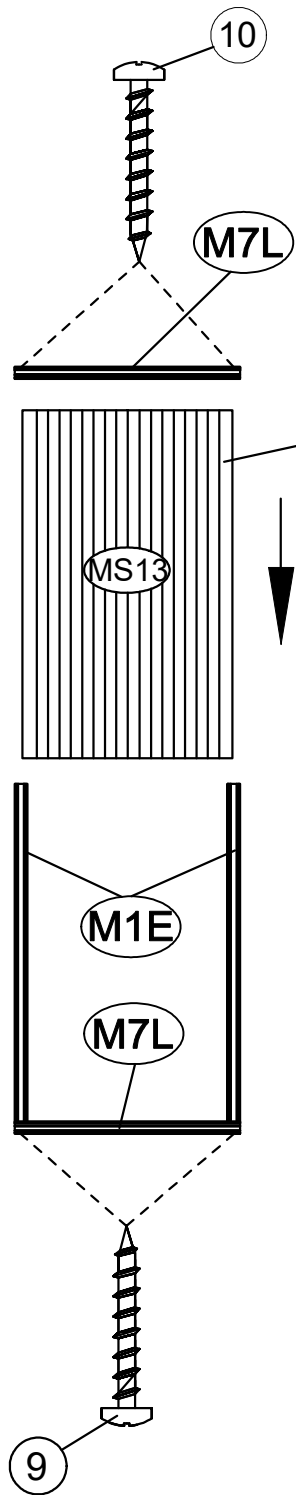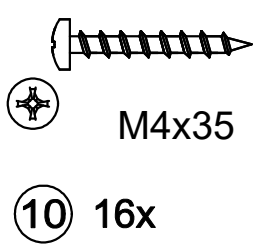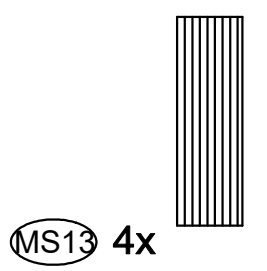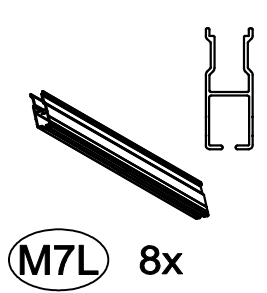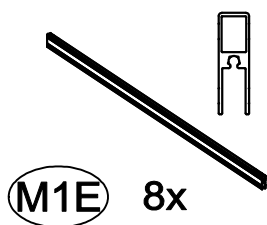


With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

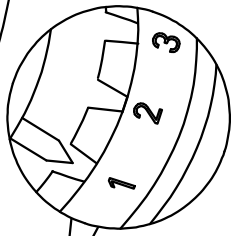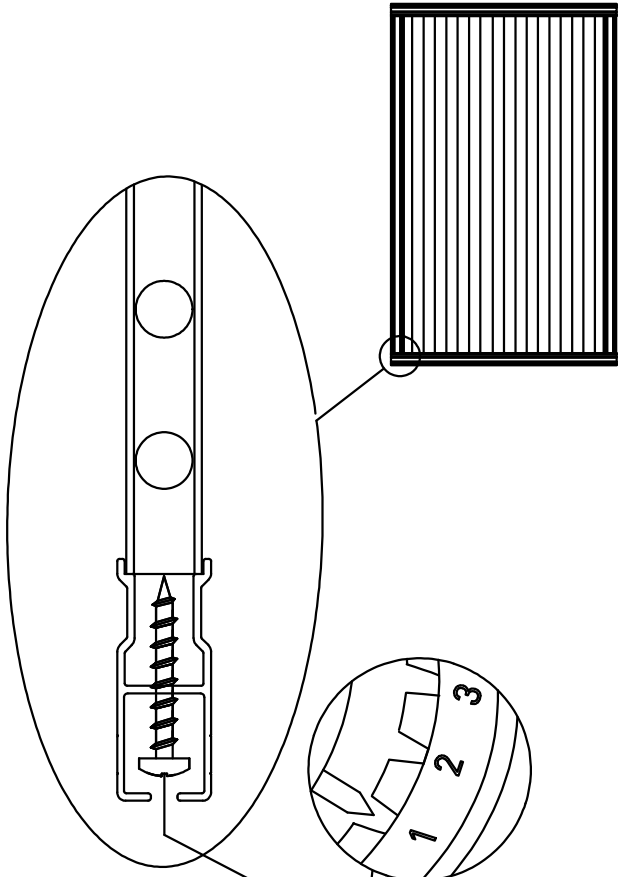

Select low gear


Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AG" to a prominent position on the front side.



MD1 48x



MD2 96x





MD3 24x


<23>

AF 8x

AG 4x

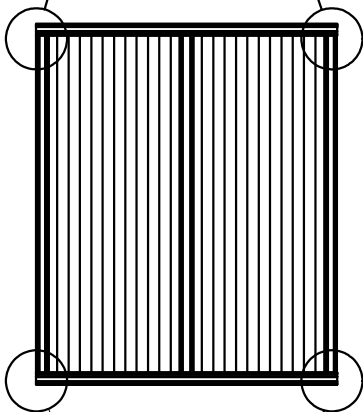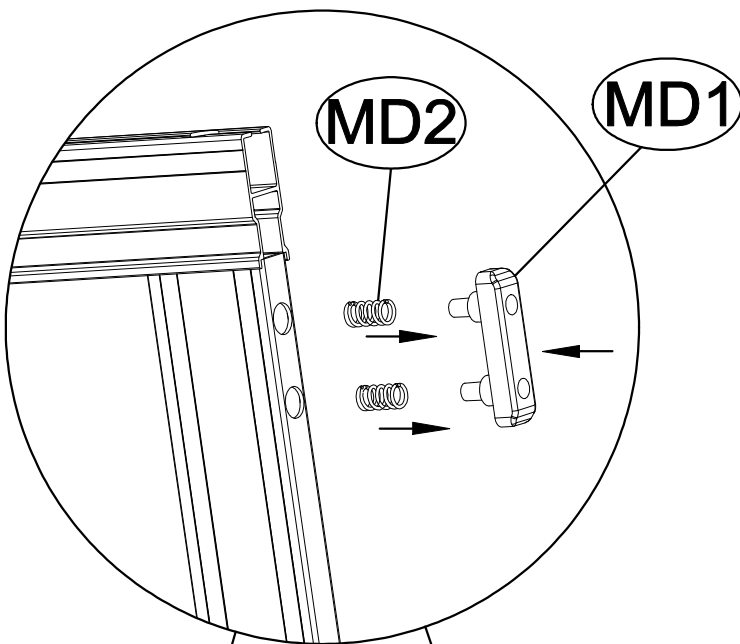


This step is recommended to be assembled with the next step together.

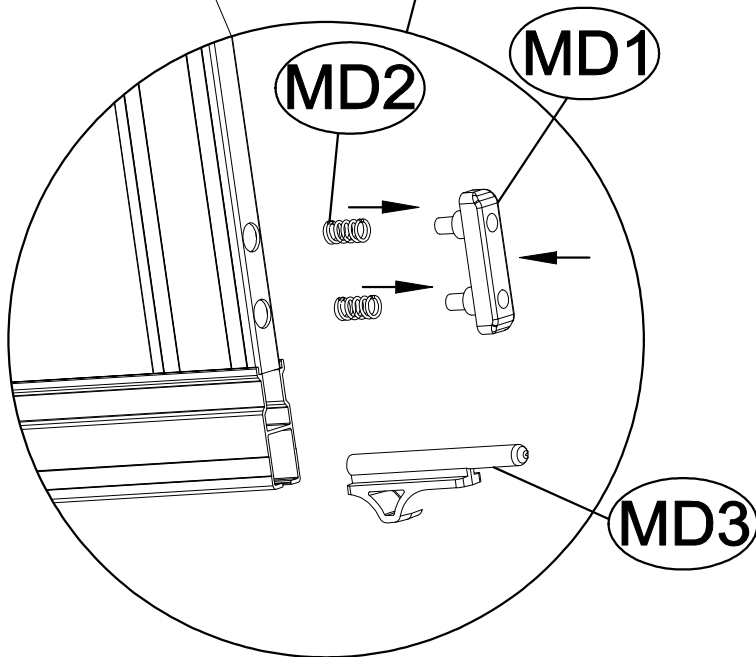

<24>

(AB) 2x


(BA) 2x

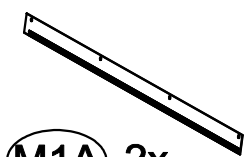


(M1A) 2x




(M2A) 2x

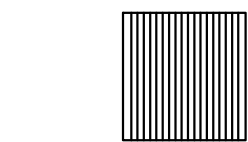

(MS3) 4x









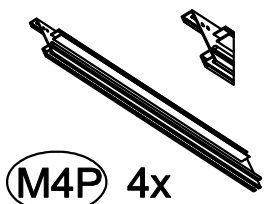


(M4P) 4x

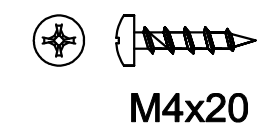






M4x20

(9) 16x

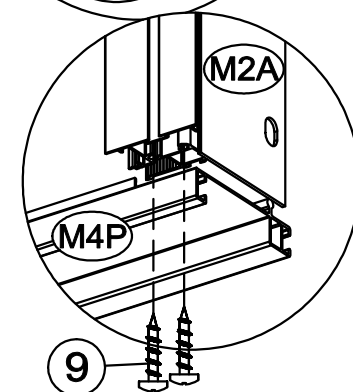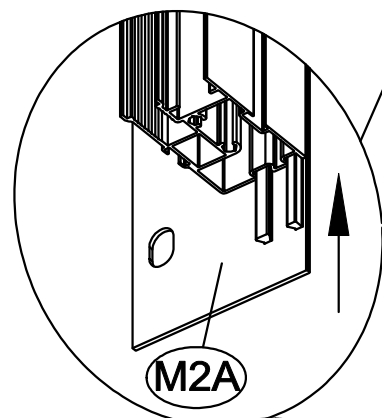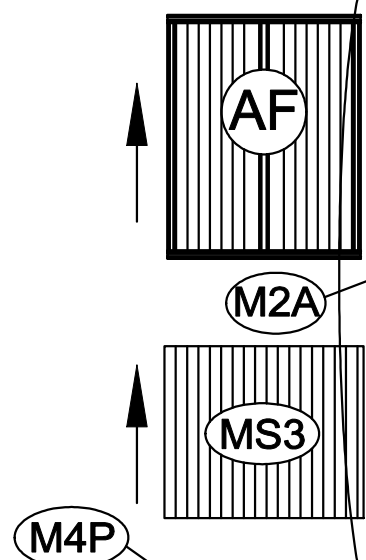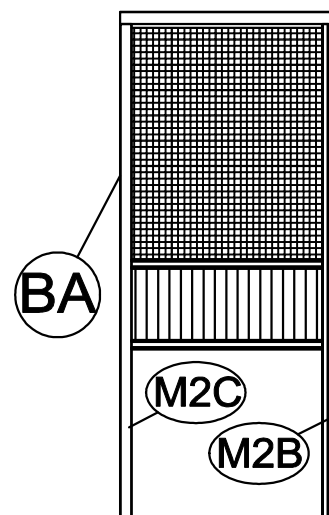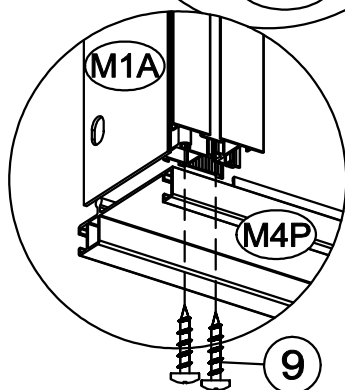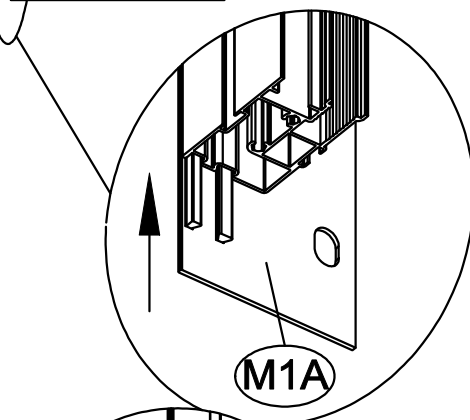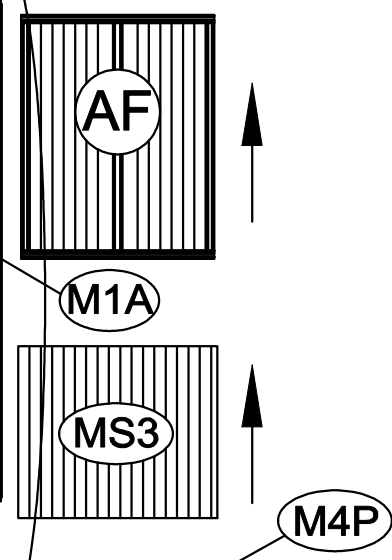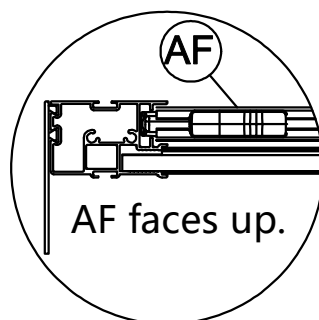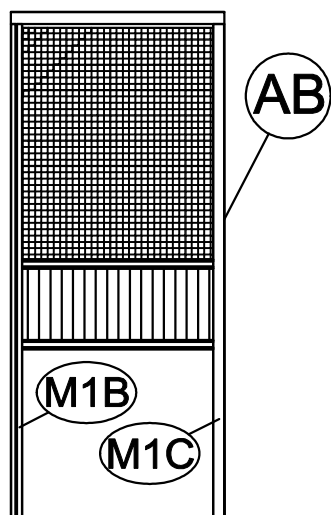


<25>

x2

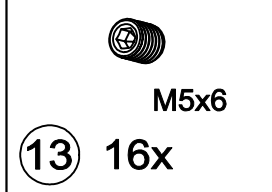
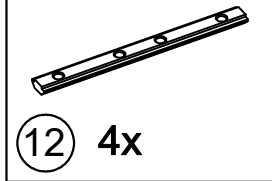
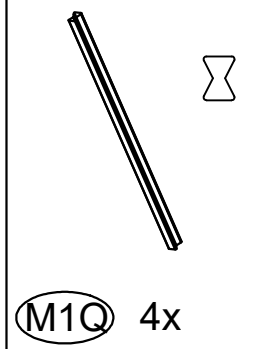
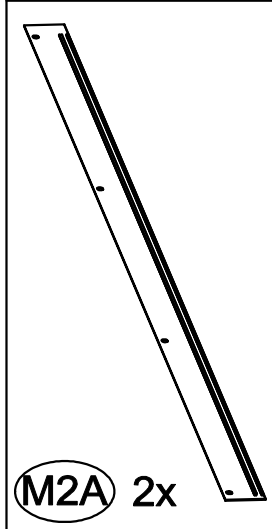
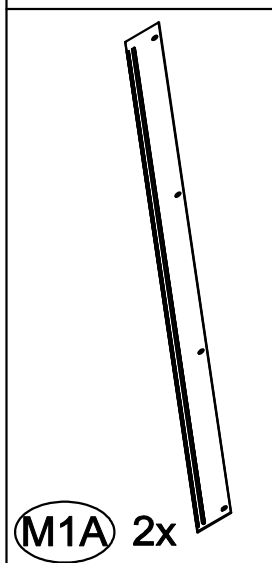













35

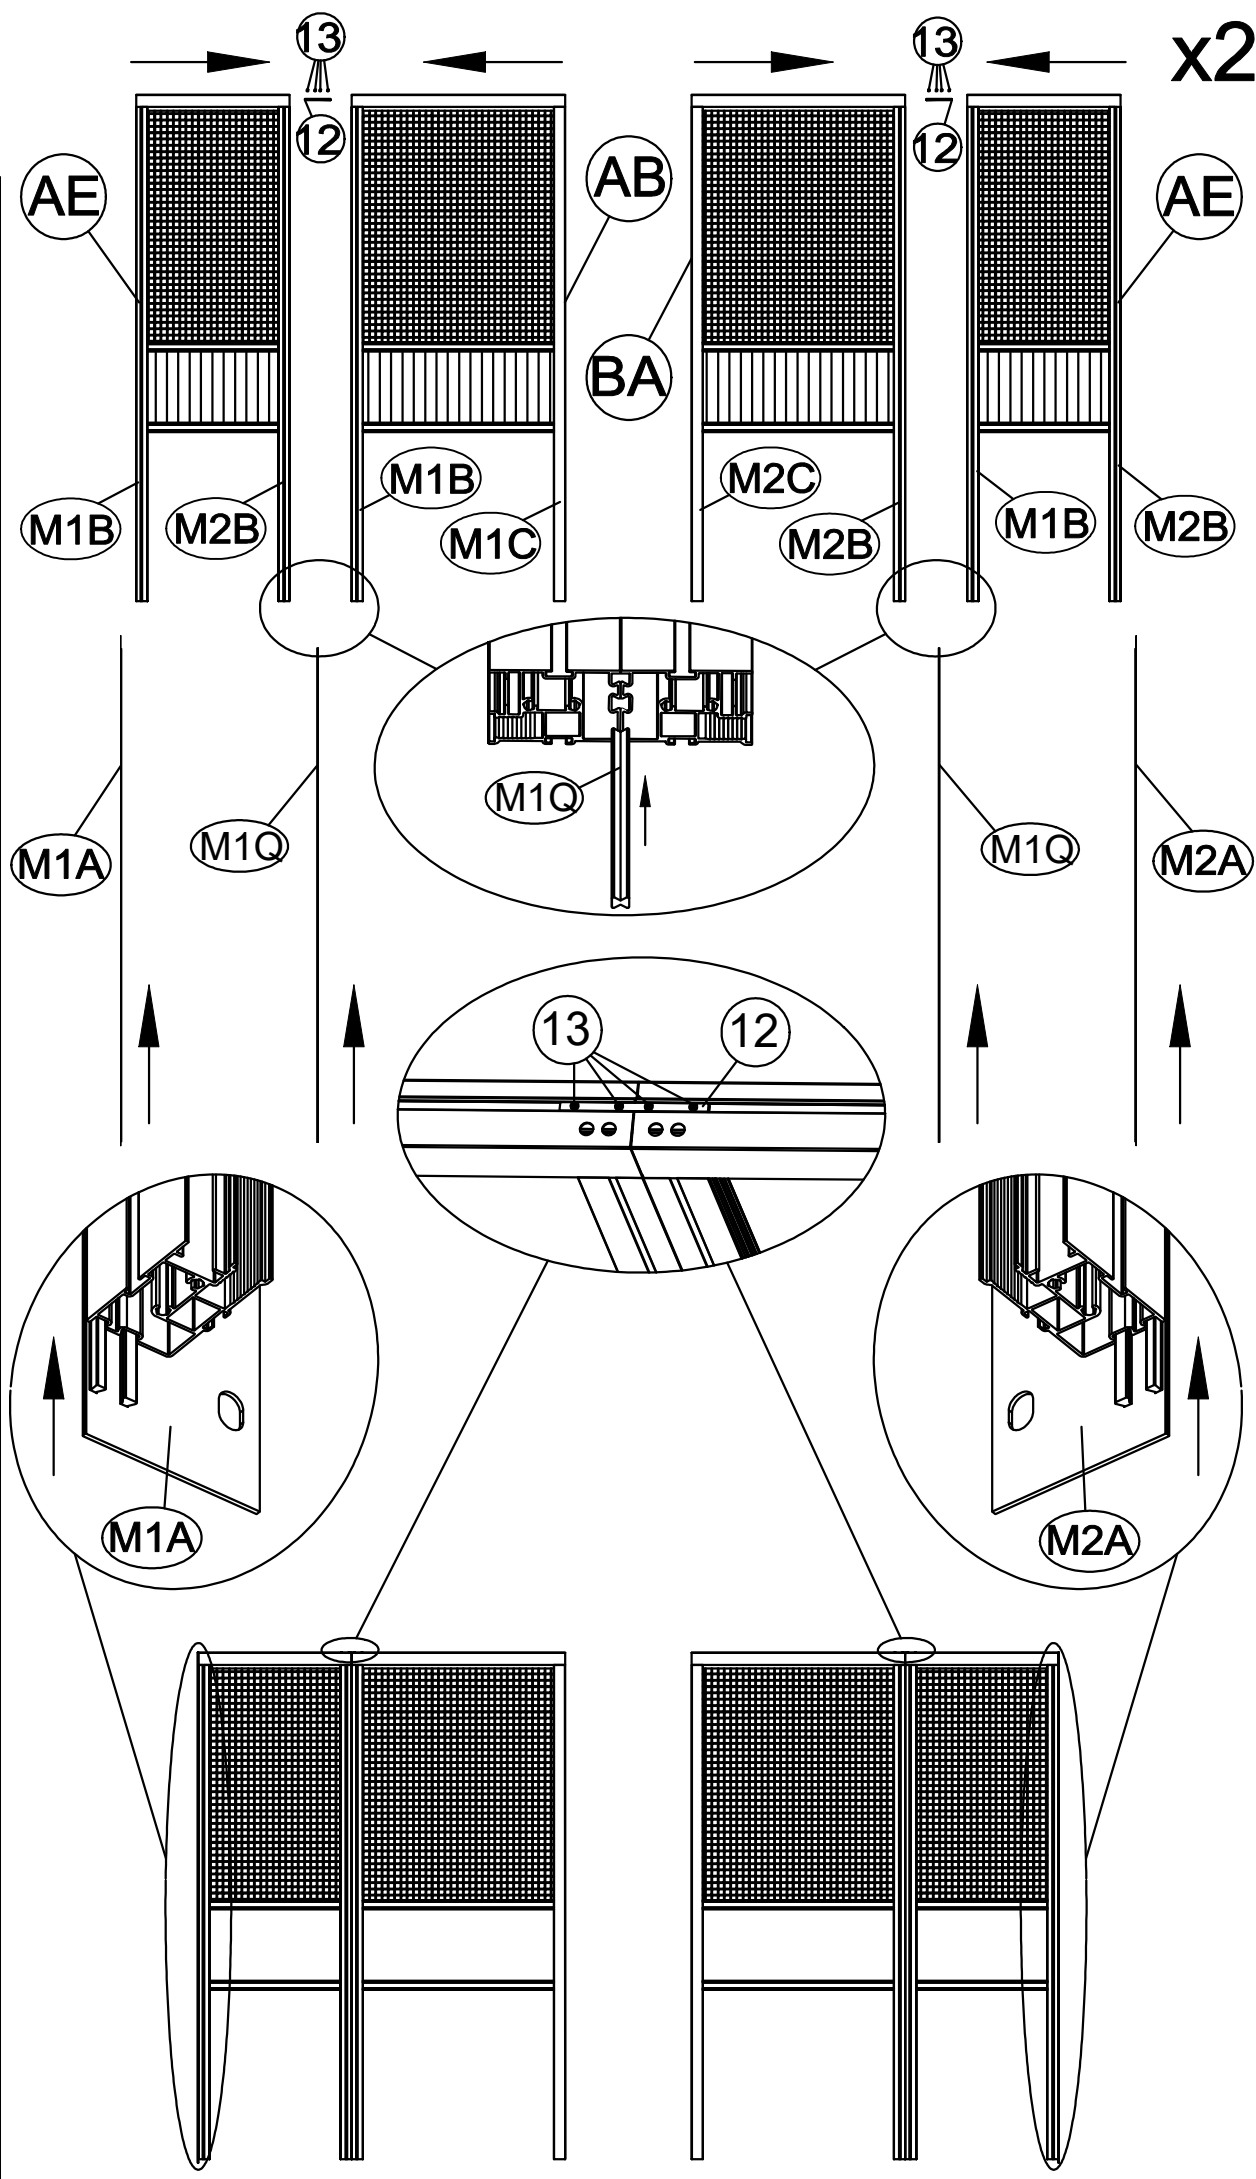

<26>










x2

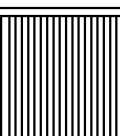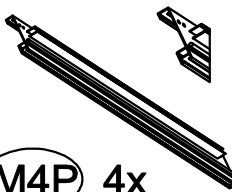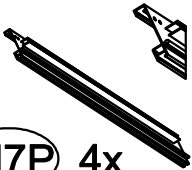-  12 8x
-  M5x6
- 13 32x
-  MS15 4x
-  MS3 4x
-  M4P 4x
-  M7P 4x
-  M4x20
- 9 32x

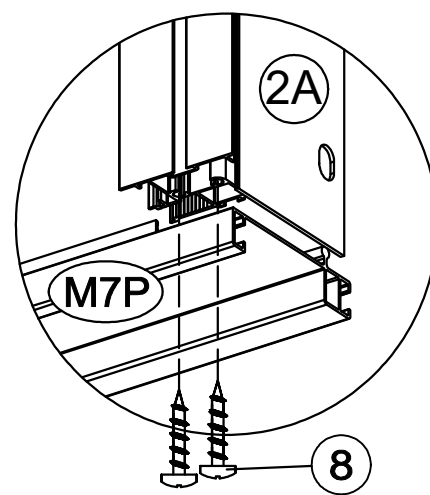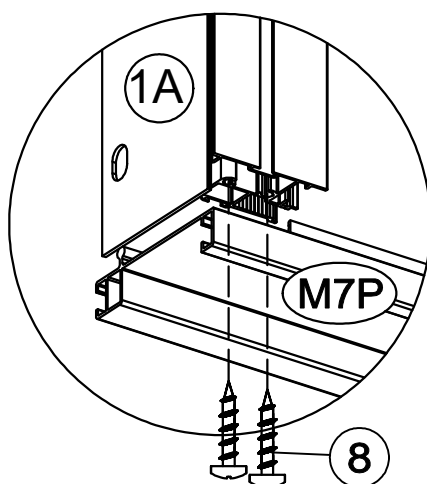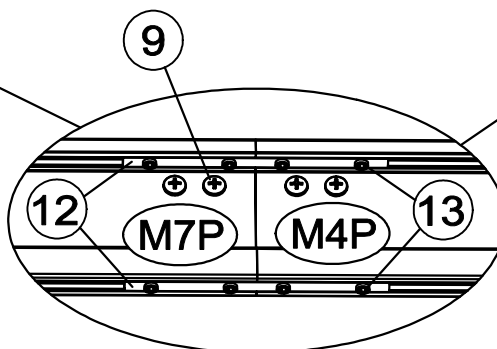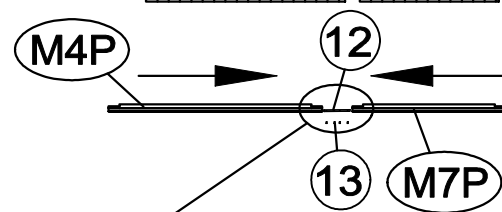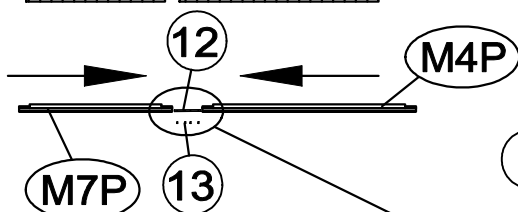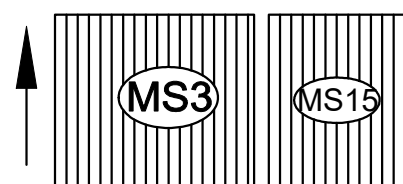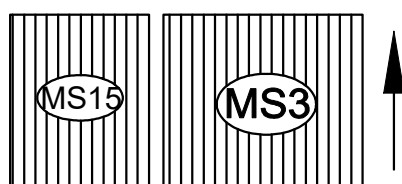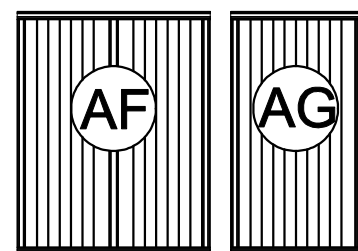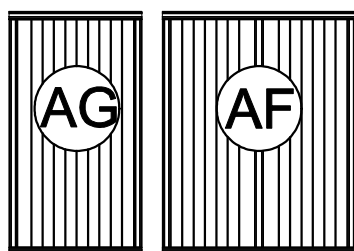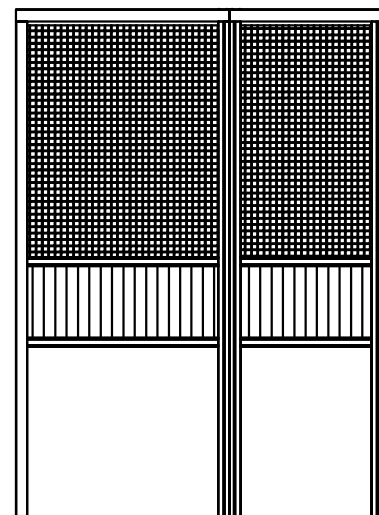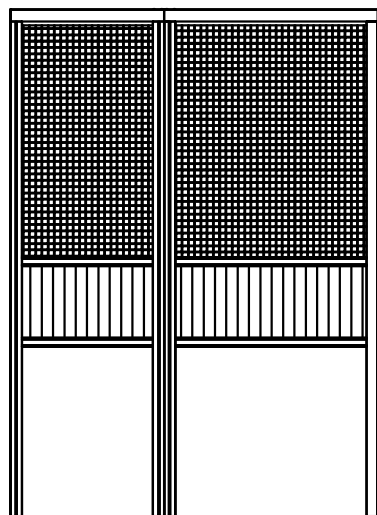


<27>

AD 4x

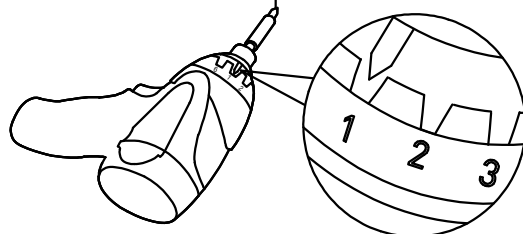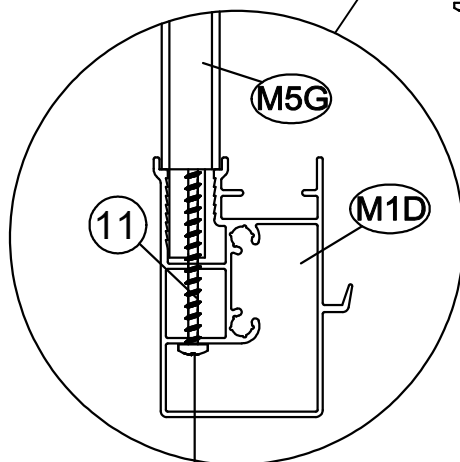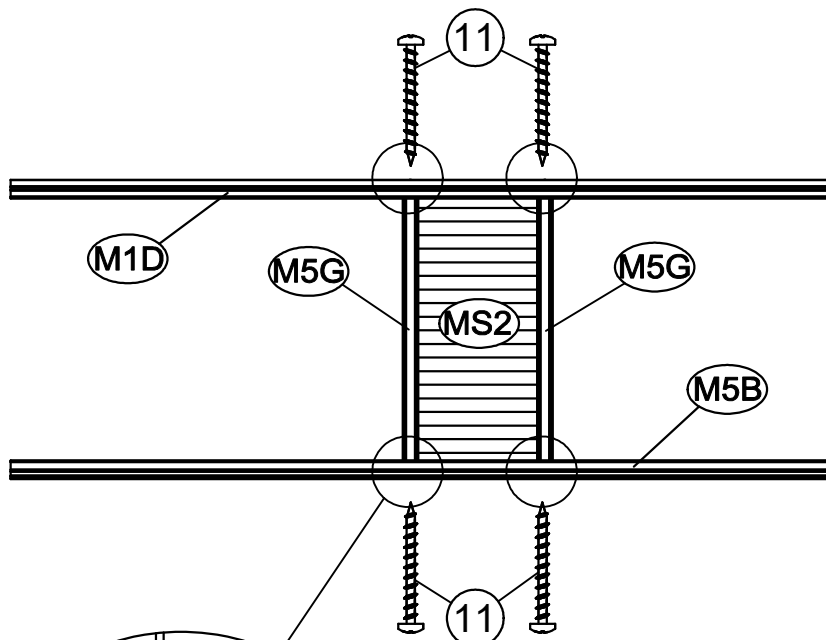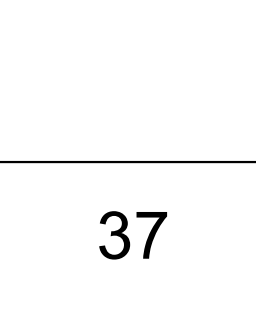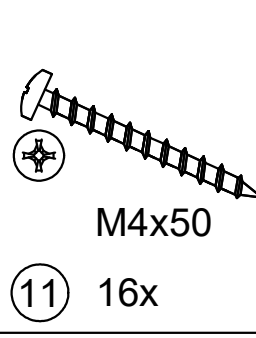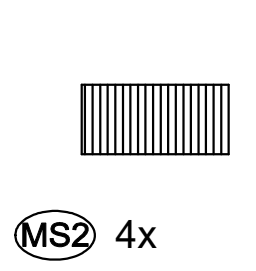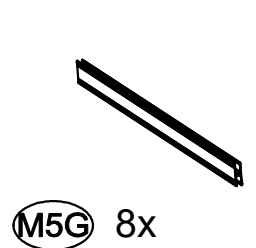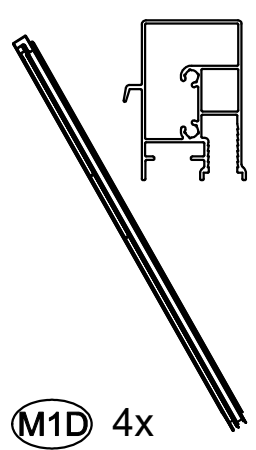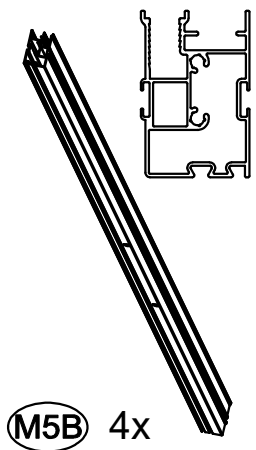

Select the low gear.







With the side of the PC panel that has text facing outward, remove the protective film before installation.

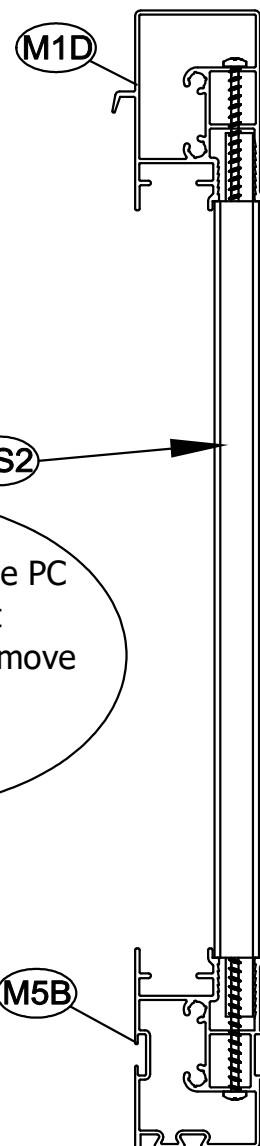




The door frame installation template on pages 36 to 38 is displayed. All subsequent door frames follow this template.

<28>

AD 4x

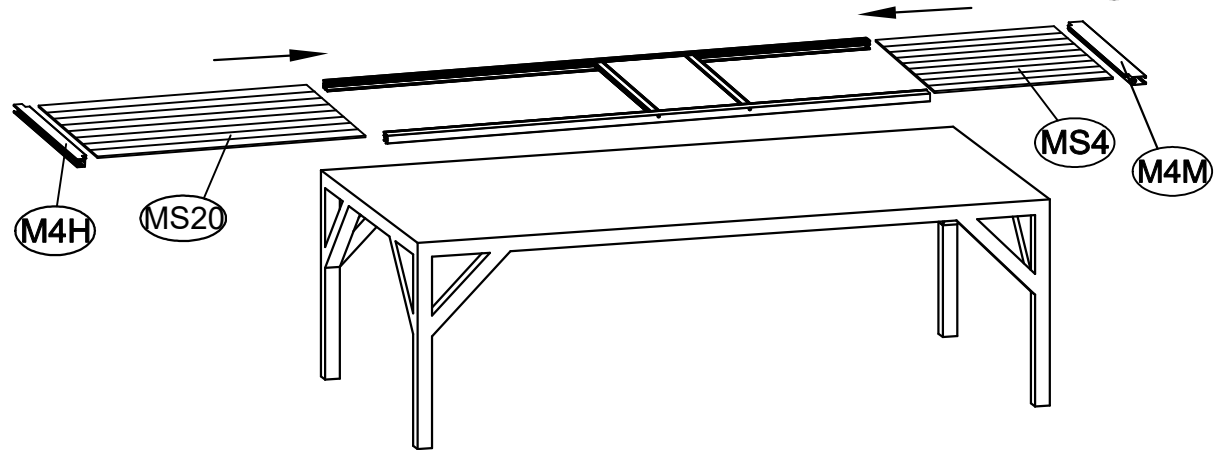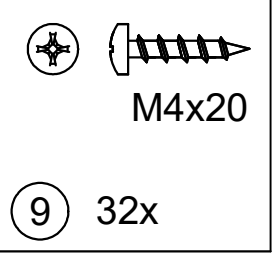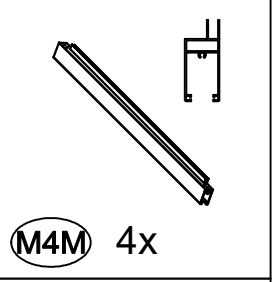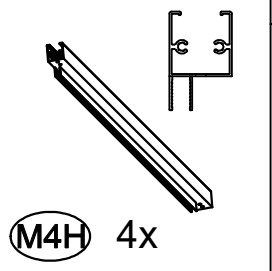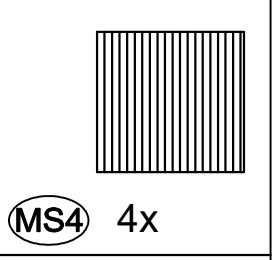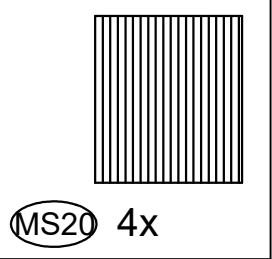


This picture is for reference in the following steps.

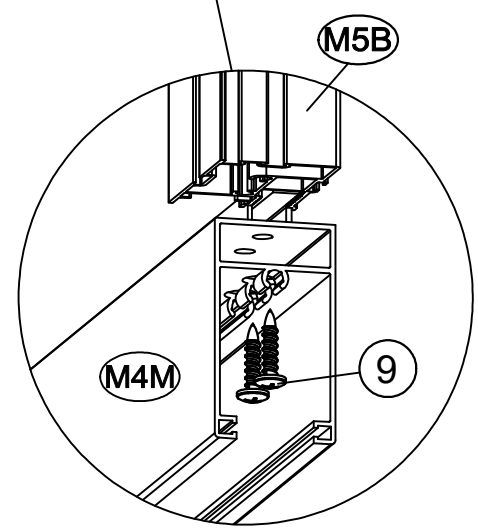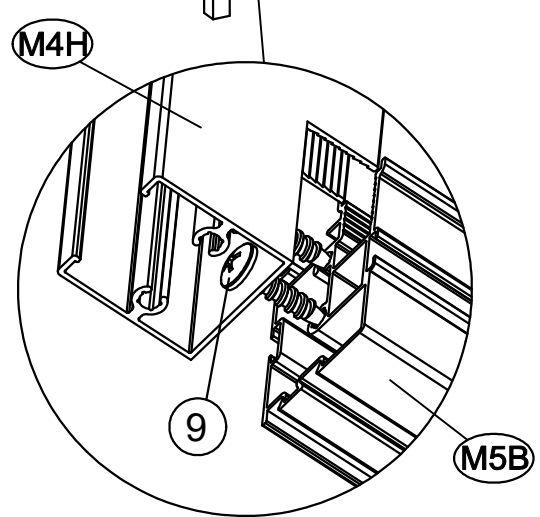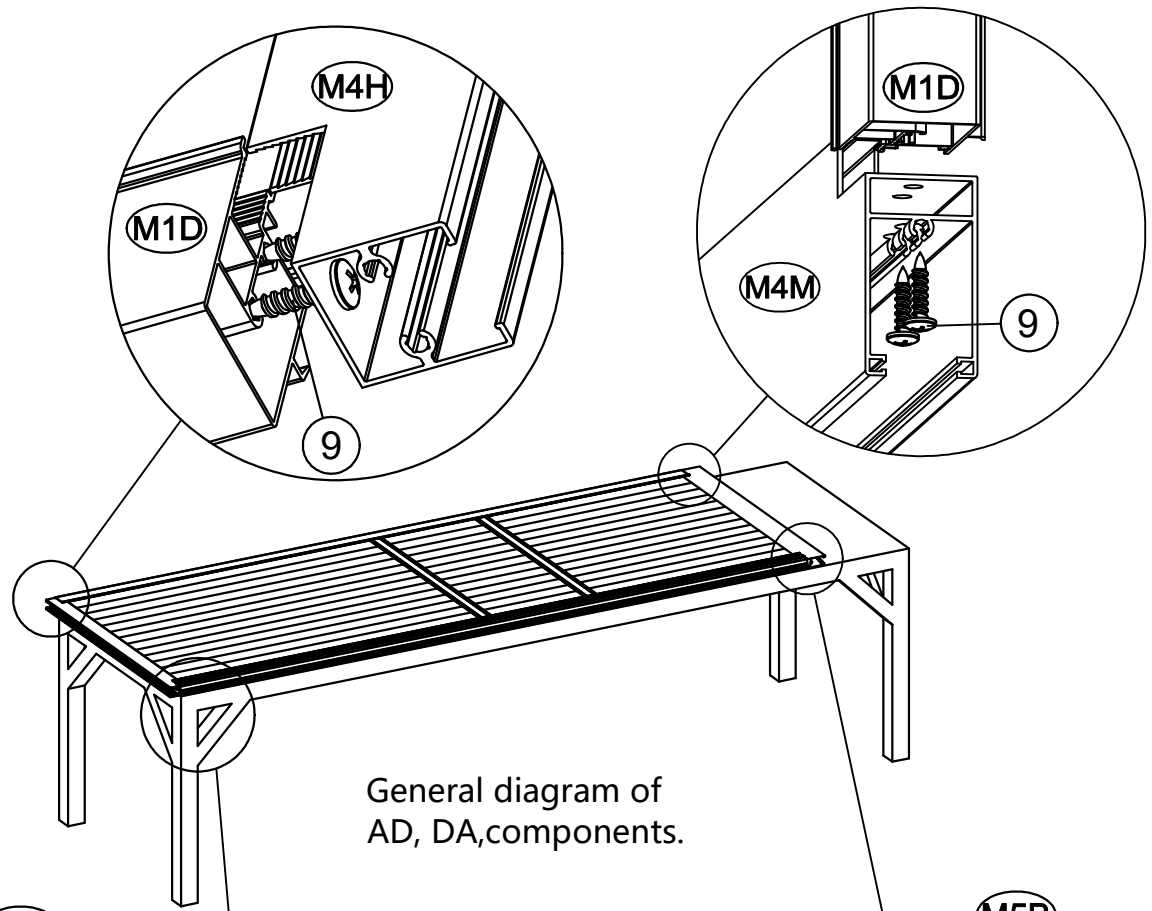


Door frame BA and AE
installation: see pages
36–38.

- (M4H) 4x
- (M4M) 4x
- (M5G) 8x
- (MS20) 4x
- (MS2) 4x
- (MS4) 4x
- (M6B) 4x
- (M2D) 4x
- (11) 16x
- (9) 32x

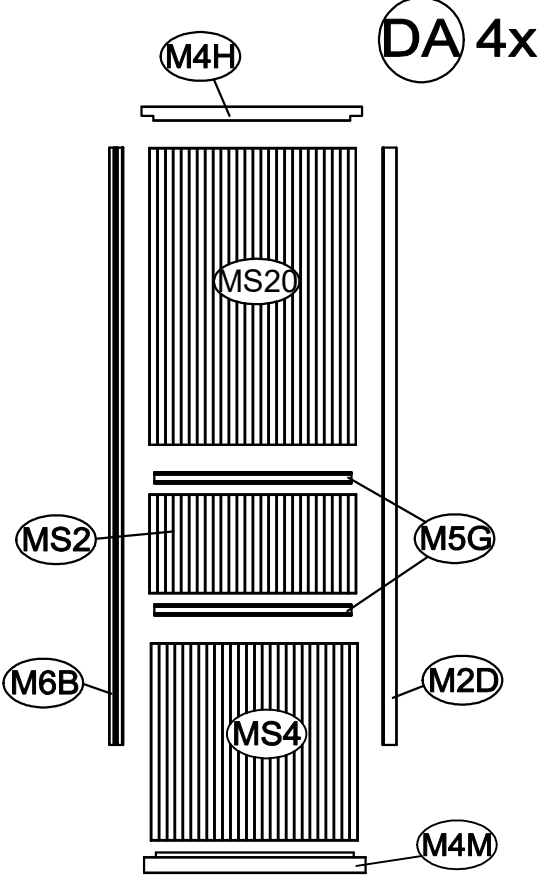


AD and DA are symmetrical components.



MD5 8x



MD4 8x




4-1 8x



M4x20

9 16x




M4x35

10 8x

40

<30>

AD 4x

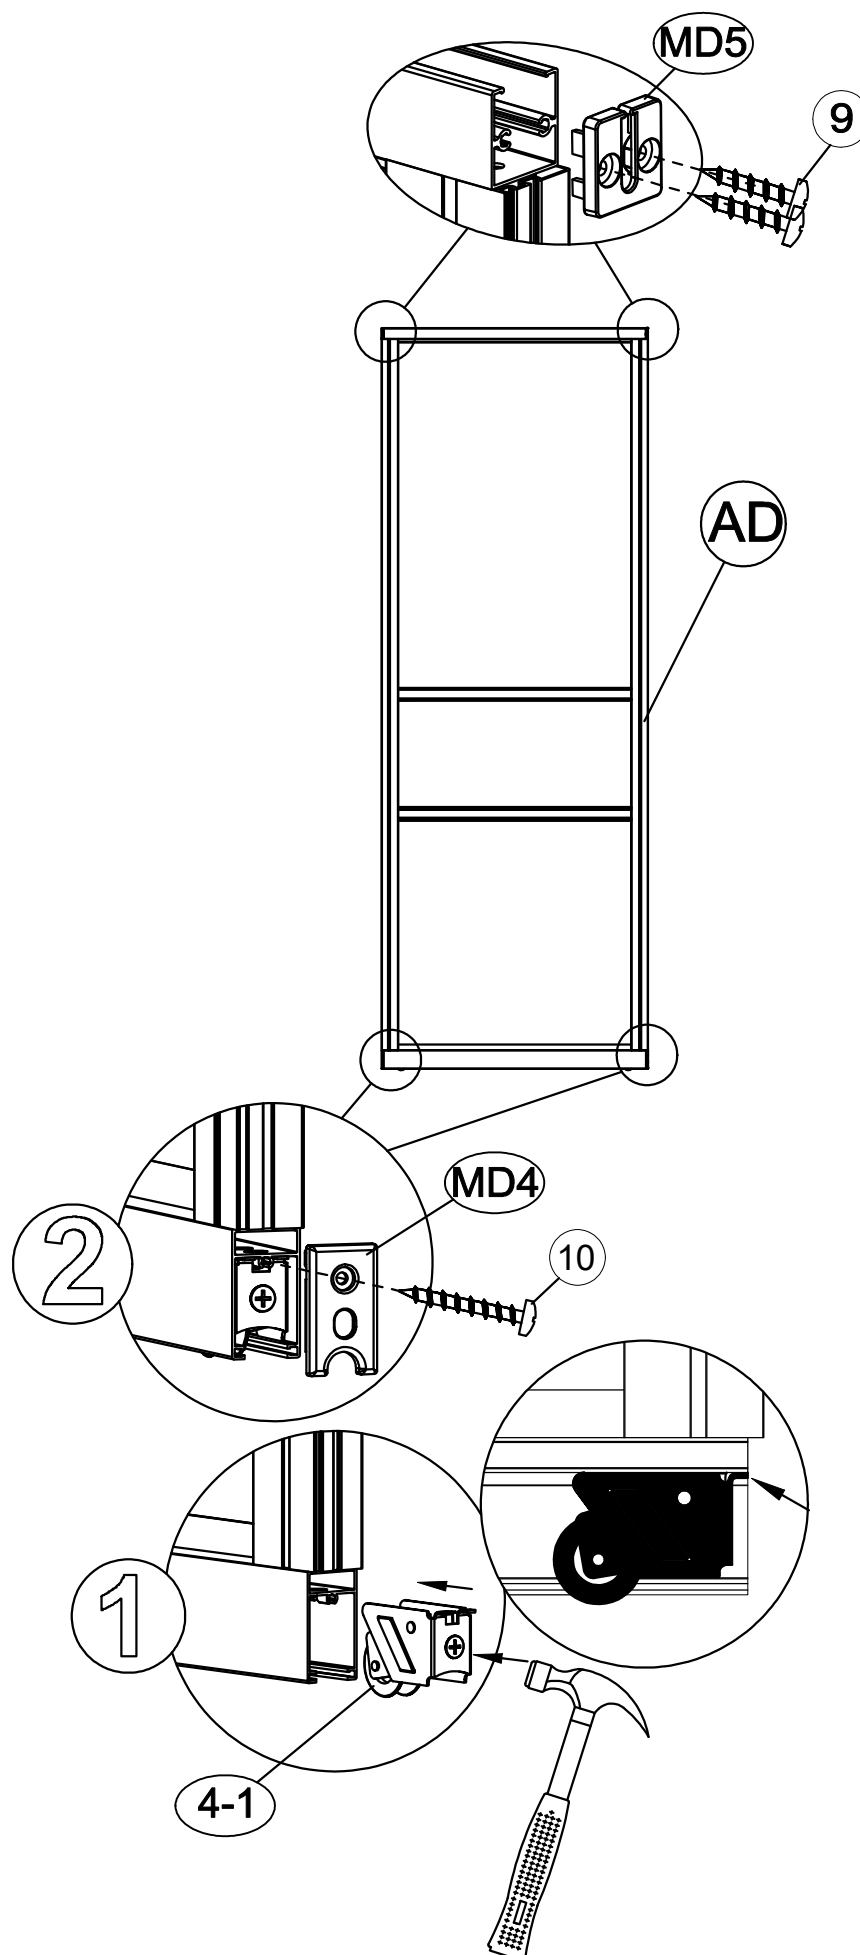

Tap gently so that the pulley is flush with the profile.

<31>

Door frame DA
installation: see pages
39–40.

MD4 8x


MD5 8x

4-1 8x

9 16x

10 8x


DA 4x

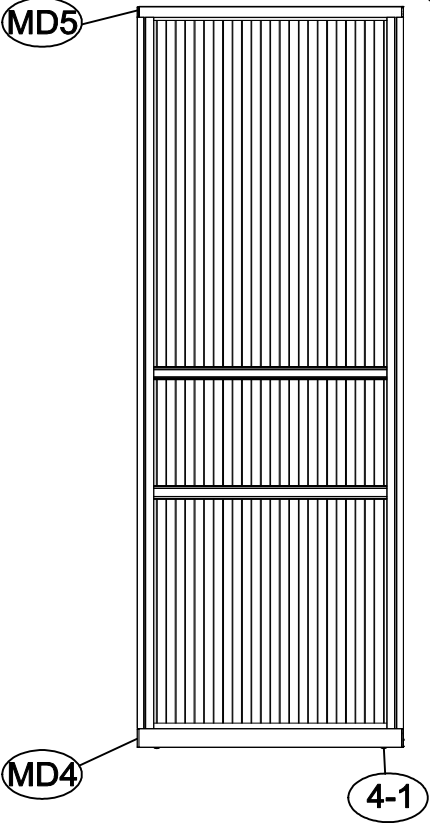

AD and DA are symmetrical
components; AE and EA are
also symmetrical.






5-1 2x

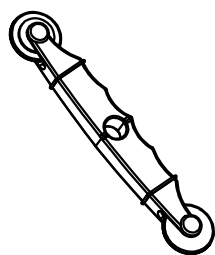



23 1x

<32>


Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

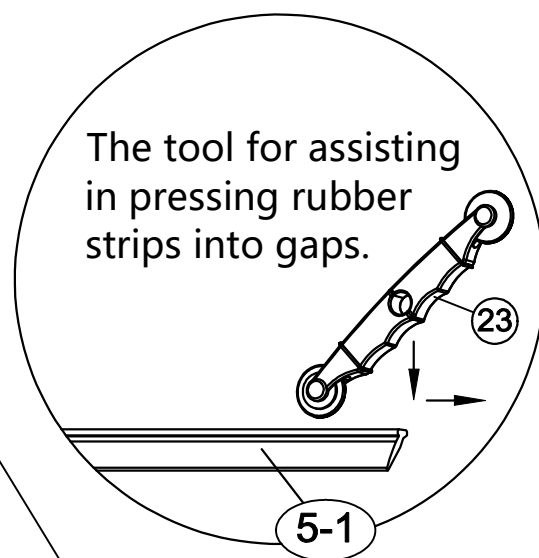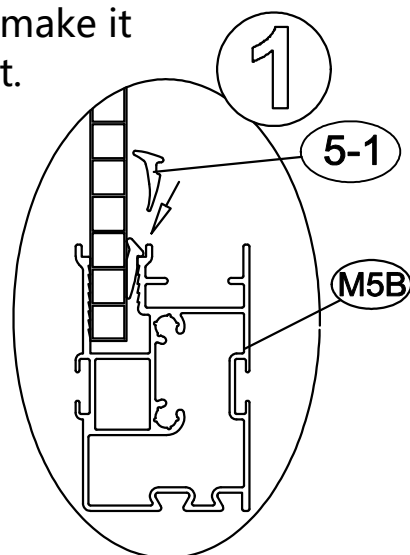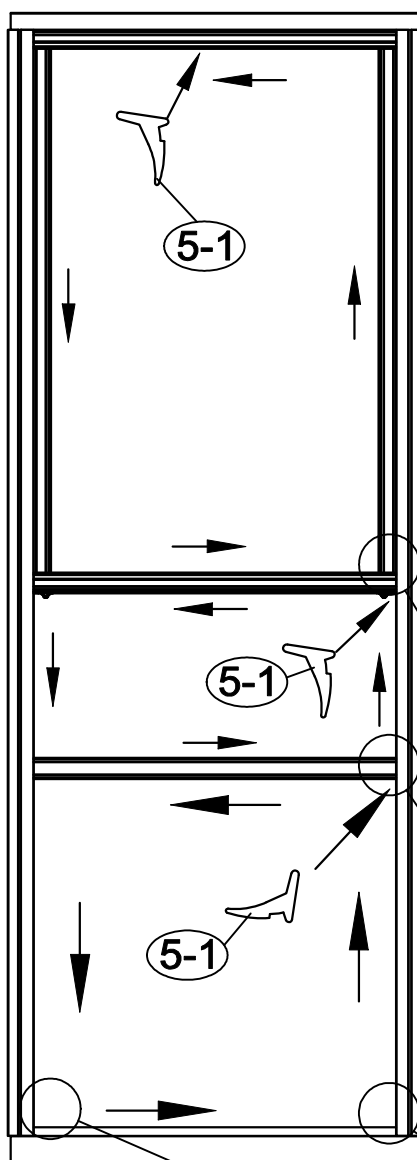


The tool for assisting in pressing rubber strips into gaps.

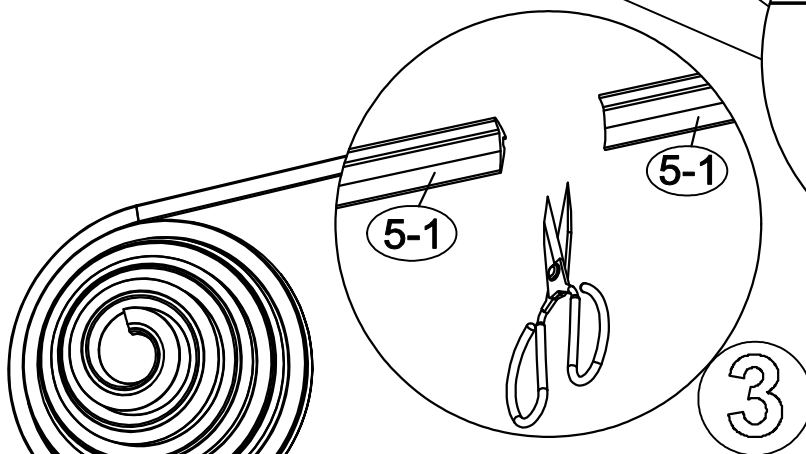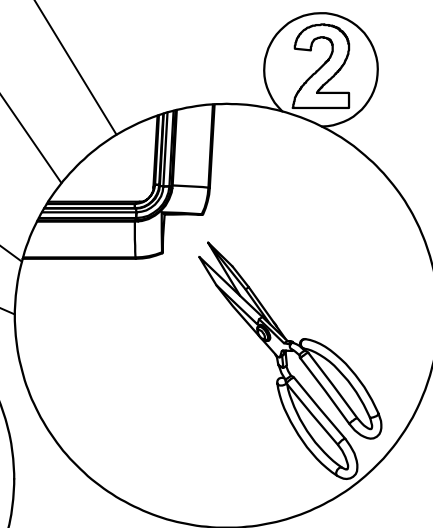

<33>

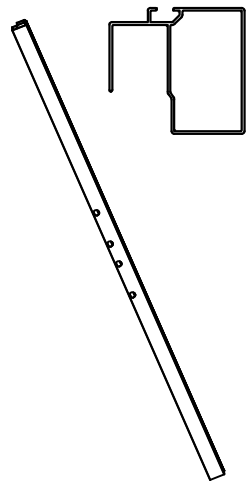

M4V 2x

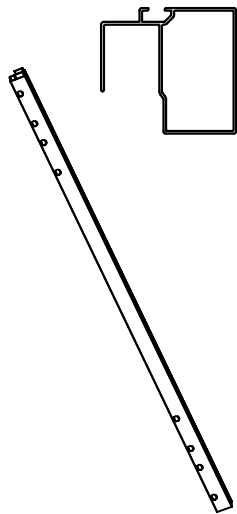


M7V 2x



6.2*11*15

3-1 16x



M6




8 16x



M6x15

1 16x

43

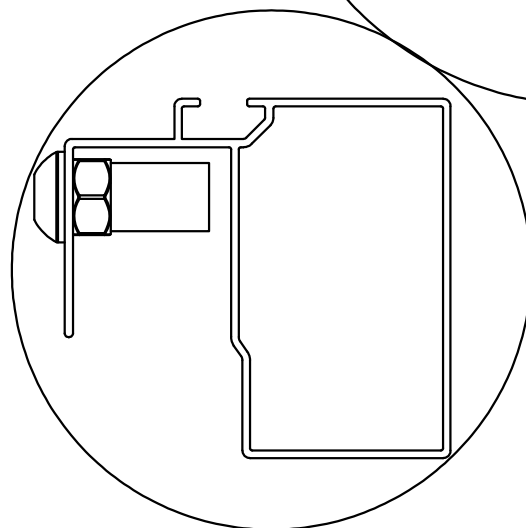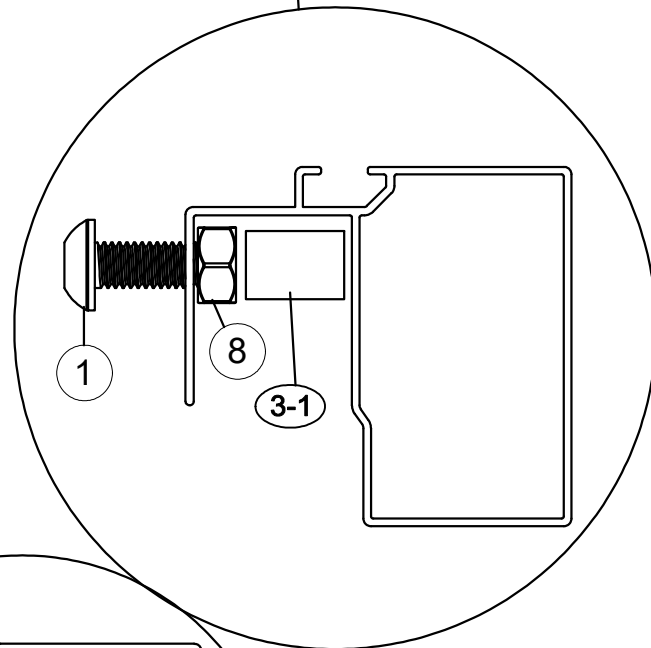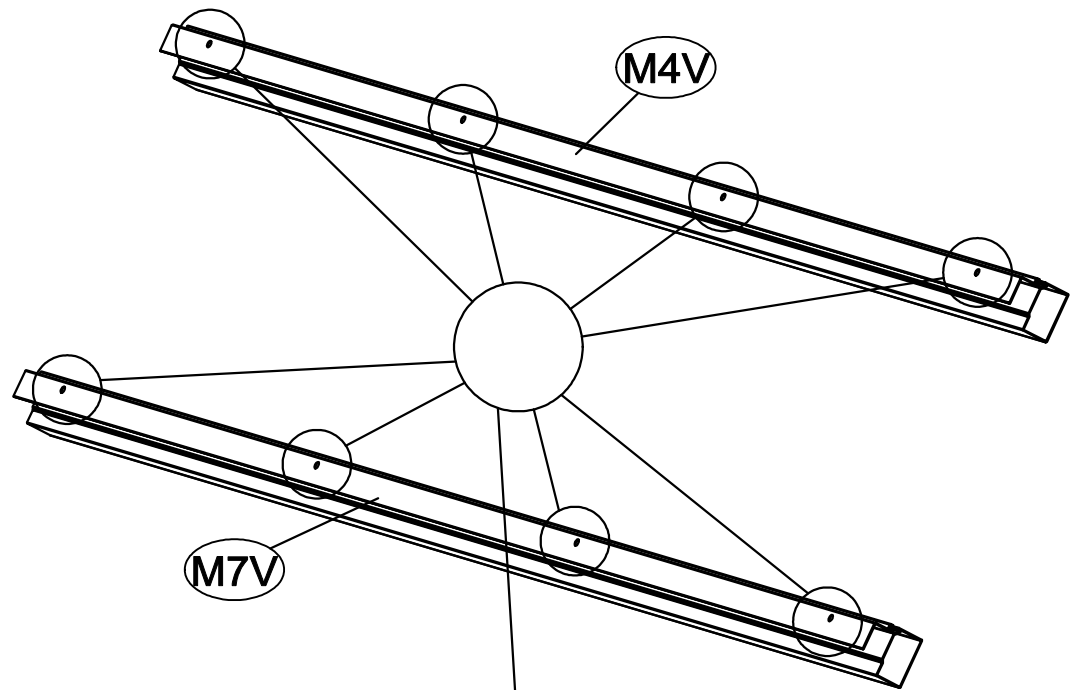

<34>




M4N 2x

12 12x





M5*6

13 48x

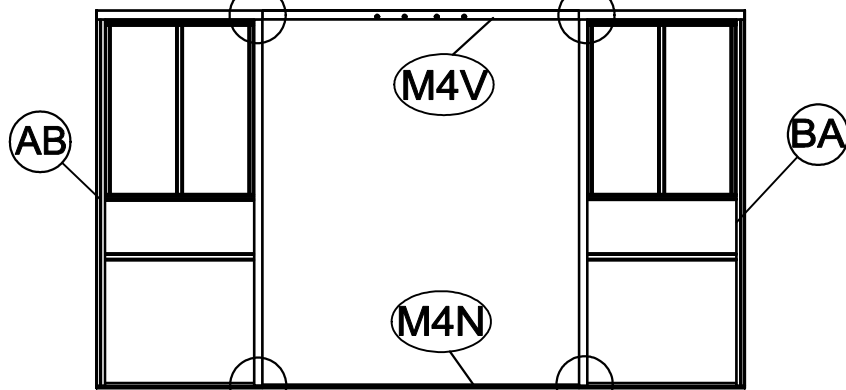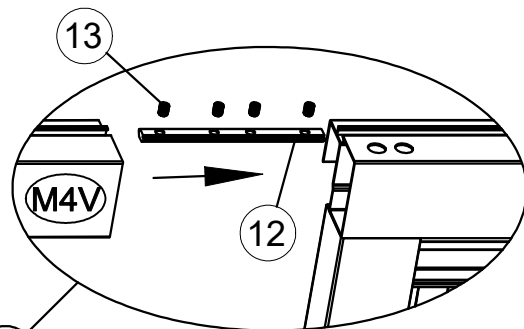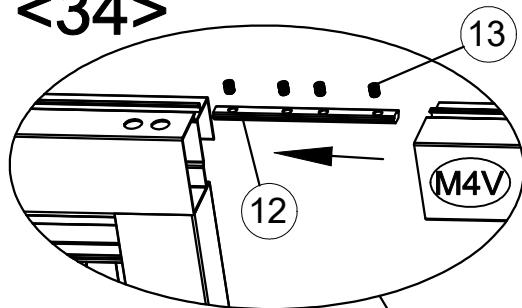

x2

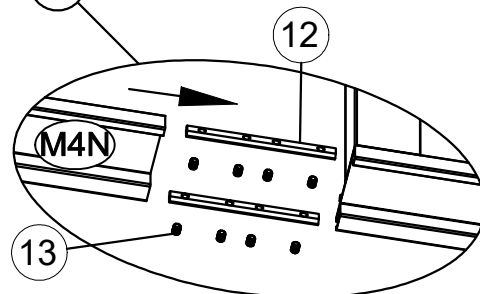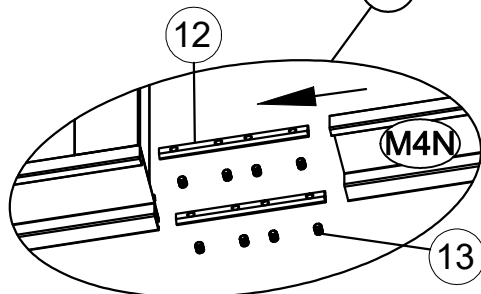




M4N 2x

12 12x





M5*6





13 48x

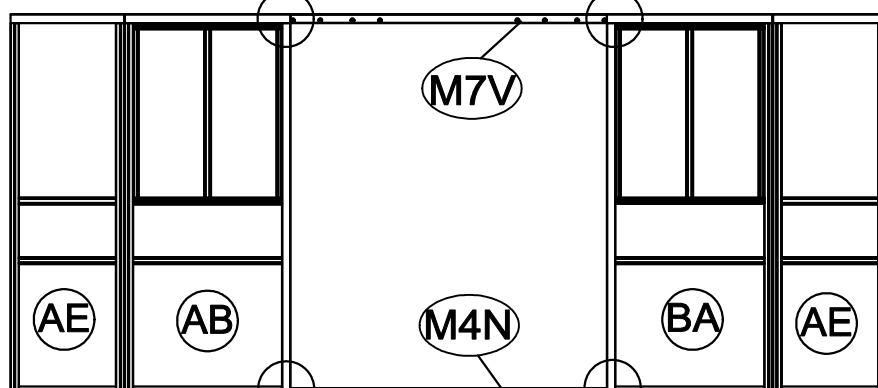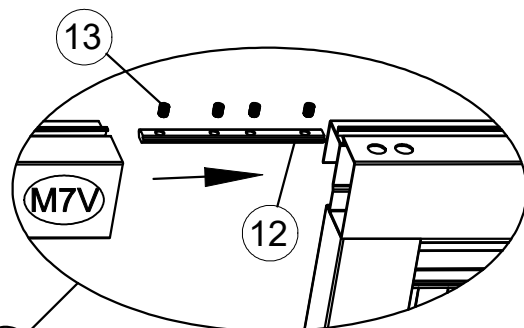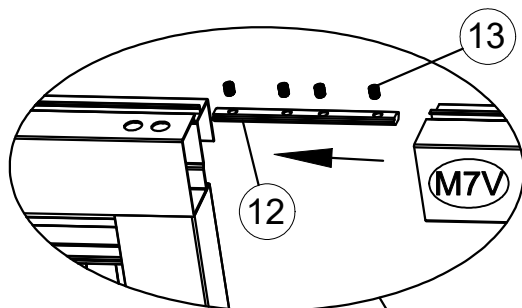


x2

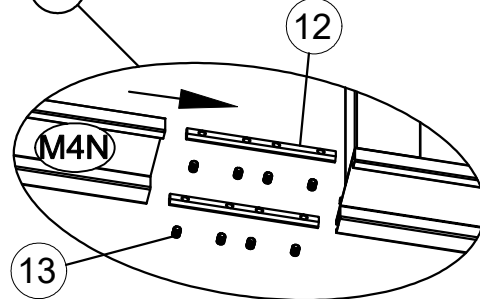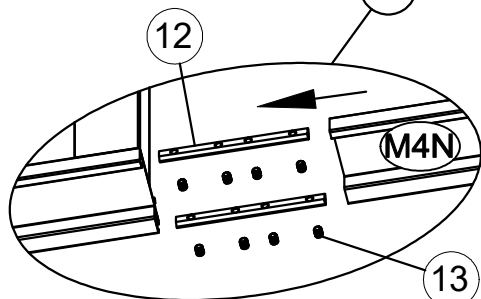

<35>

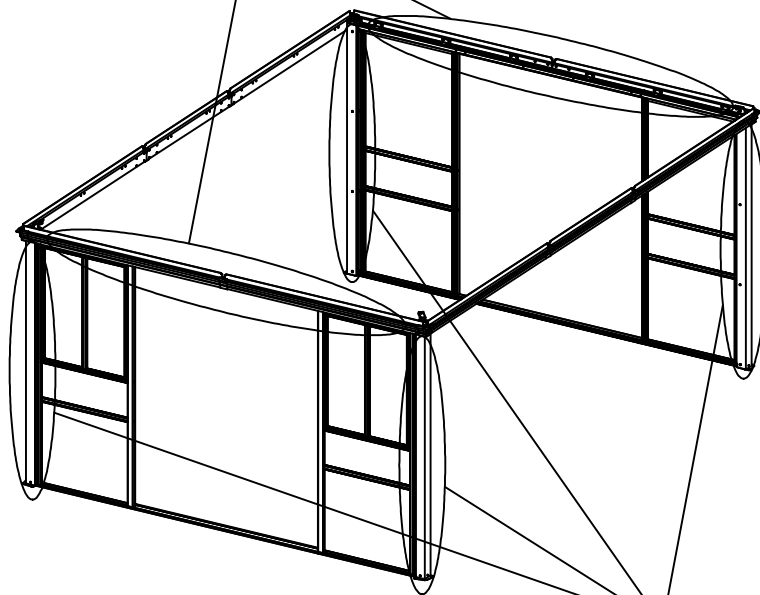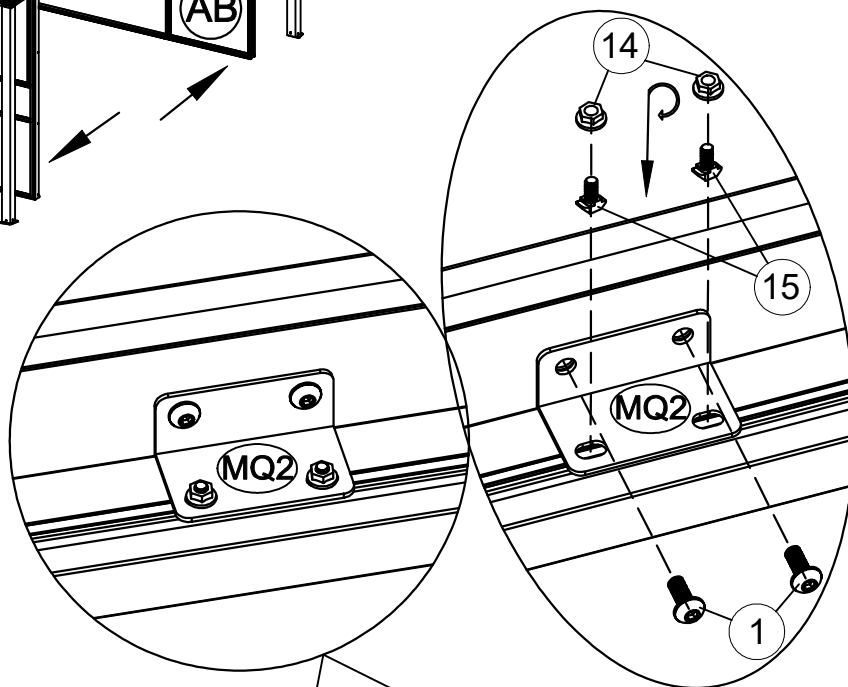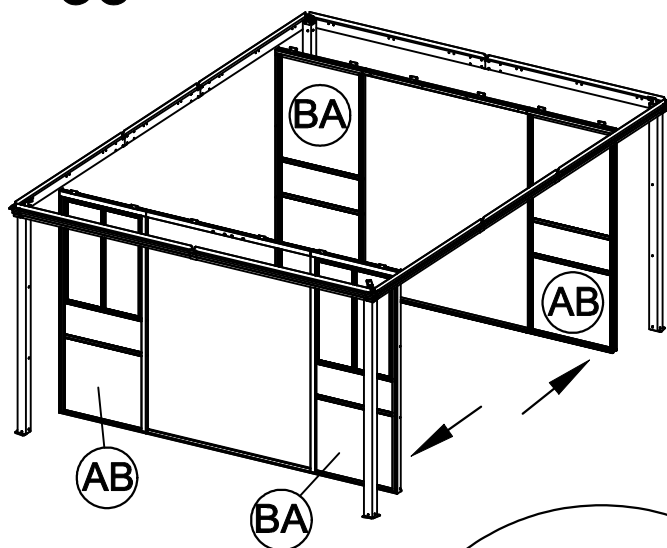

MQ2 12x



M5x12

15 24x



M5




14 24x









M6x15

1 40x


45

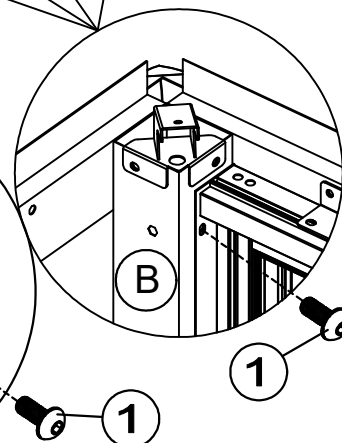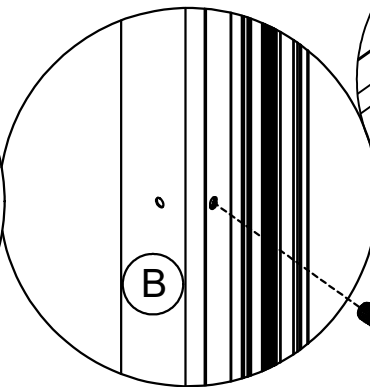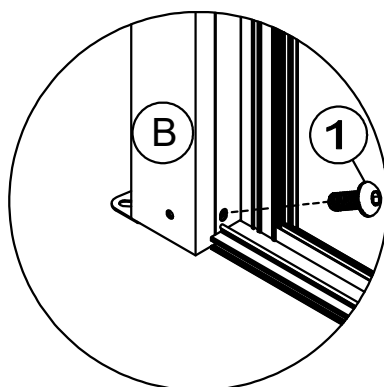


<36>

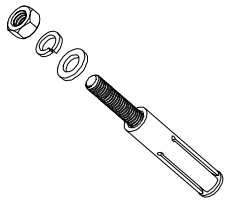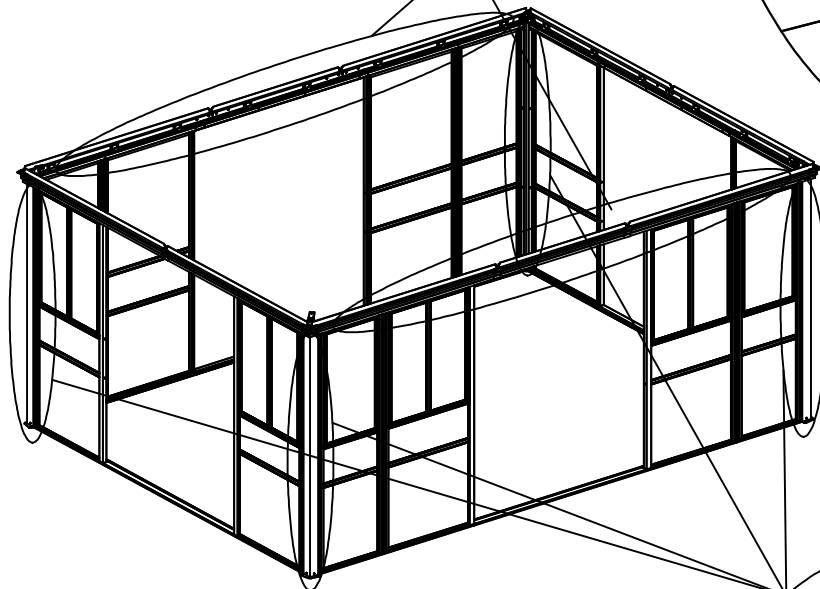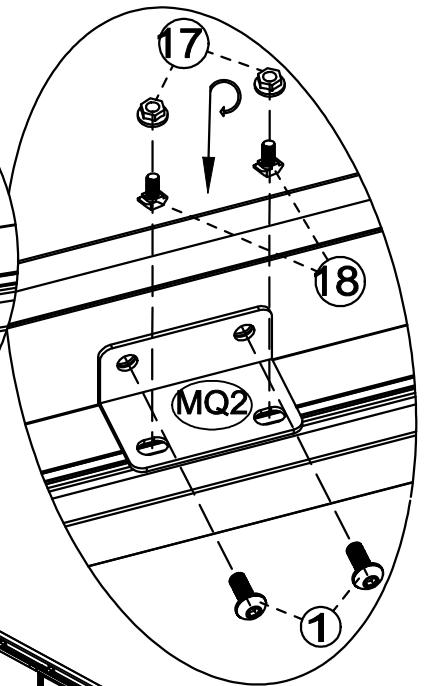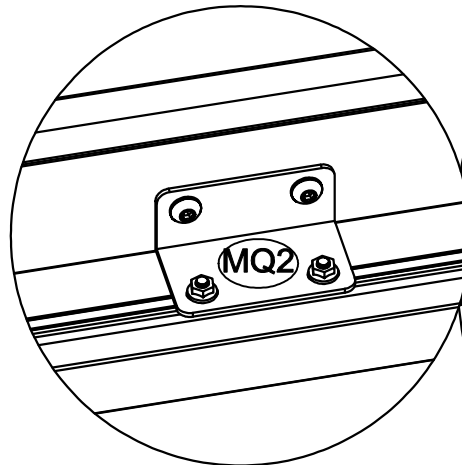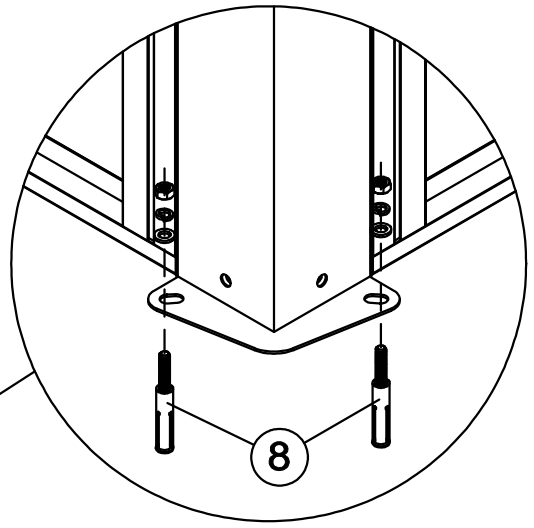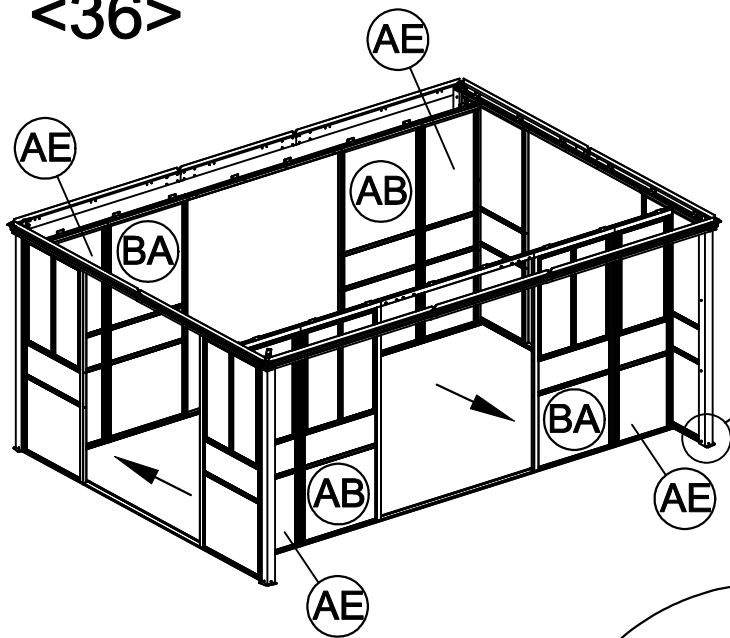

20 8x



MQ2 16x



M5x12

15 32x



M5




14 32x



M6x15

1 48x

46

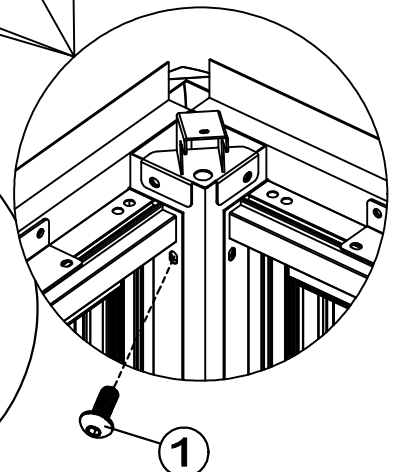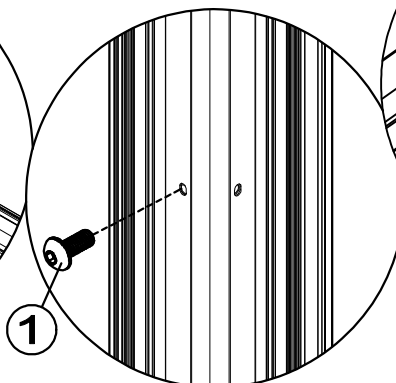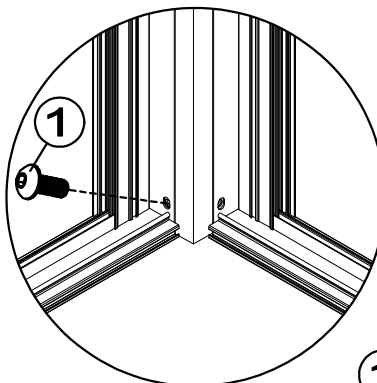

<37>

DA 4x


Pay attention to the installation direction of the left and right sides of the door.


M1F 4x



ST4.8x12

3 16x

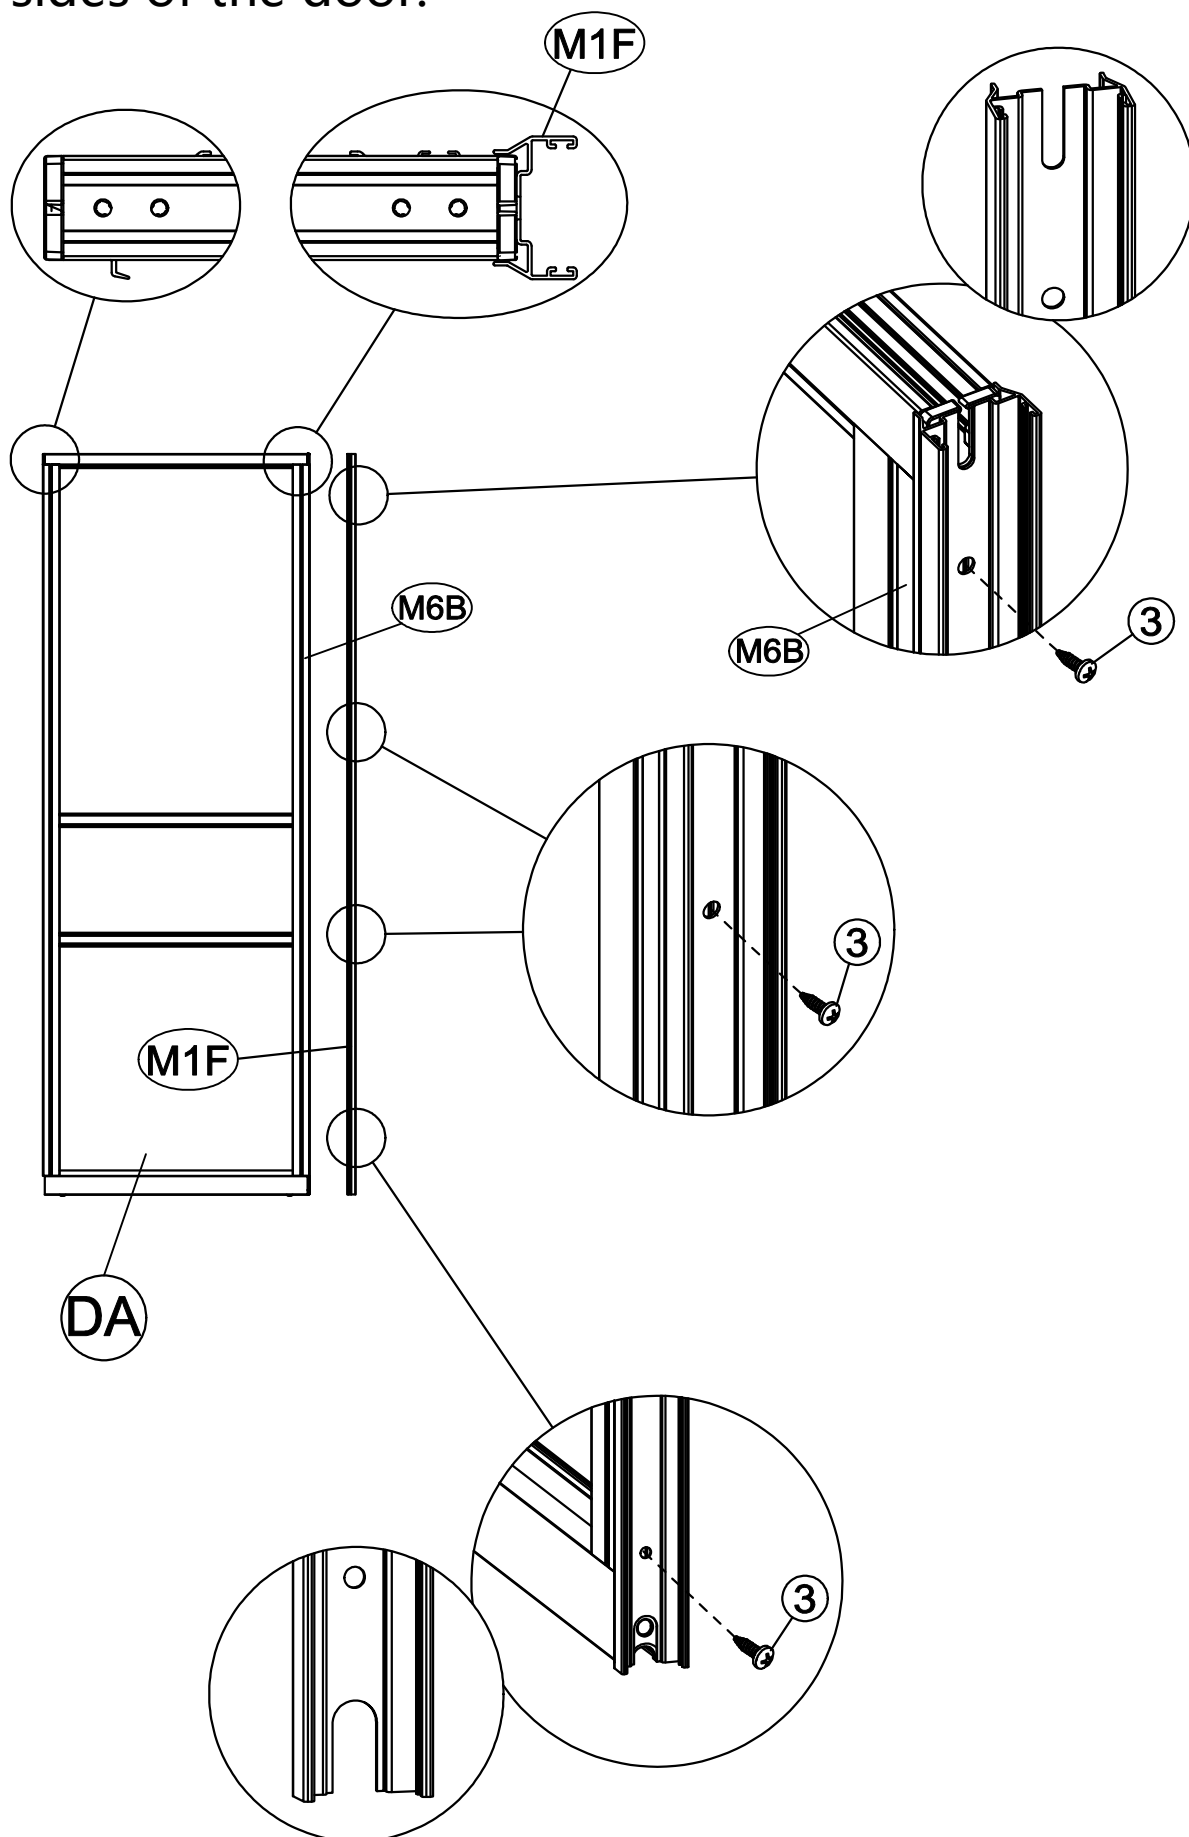




U1 4x



U2 4x



U3 4x




M4x12

22 4x


<38>


DA 4x

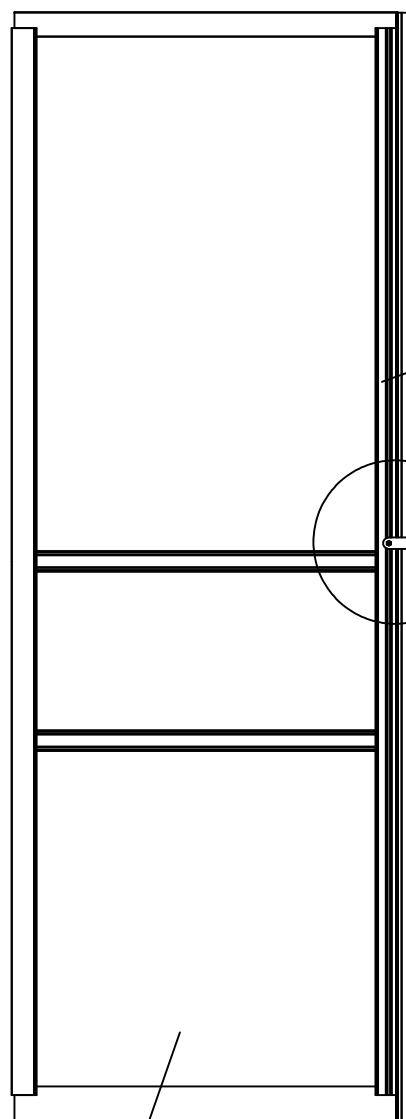

M6B

DA

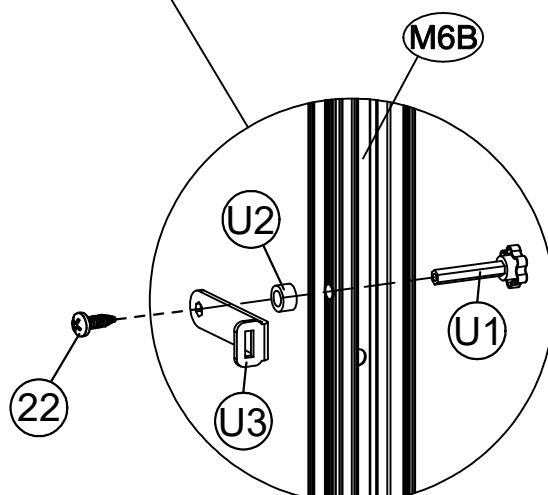



U4 4x




M5x15


21 16x

<39>


AD 4x

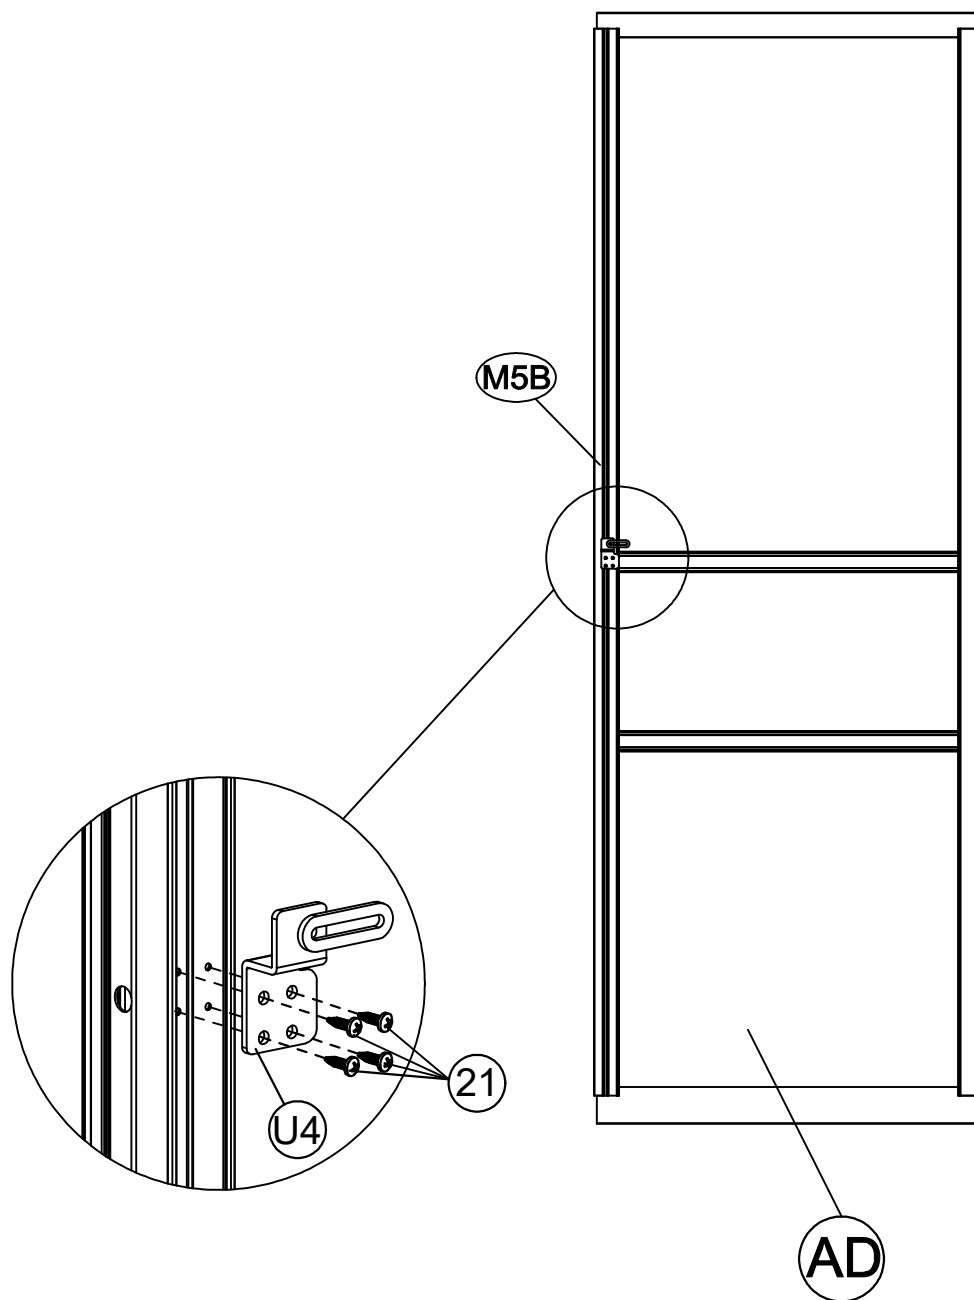

<40>


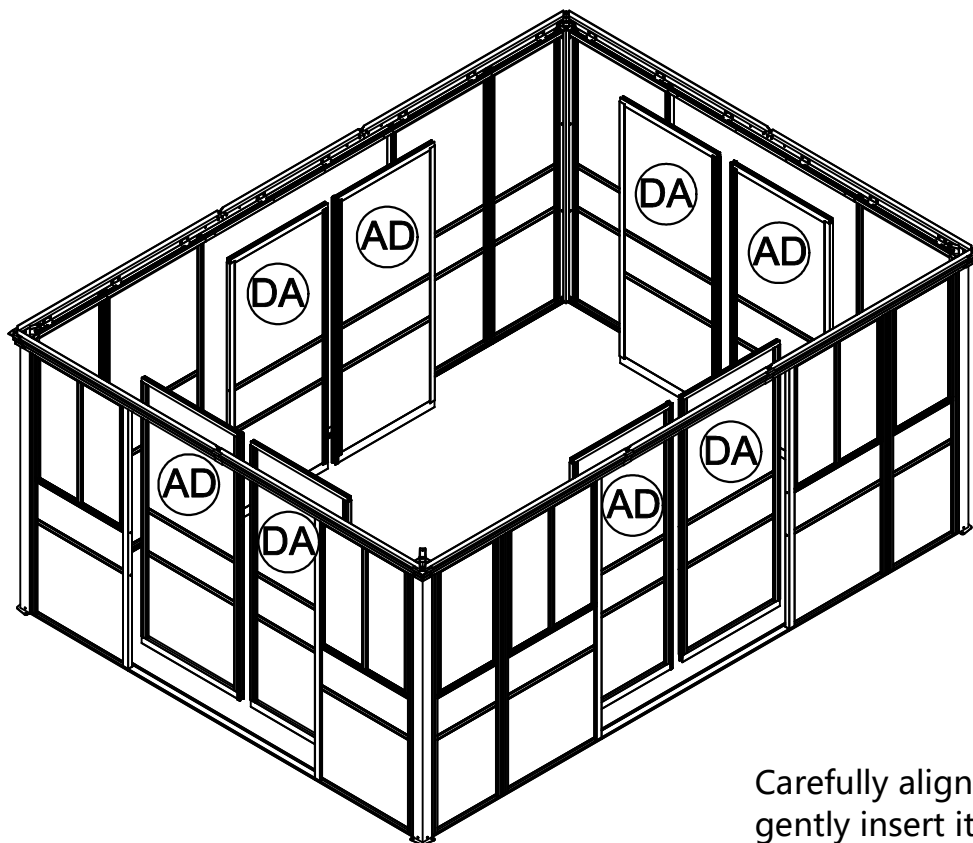


Carefully align the door and gently insert it from the inside into the upper slot.

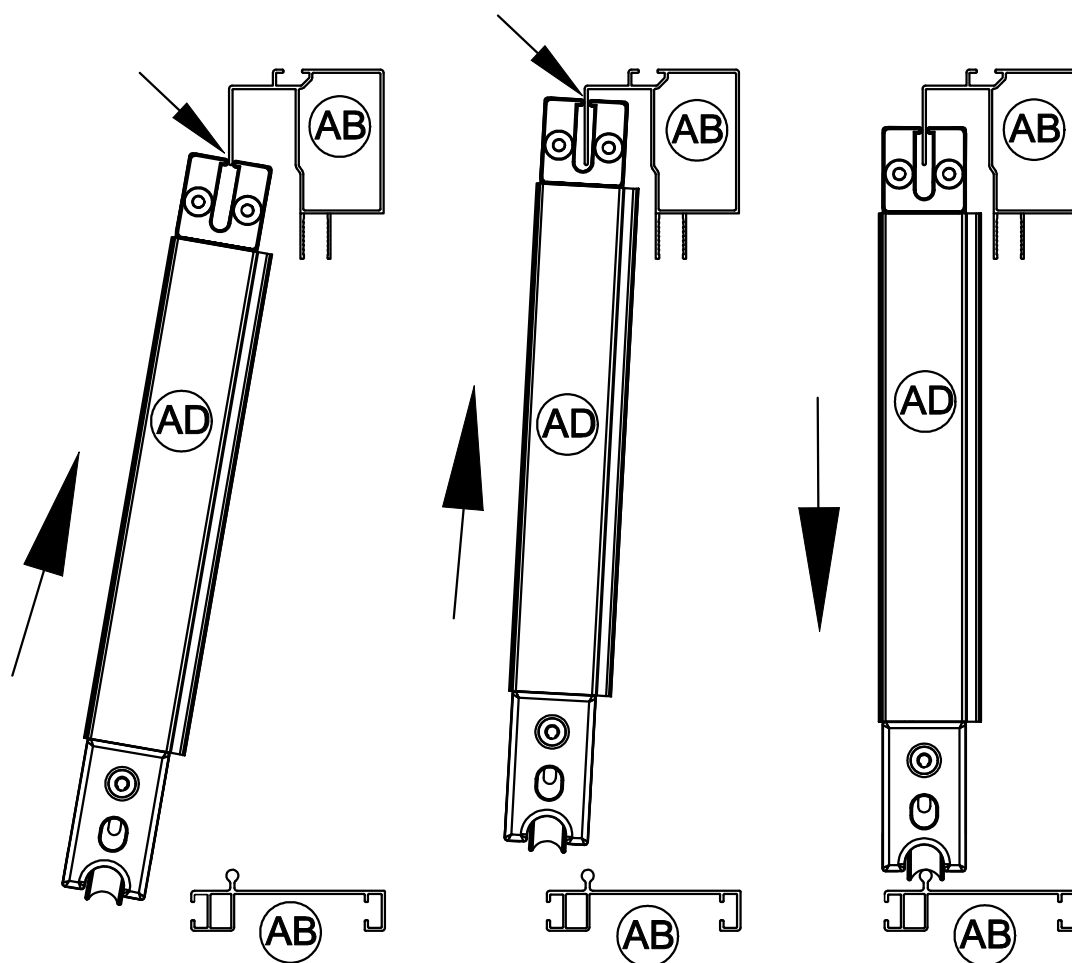

Repeat the previous steps for other components.

<41>

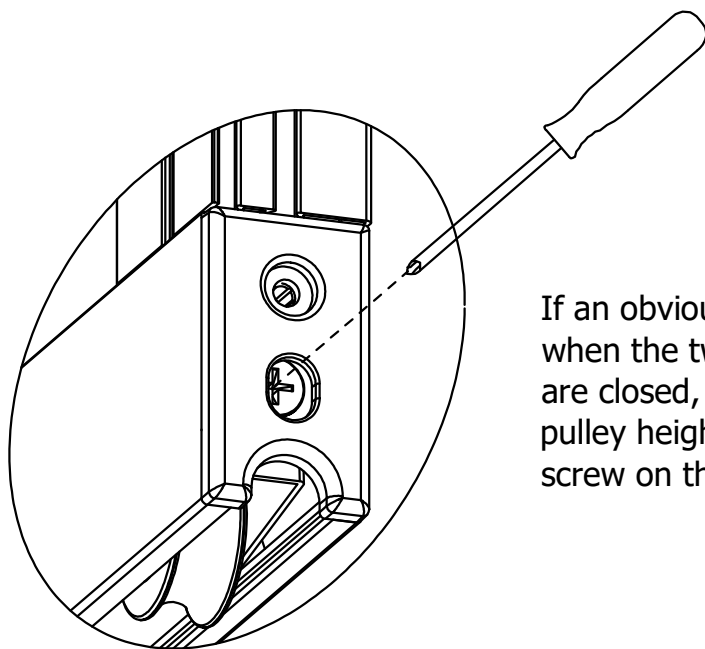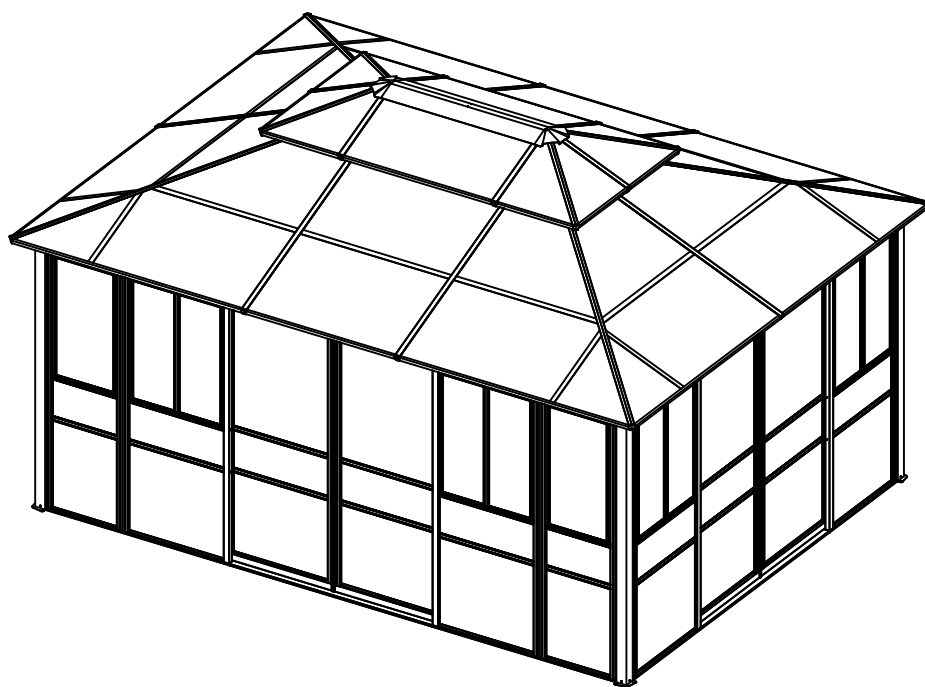

If an obvious gap is found when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<42>

