


ASSEMBLY INSTRUCTIONS

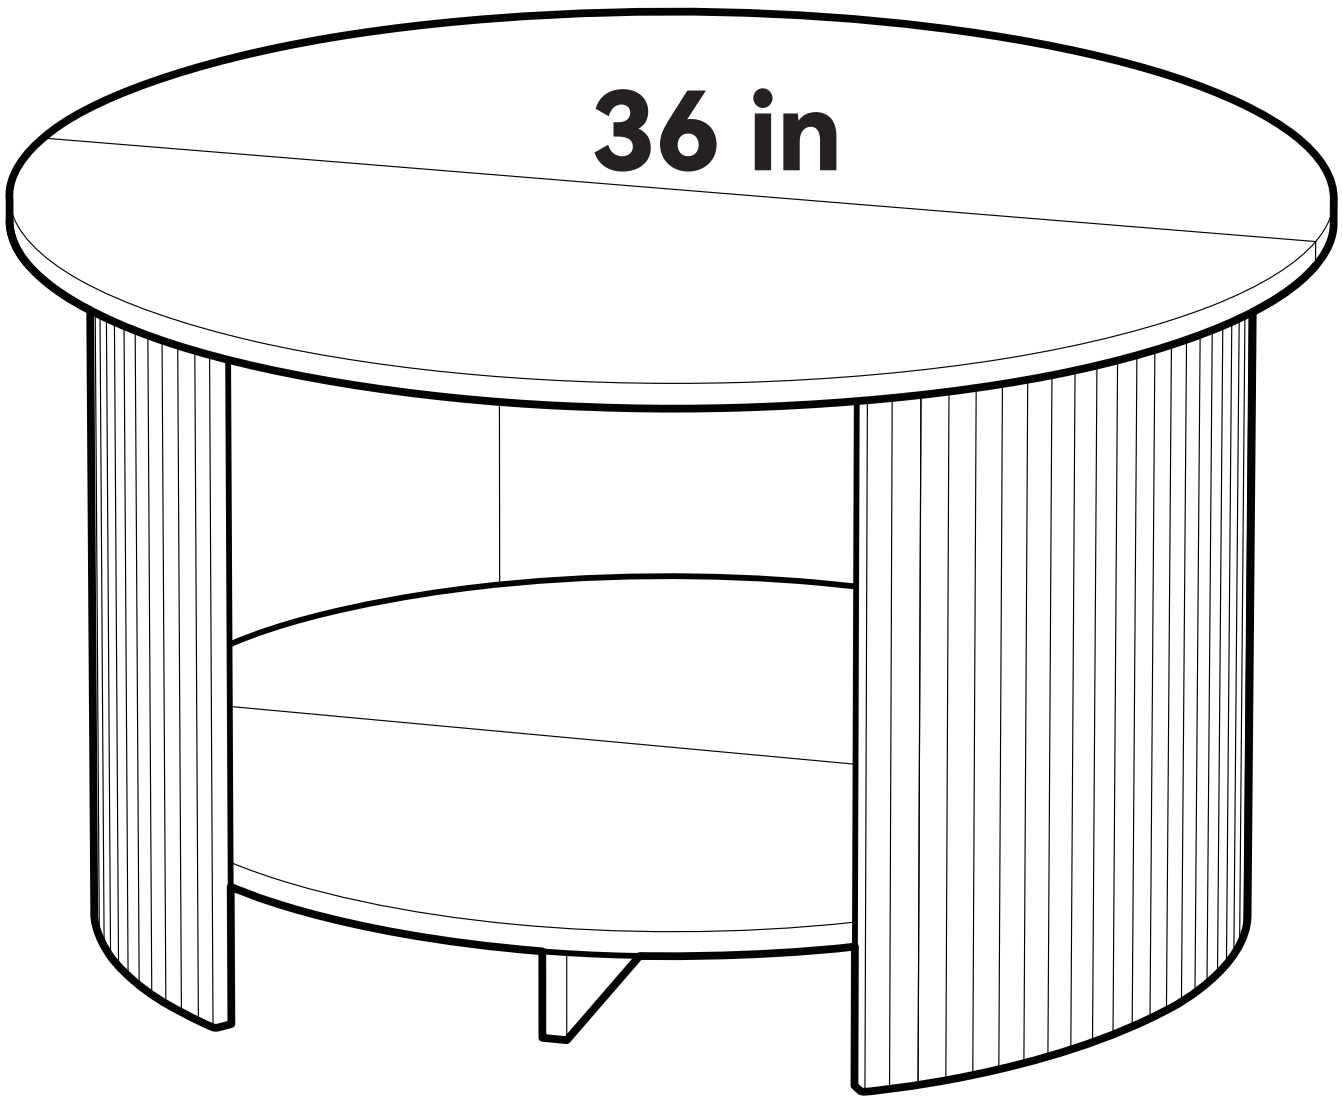

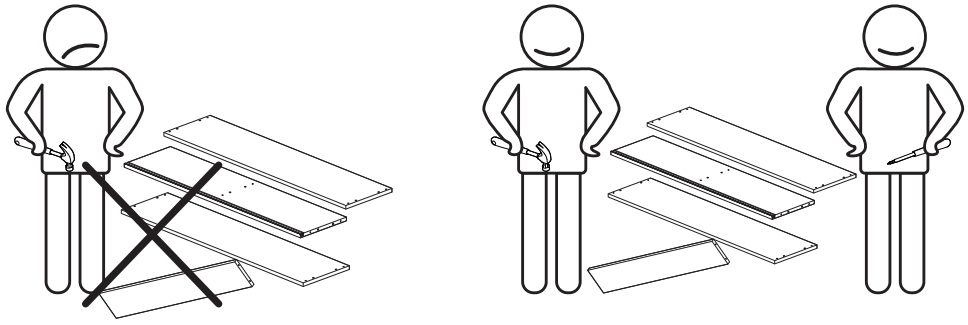


We recommend at least 2 people for the assembly.

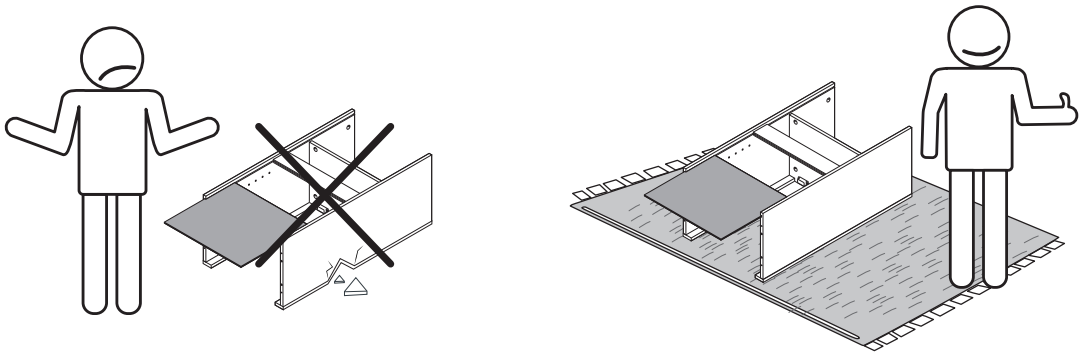


To prevent any damage during assembly, place a mat under the pieces.




PARTS DIAGRAM

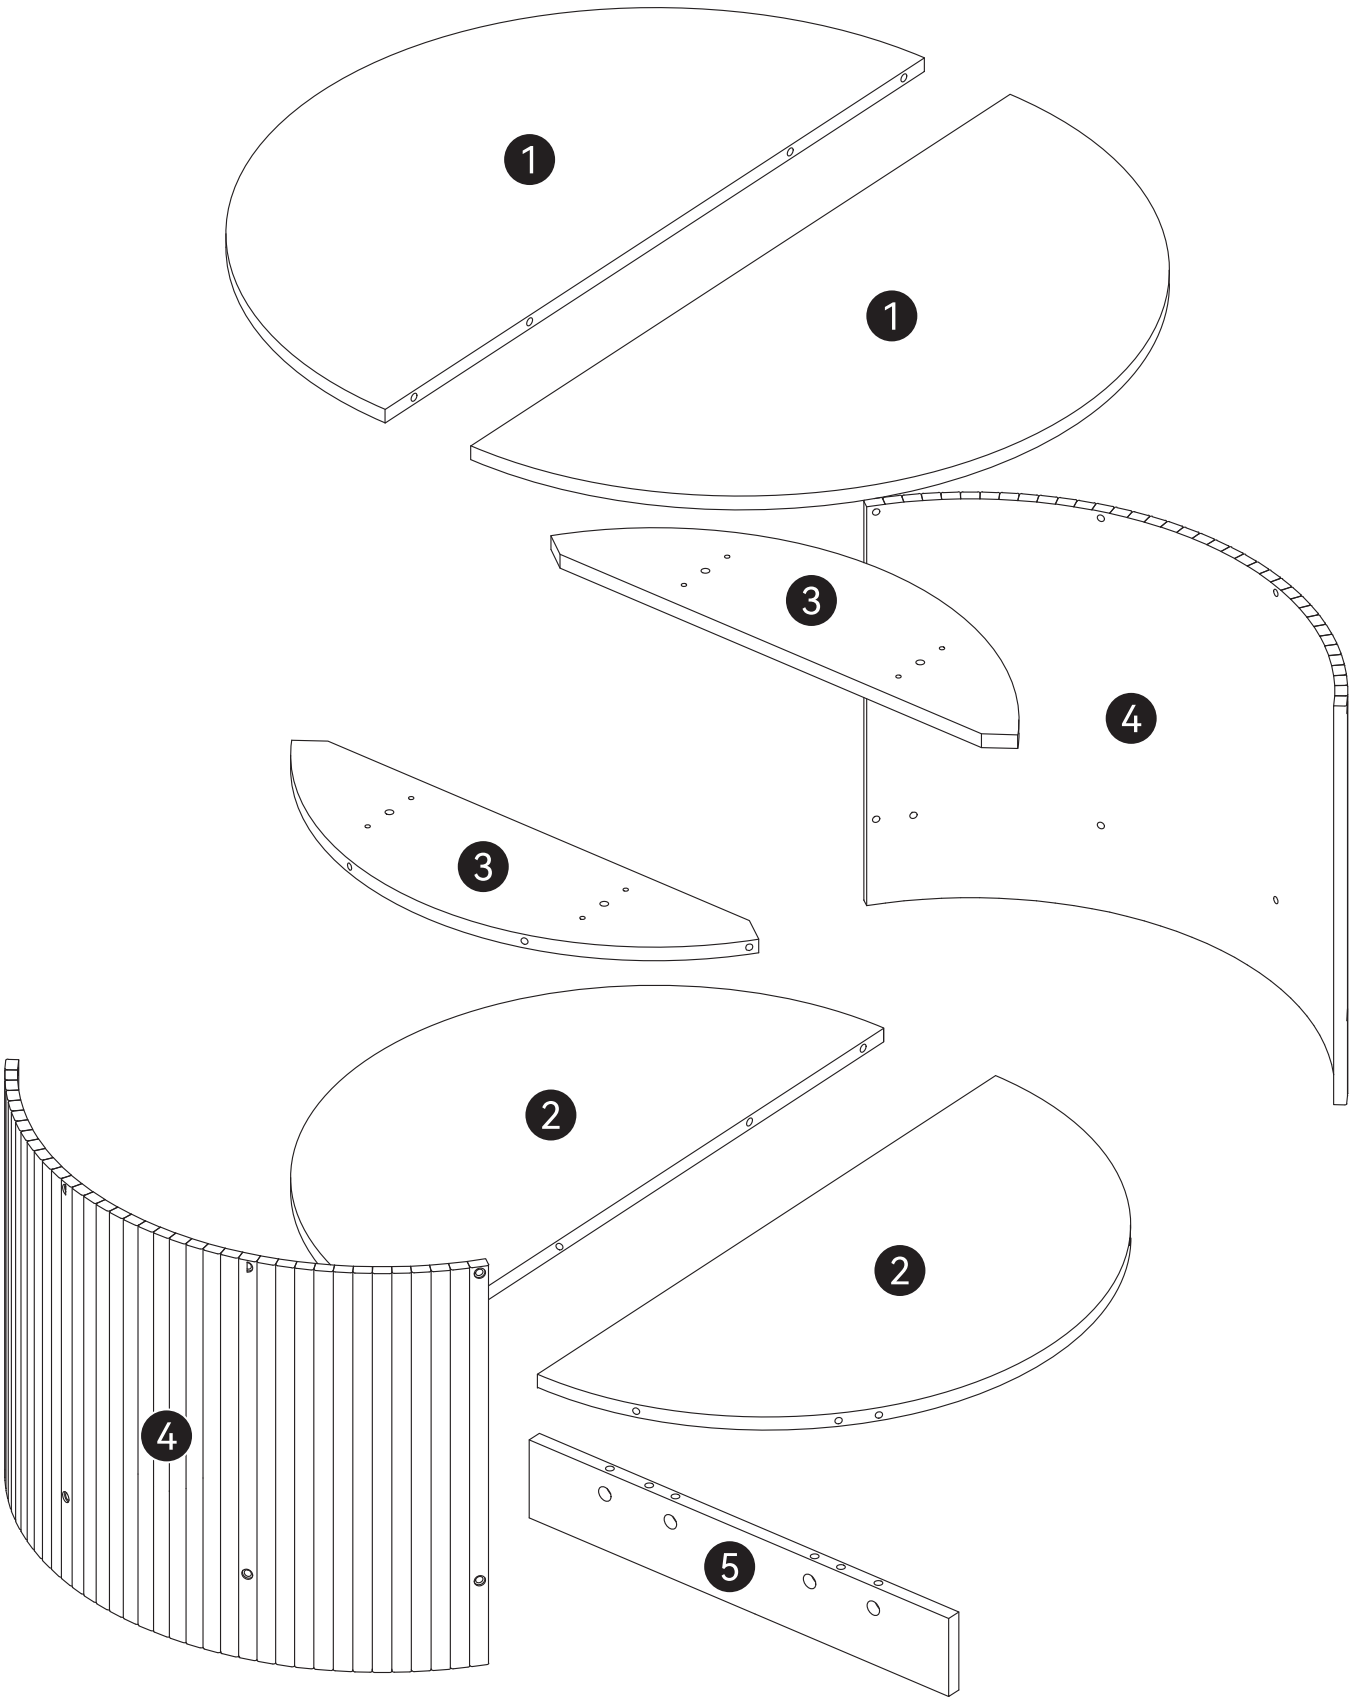


PARTS LIST

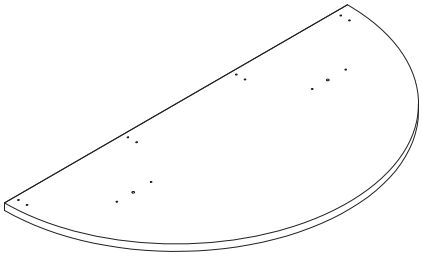


❶ x 2

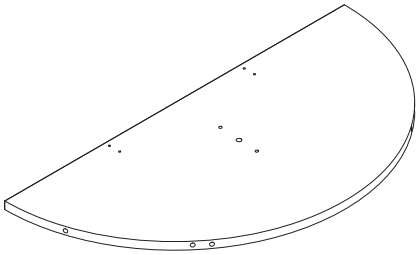


❷ x 2

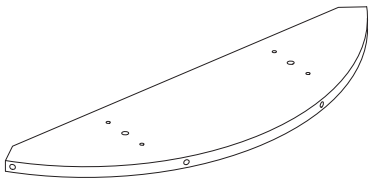

❸ x 2

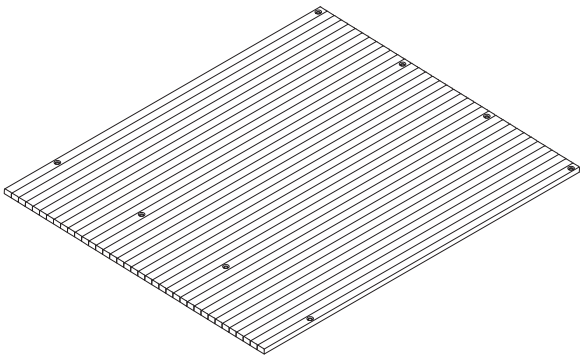


❹ x 2

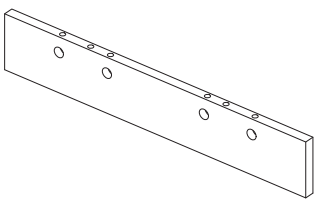

❺ x 1

HARDWARES

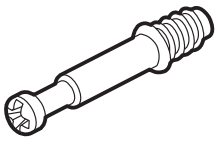


Ø6x35mm

A x 4




Ø15x10mm

B x 4

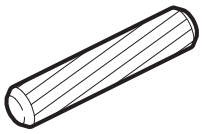

Ø6x30mm

C x 14



M4x35mm

D x 16




M4x25mm

E x 8




M3x14mm

F x 24

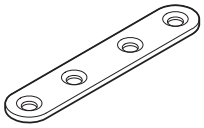

G x 6




Ø6x20mm

H x 4




I x 16

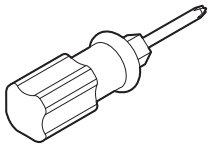

x 1


SPARE PARTS

The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

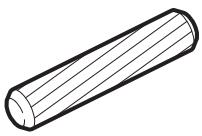

Ø6x30mm

C x 1



M4x35mm

D x 1



M3x14mm

F x 1




I x 1


CAM LOCK FASTEN SYSTEM

⚠ Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

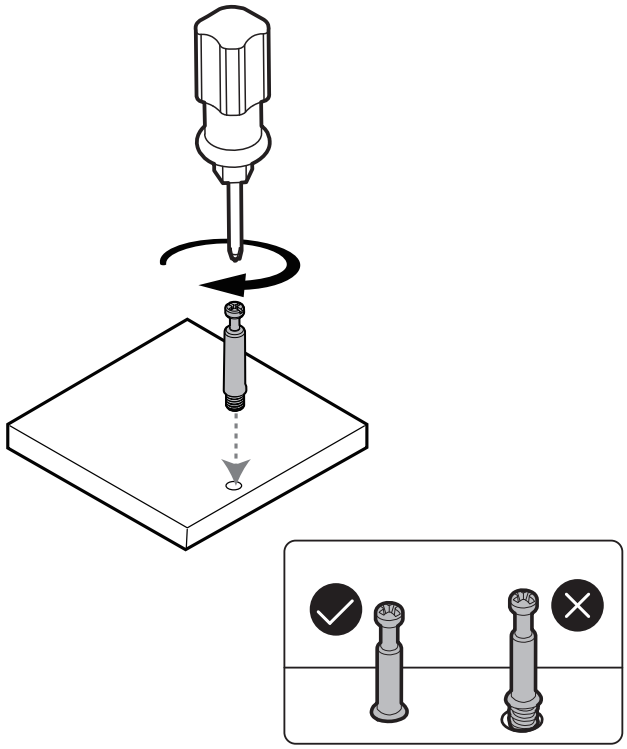

2

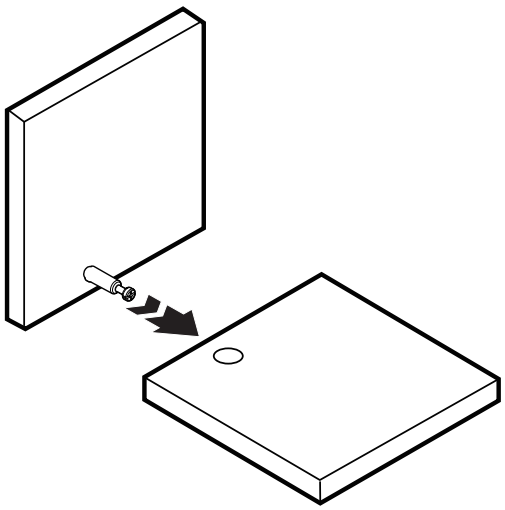


3

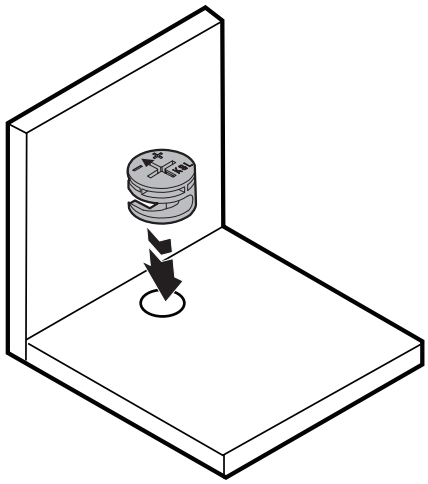




Point the opening towards the edge of the board.


4

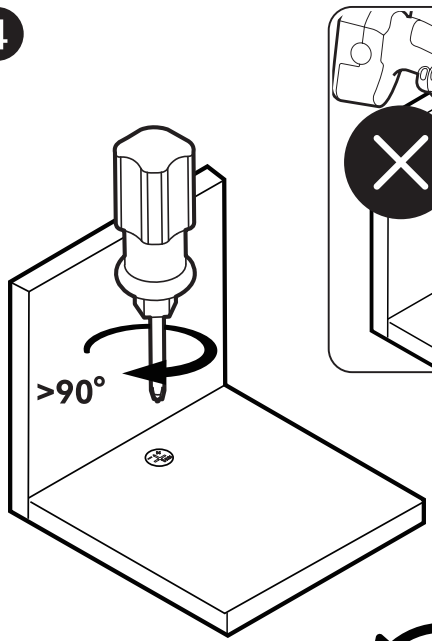


ASSEMBLY


1

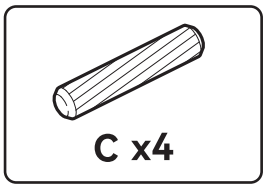

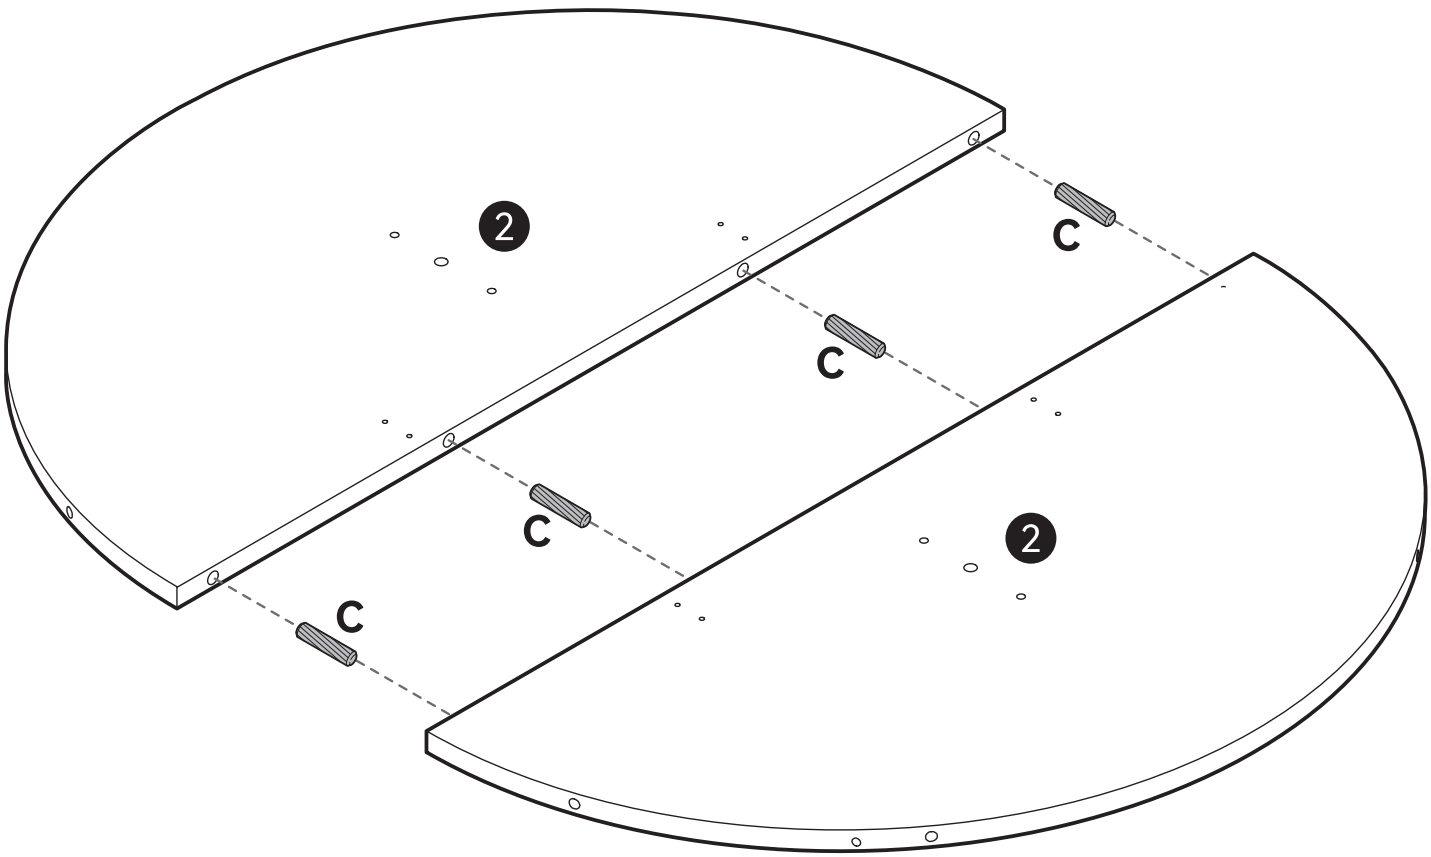



2

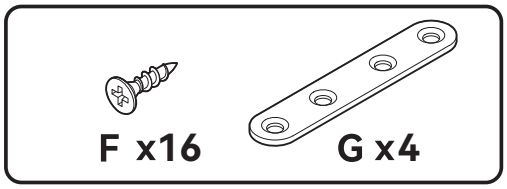


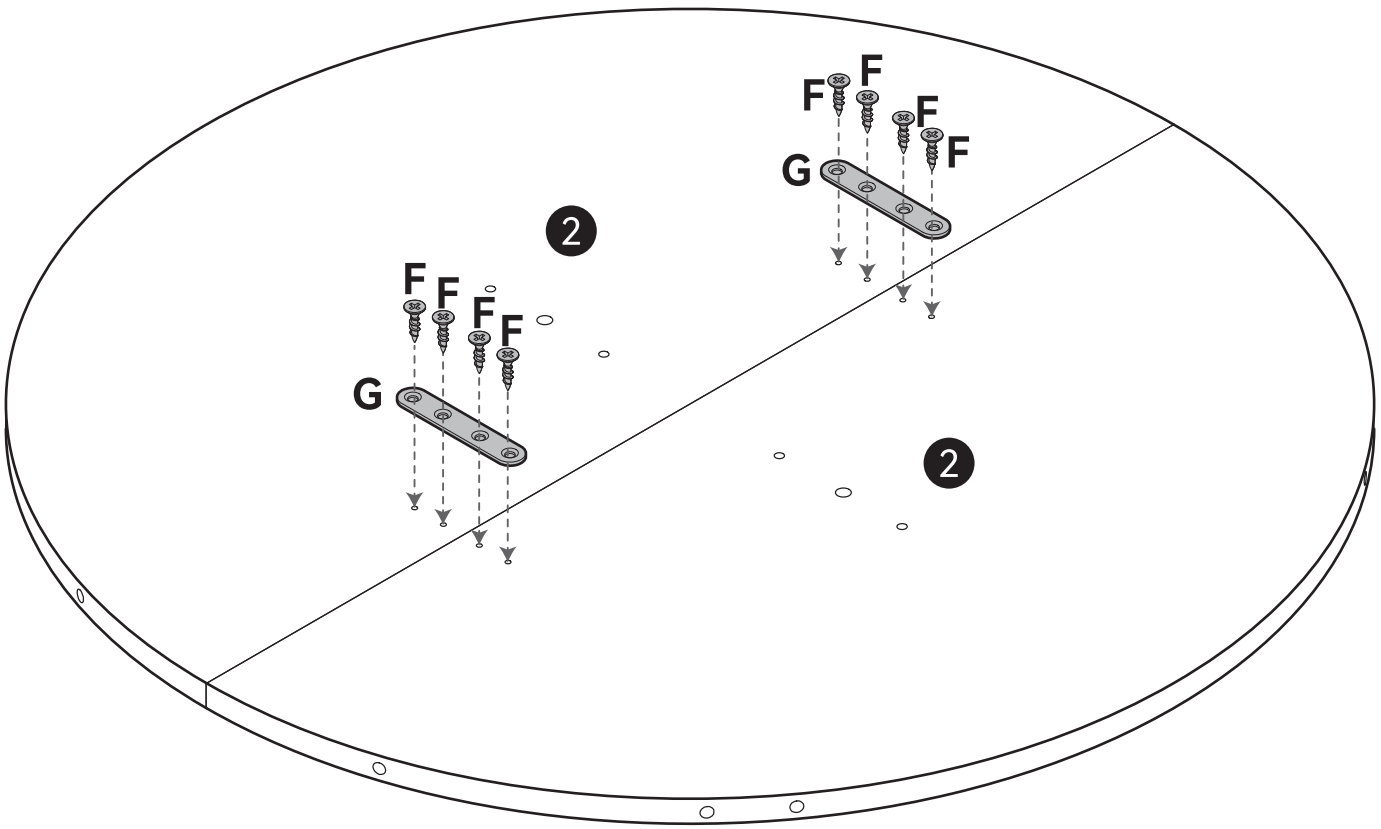


3

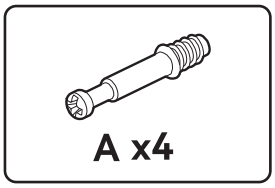


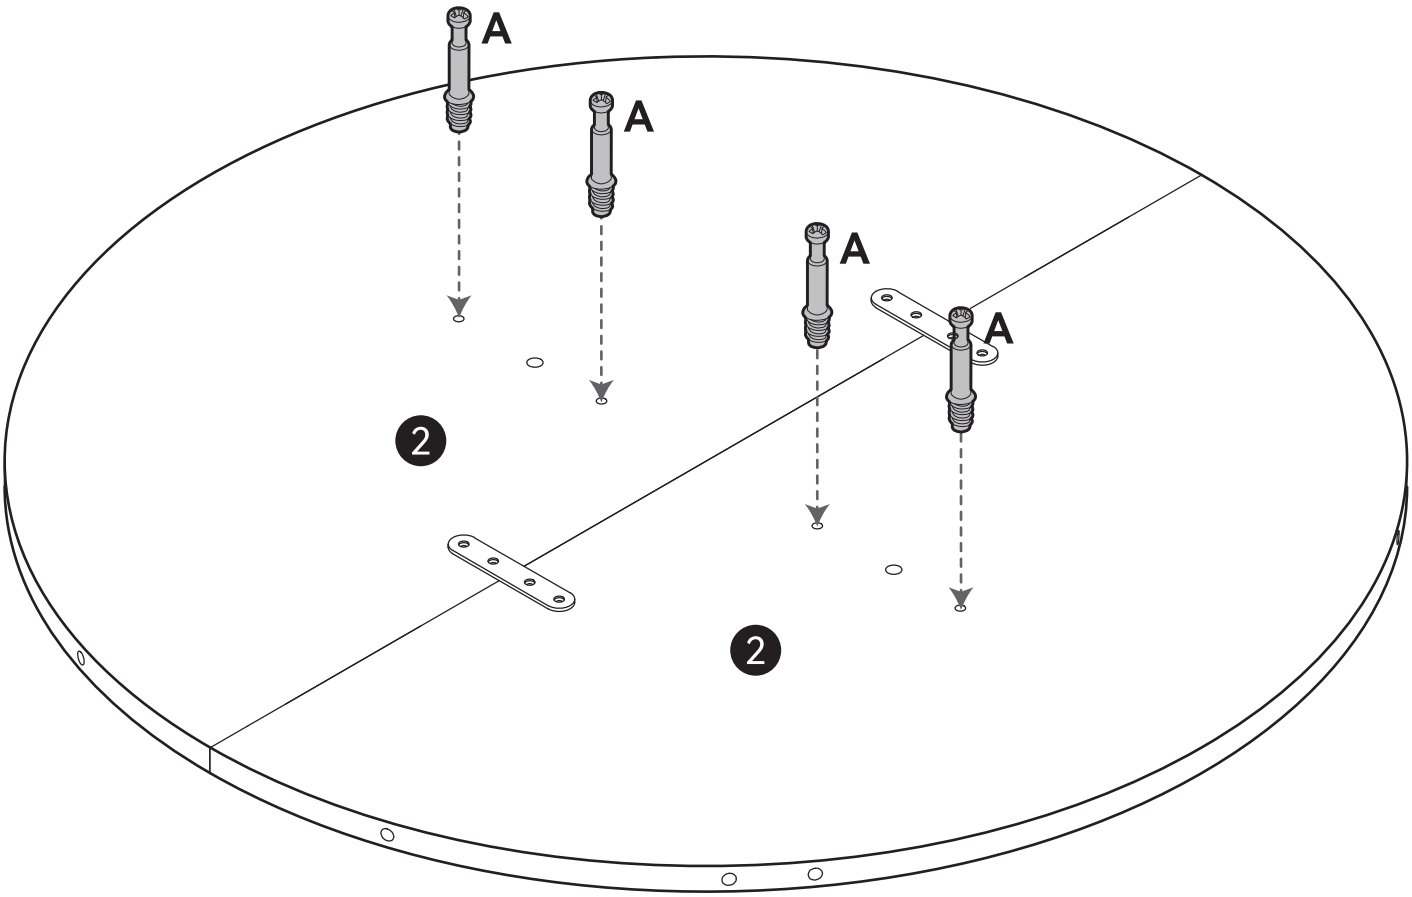


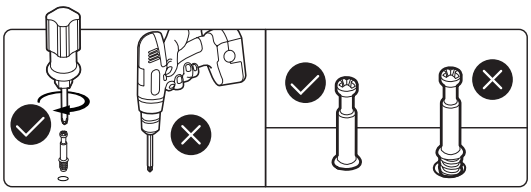


4

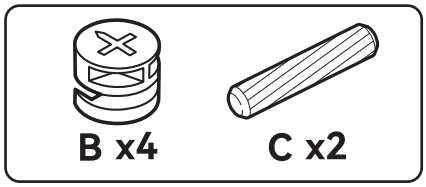


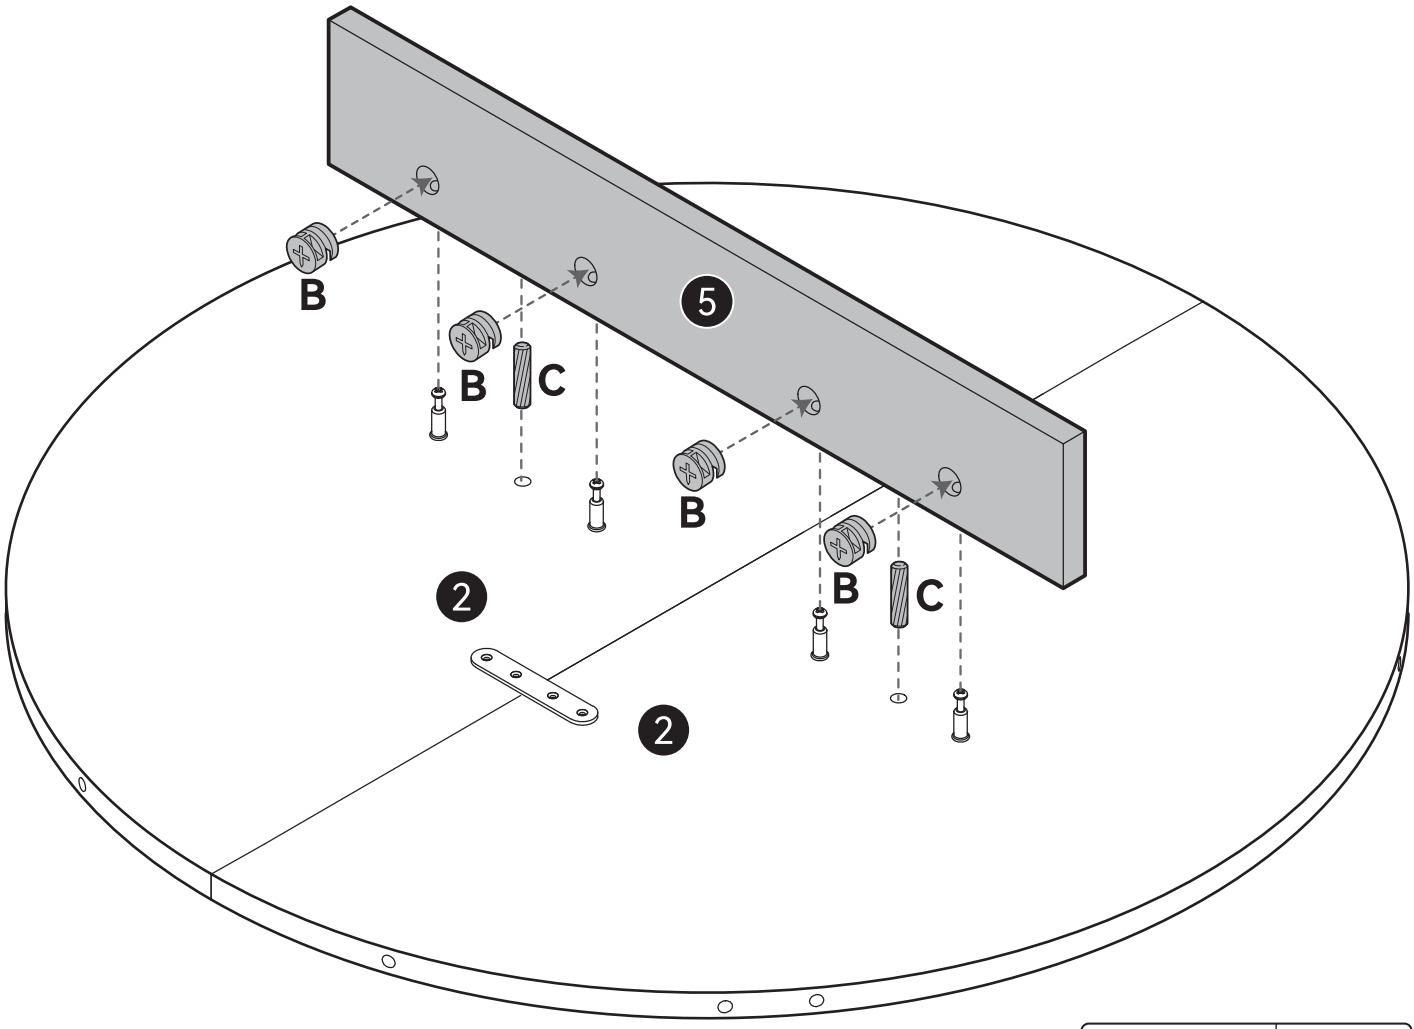

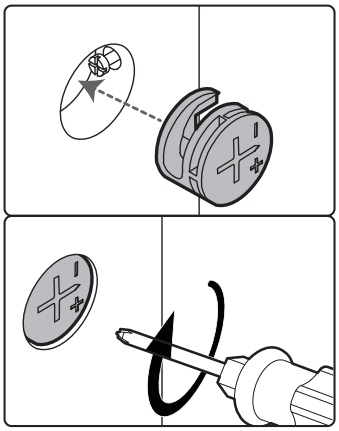



5

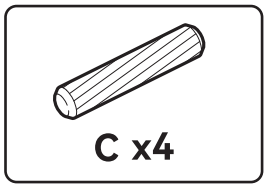

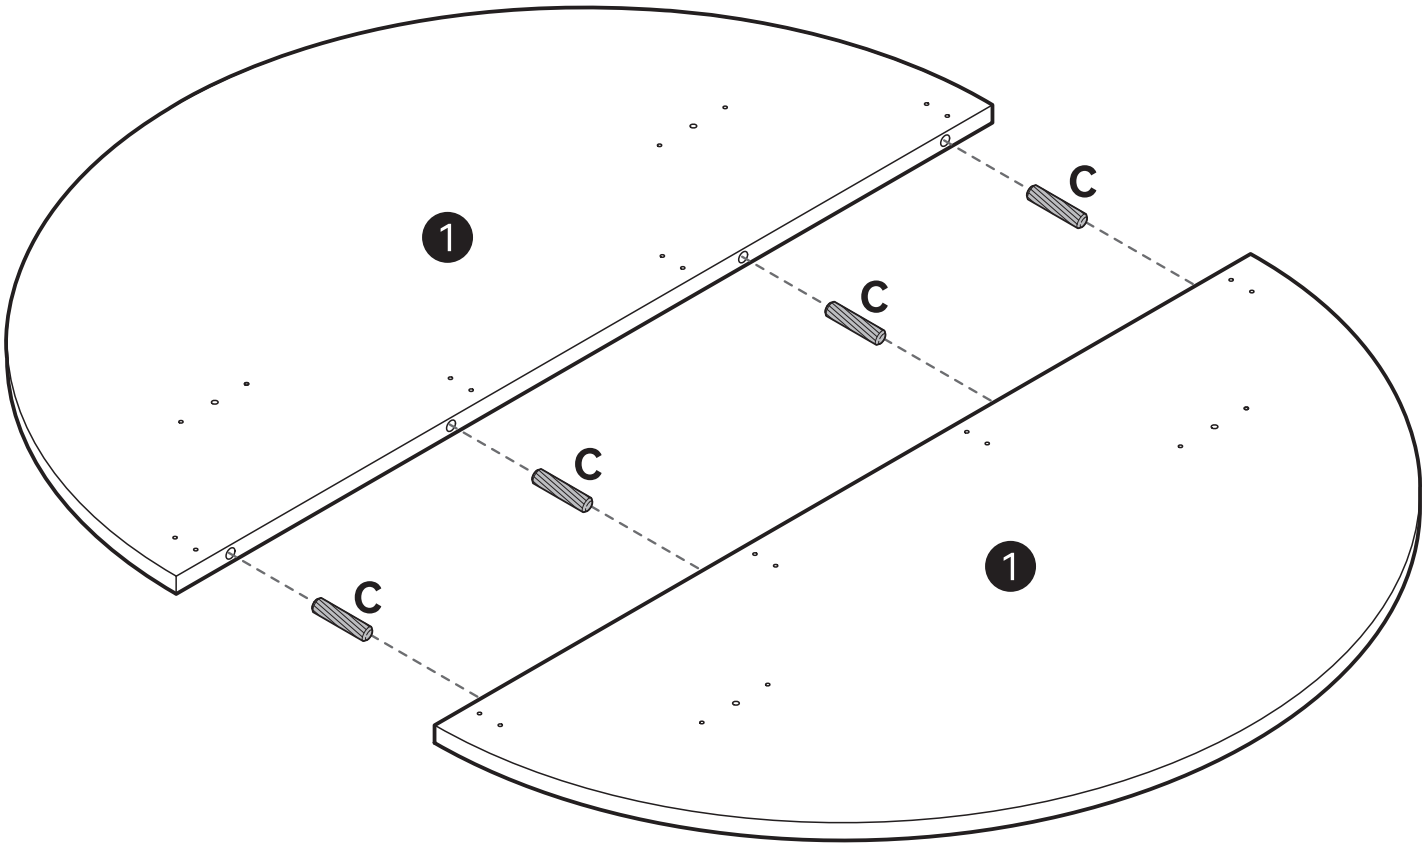


6

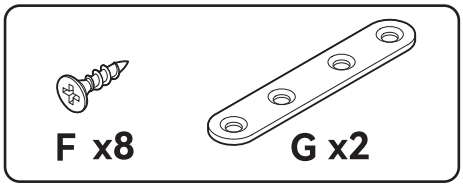


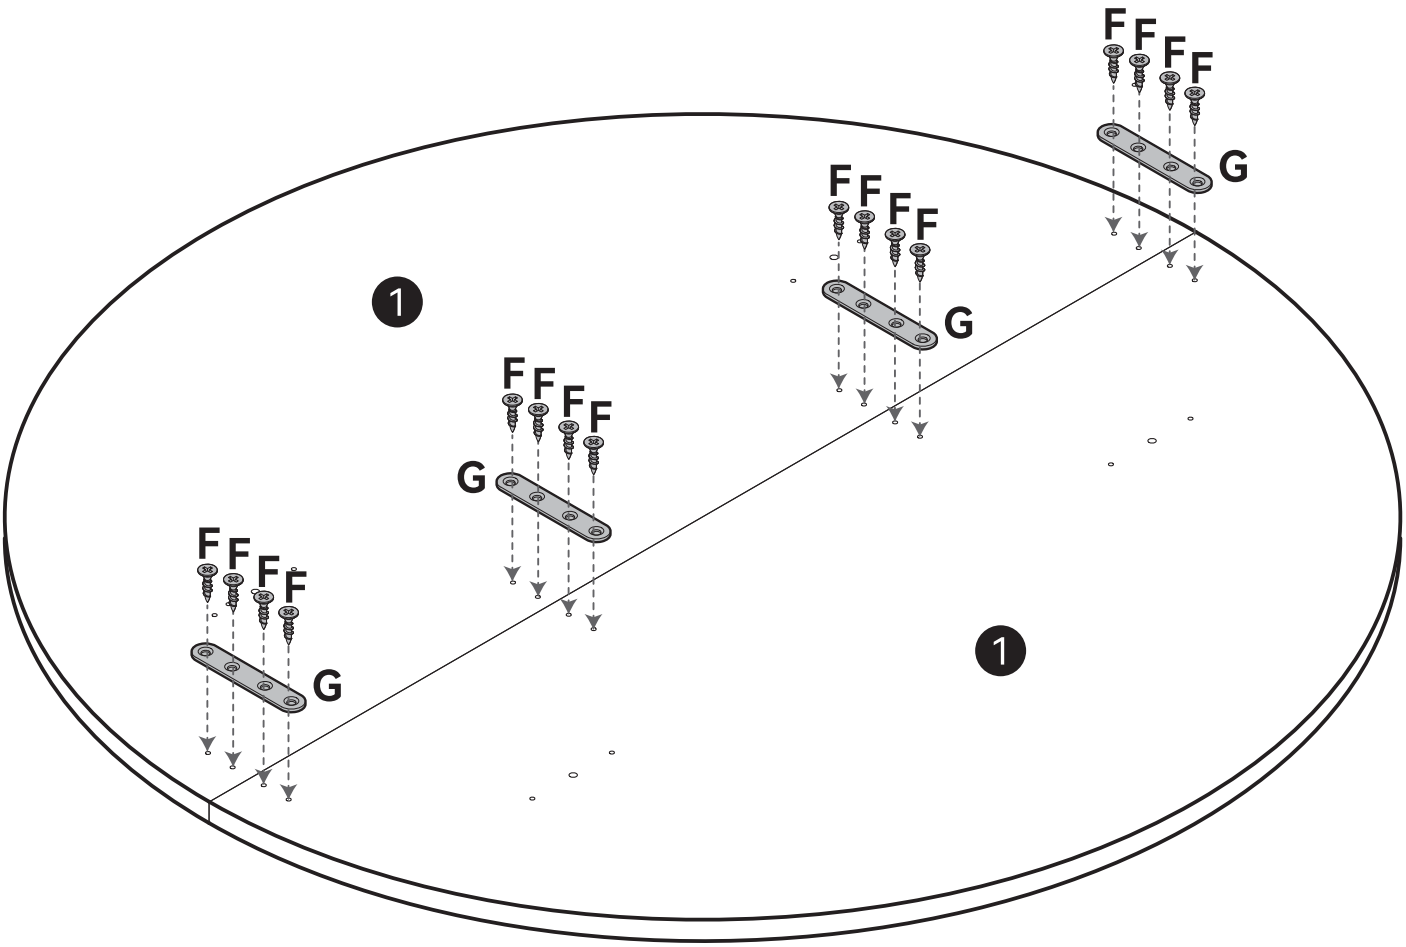


7

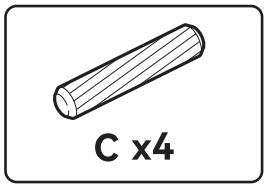


Insert into the corresponding dowel hole.

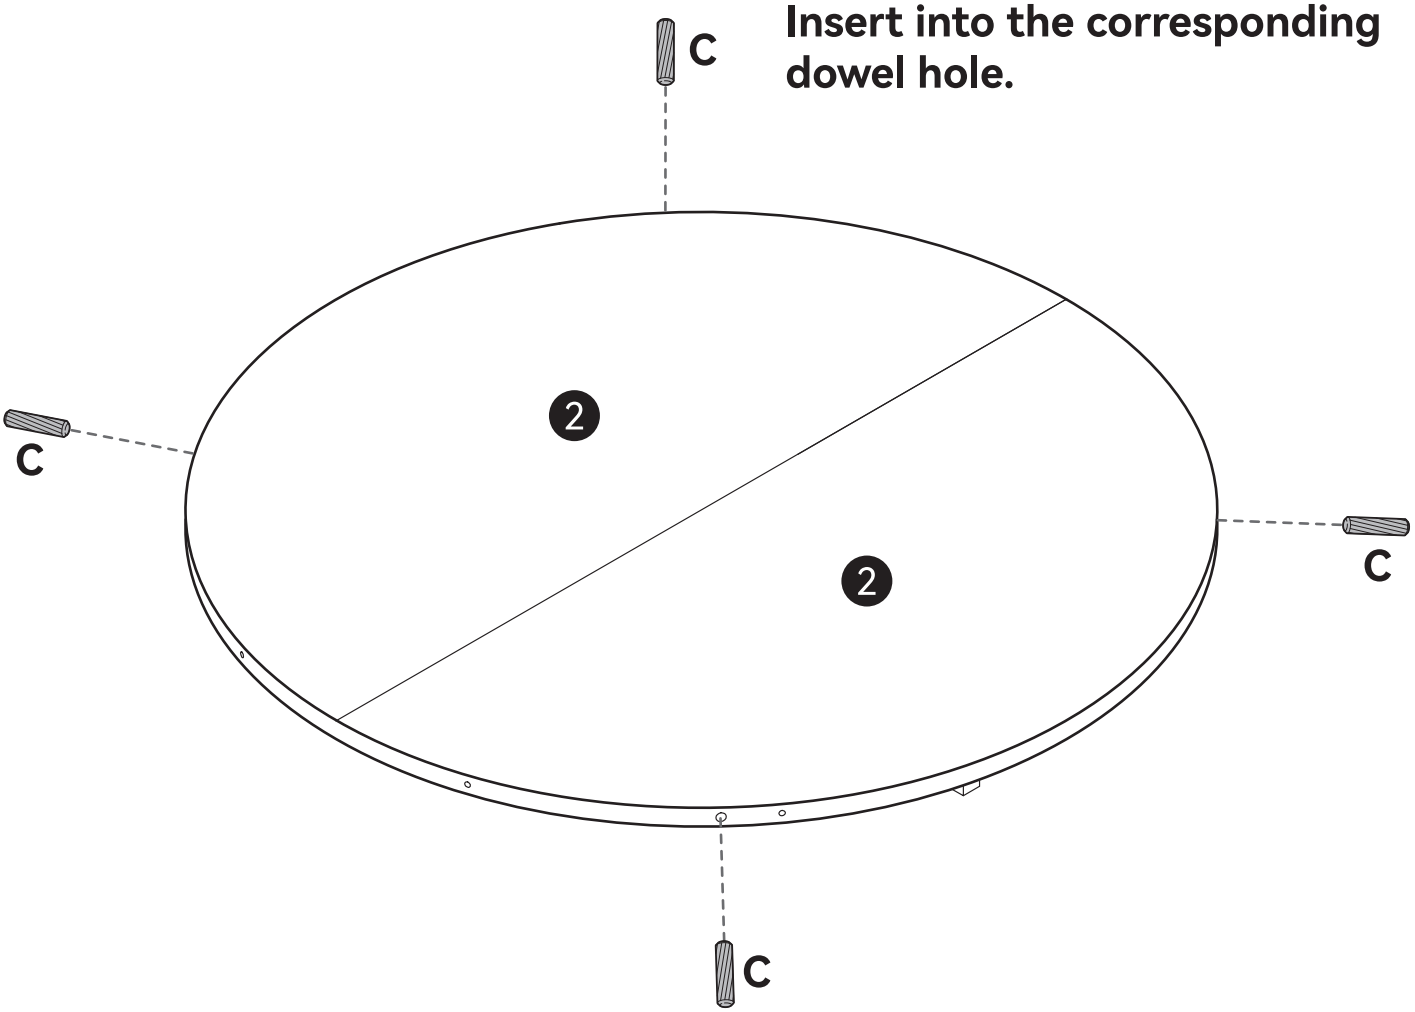


8

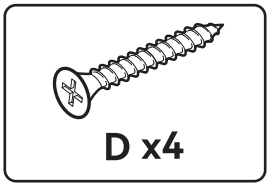


Align rolling door with dowel holes and secure with screws.

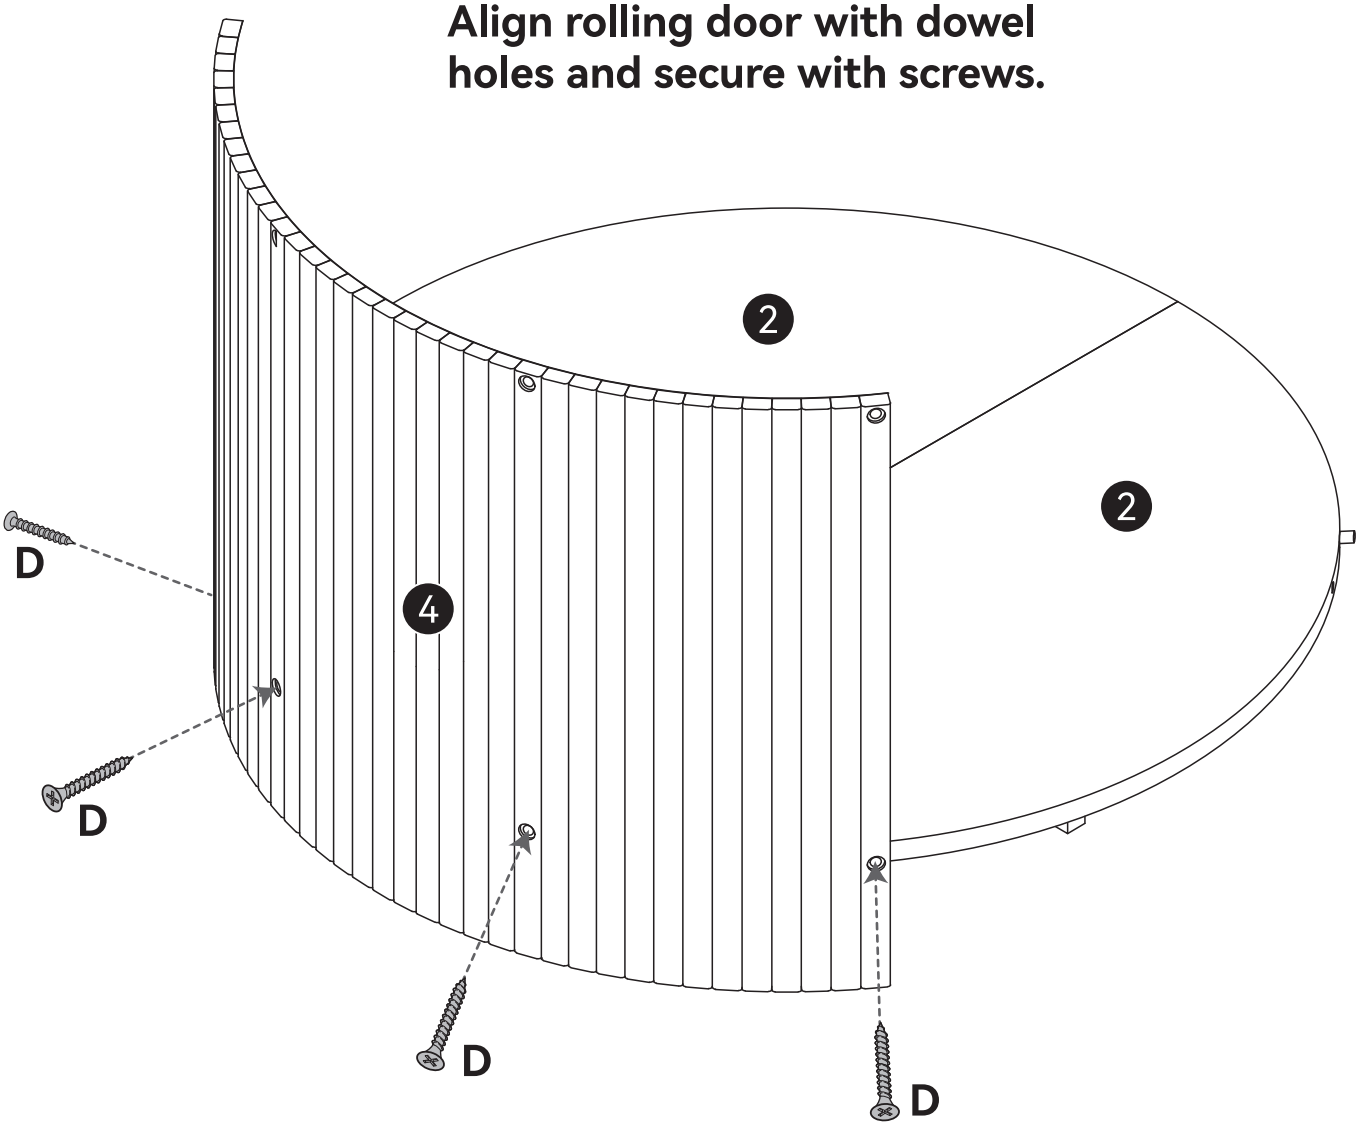


9

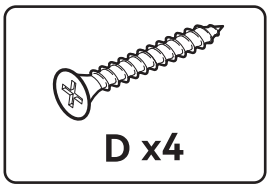


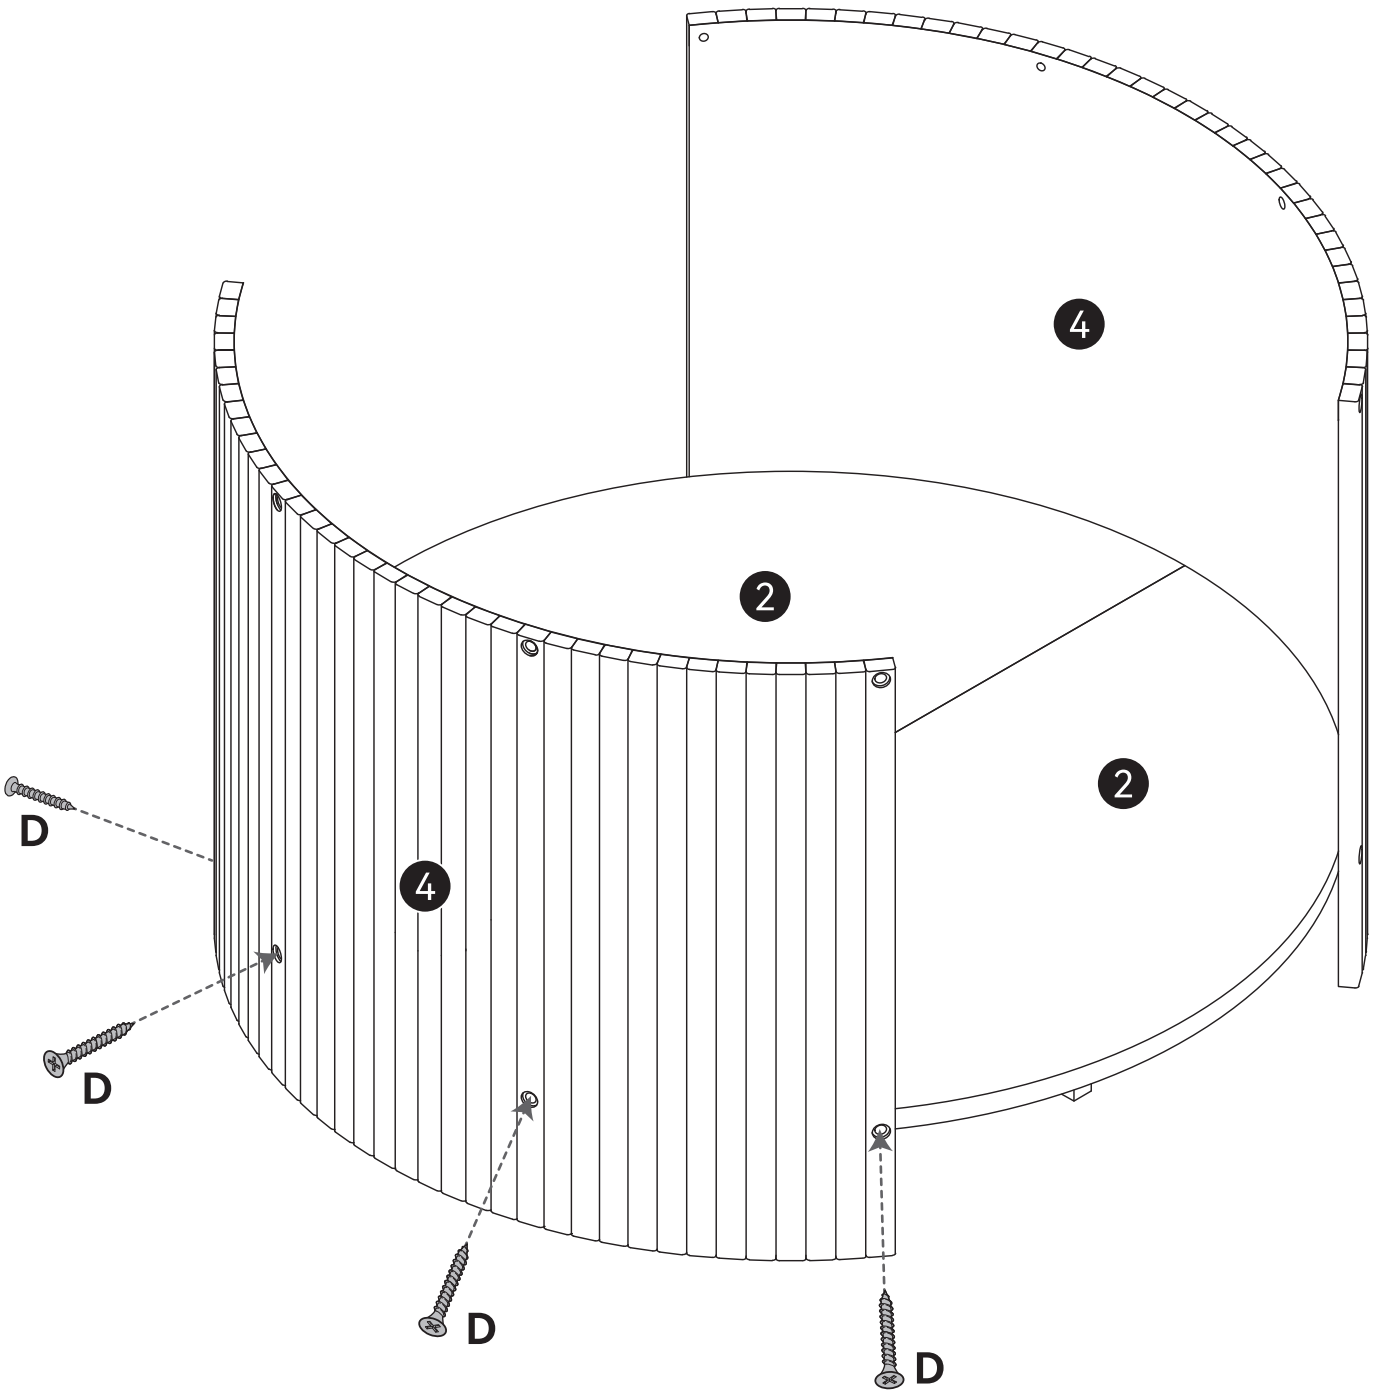


10

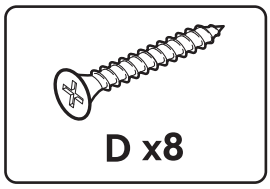


Install board ❸ as shown. Then flip the table over for the next step.

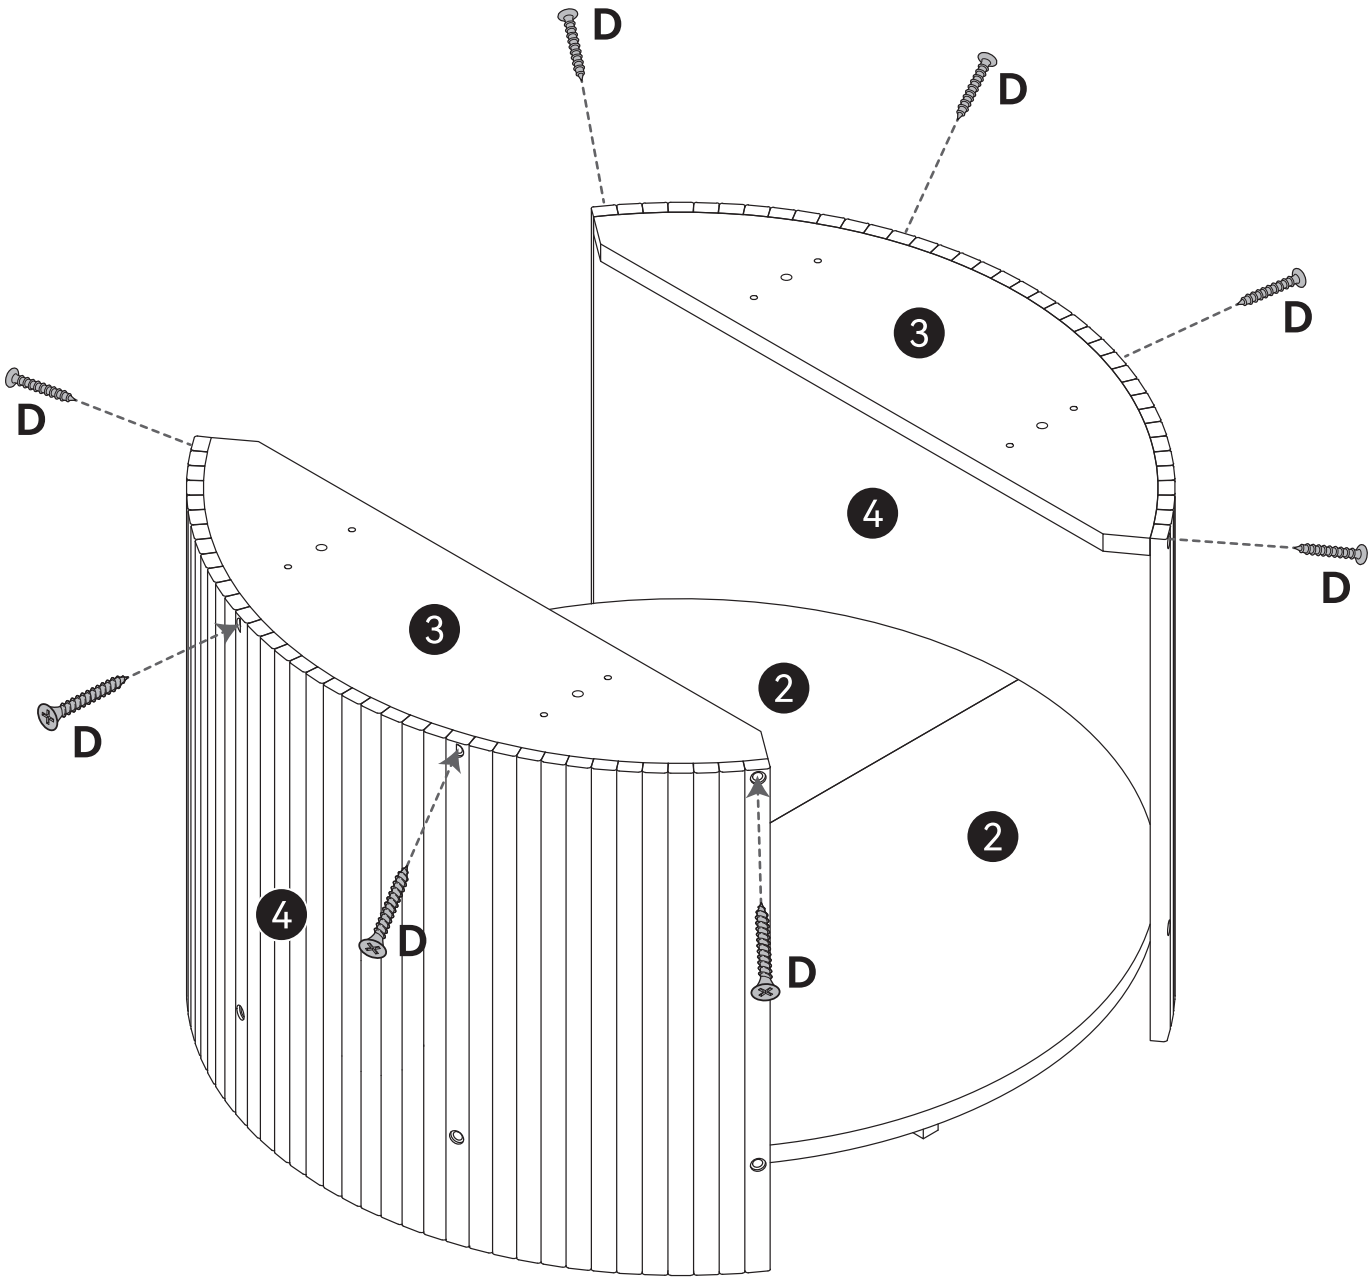

11

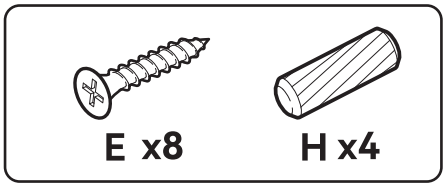


**Insert dowels into board ❶ .
Align board to table body as shown and secure with screws.**

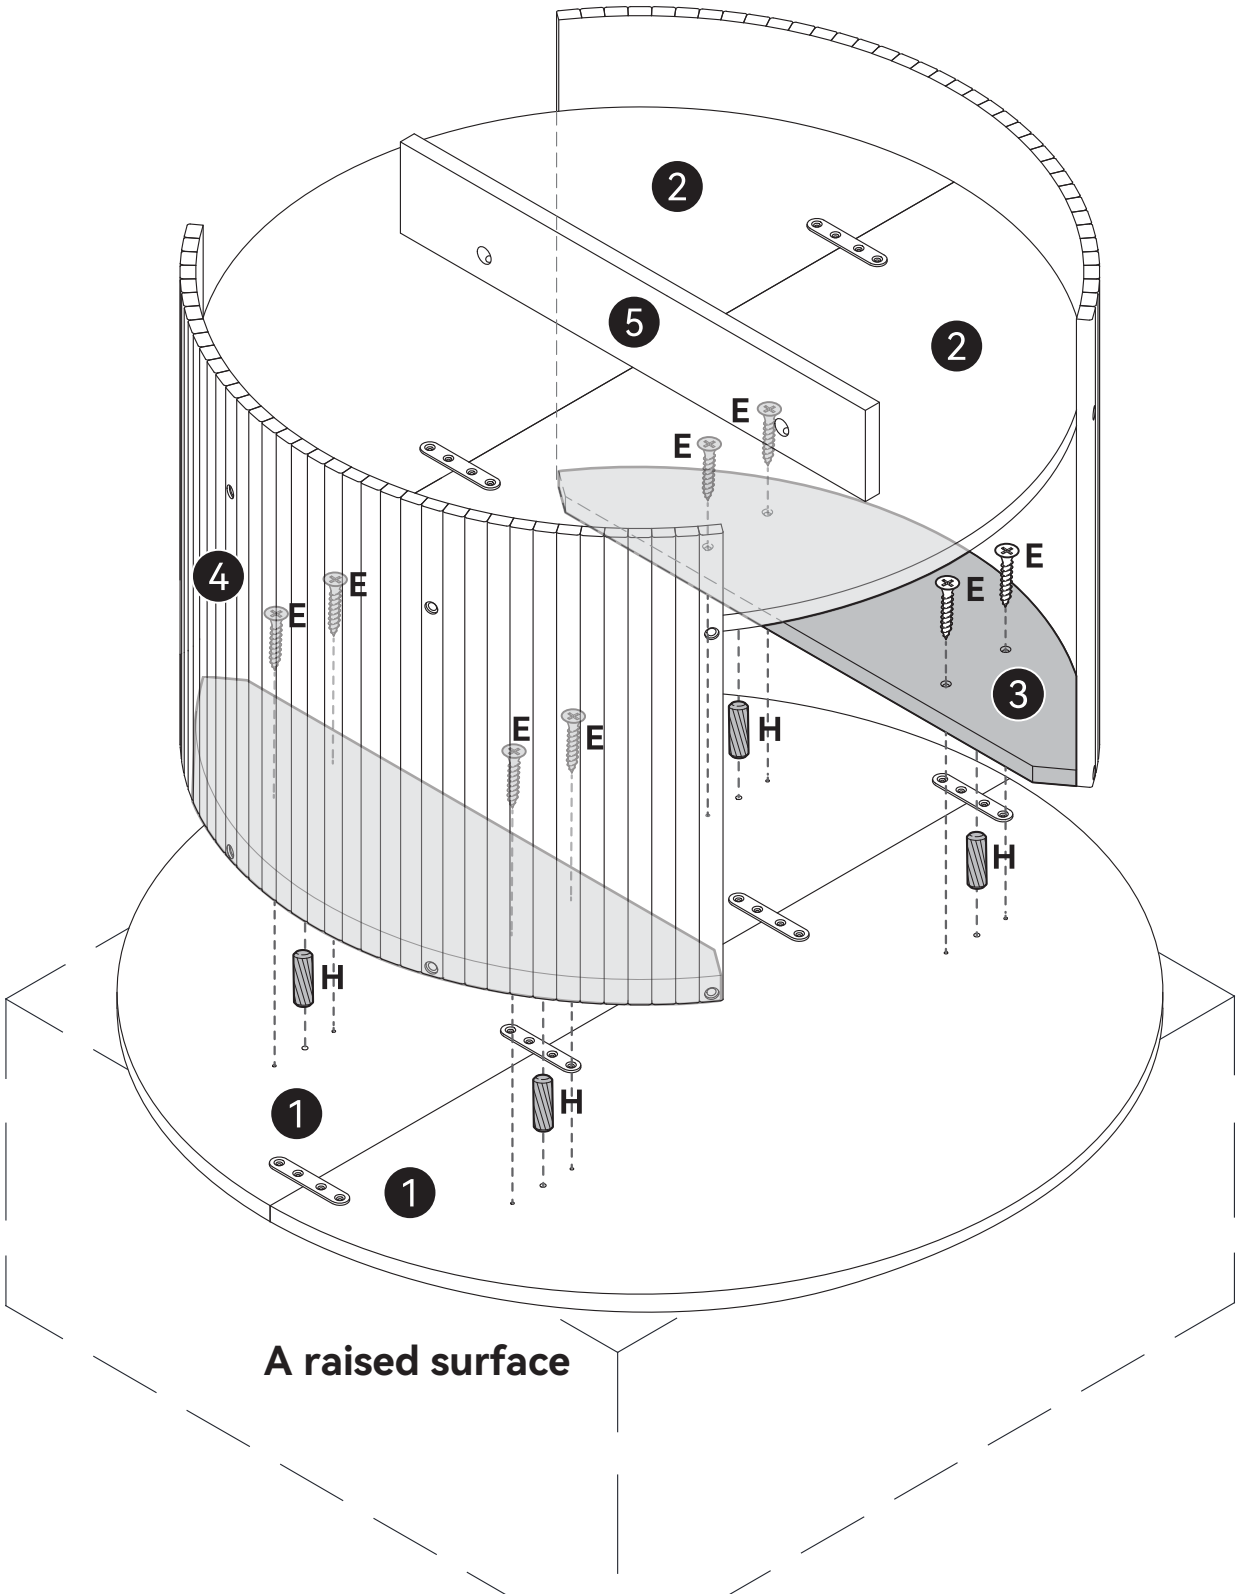



A raised surface

**Before you start this step,
place Panel ❶ on a raised surface –
a table or any other sturdy object will work fine.
This gives you a clear view of how Connector H joins Panel ❶ and Panel ❸.
Then follow the step as shown.**

12

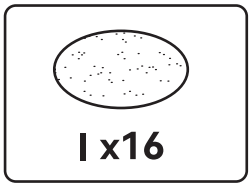

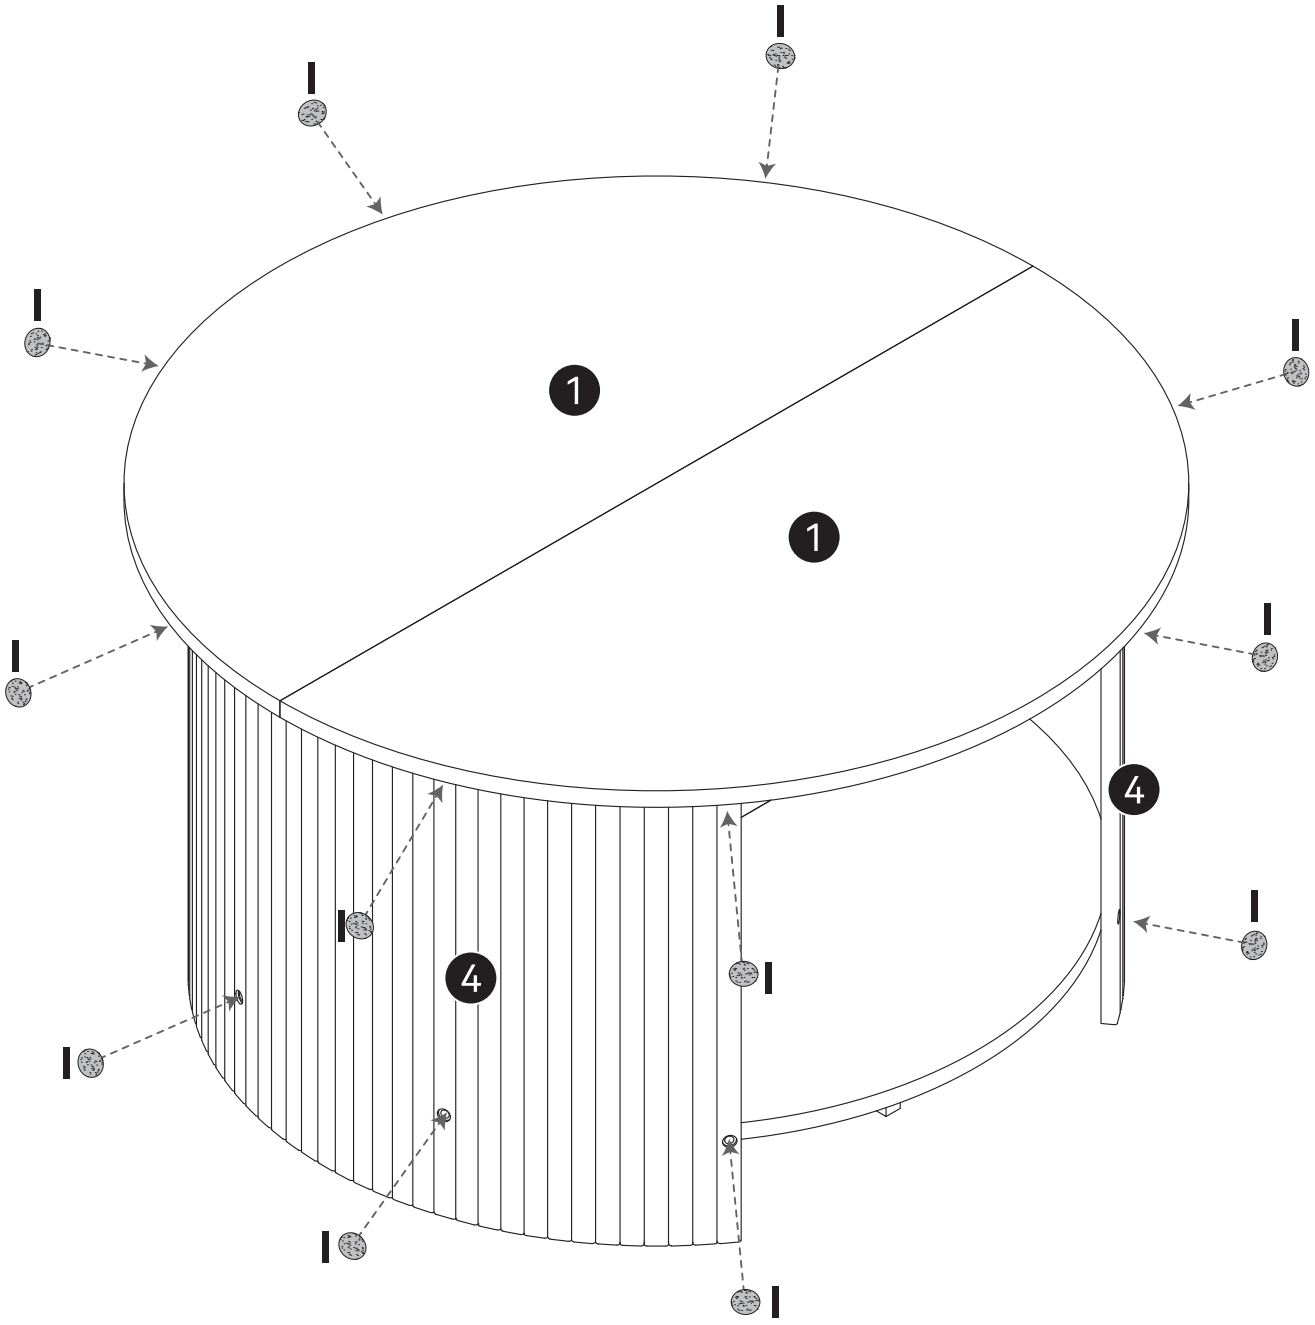

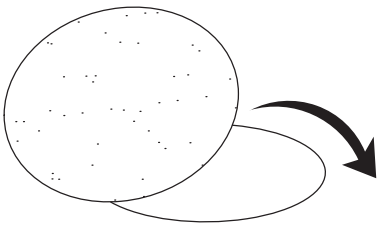

Peel off the backing film and apply to the exposed holes.