

ASSEMBLY INSTRUCTIONS

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.





Recommended installers : 2



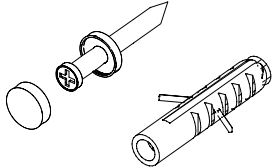
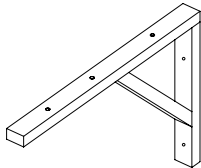


Put a carpet on the floor
before unpacking

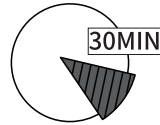


Estimate installation time:
30 minutes

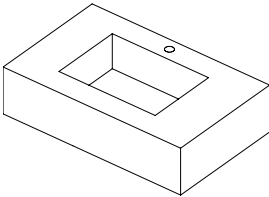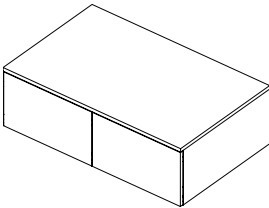Item no.	Reference Image	Qty
A		x1
B		x1


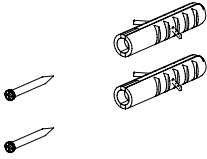
Item no.	Reference Image	Qty
1		x2 Sets
2		x2
3		x2 Sets
4		x2

ASSEMBLY INSTRUCTIONS


1



Ⓑ 1pc

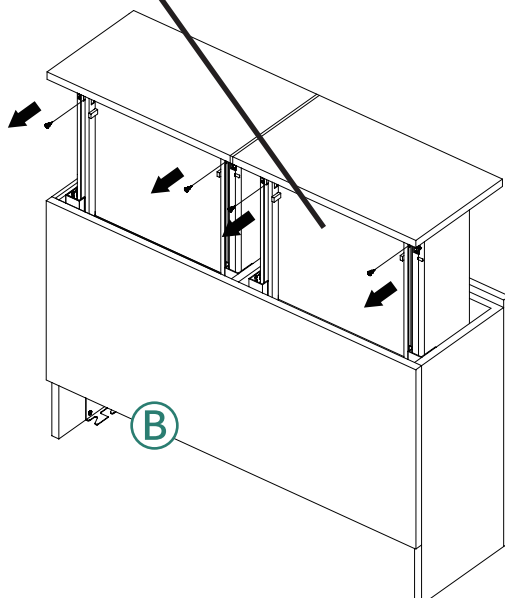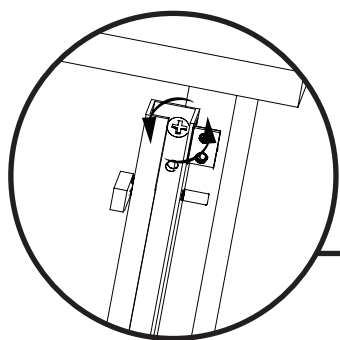


2

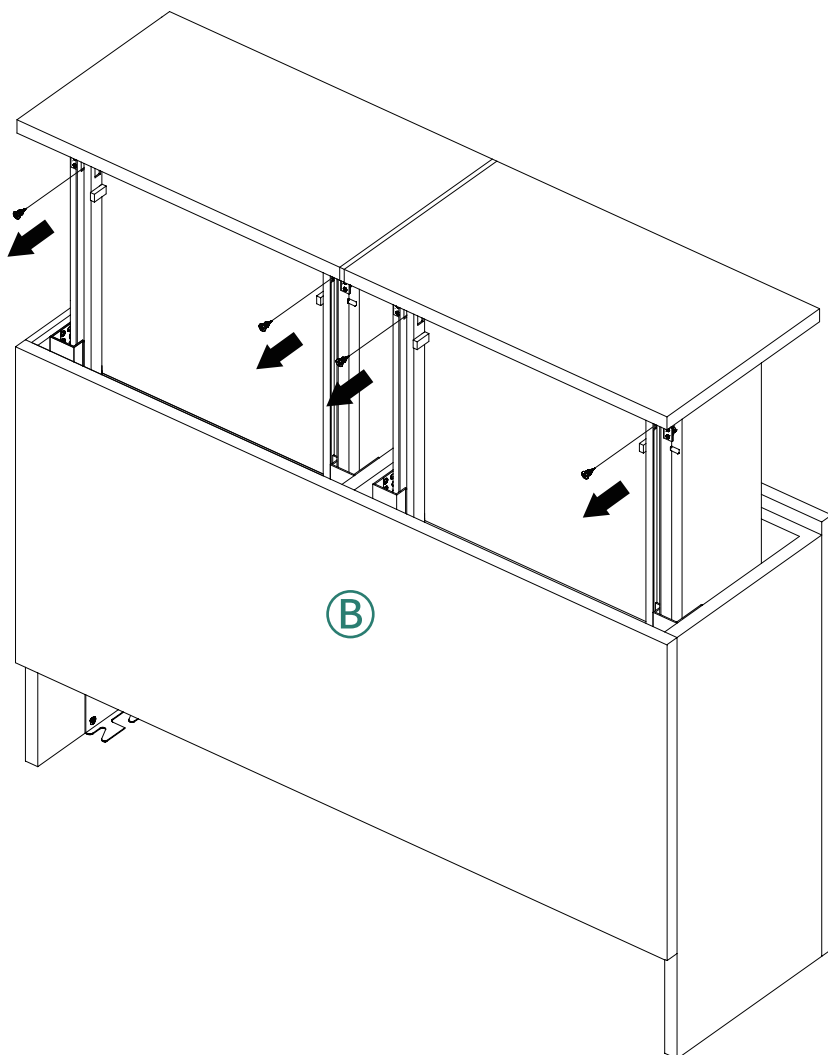


3

Mark the holes' position for drilling when you align the product

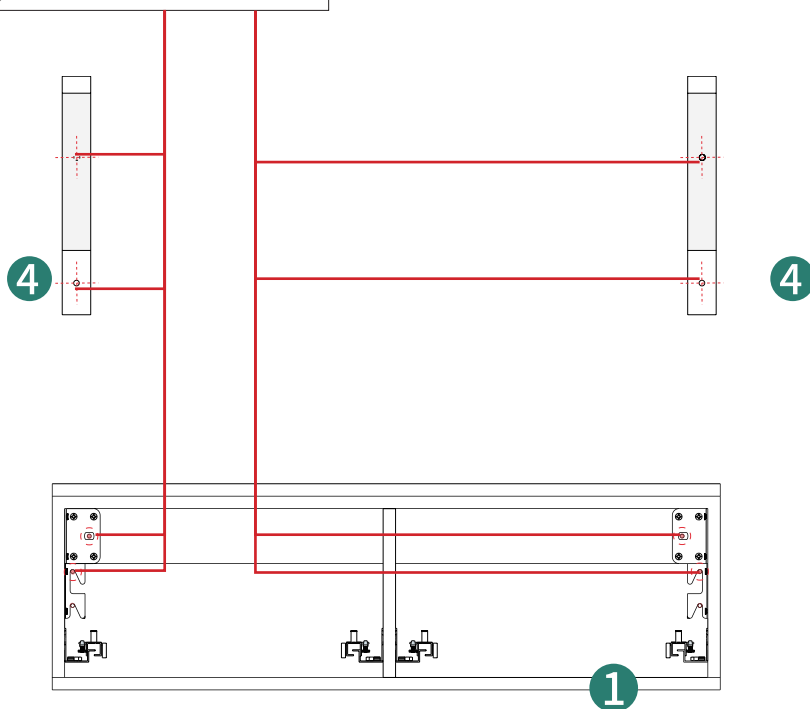



ASSEMBLY INSTRUCTIONS

4




① 2Sets

Drill holes at tracing points

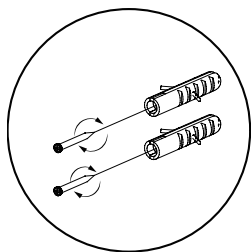


1



1


ASSEMBLY INSTRUCTIONS

5

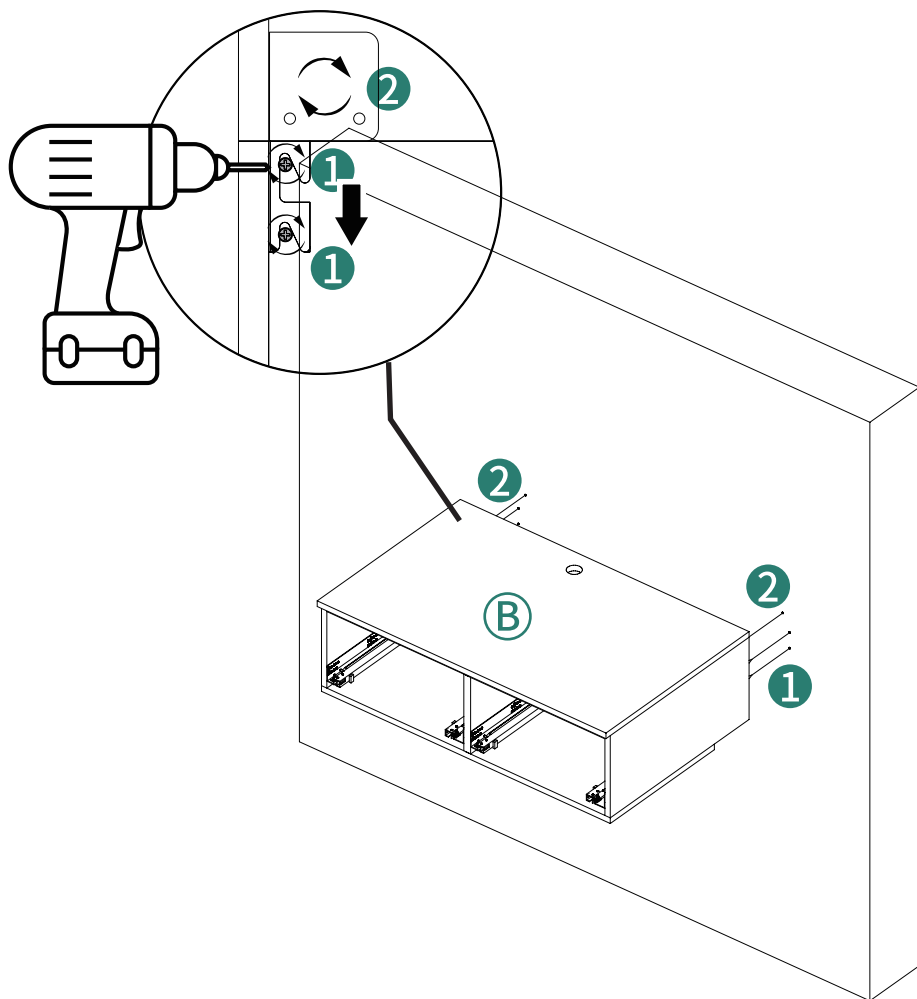

ASSEMBLY INSTRUCTIONS


6




Ⓑ 1pc

STEP-1


Install the drawers to the slide rails.

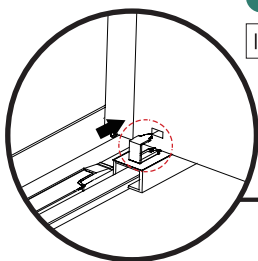



STEP-2

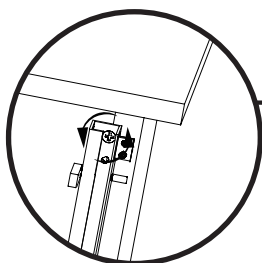


STEP-3

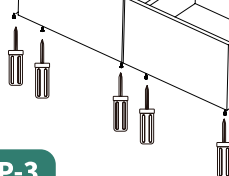

ASSEMBLY INSTRUCTIONS

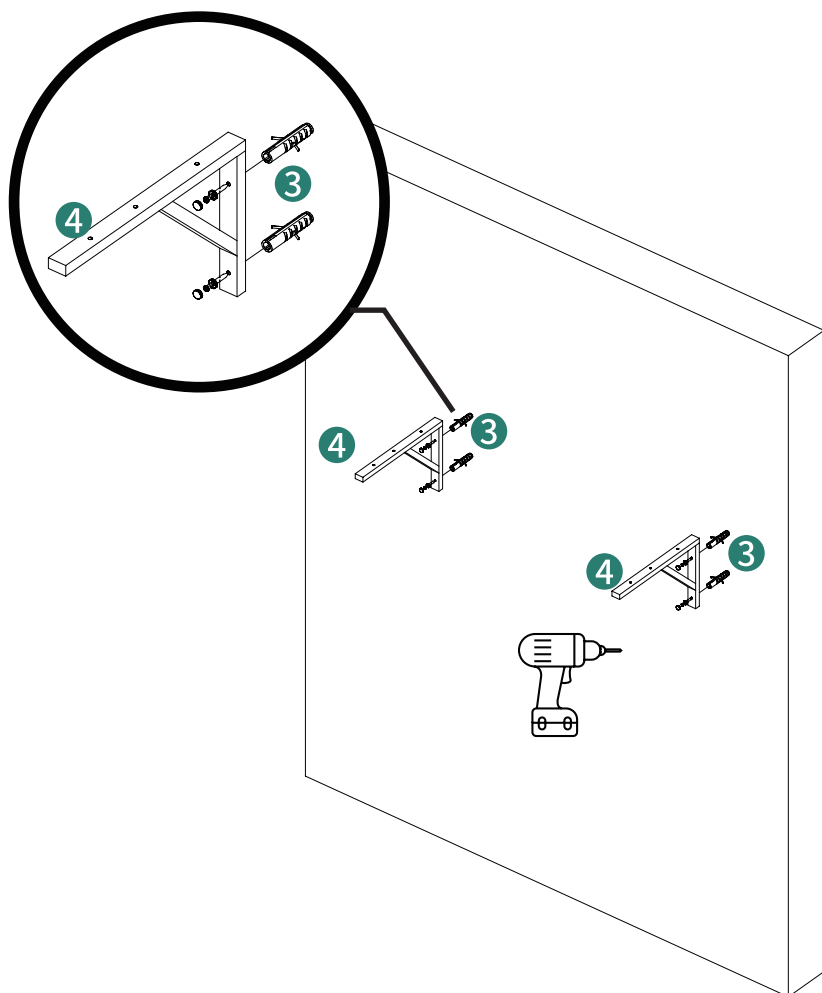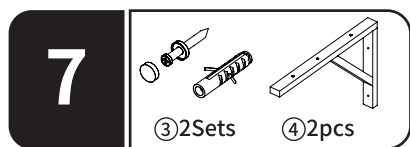


8



Ⓐ 1pc


Apply silicone sealant (not included) to the bracket surface, refer to the blue area. Then place the vanity top.

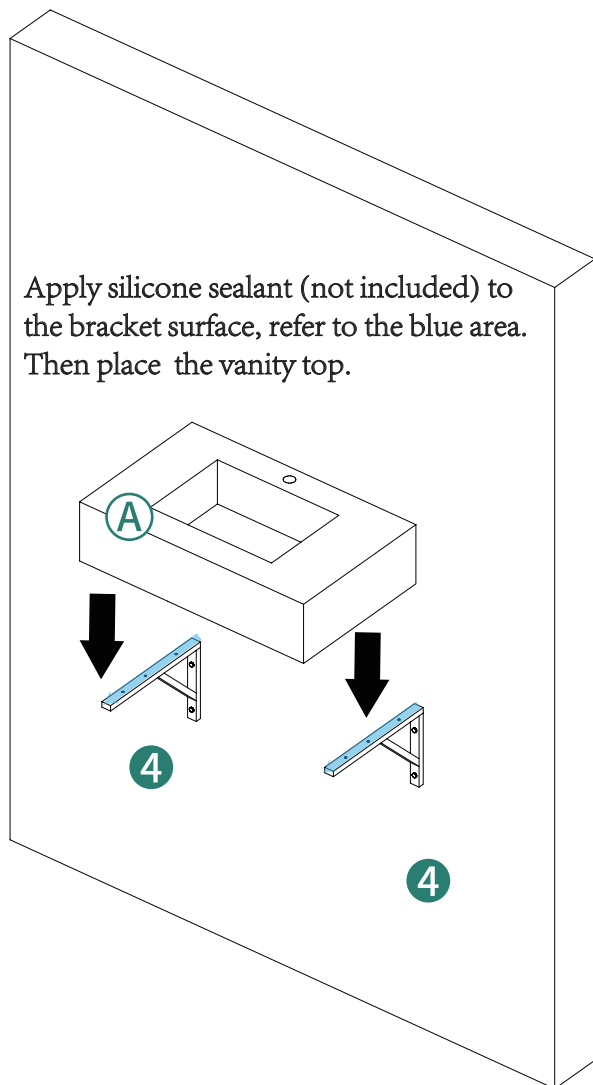

ASSEMBLY INSTRUCTIONS

9

Apply silicone sealant (not included) to the mounting surface, refer to the blue area.

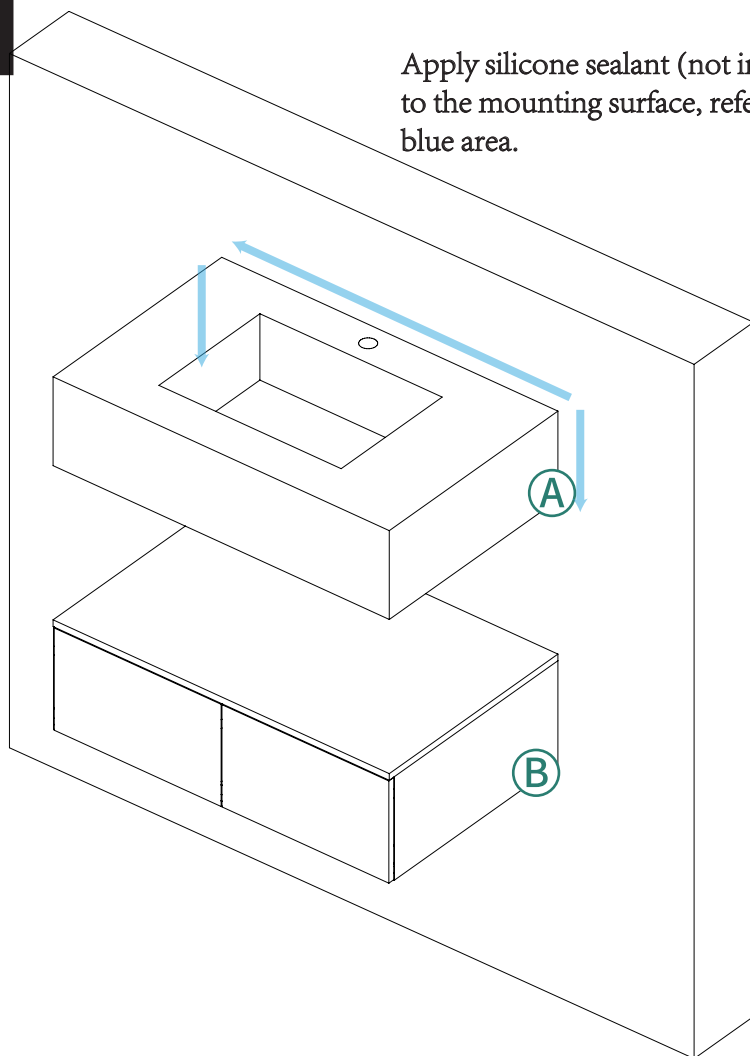

Installation completed