

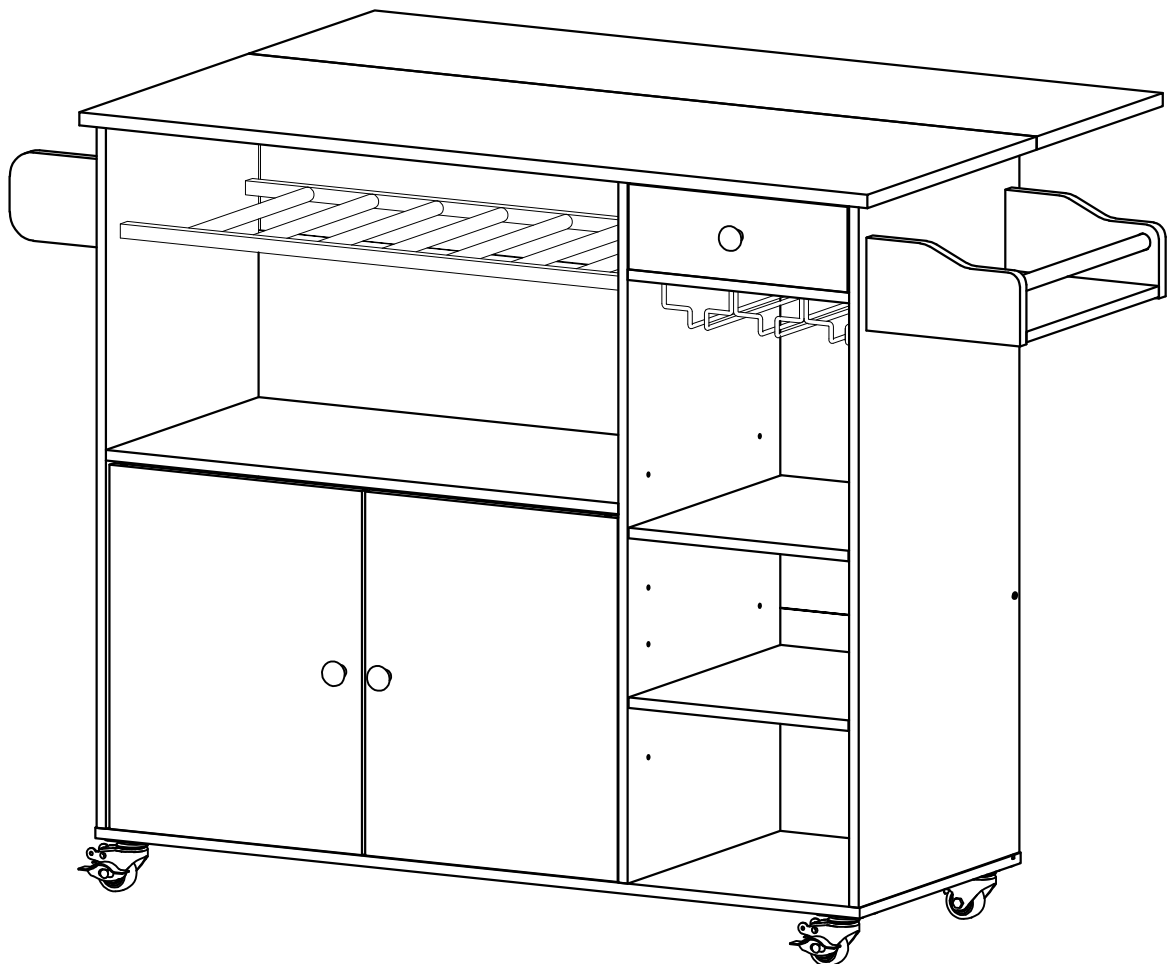
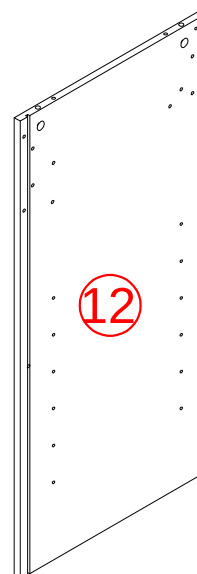
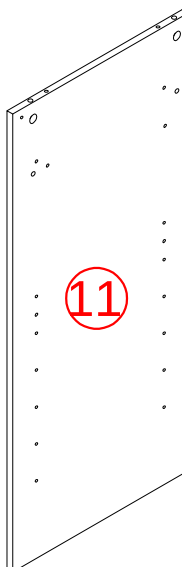
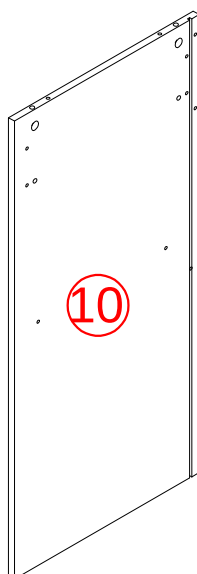
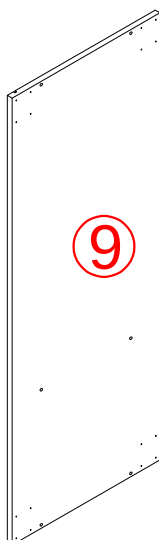
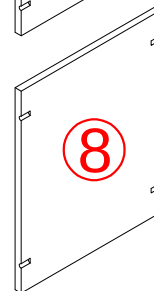
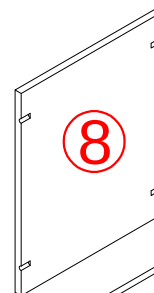
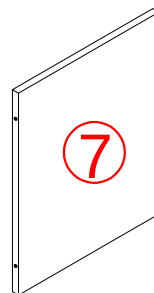
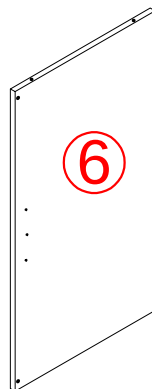
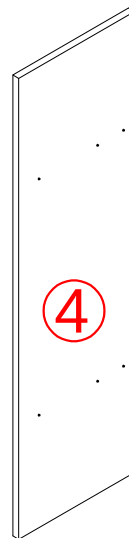
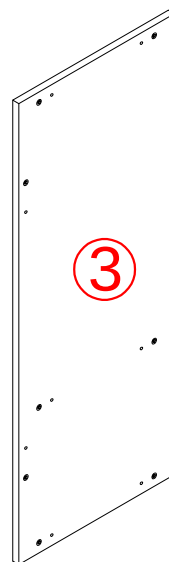










Installation Instruction

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

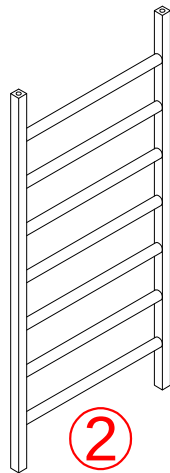


Hardware List

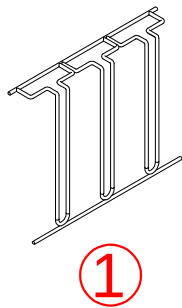

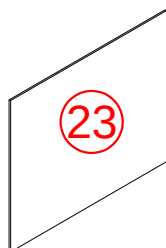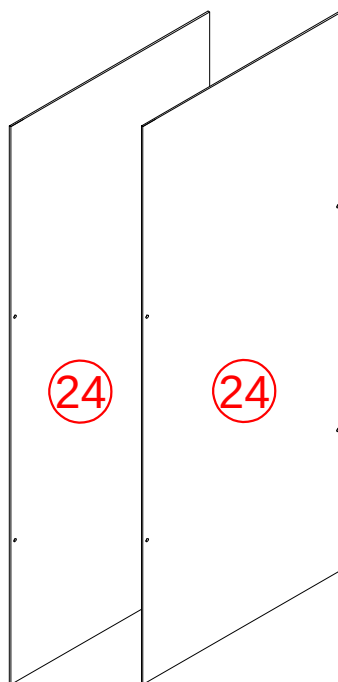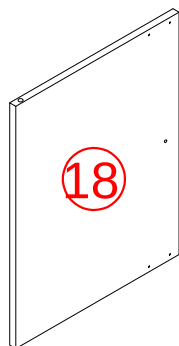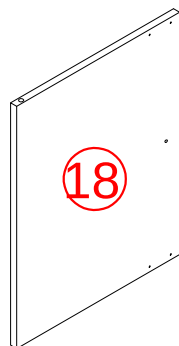


Parta List



M4

A×1PCS



M5×45mm


B×37PCS



Ø6×30mm

C×8PCS

D

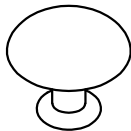


D1×3PCS



M4×22mm

D2×3PCS



M6×25mm


E×4PCS

F



Ø6.5×30mm


F1×12PCS

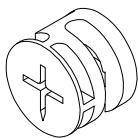

Ø 15×9.5mm

F2×12PCS

G




G1×1PCS




G2×2PCS

J

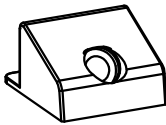


J1×4PCS




Ø8×M4×16mm

J2×7PCS


K

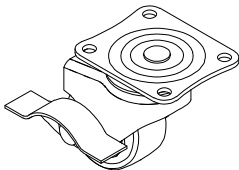

K1×2PCS

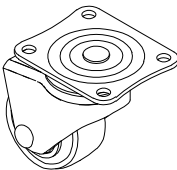

K2×2PCS

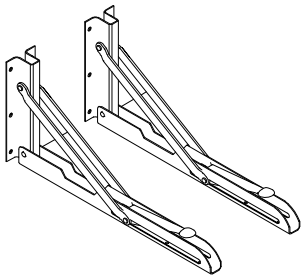


L1×2PCS



Ø7.5×M4×16mm

L2×18PCS




M×4PCS







M5×Ø6×18mm

N×2PCS



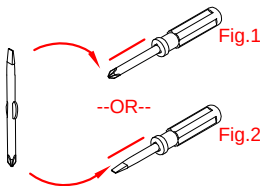


1

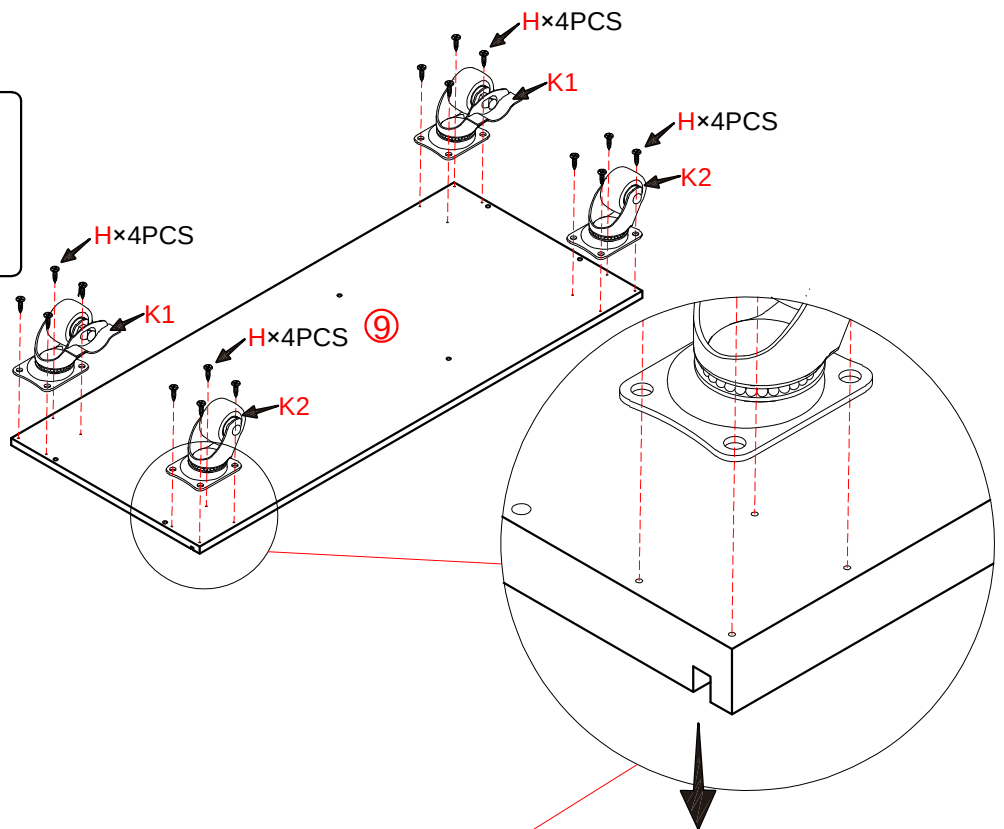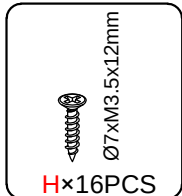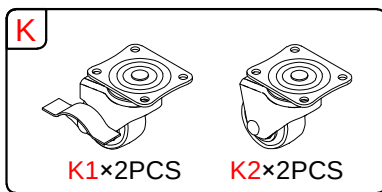





Note: "K2" wheels are mounted on one side of the slot

2

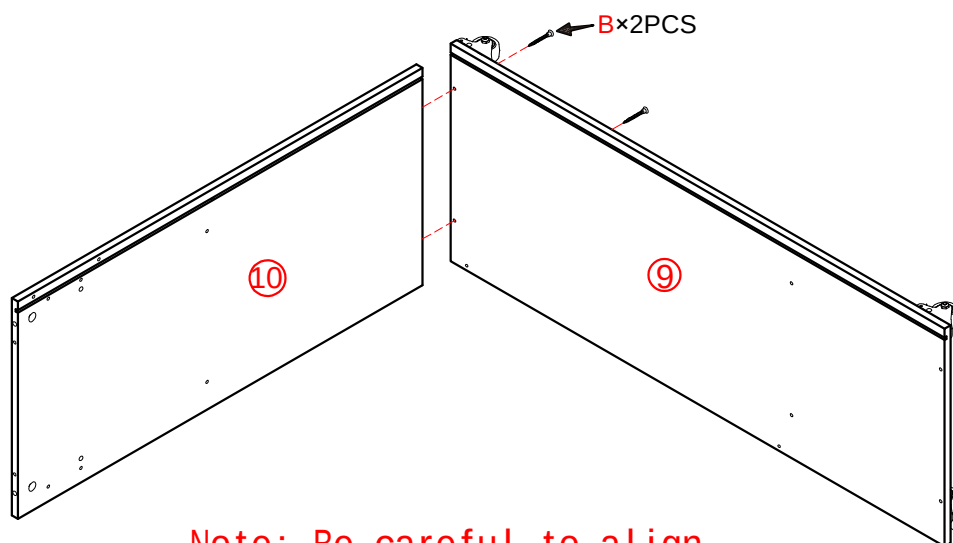

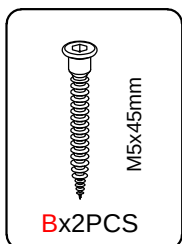


Note: Be careful to align the slots of the two boards

3

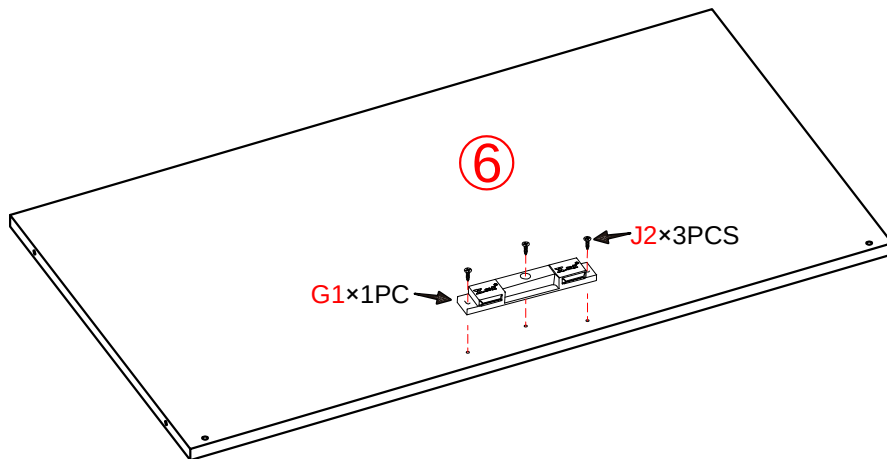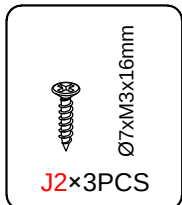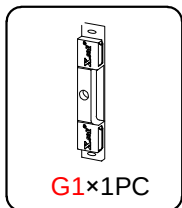

4

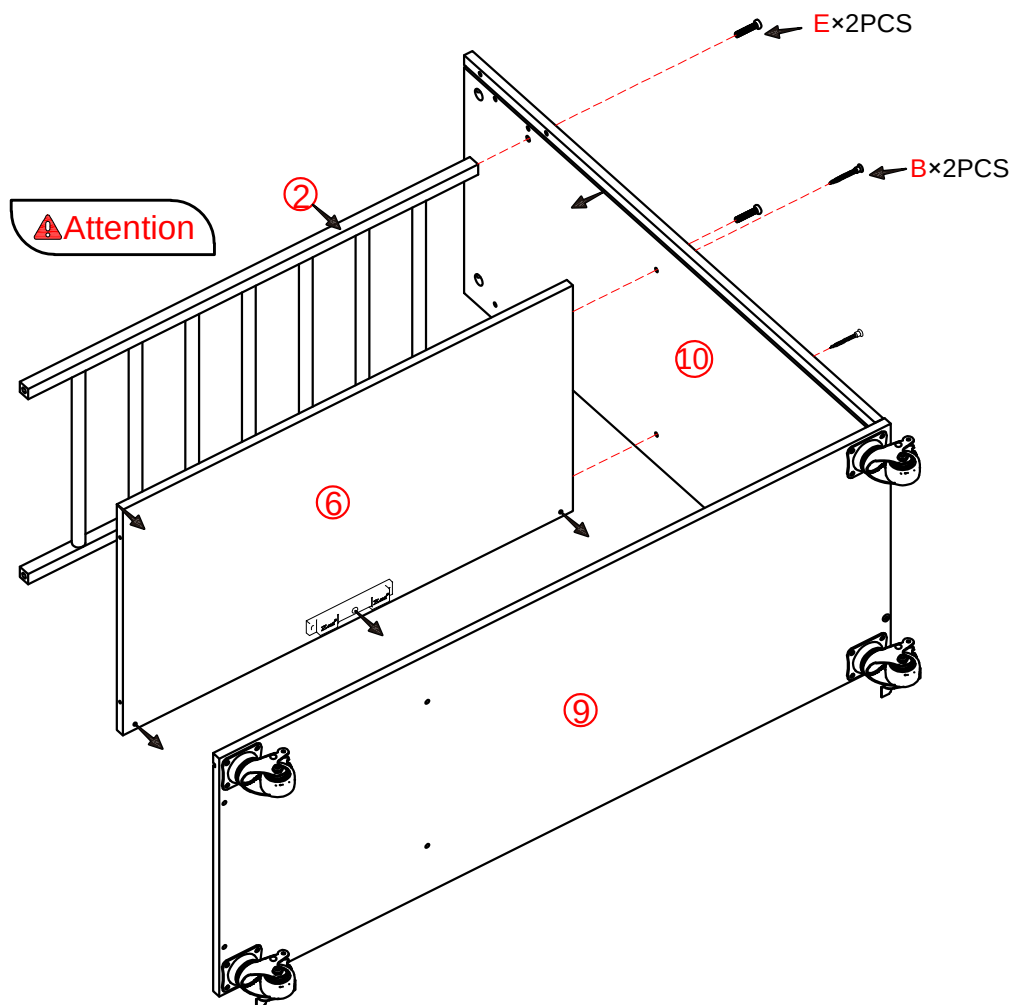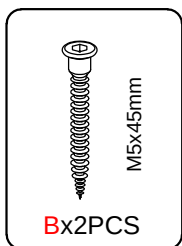

5



M5x45mm

Bx4PCS




M6x25mm

Ex2PCS

11x1PC

Note: The side with holes is on top

⚠ Attention

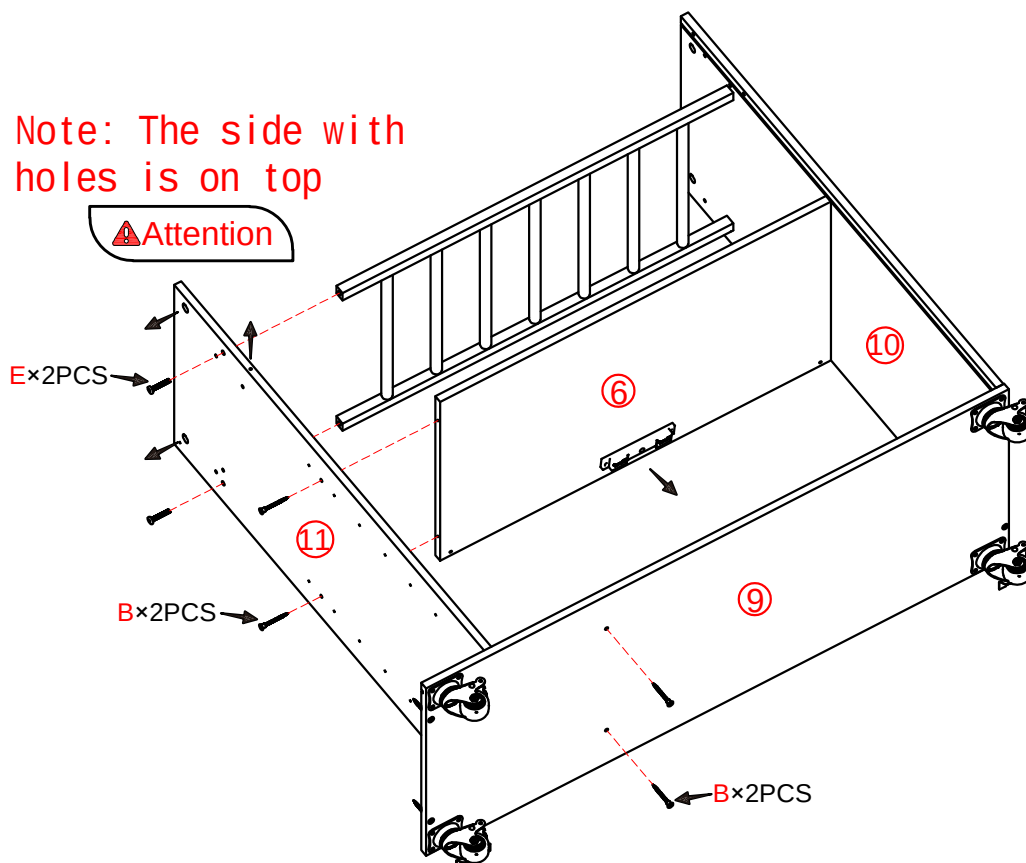


6



M5x45mm


Bx2PCS

7x1PC

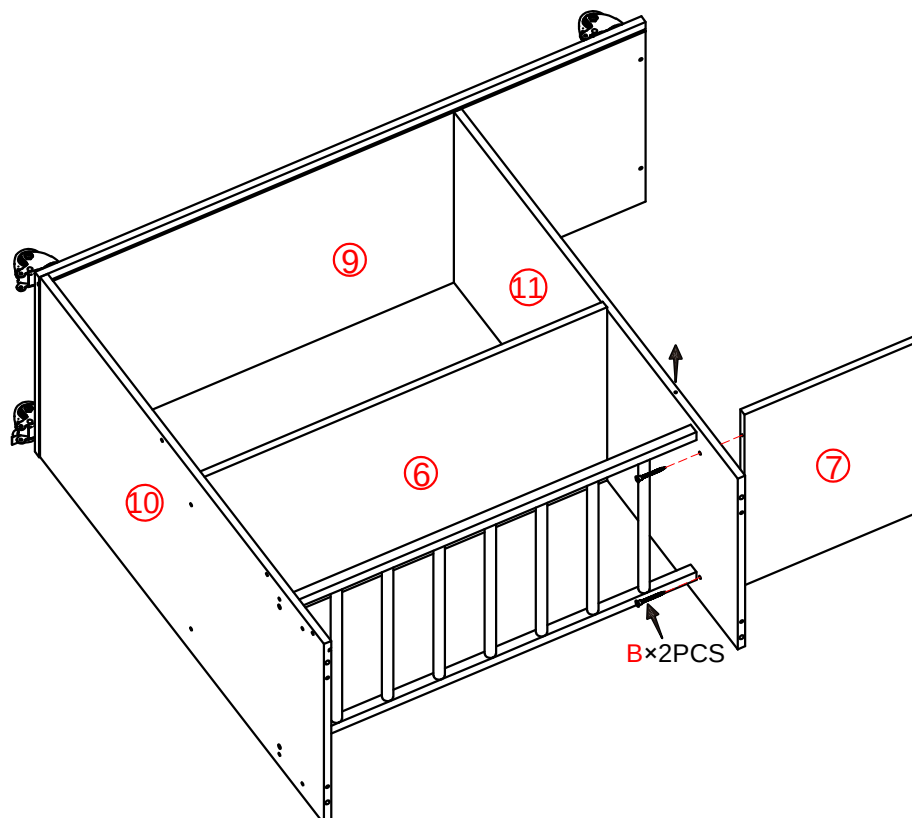

7

①×1PC

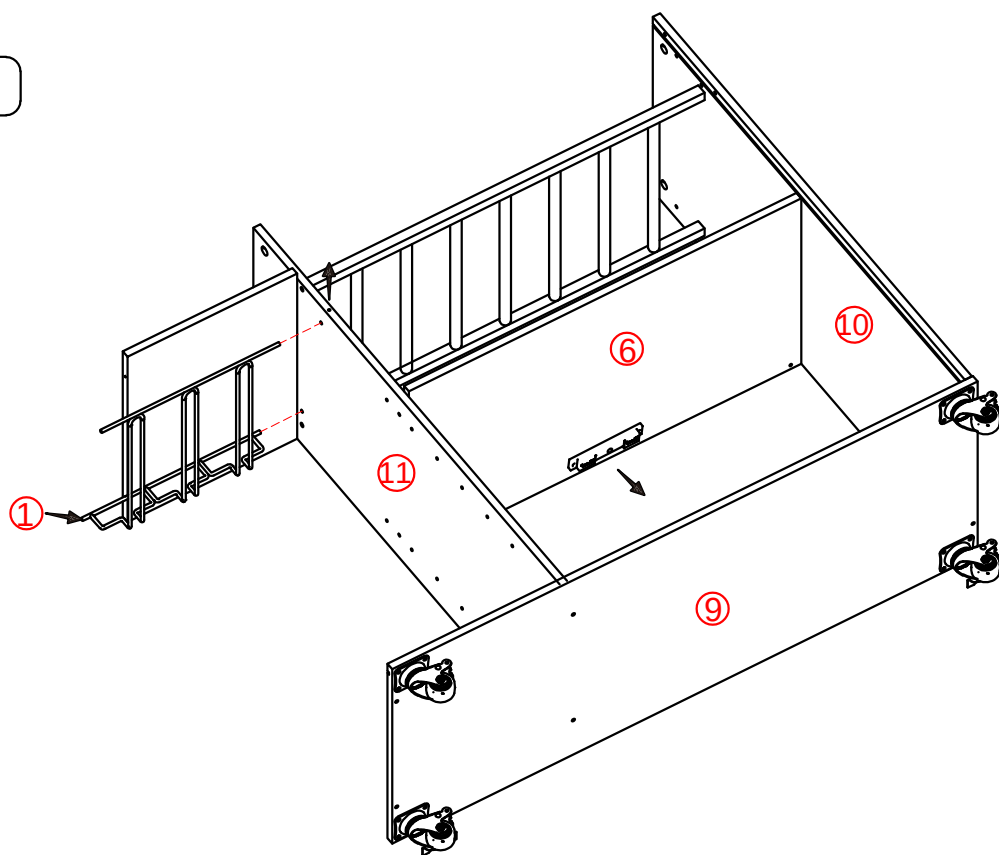

8




M5x45mm




B×4PCS

⑫×1PC




B×2PCS

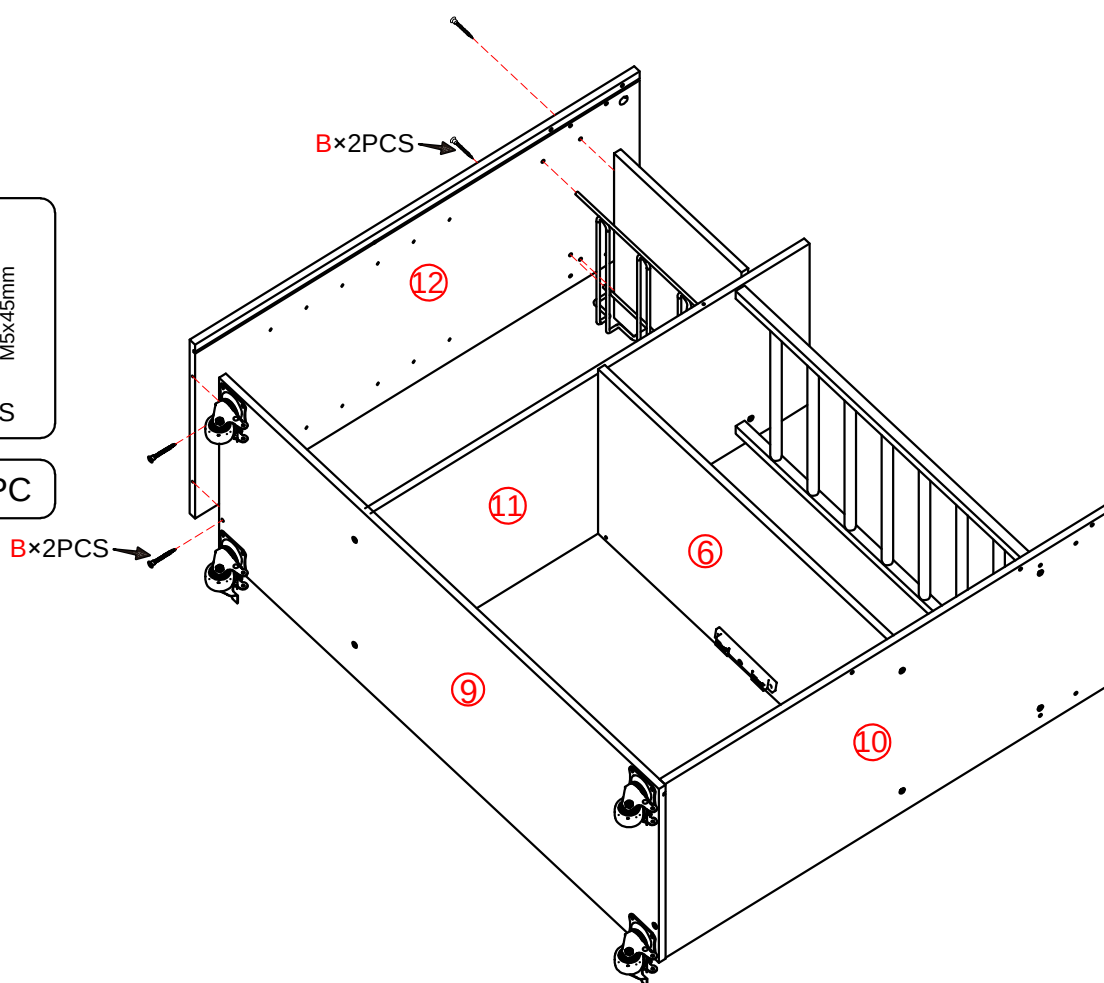


9

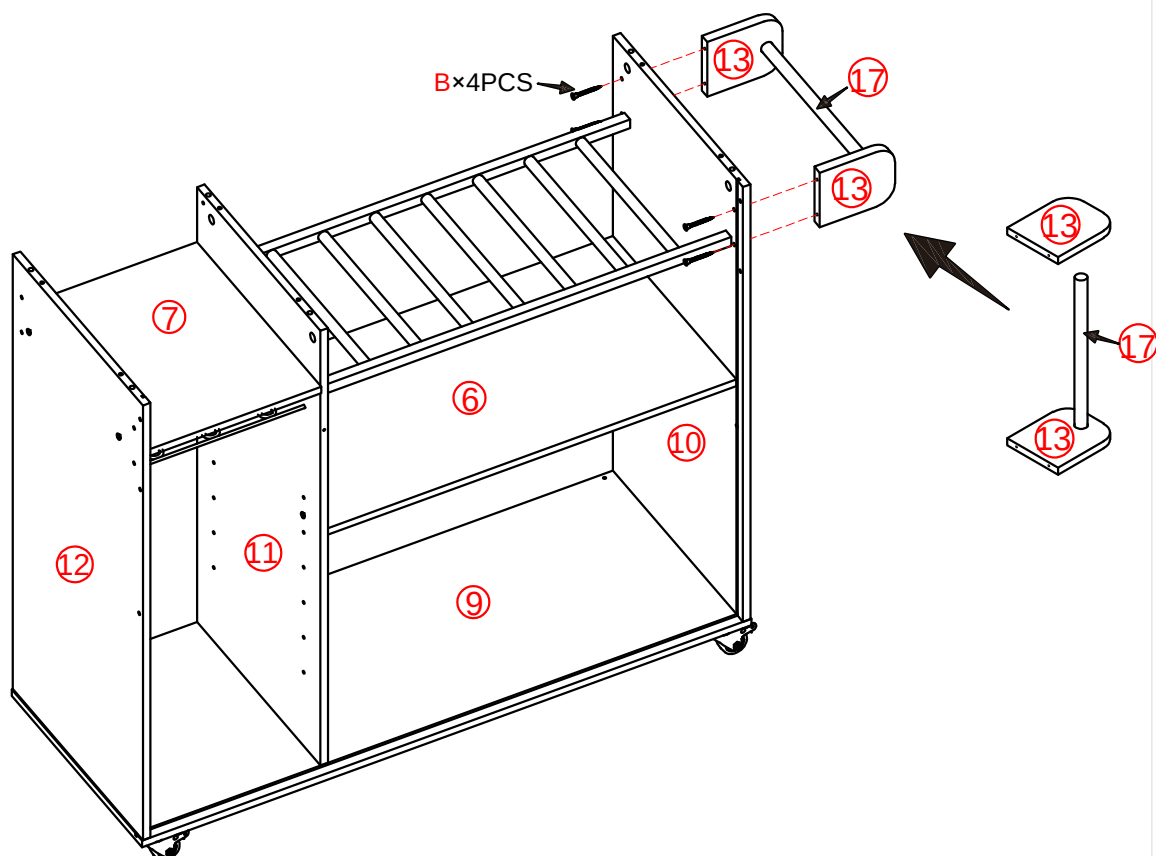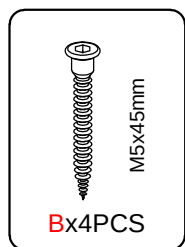


10

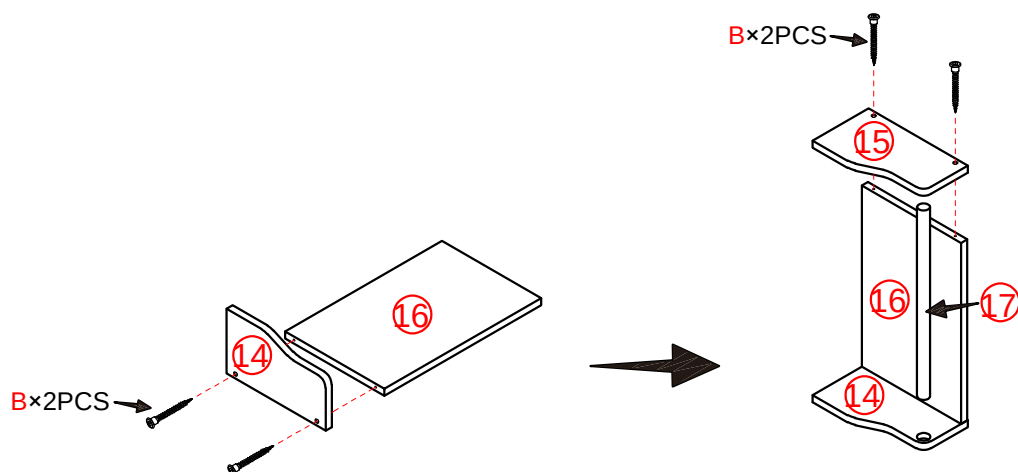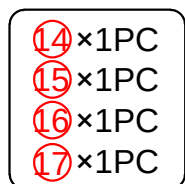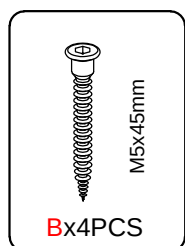


11

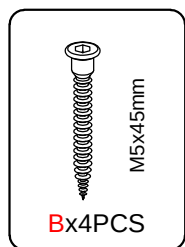


- ⑭×1PC
- ⑮×1PC
- ⑯×1PC
- ⑰×1PC

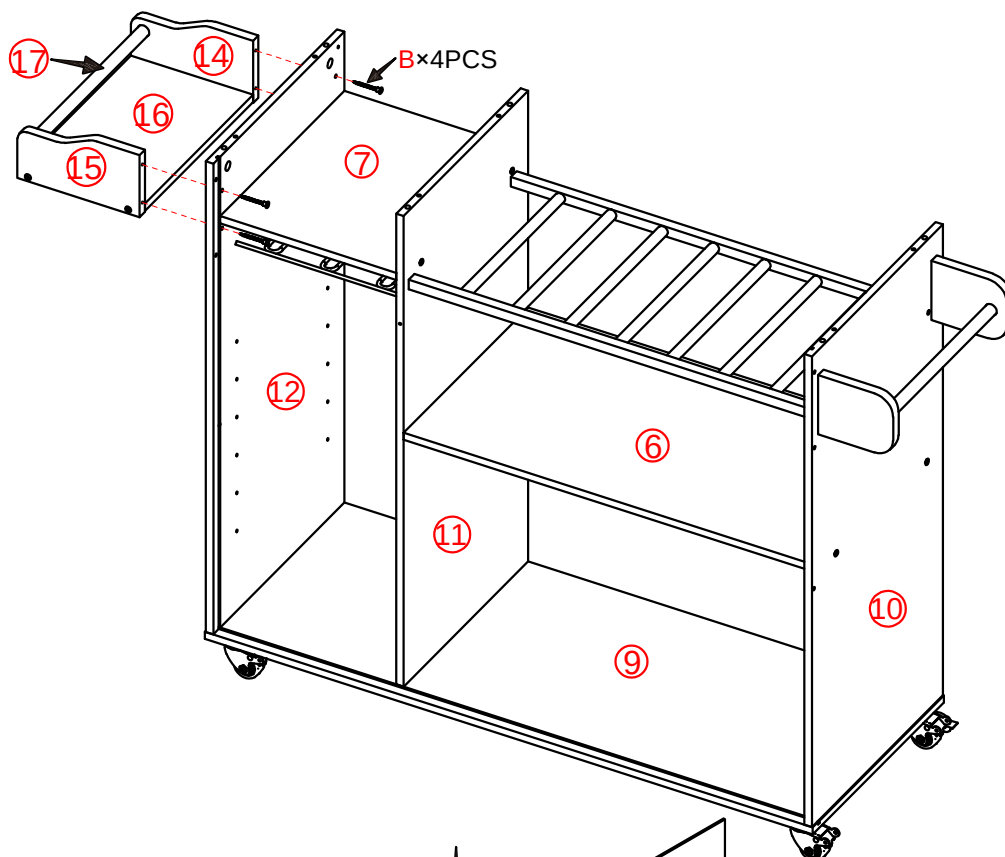

12

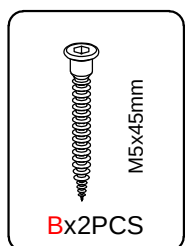


- ⑳×2PCS
- ㉑×1PC




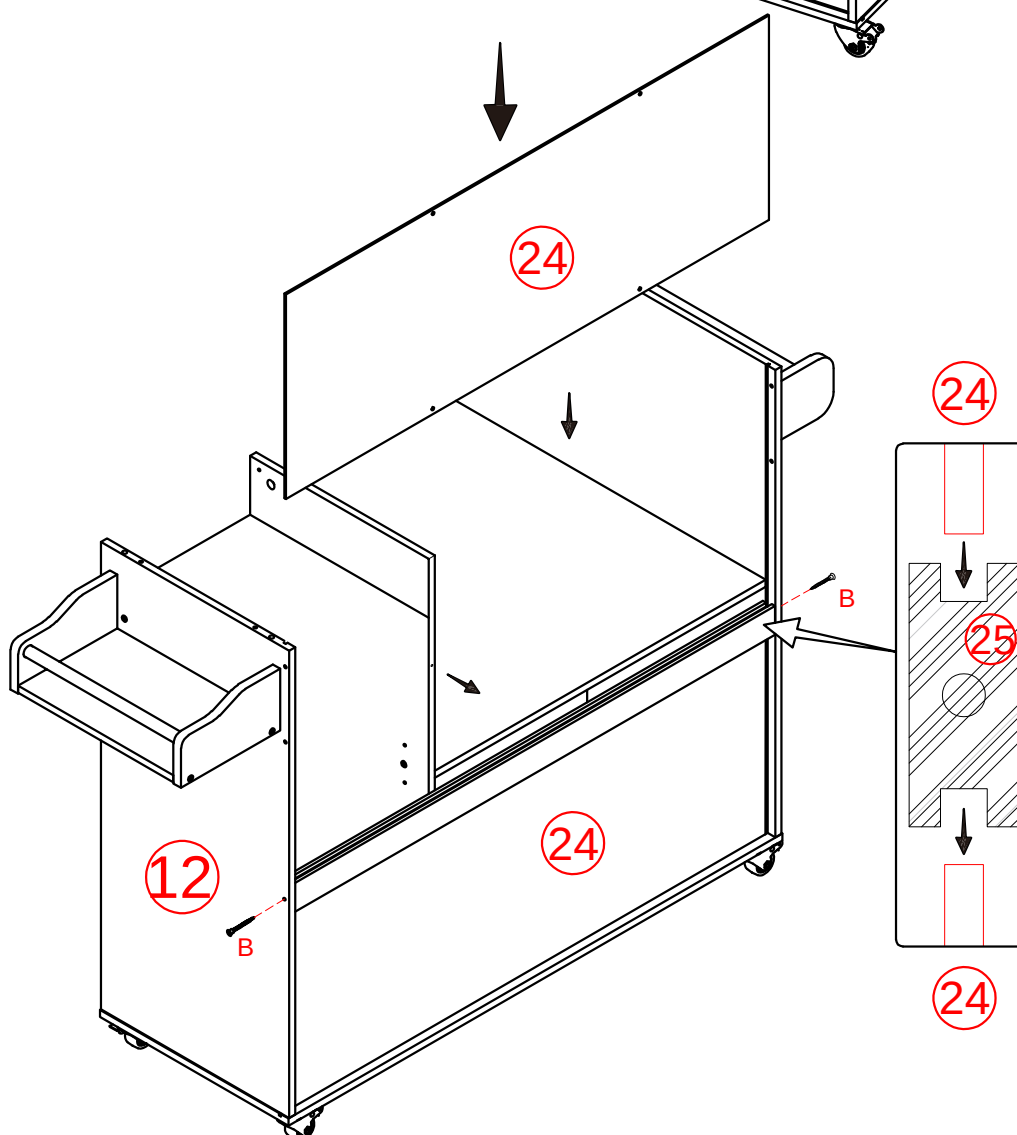


⚠ Attention




Note: Pinch the support bracket and slowly put it into the card slot.

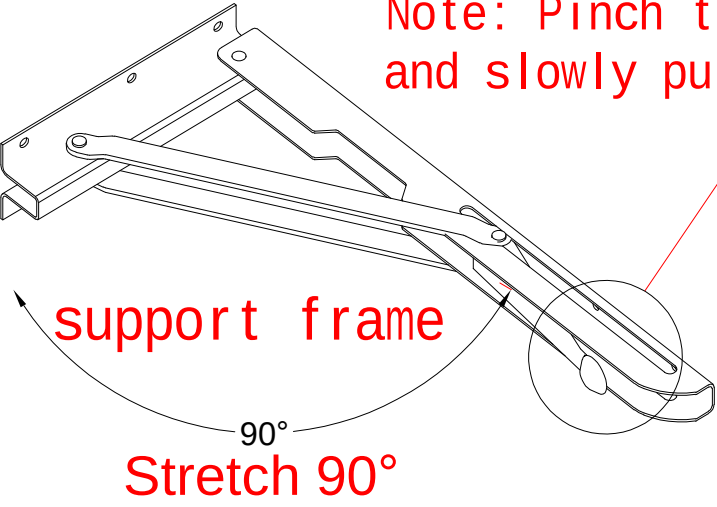

13

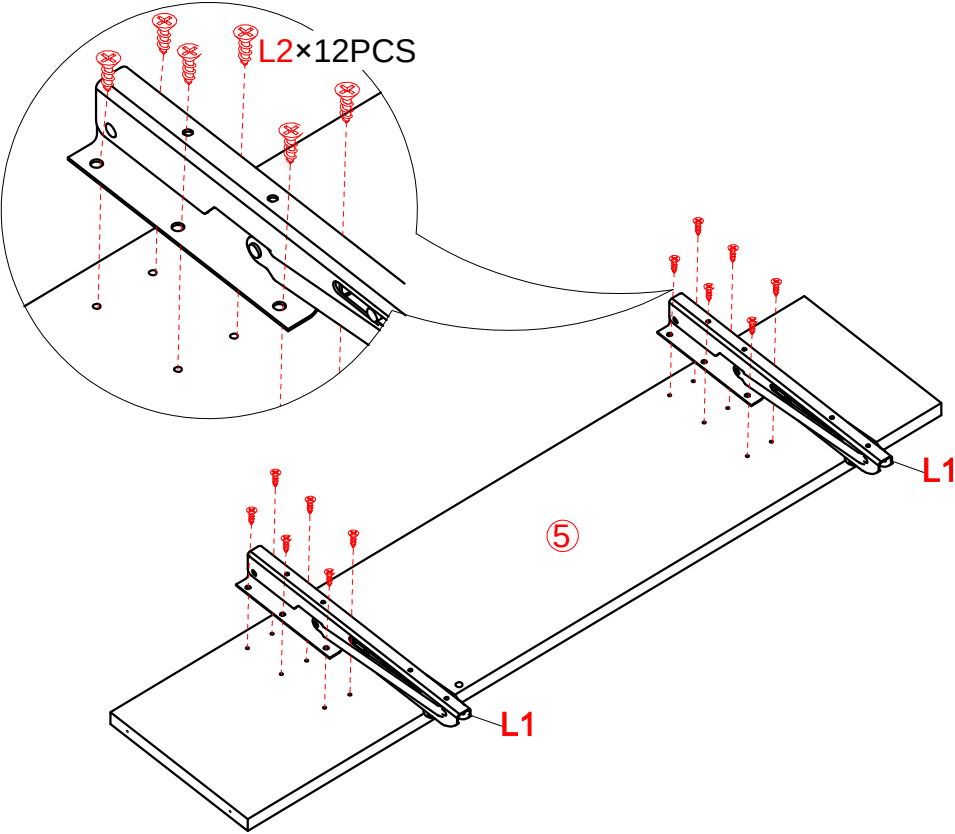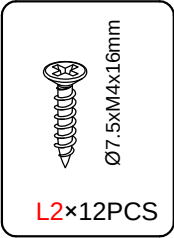
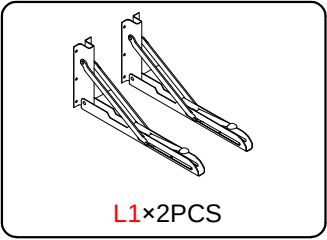


14

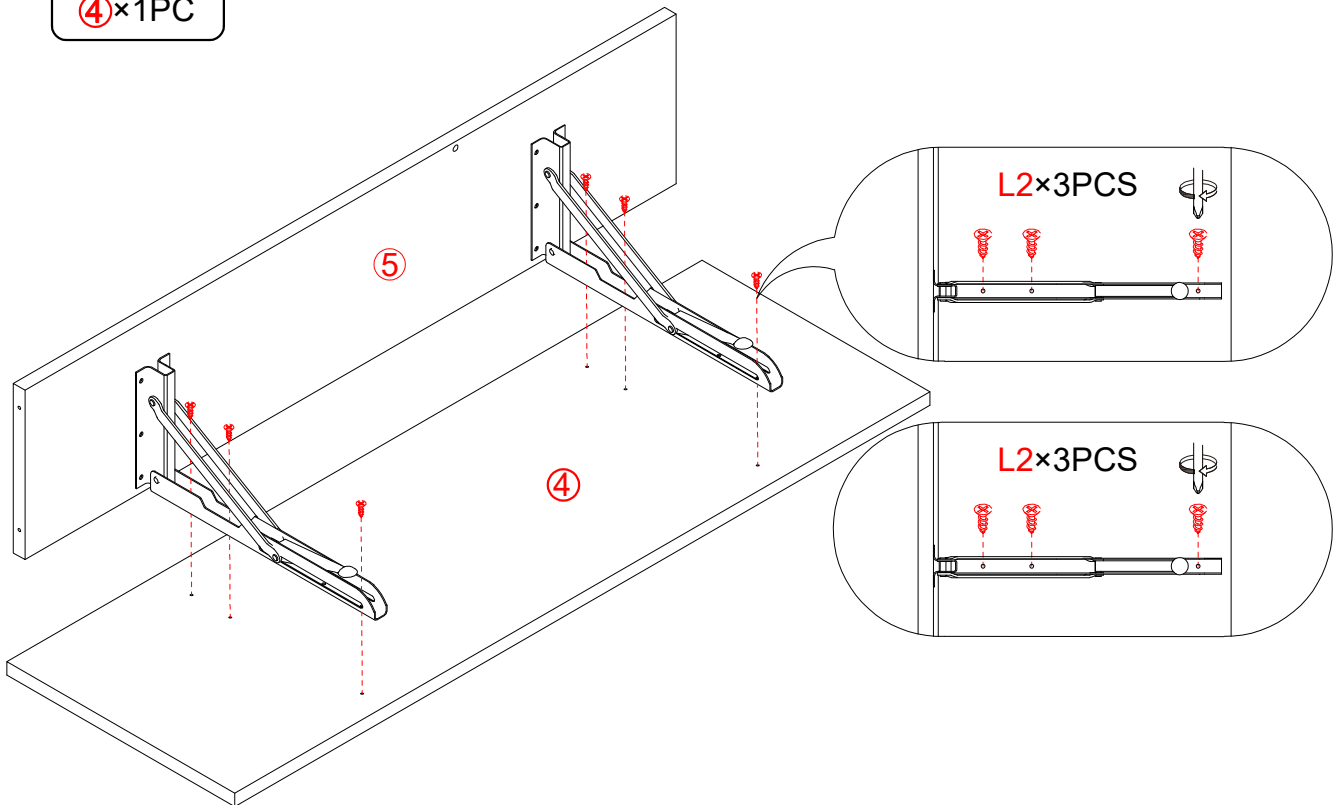

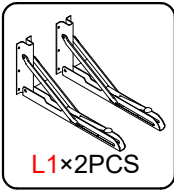


15



Note: 1. While holding down the A key, lift it up slightly, then press it down to make the No. 4 board extend and retract

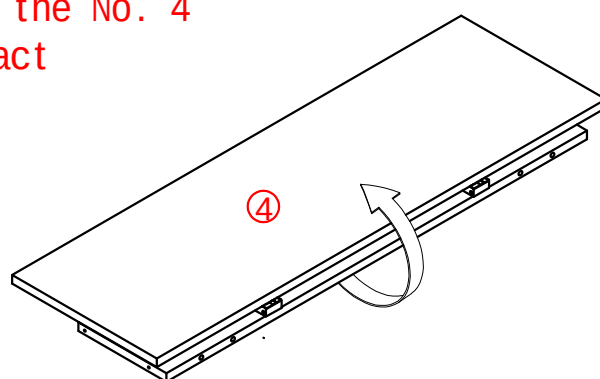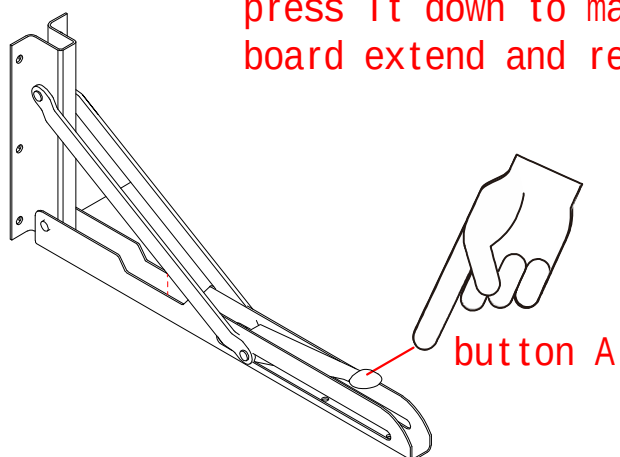



16

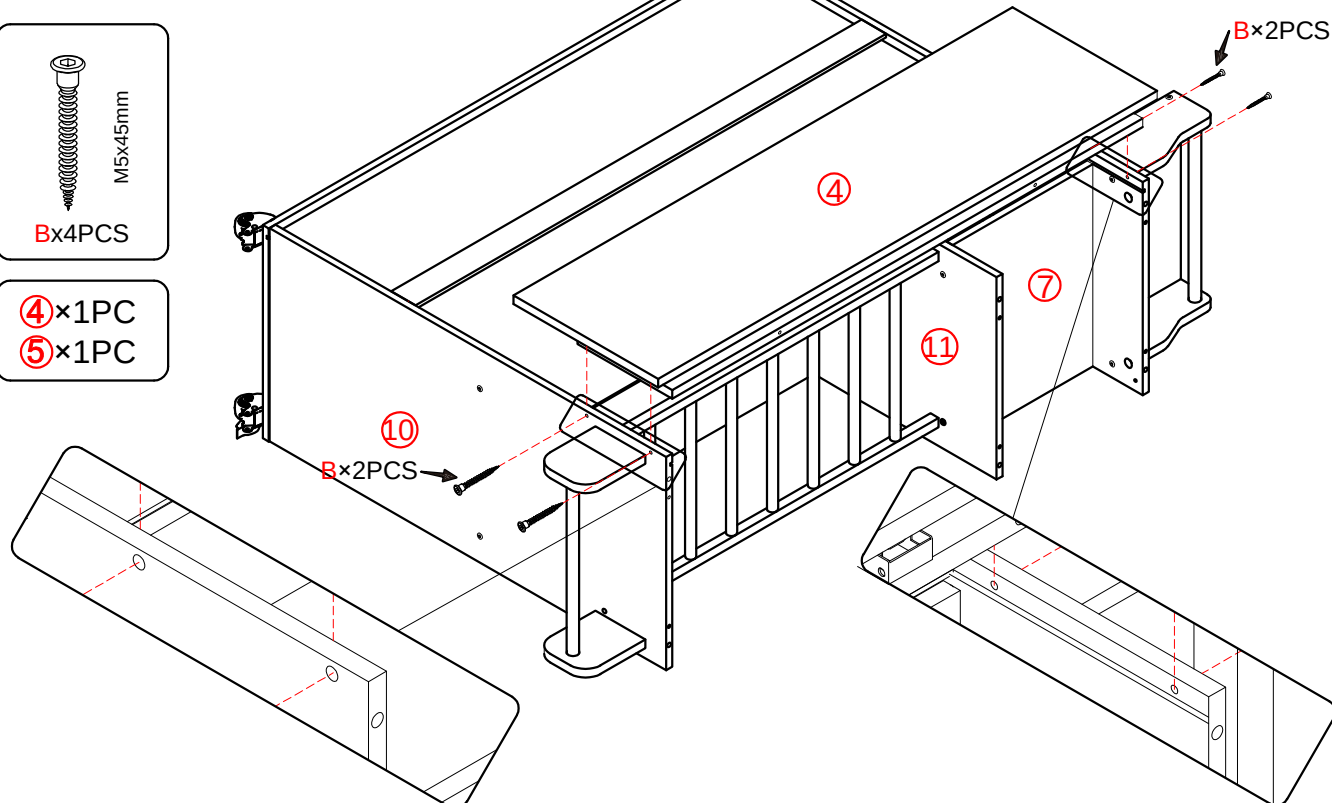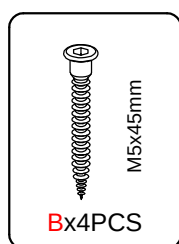


17

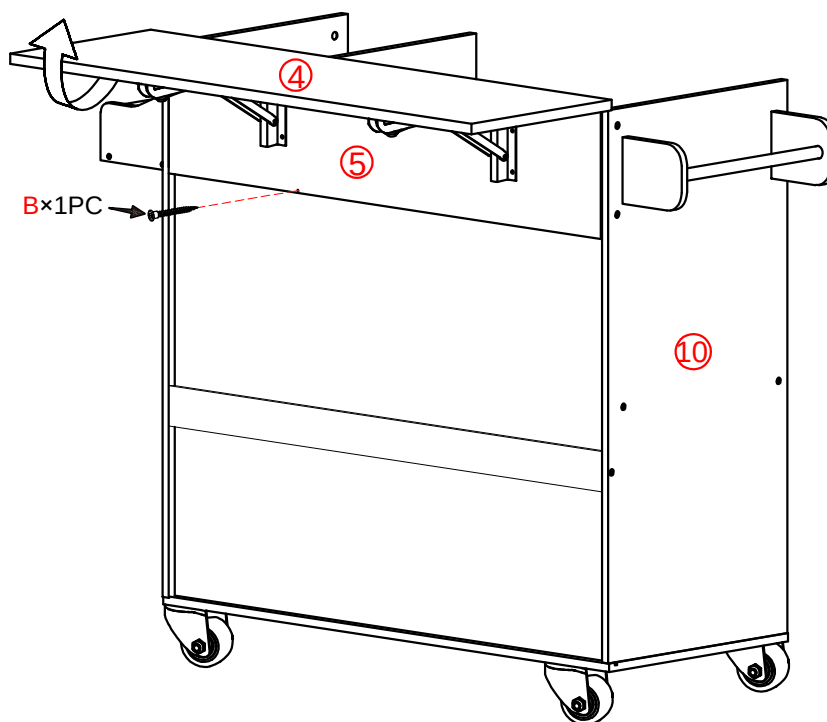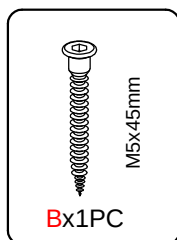


18

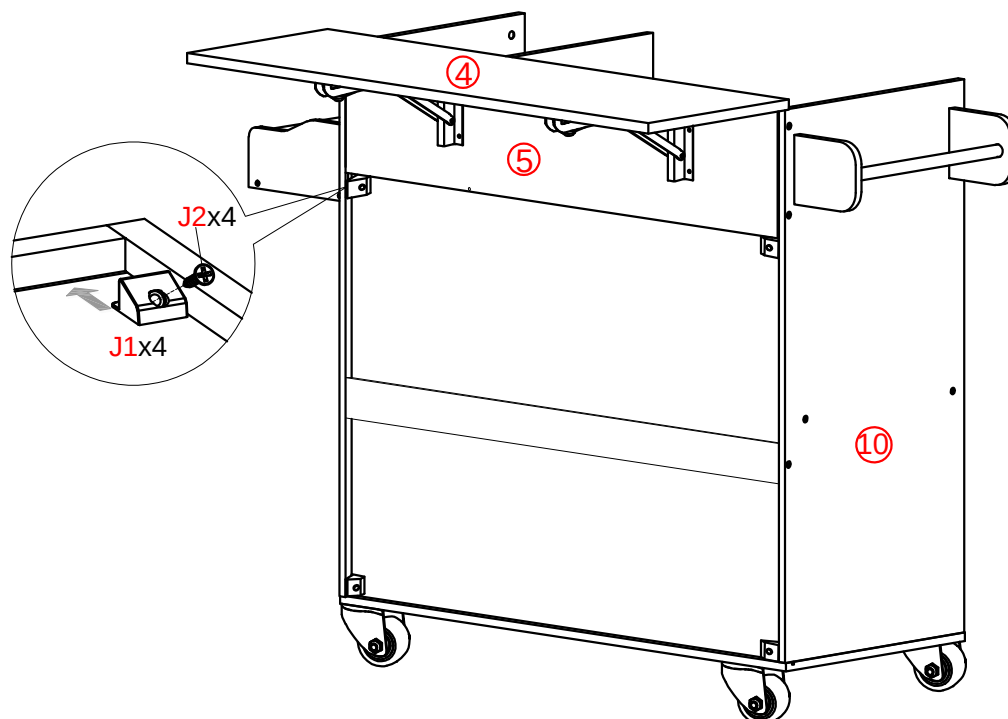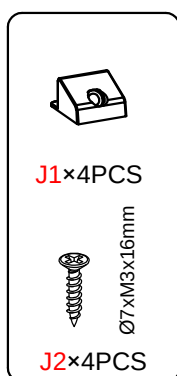



Note: First, insert the thin edges of the fitting "J1" into the four corners of the rear panel, then tighten them firmly with the screws "J2".

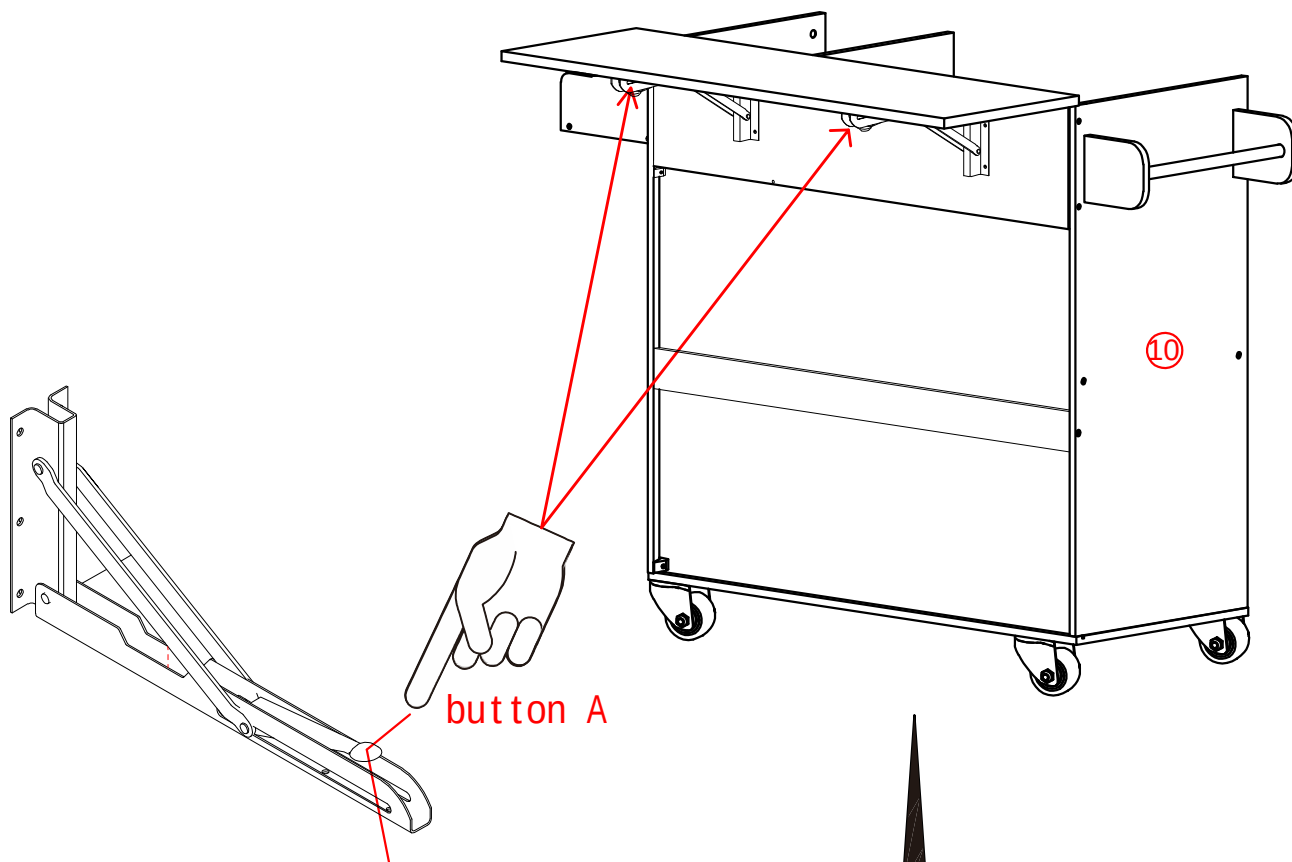




Note: 1. While holding down the A key, lift it up slightly, then press it down to make the No. 4 board extend and retract

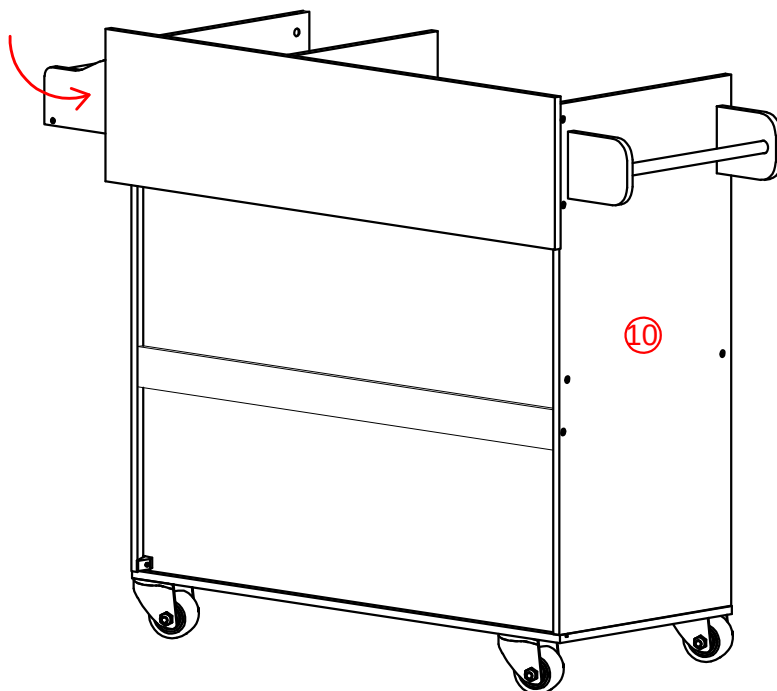




19

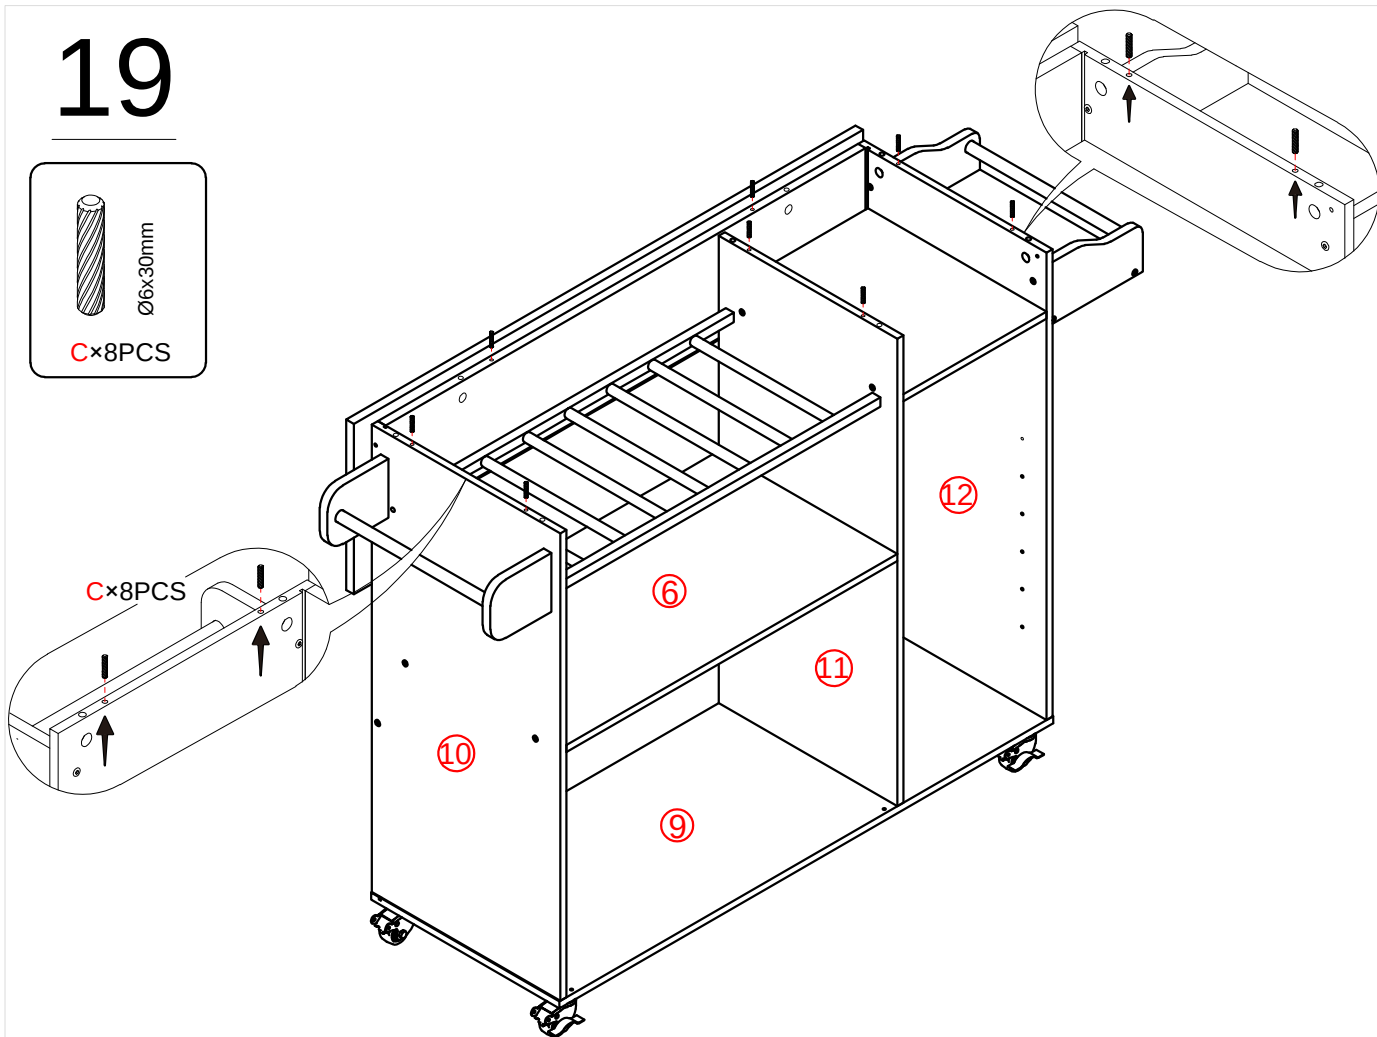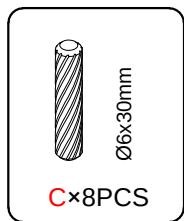


20

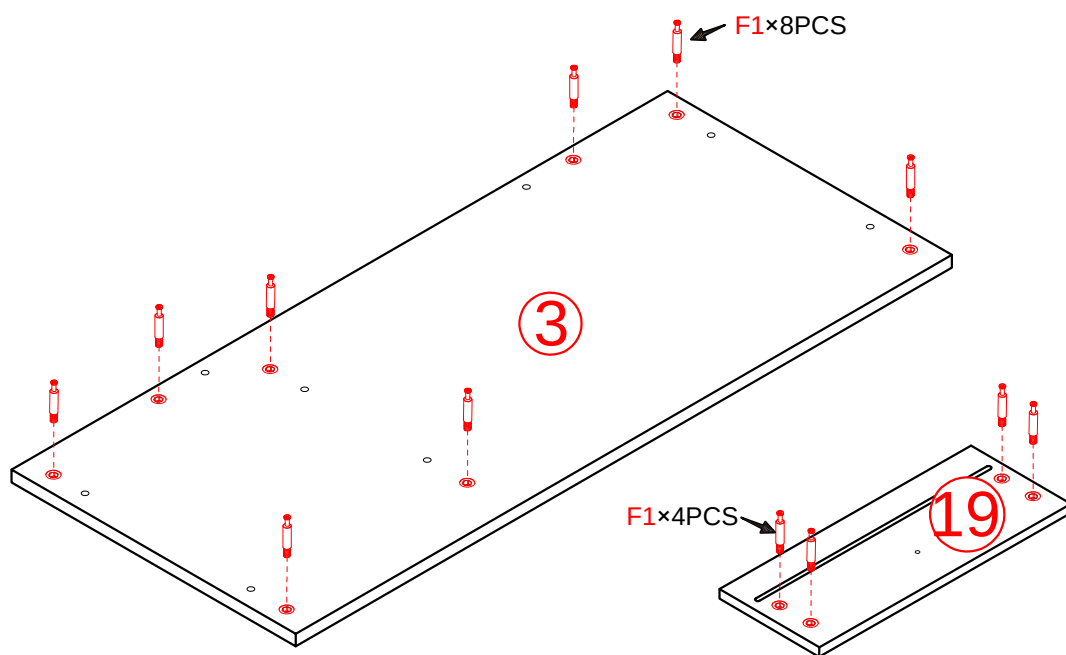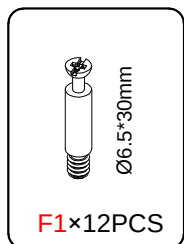

21

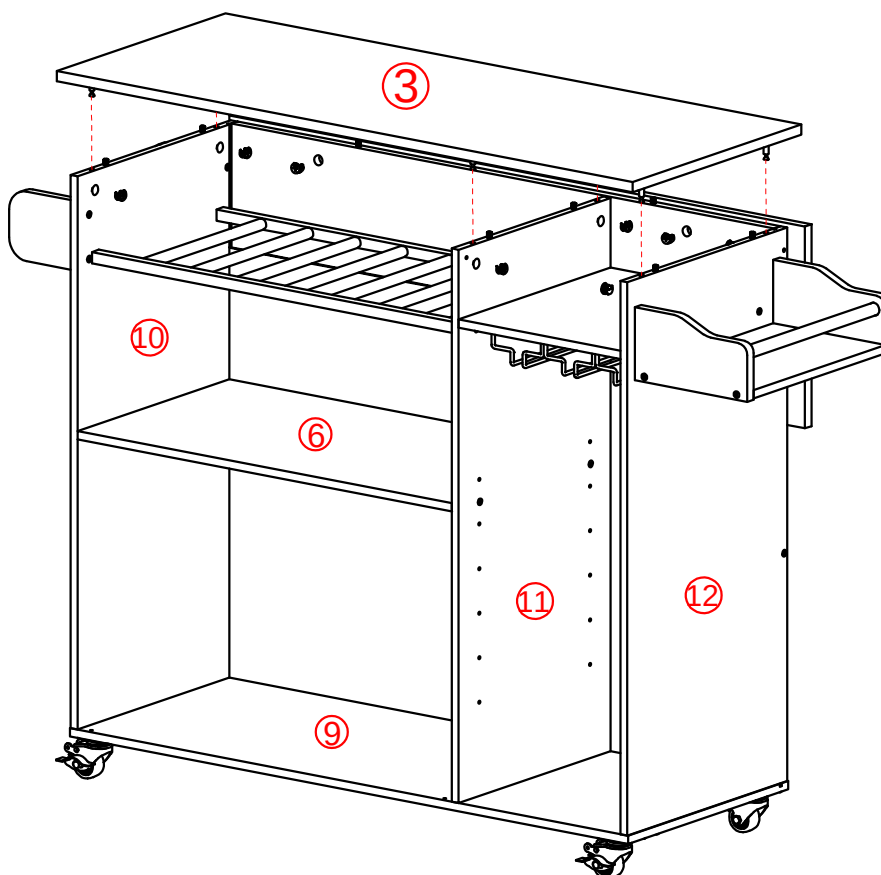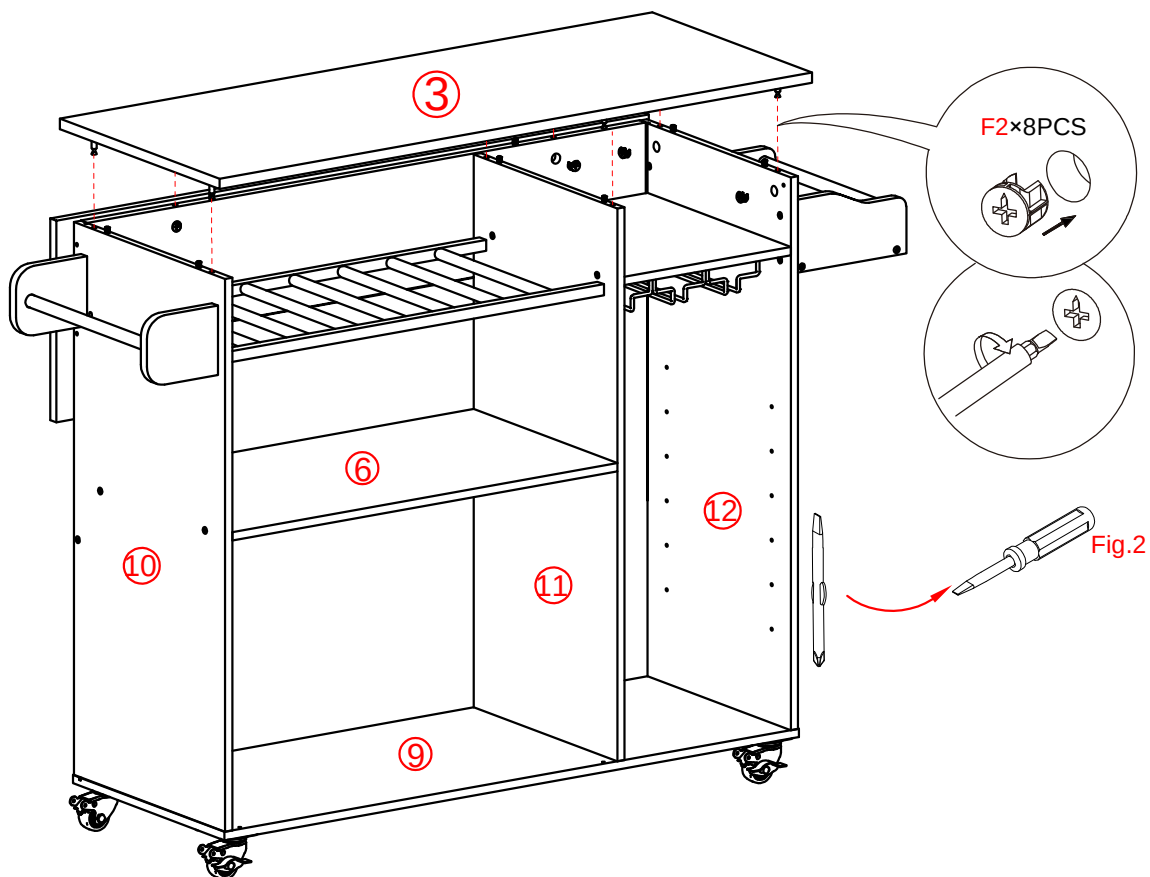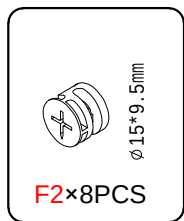


22



M×4PCS

18×2PCS

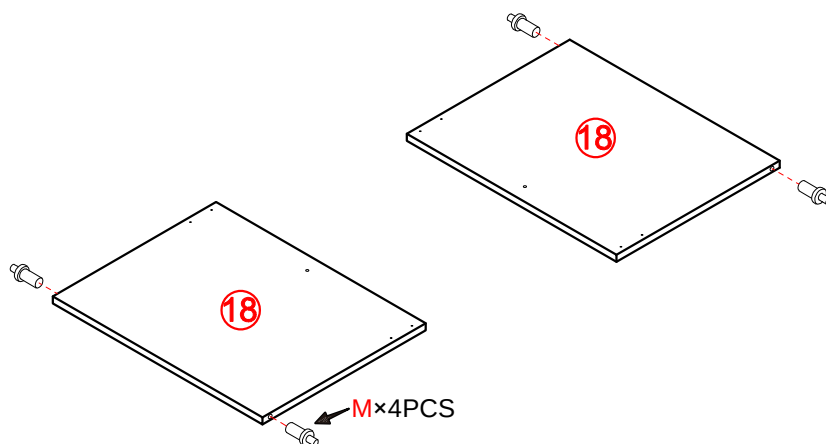

23




D1×2PCS






M4×22mm

D2×2PCS




18×2PCS

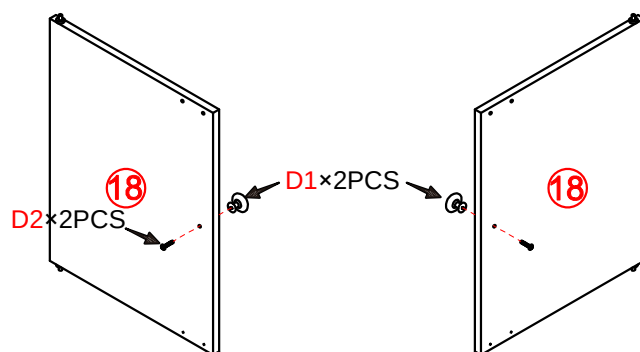

24

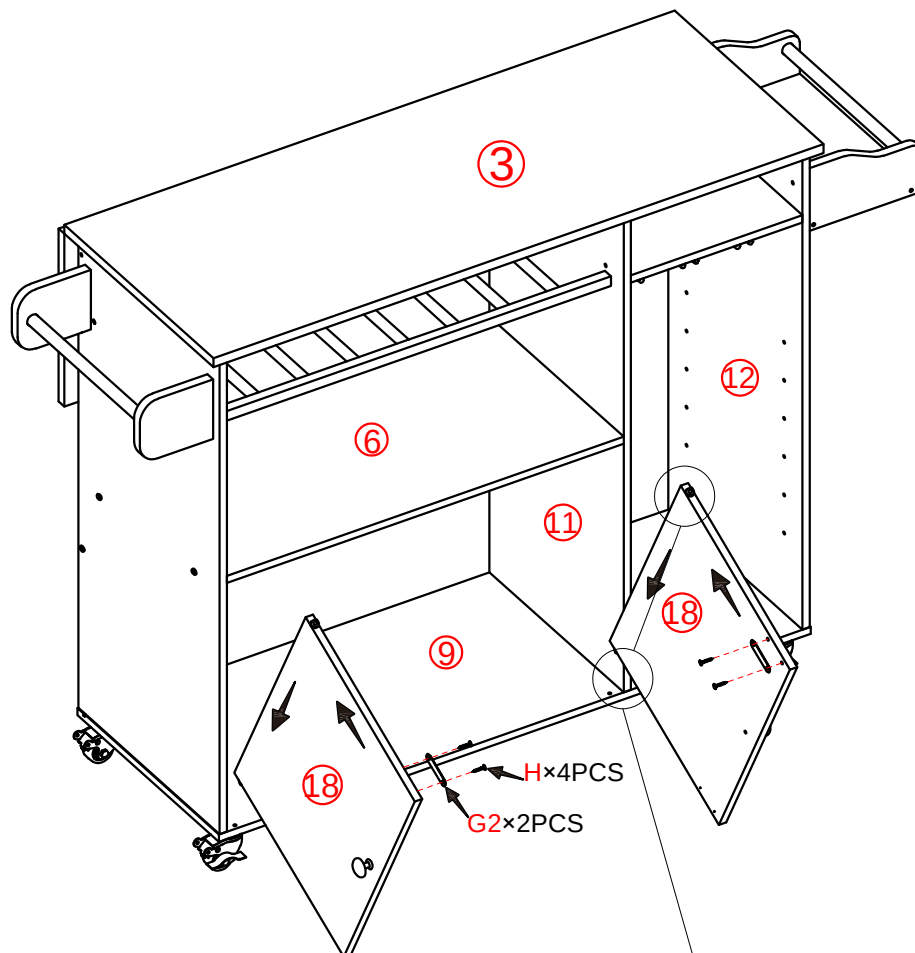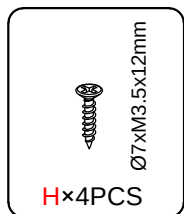

25

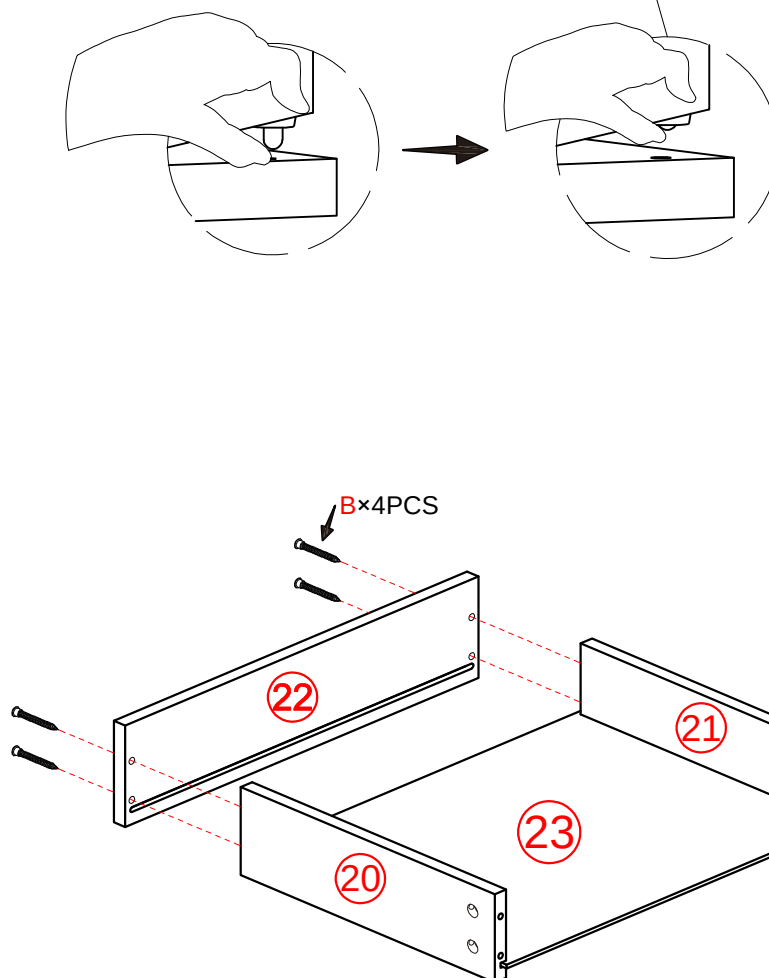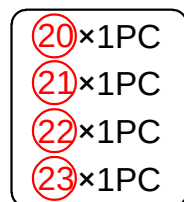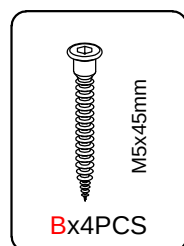

26



Ø 15×9,5mm

F2×4PCS




D1×1PC



M4×22mm

D2×1PC

19×1PC

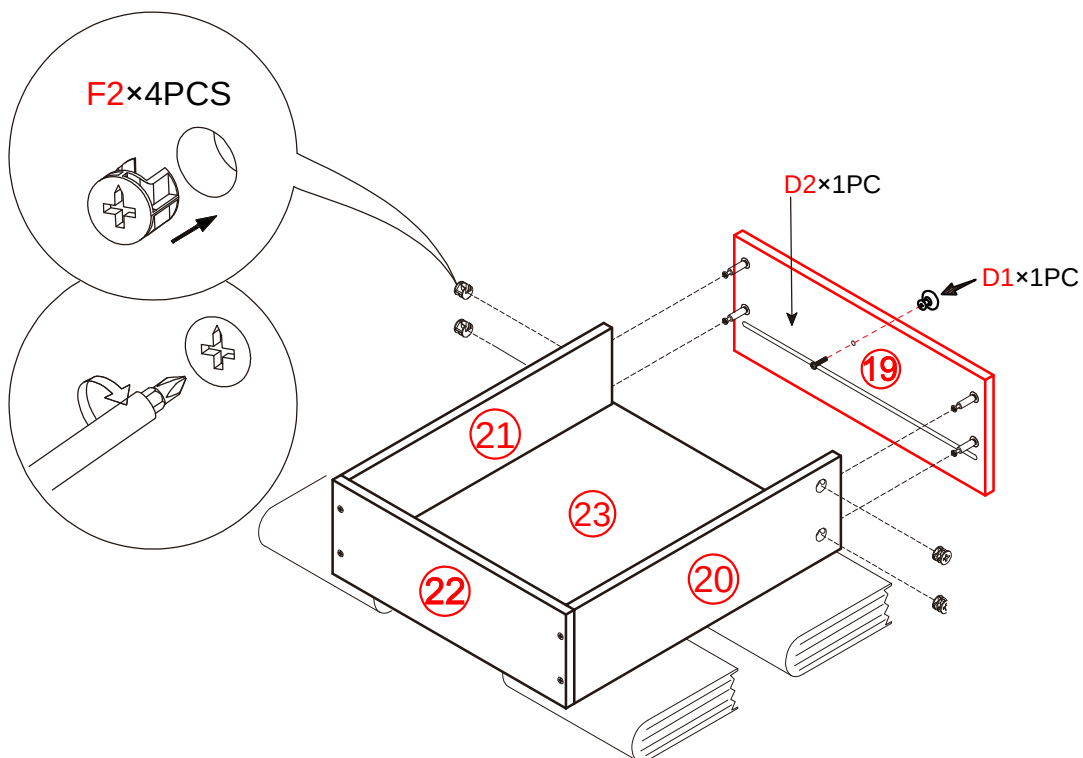


27



M5×Ø6×18mm

N×2PCS

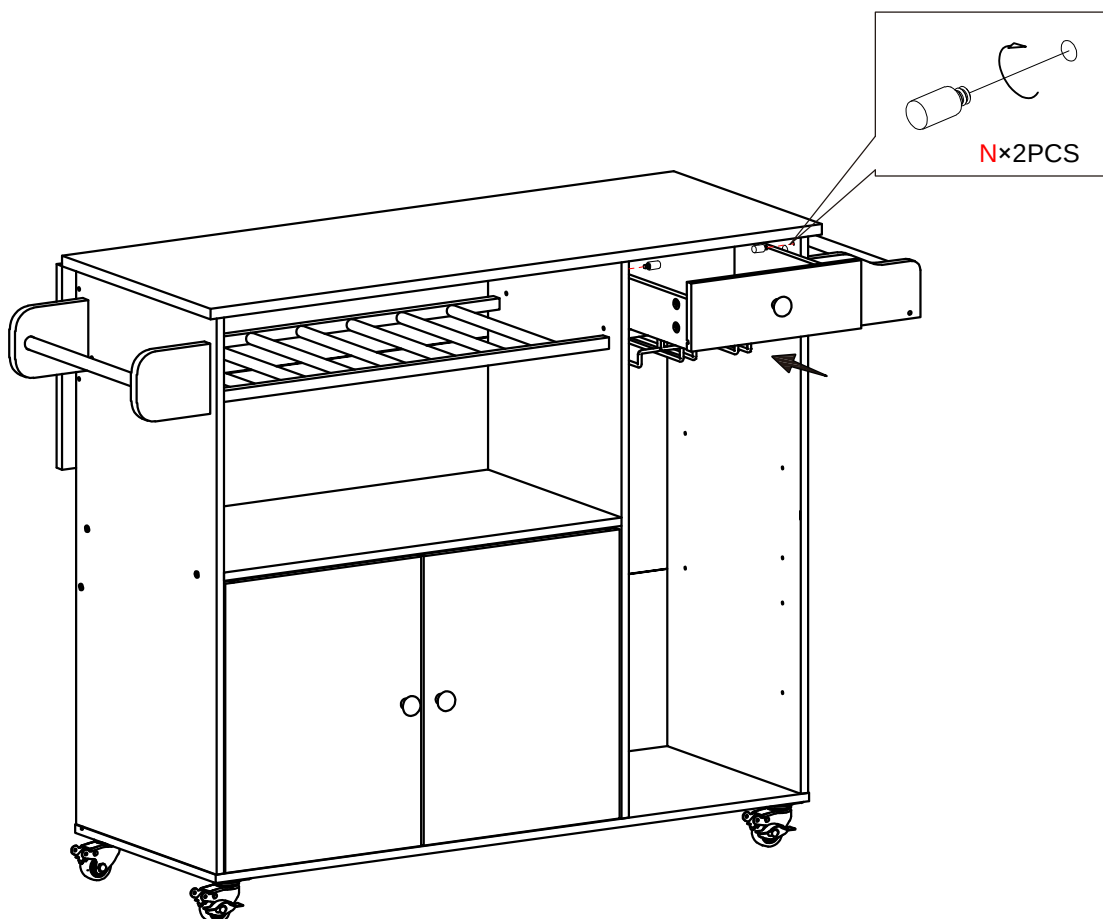

28

