


# ASSEMBLY INSTRUCTIONS


- Description: Queen Headboard, Monterey Brown

Page 01 of 03


## Hardware List



A x 2  
(M7 x 50)




B x 4  
(Ø8 x 30)




C x 4  
(M6 x 40)




D x 4  
(M6 x Ø19)

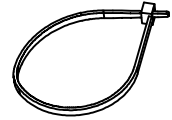


E x 2




F x 2



G x 2  
(M4 x 50)









H x 2  
(M4 x 20)




Z x 1  
(M4)

## Component List

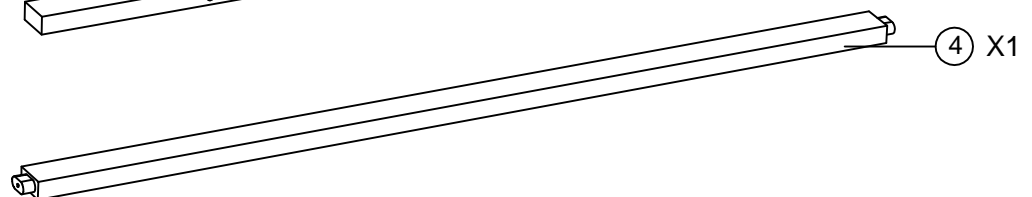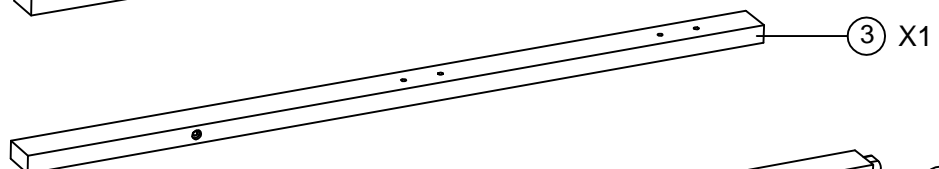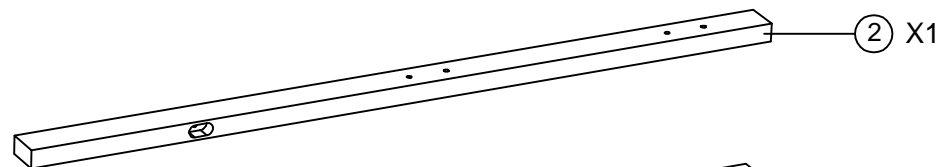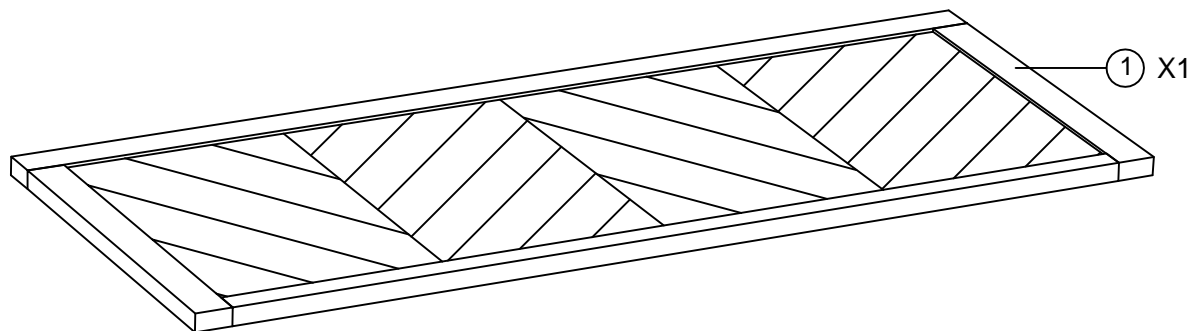

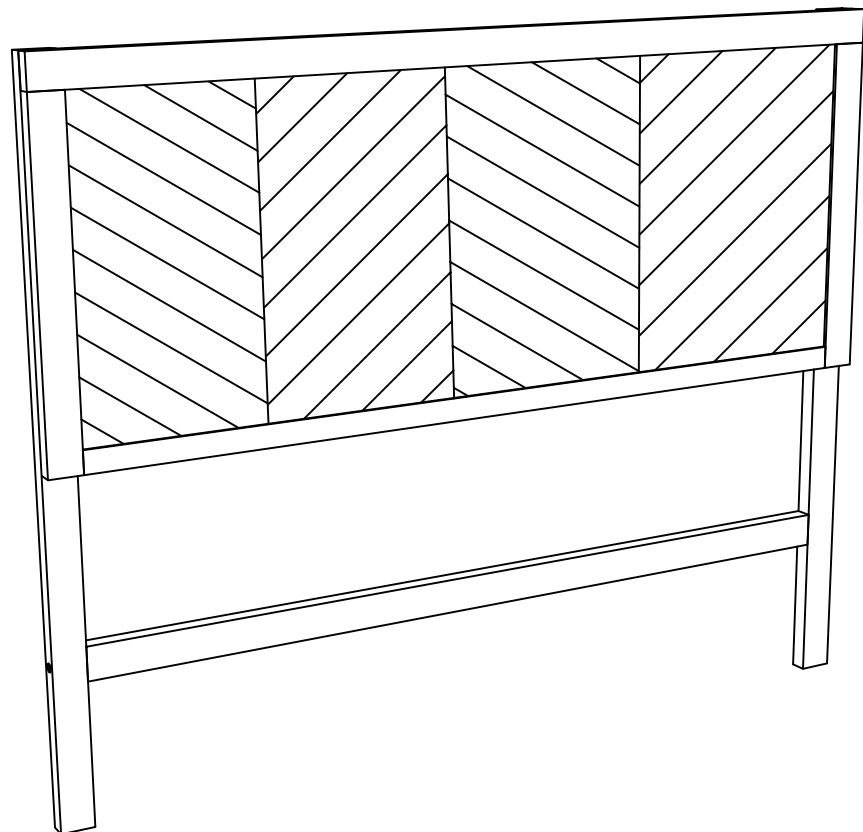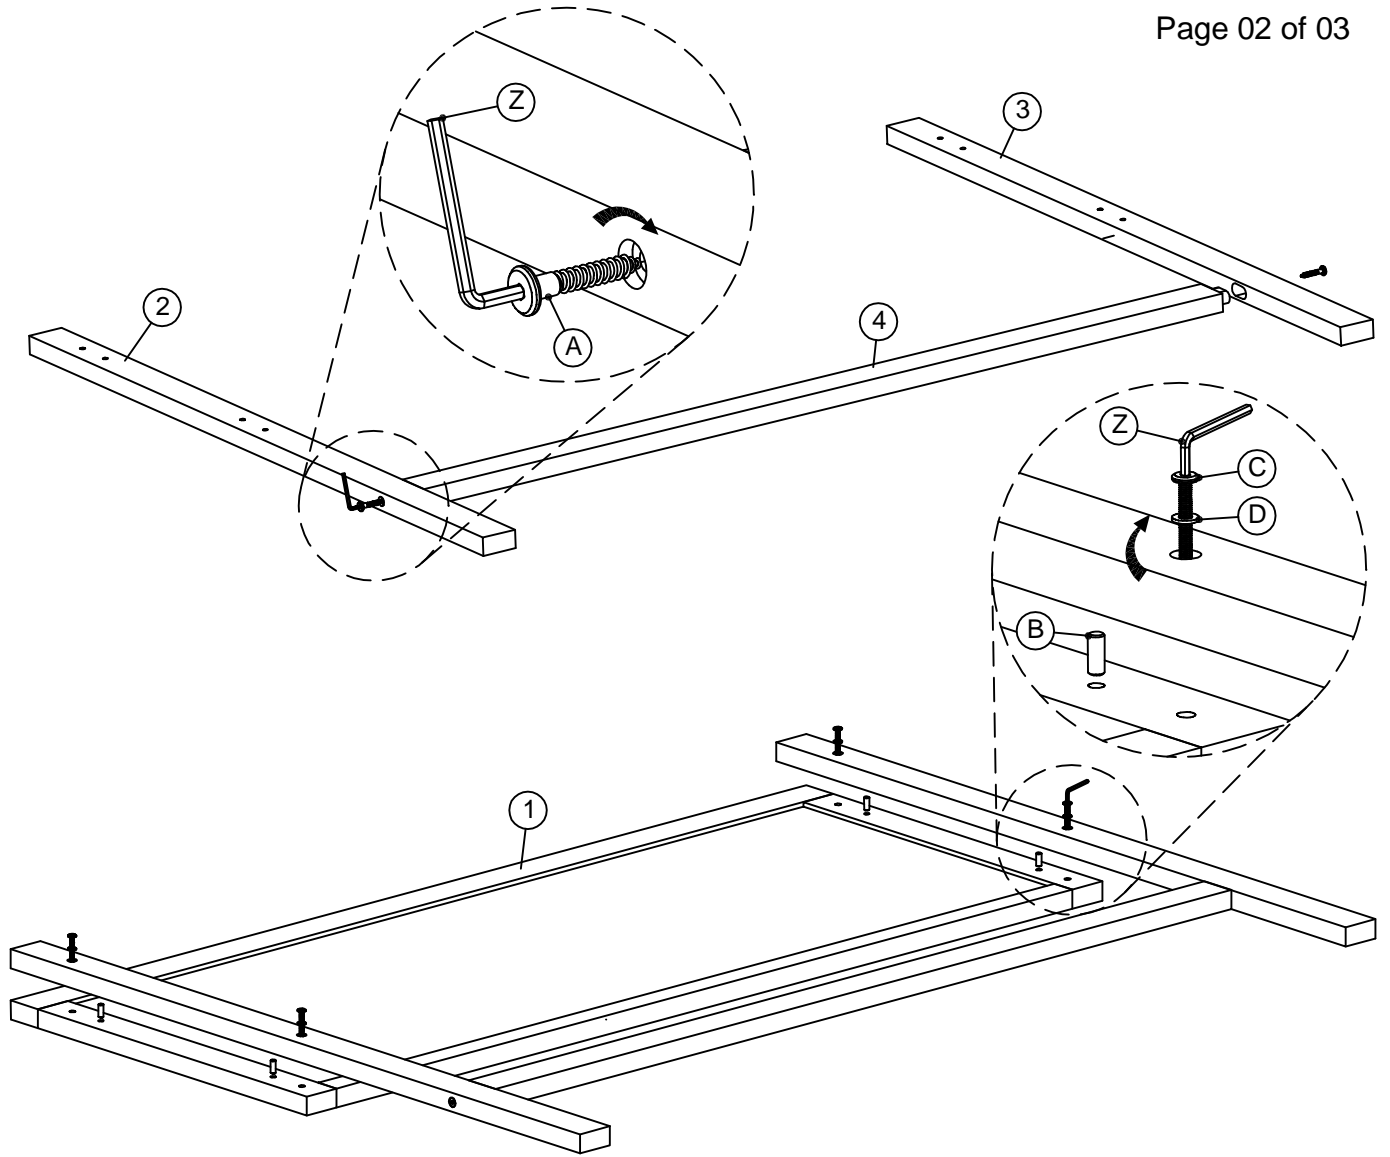

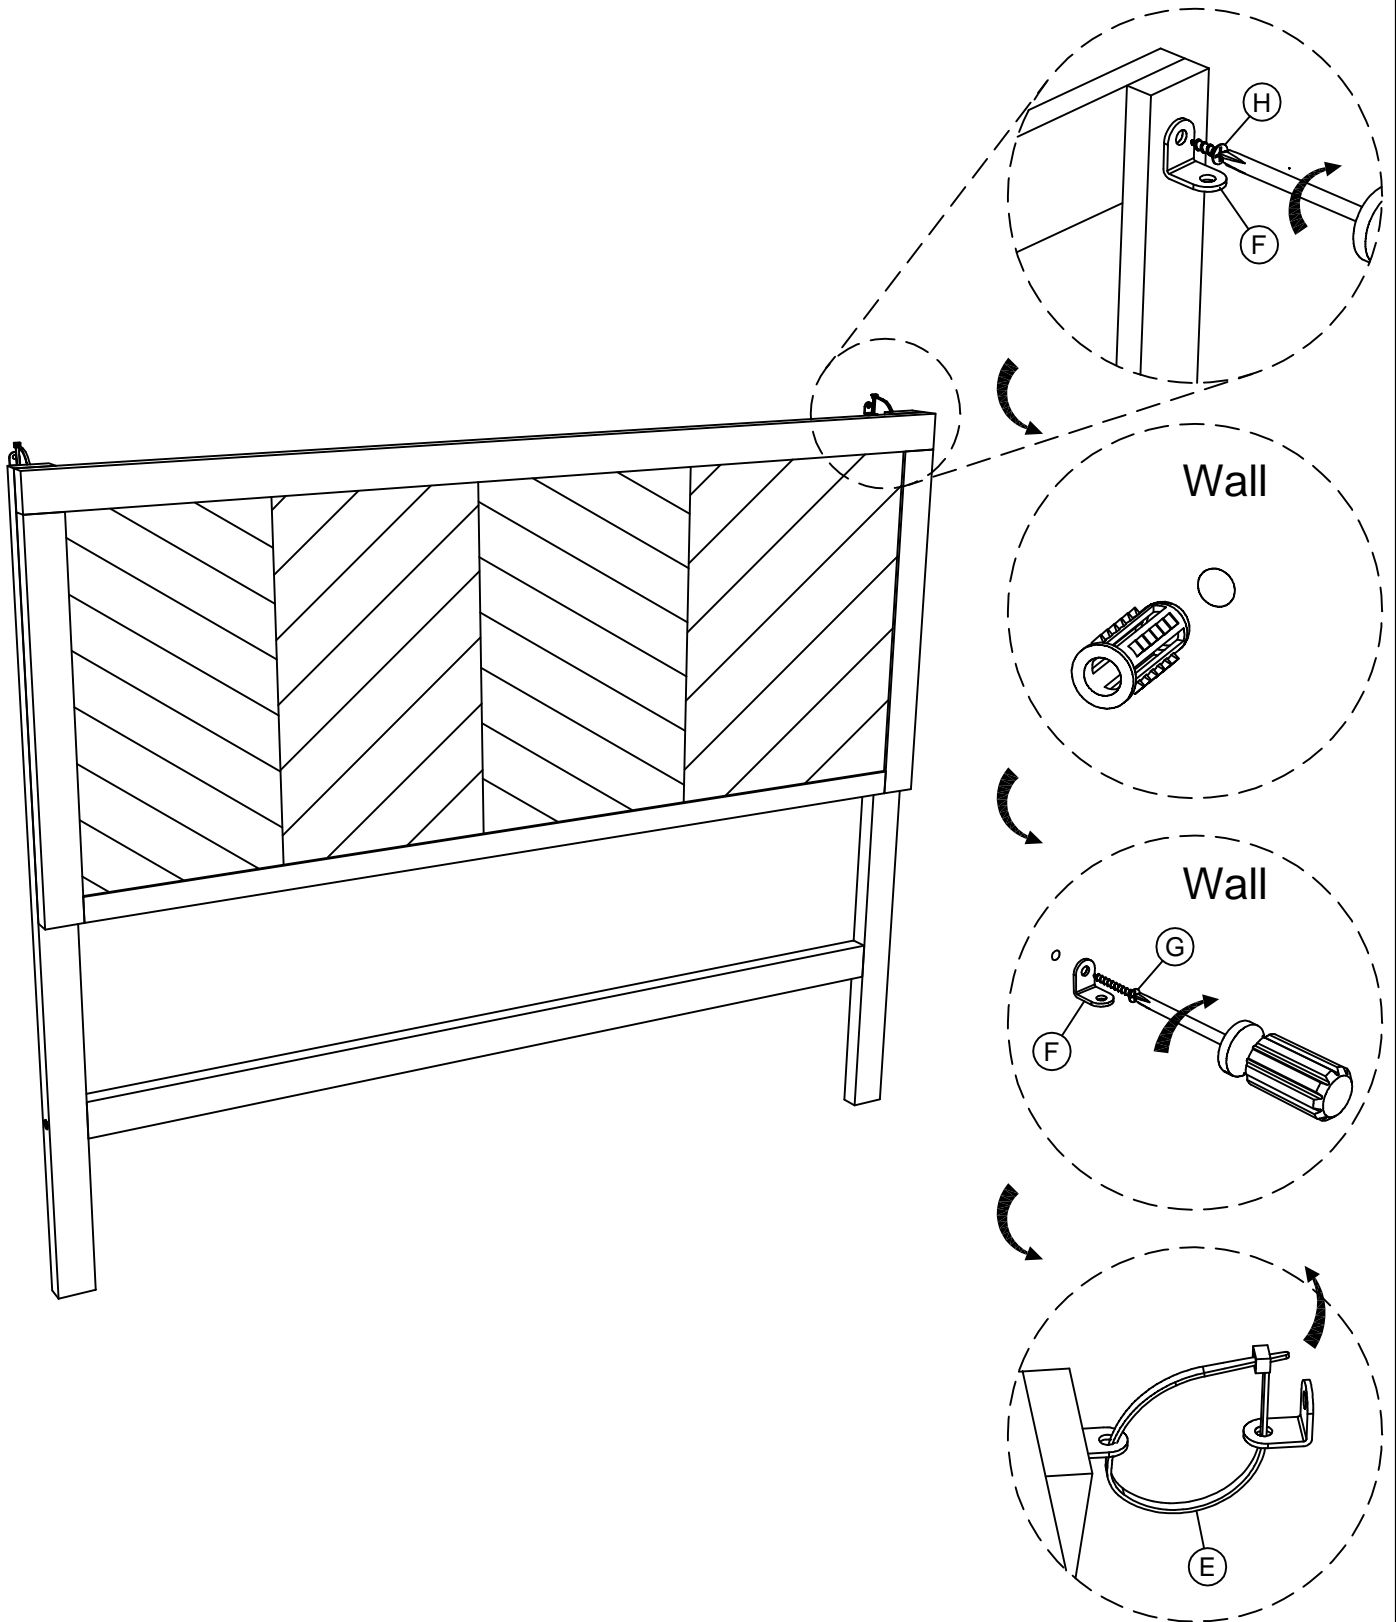

**"IMPORTANT"**

1. Screwdriver is not supplied. Please secure the unit to your wall using the appropriate tool for your wall type, there are readily available from your local DIY/ home improvement stores.
2. Before drilling into your wall check for wires or electric cables.