


DESCRIPTION

- Thermostatic Shower Column Set
- Brass Construction





CARTRIDGE

- Thermostatic cartridge

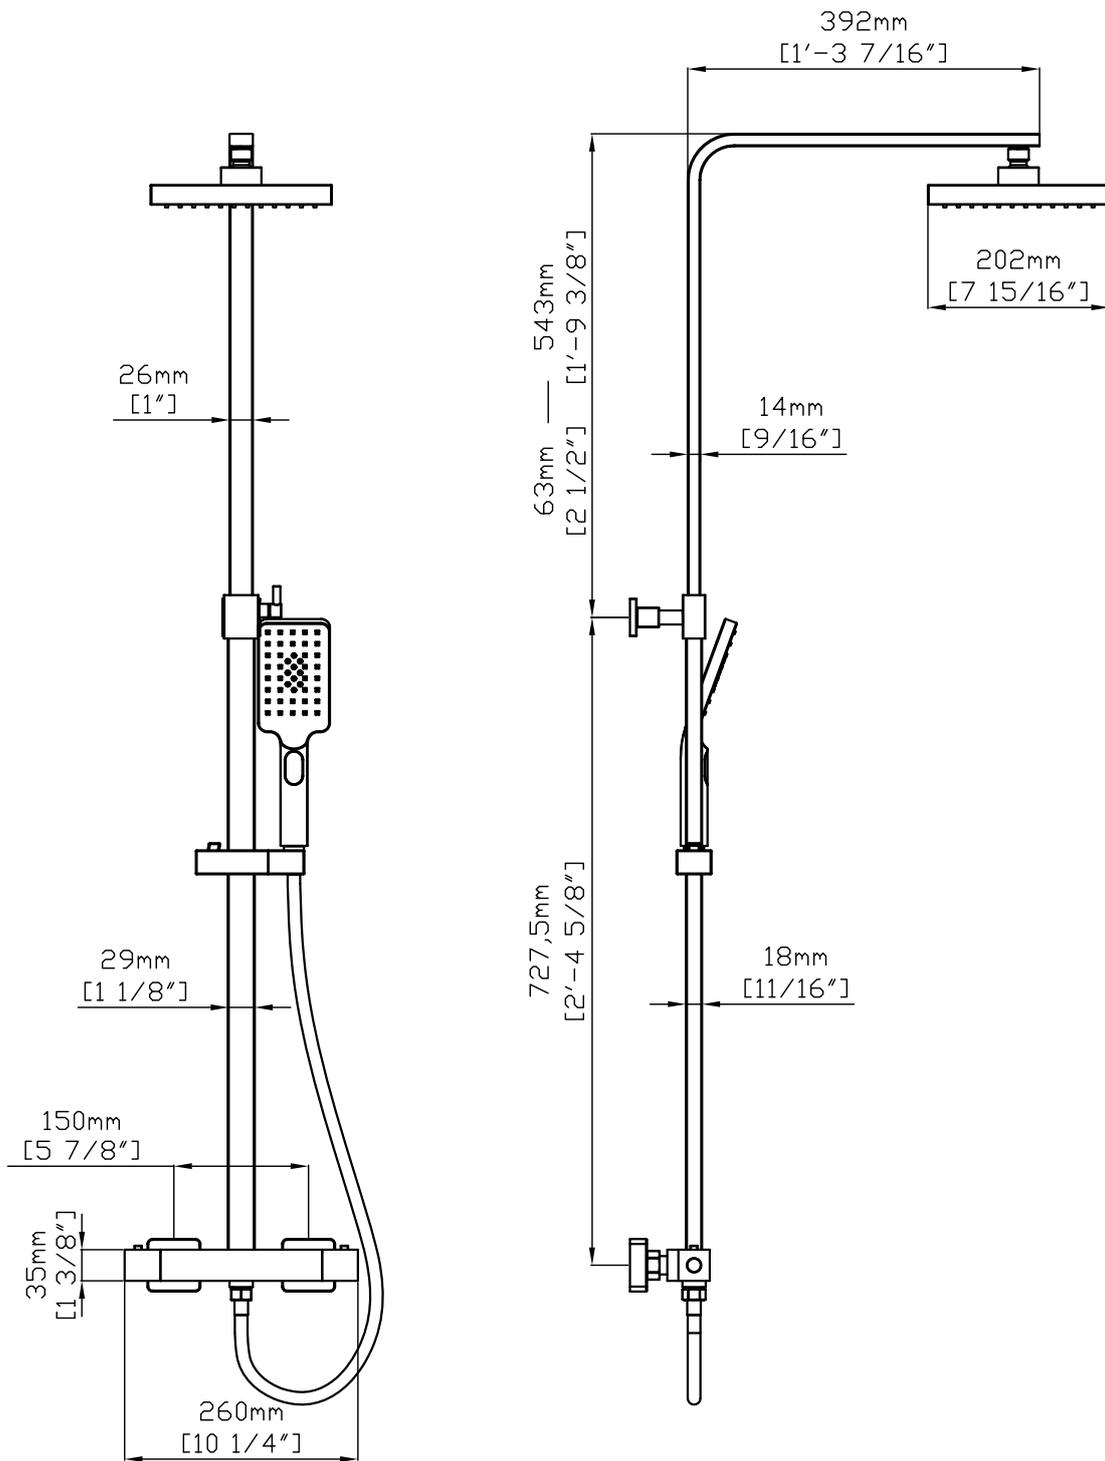

Note: Dimensions are for reference only. Detailed information is in accordance with the final product.


INSTALLATION MANUAL Tools You Will Need :

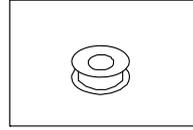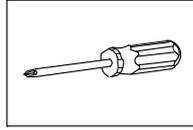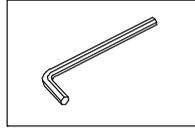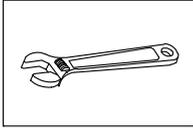

Adjustable wrench Hexagon wrench Philips Screwdriver Pipe Tape


Notes before installation :

1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
4. If you will be away from home for an extended period you should shut off the main water supply.

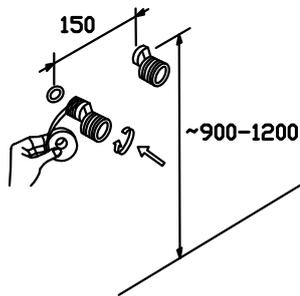


Step 1

As shown, install the accessories and attach the tape.

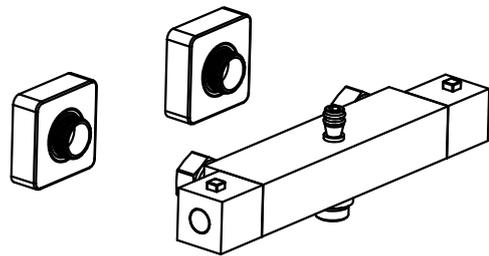


Step 2

Install the main body and rubber pad.

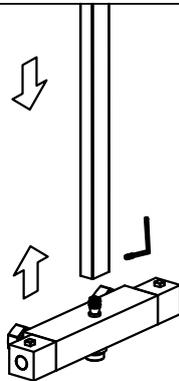


Step 3

Install the riser on the faucet, tighten the screw.

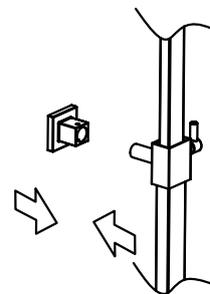


Step 4

Install the mounting piece on the shower arm.

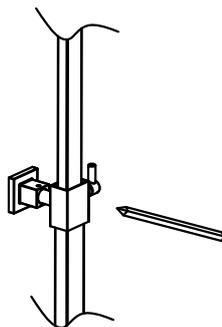


Step 5

Make sure the riser is level, mark the position of the screw holes.

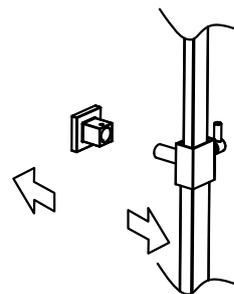


Step 6

Remove the riser and the mounting piece.

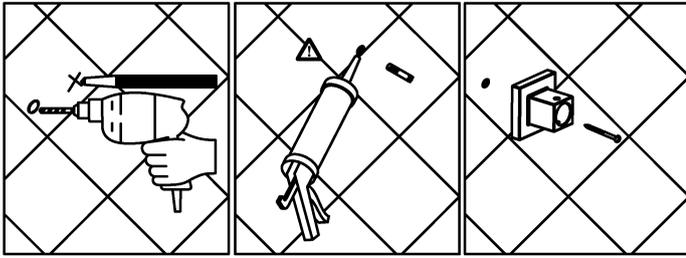


Step 7

Drill the screw holes and install the anchors. Install the mounting piece and mounting piece seal.

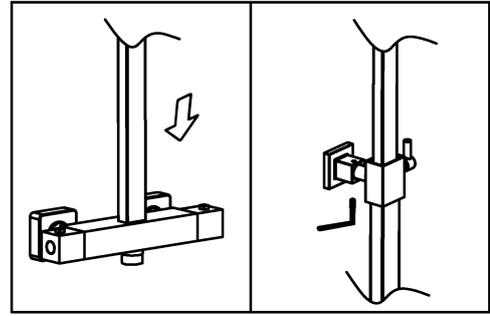


Step 8

Install the riser on the faucet, tighten the screw.

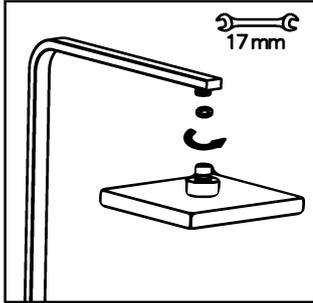

Step 9

Install the shower rain head.

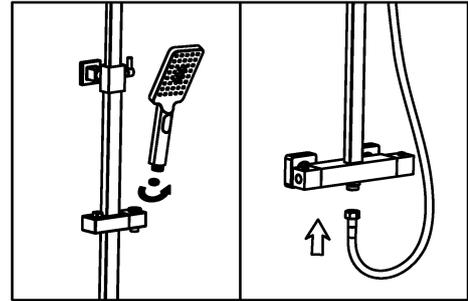

Step 10

Place the hose washer into the short hose end connection. Connect the end of the hose to the faucet. Place the screen washer onto the long hose end connection. Install the hand shower onto this end of the hose. Position the hand shower into the holder.



SERVICE CONTACTS:

Website: www.casainc.com
 Contact us: (303)747-4321
 Email us : service@casainc.com