
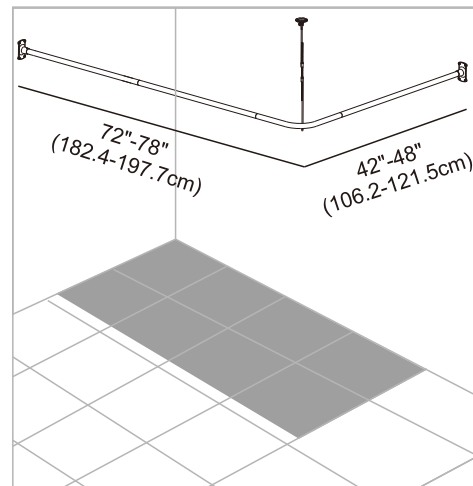
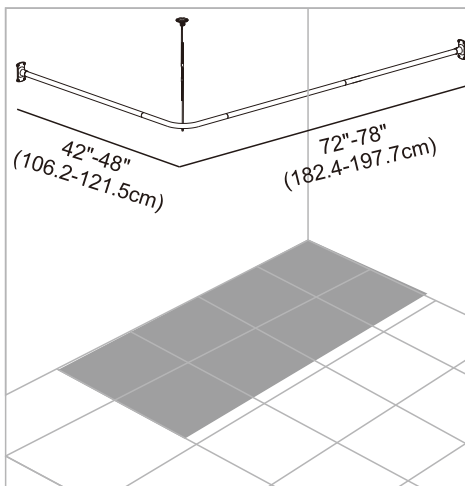
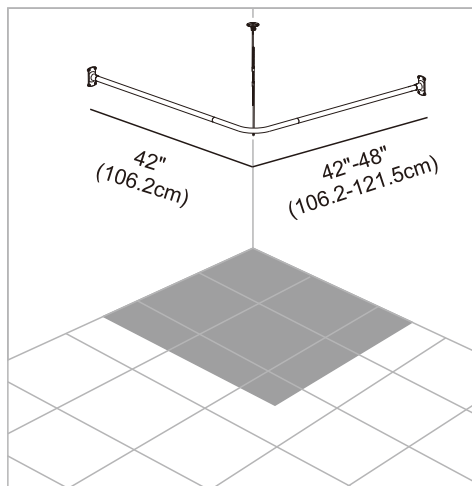
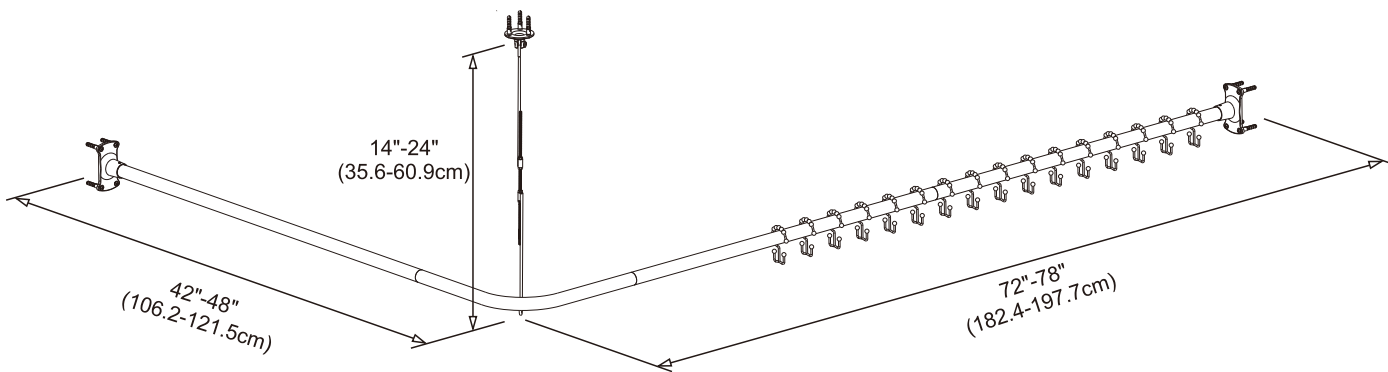


L Shaped Shower Curtain Rod,
Bathroom Bathtub Corner Shower Curtain Rod
with Ceiling Support
[42"-48"] x [72"-78"]

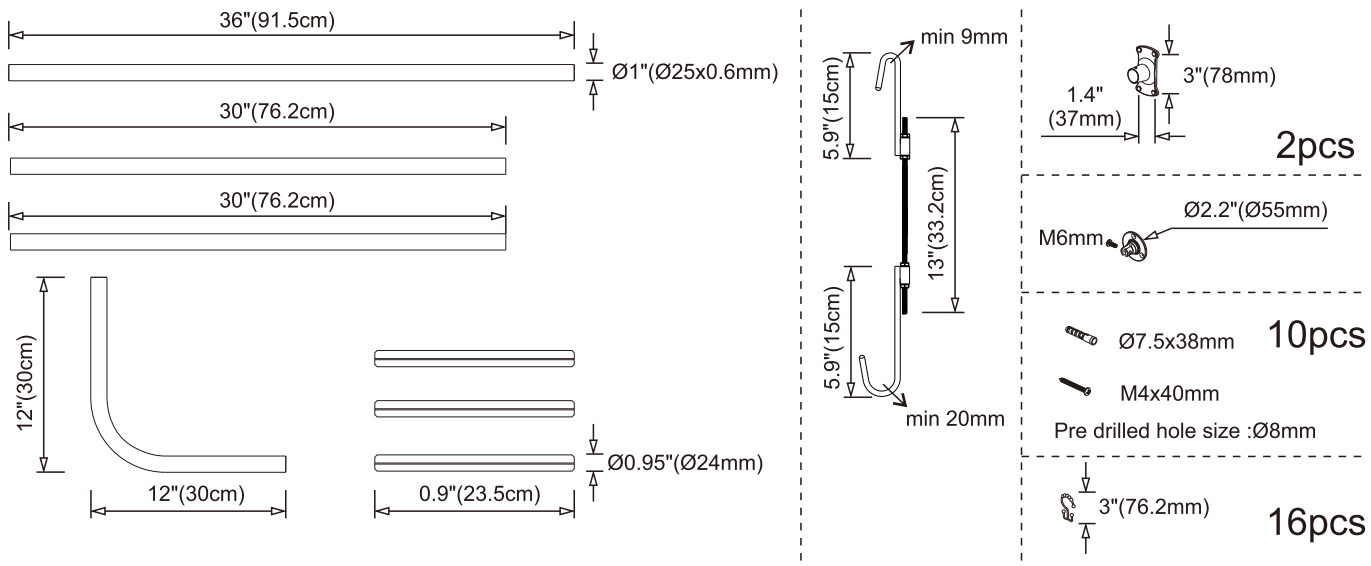


L SHAPED DESIGN: L-shaped shower curtain rod is perfect for corner tubs and shower spaces , which fits area up to 42" long and 42 " wide , or 48" long and 42 " wide , or 78 " long and 42 " wide , or 72 " long and 48 " wide , this L-shaped curtain rod can be easily cut o desired length , helps the L shaped shower rod easily to adjust to suit your corner size.

NOTE:


These products should be located and mounted to a wall. While it is possible to mount them to any surface, a stud or concrete mounted product will yield the best results.

DANGER:(Risk of personal injury)


These products are not designed or intended for use as a grab bar or support bar. Do not install any of these products in any area where they are likely to be used inadvertently as a grab bar or support bar.

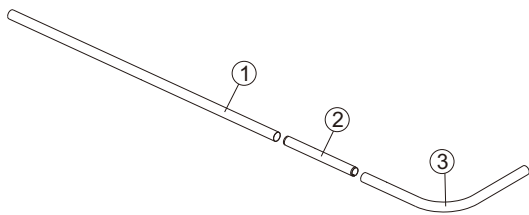


One connector(2) to join the rod (1) and the L rod (3) together.

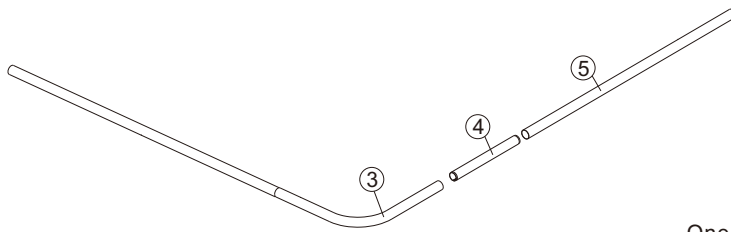


One connector(4) to join the rod (5) and the L rod (3) together.

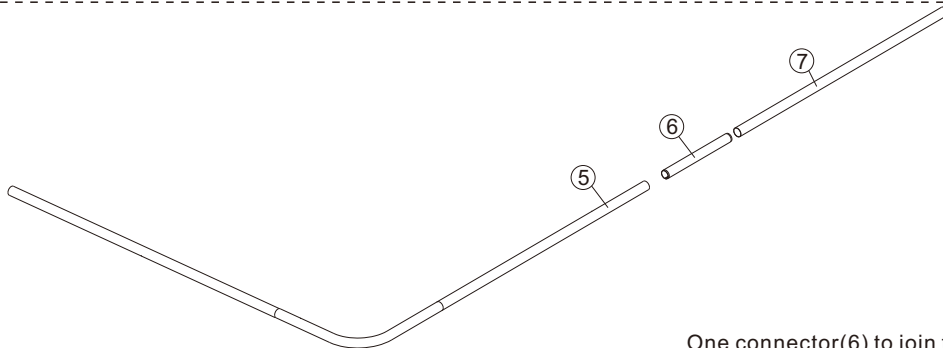

One connector(6) to join the rod (5) and the rod (7) together.

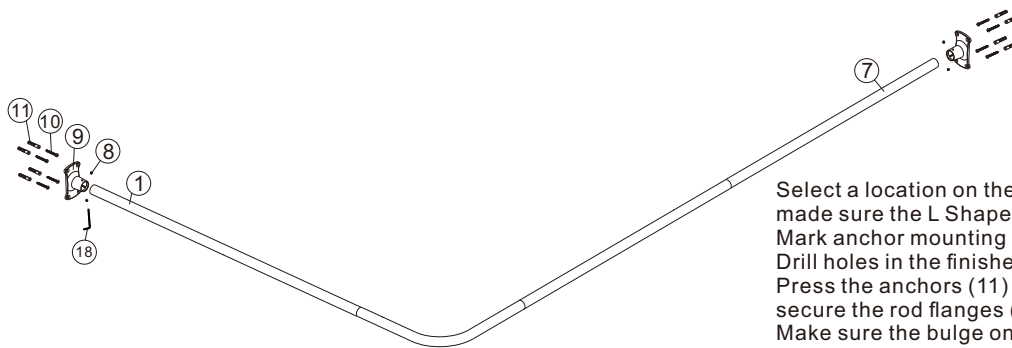

Select a location on the vertical wall to install the rod flanges(9) , made sure the L Shaped Shower Curtain Rod are horizontal . Mark anchor mounting hole locations on wall as shown , Drill holes in the finished wall as required. Press the anchors (11) into the holes. secure the rod flanges (9) with the self-tapping screws (10). Make sure the bulge on rod flanges (9) upwards. Slide the extension of the rod(1) (7) onto the rod flanges (9) . Tighten the screw(8) with the hex wrench (18) to secure the rod flanges (9) .

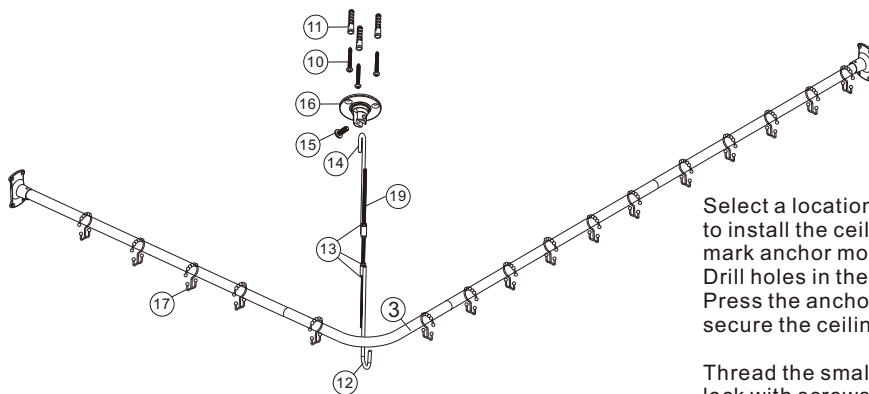

Select a location on the ceiling at the top of the L-shaped rod(3) to install the ceiling support (16) , mark anchor mounting hole locations on wall as shown , Drill holes in the finished wall as required. Press the anchors (11) into the holes. secure the ceiling support (16) with the self-tapping screws (10).

Thread the small hook (14) through the ceiling support (16) , lock with screws (15). Adjust the length of screw (19) through nut (13), make the large hook (12) hooking the positioning hole of the L rod(3).

Made sure the L Shaped Shower Curtain Rod are horizontal . Be sure to tighten nut (13) to prevent the hook from shaking and scratching the bathroom curtain, or causing the bathroom curtain to slide unevenly.

You can choose suitable patterns of shower curtain decorative fabric by yourself (not provided). Hang the hook (17) on L Shaped Shower Curtain Rod,