
INSTALLATION & ASSEMBLY

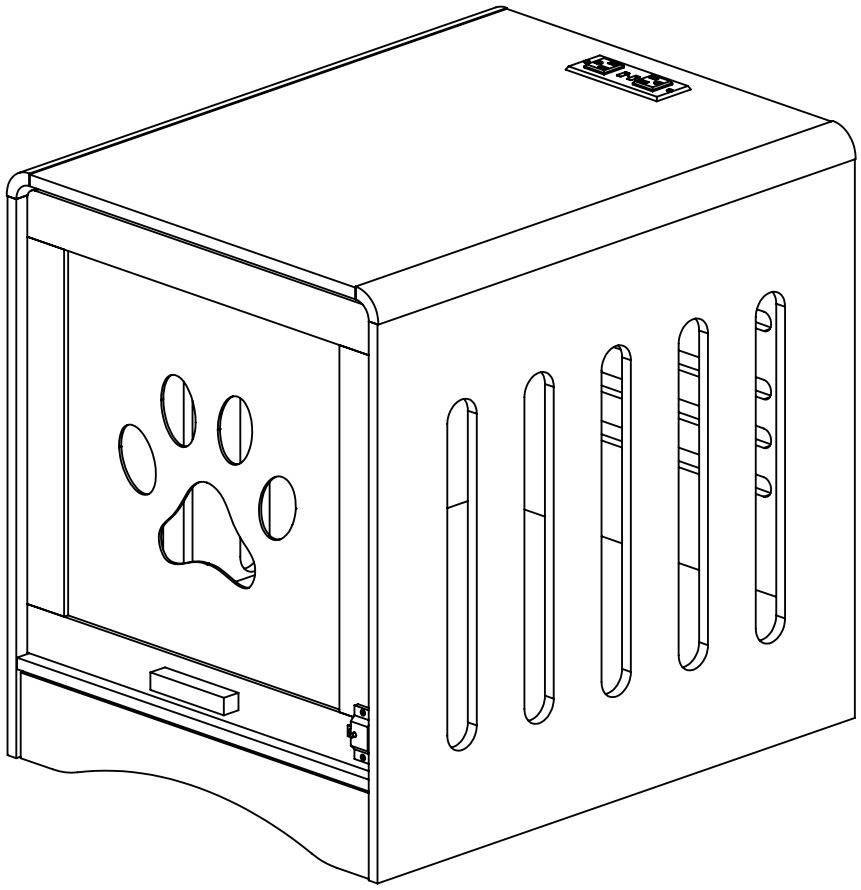

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.
Our professional after-sales team will serve you online all day.

CONTACT US ANYTIME FOR TOP-NOTCH CUSTOMER SERVICE

Q:Need help with assembly?

A:We could provide detailed installation videos.Contact us for step-by-step guidance to ensure successful installation.

Q:Found damaged panels or missing accessories?


A:Let us know,and we'll promptly send replacements your way.

Q:Have feedback on product usage?

A:Contact us,and we'l collaborate to ensure the best experience for you.

DO NOT RETURN PRODUCT TO WAREHOUSE
CONTACT US BY EMAIL

Before You Start

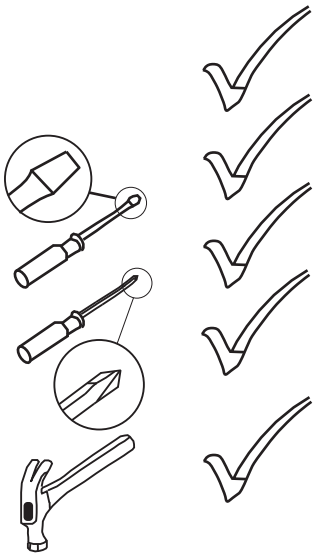

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process

Have the following tools:Flat Head Screwdriver,#2 Phillips Head Screwdriver and Hammer

Caution:If using a power drill or power screwdriver for screwing,please pay attention to slow down and stop when screw is tight.Failure to do so may result in stripping the screw.(Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY:1-2

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.

-Identify,sort and count the parts before attempting assembly.




-Compression dowels are lightly tapped in with a hammer.

-Slides are labeled with an R(right)and L(left)for proper placement.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.

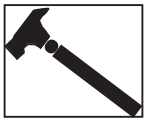

-If there is a back panel in the package,please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability.If it is difficult to fixit when tightening,it can be fixed with the help of a hammer and then tightened.




-Do NOT use harsh chemicals or abrasive cleaners on this item.

-Never push,pull,or drag your furniture.




Board Identification

Not actual size

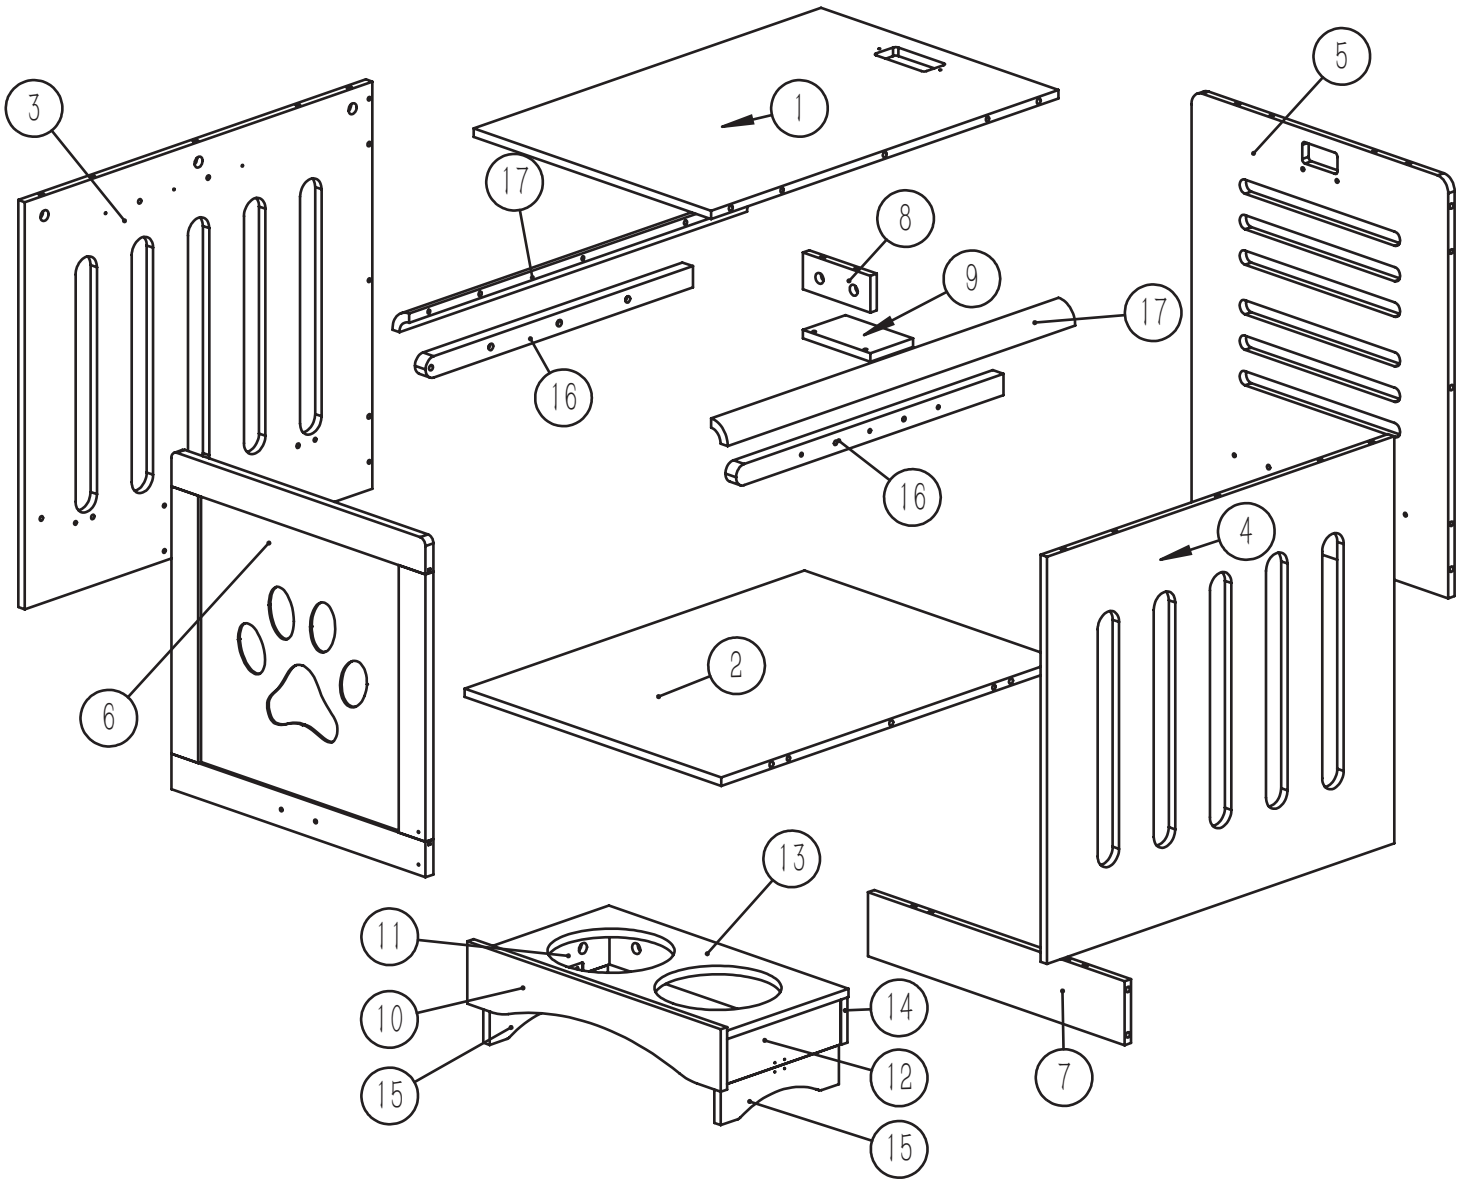


Board Identification

Not actual size

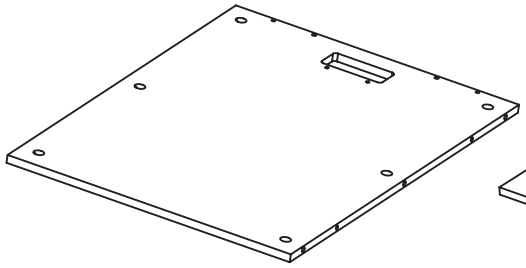


1

Qty:1

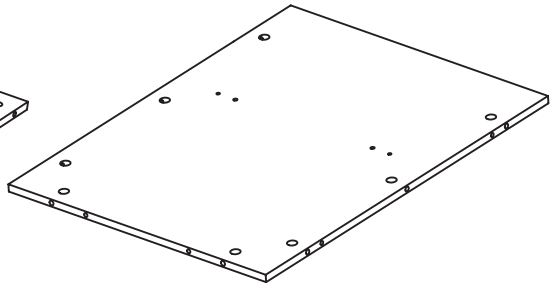


2

Qty:1

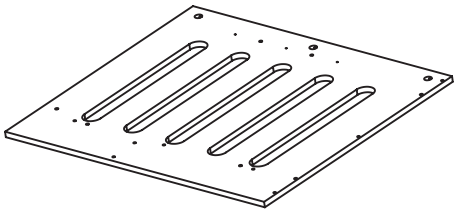


3

Qty:1

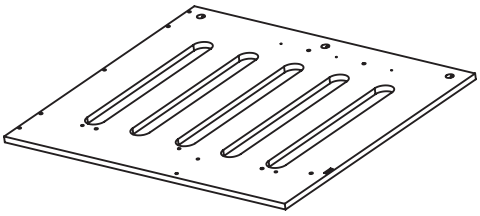


4

Qty:1

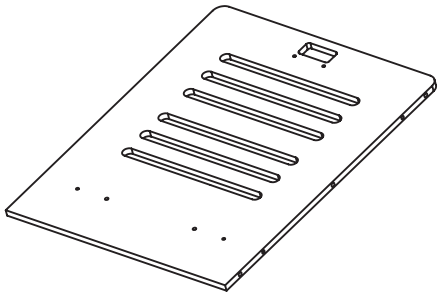


5

Qty:1

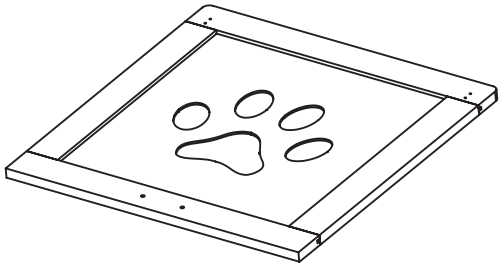


6

Qty:1

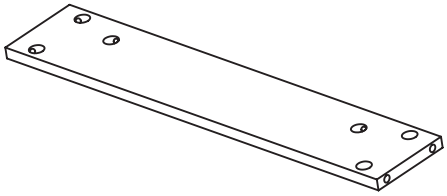


7

Qty:1

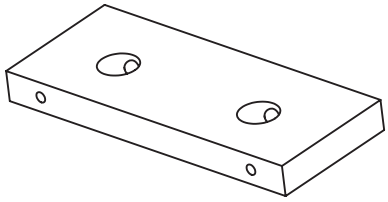

8

Qty:1

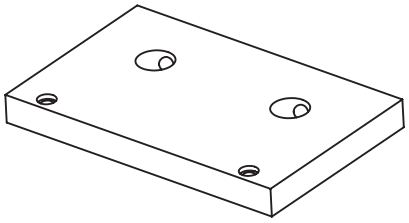


9

Qty:1


Board Identification

Not actual size

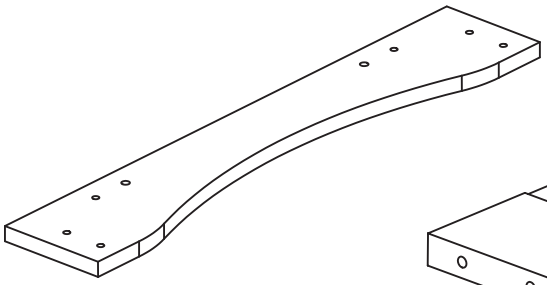


10

Qty:1

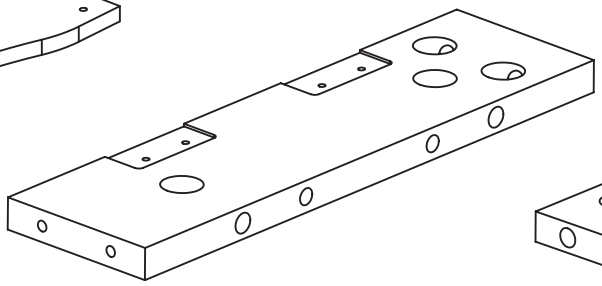


11

Qty:1

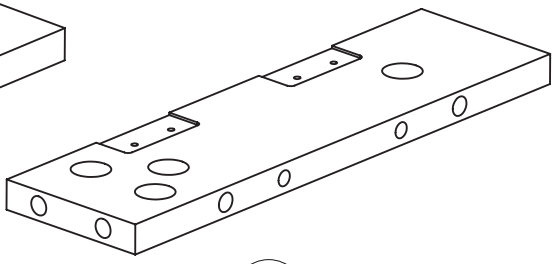


12

Qty:1

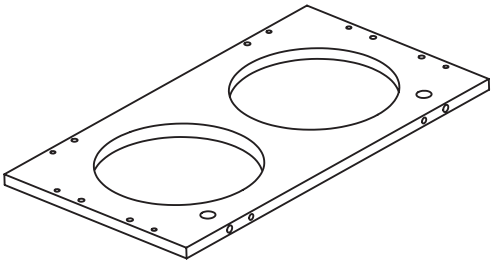


13

Qty:1

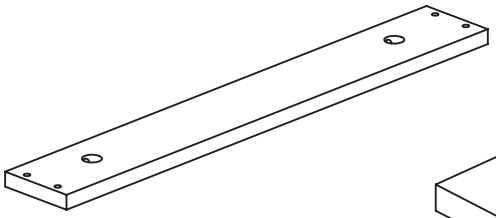


14

Qty:1

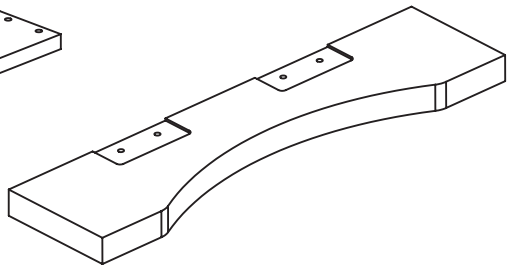


15

Qty:2

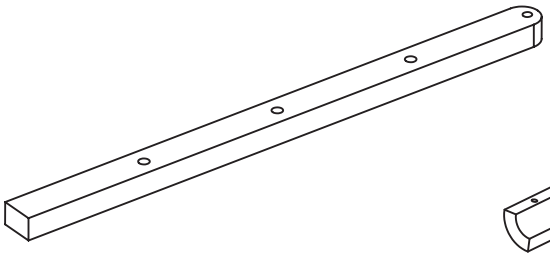

16

Qty:2

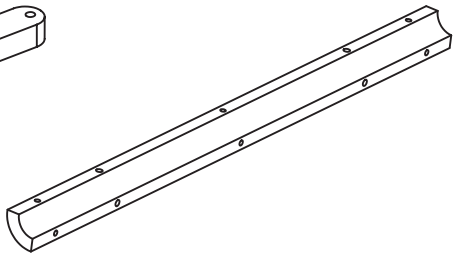

17

Qty:2

Part List

Ⓐ



X50

CAM LOCK

Ⓑ



X50

CAM BOLT


Ⓒ



X30

WOOD DOWEL


Ⓓ



X4

WOOD DOWEL

Ⓔ



X1

LATCH

Ⓕ



X2

PLASTIC BRACKET

Ⓖ



X2

RECESSED TRACK ROLLER


Ⓗ



X6

SCREWS

Ⓘ



X1

HANDLE

Ⓙ



X24

SCREWS


Ⓚ



X6

SCREWS


Ⓛ



X4

HINGE


Ⓜ



X2

SCREWS

Ⓝ

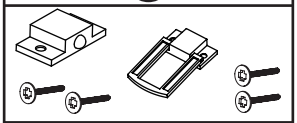

X2

LATCH


Ⓞ



X1

POWER STRIP

Ⓟ



X1

SCREWDRIVER

Ⓠ



X12

ANTI-SLIP PAD


Ⓡ



X2

PET BOWL

Ⓢ



X50

HOLE PLUG

Ⓣ




X1

SCREWDRIVER


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

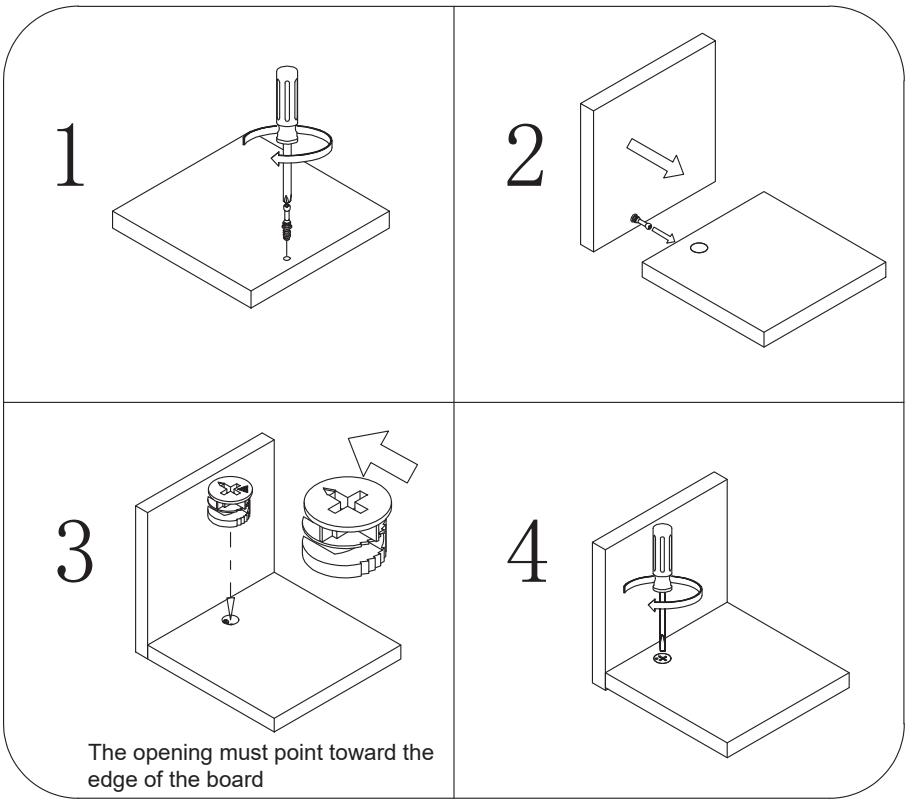


REMARK


1. Put a blanket under the board to avoid scratch or damage.
2. Please do not screw too deep or too shallow.

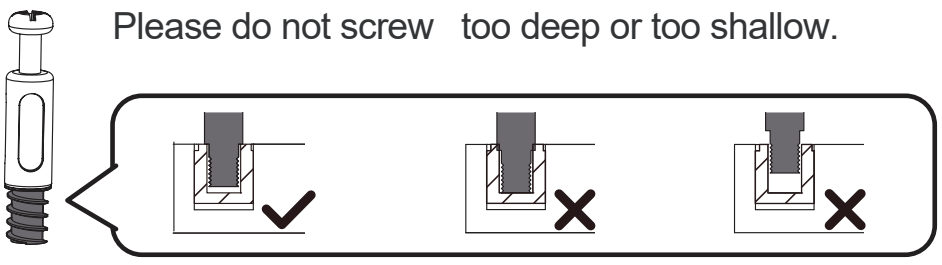

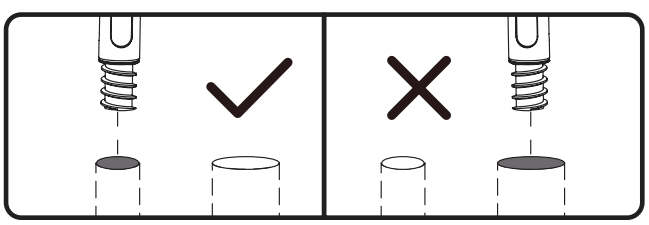


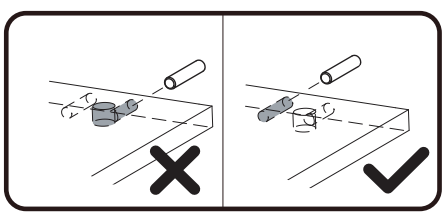


STEP1

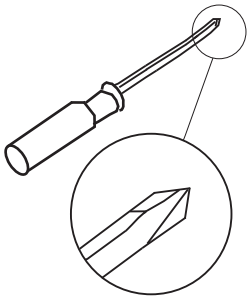



A	B	C
 Φ15×9.5mm	 Φ6.5×35mm	 Φ6×30mm
X2	X4	X2

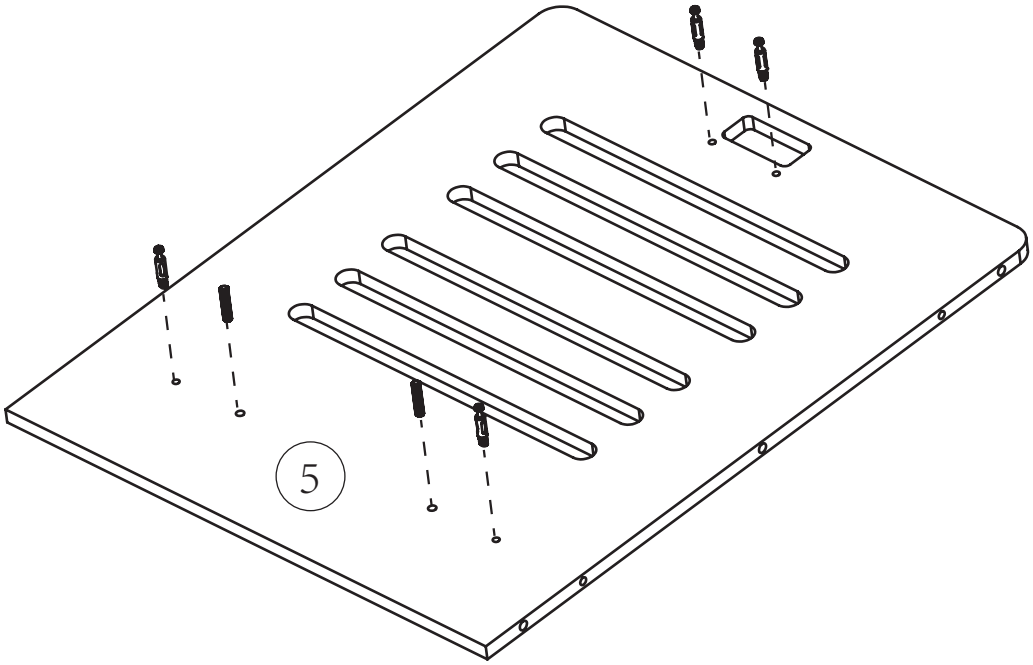


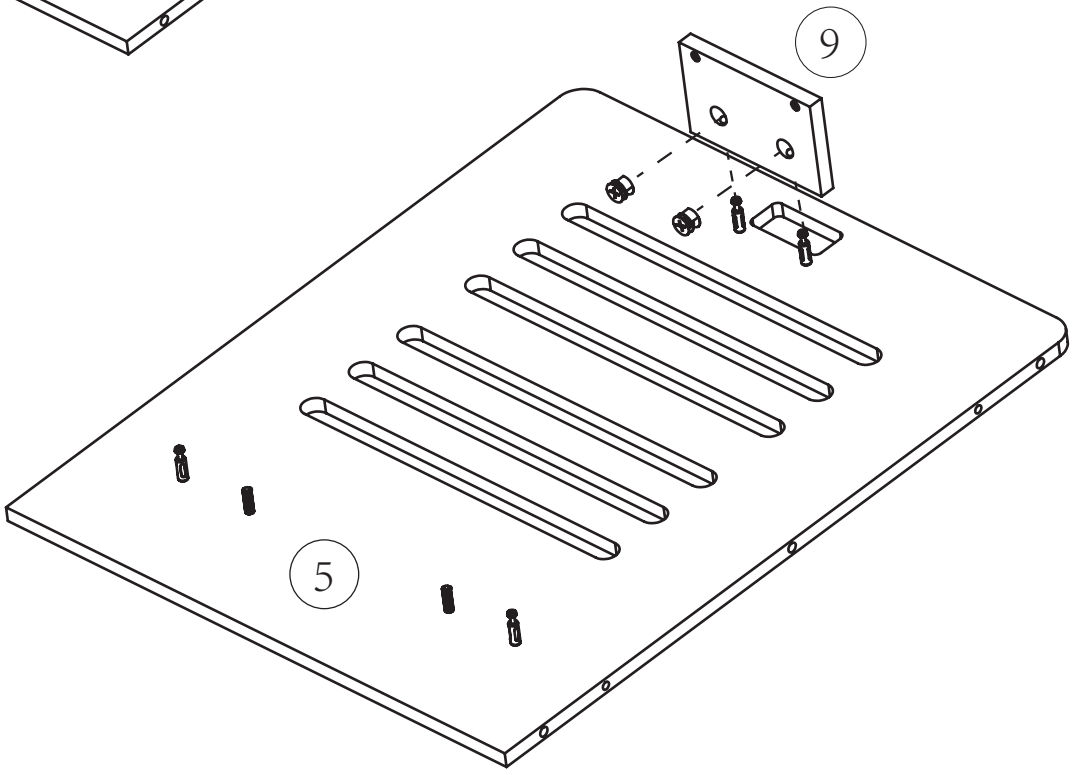


STEP2

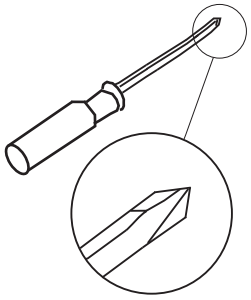


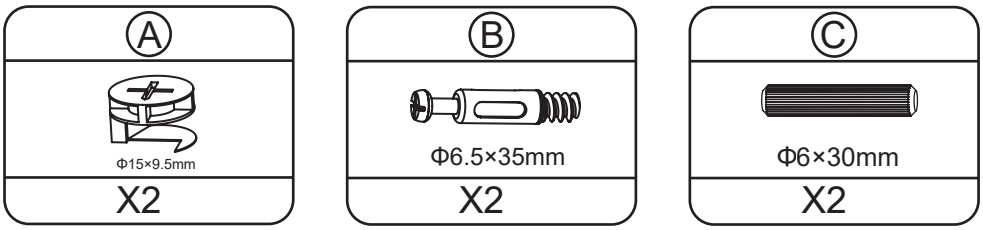


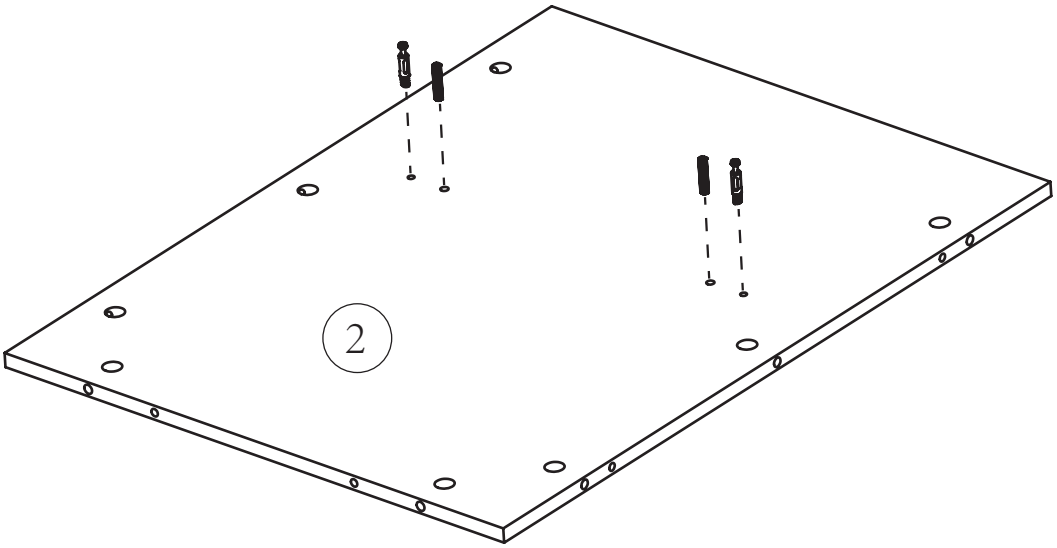


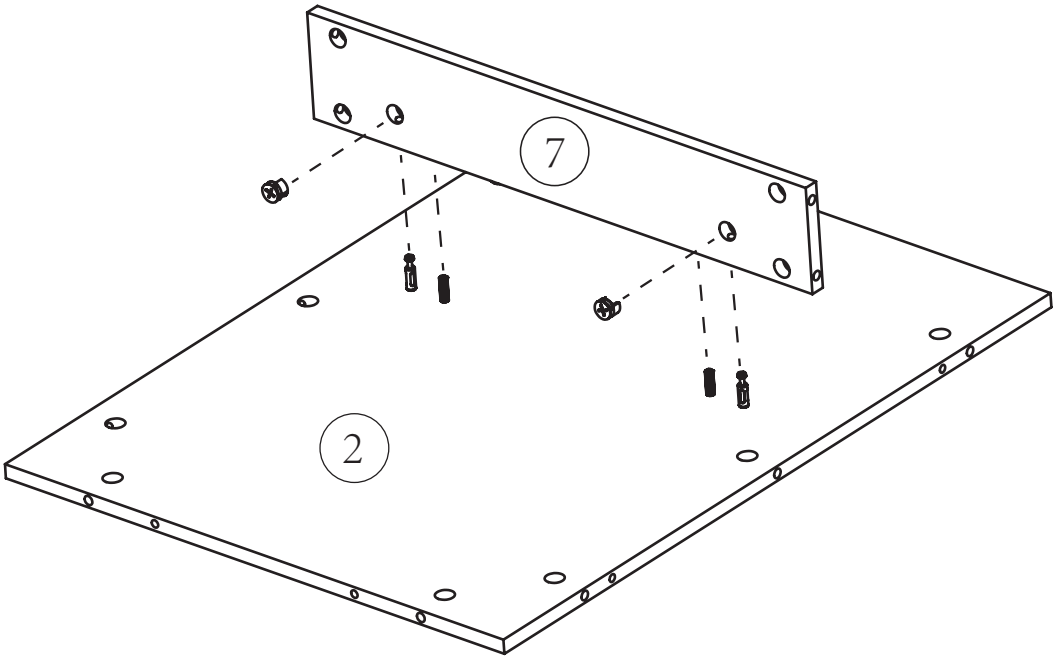


STEP3

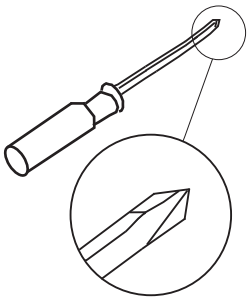


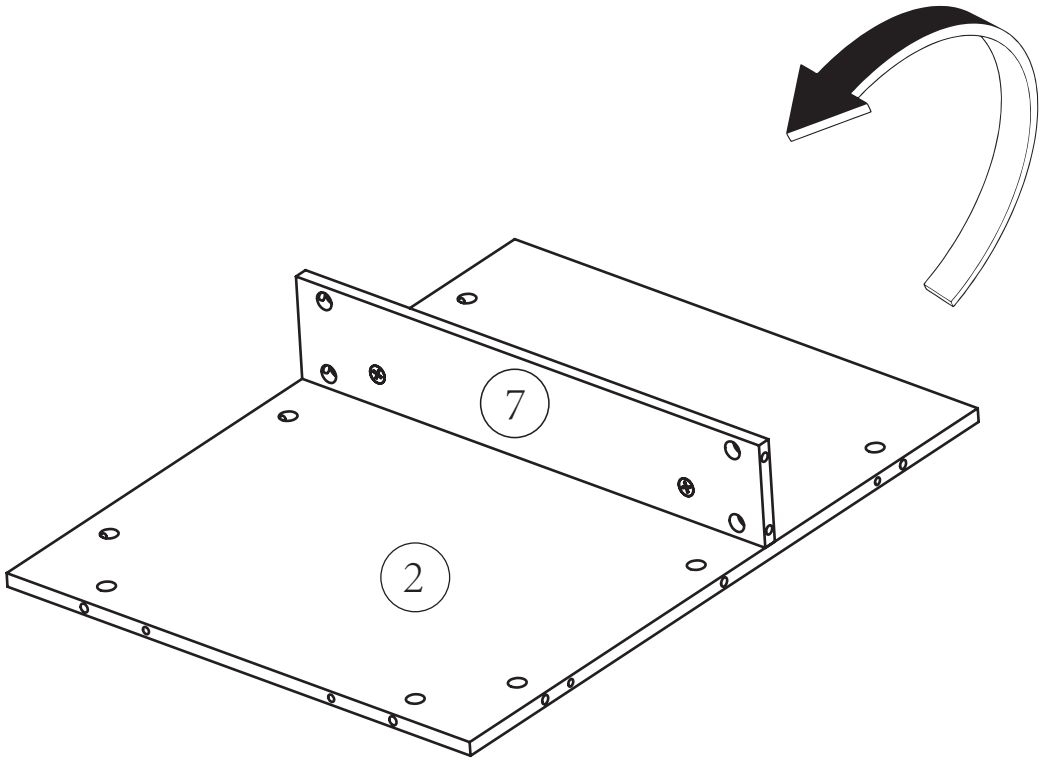


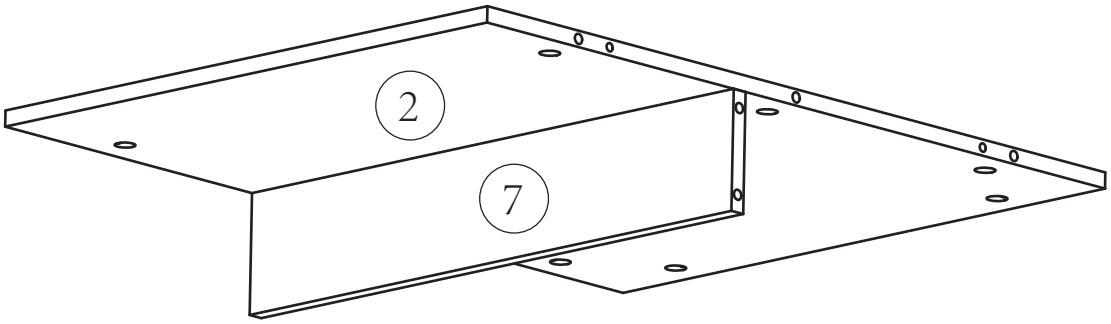


STEP4

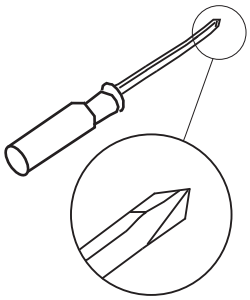


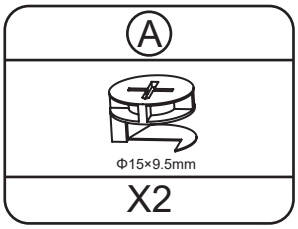


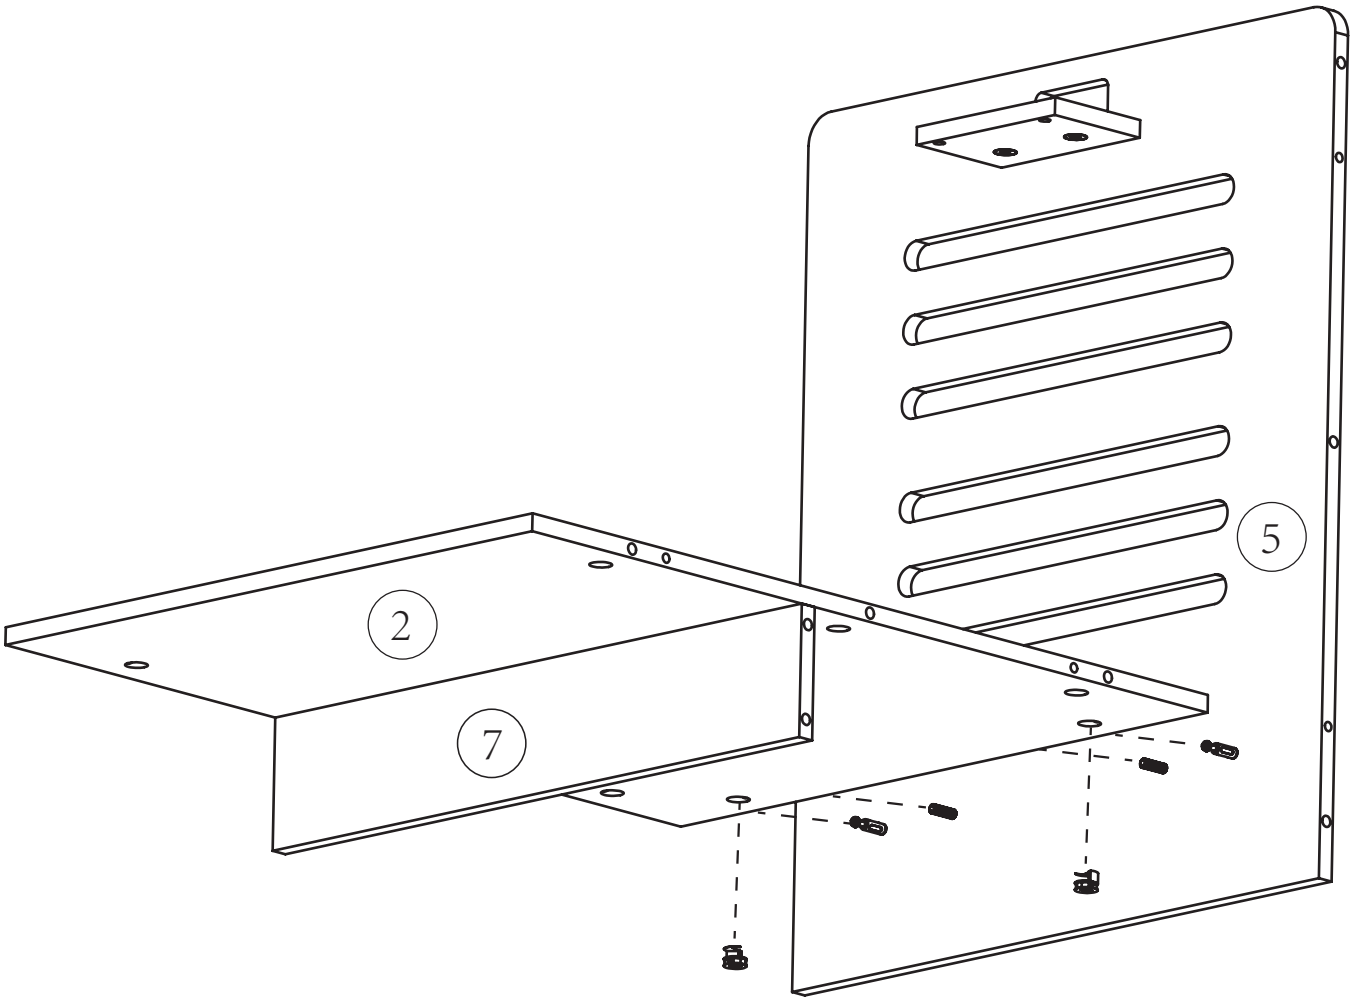


STEP5

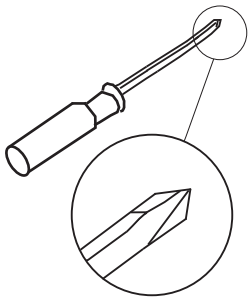


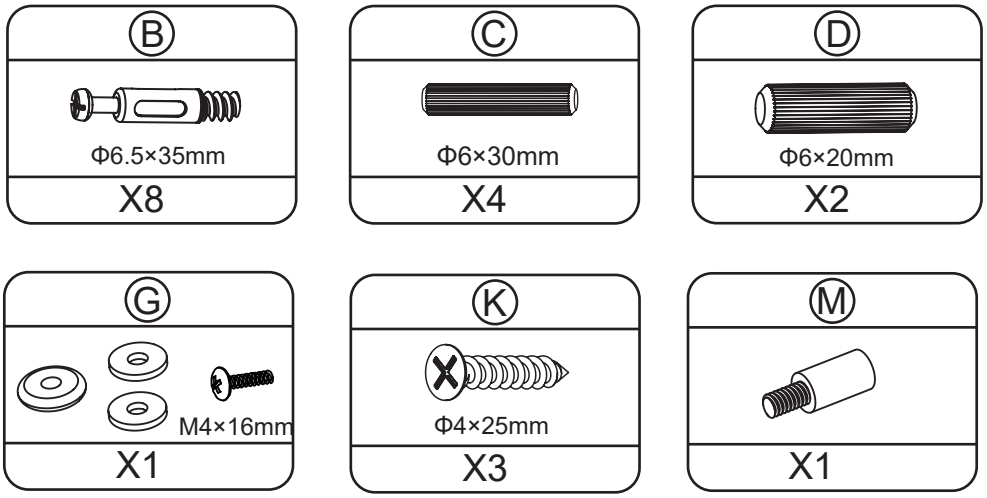


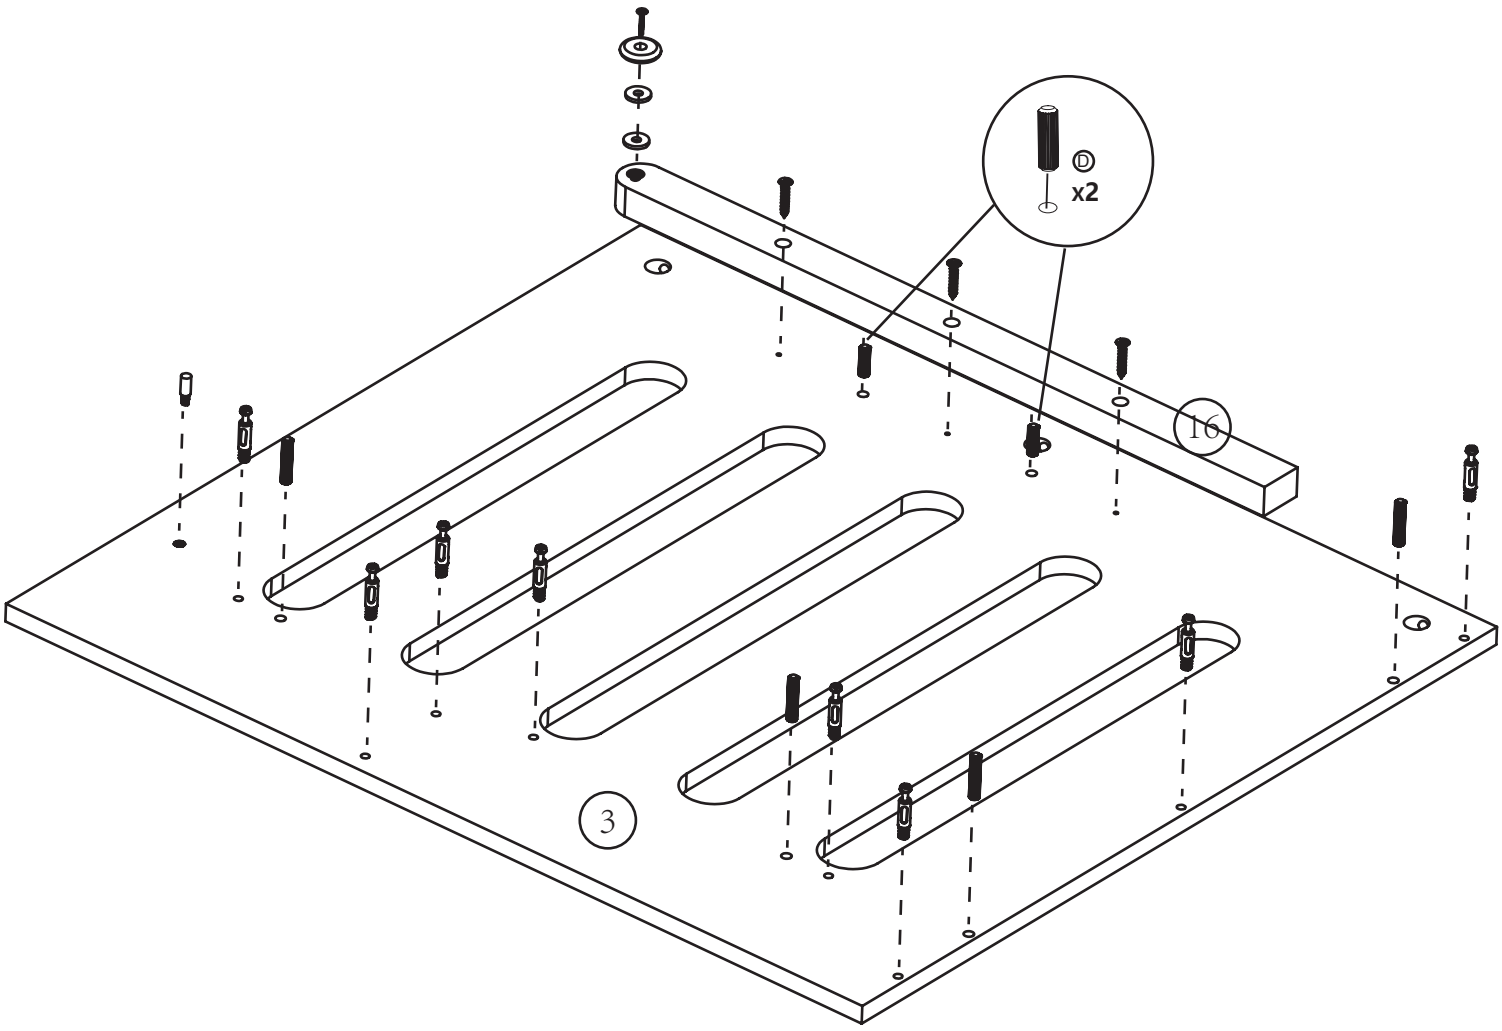


STEP6

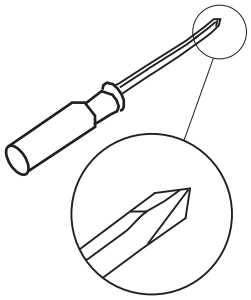



B	C	D
 Φ6.5×35mm	 Φ6×30mm	 Φ6×20mm
X8	X4	X2


G	K	M
 M4×16mm	 Φ4×25mm	
X1	X3	X1

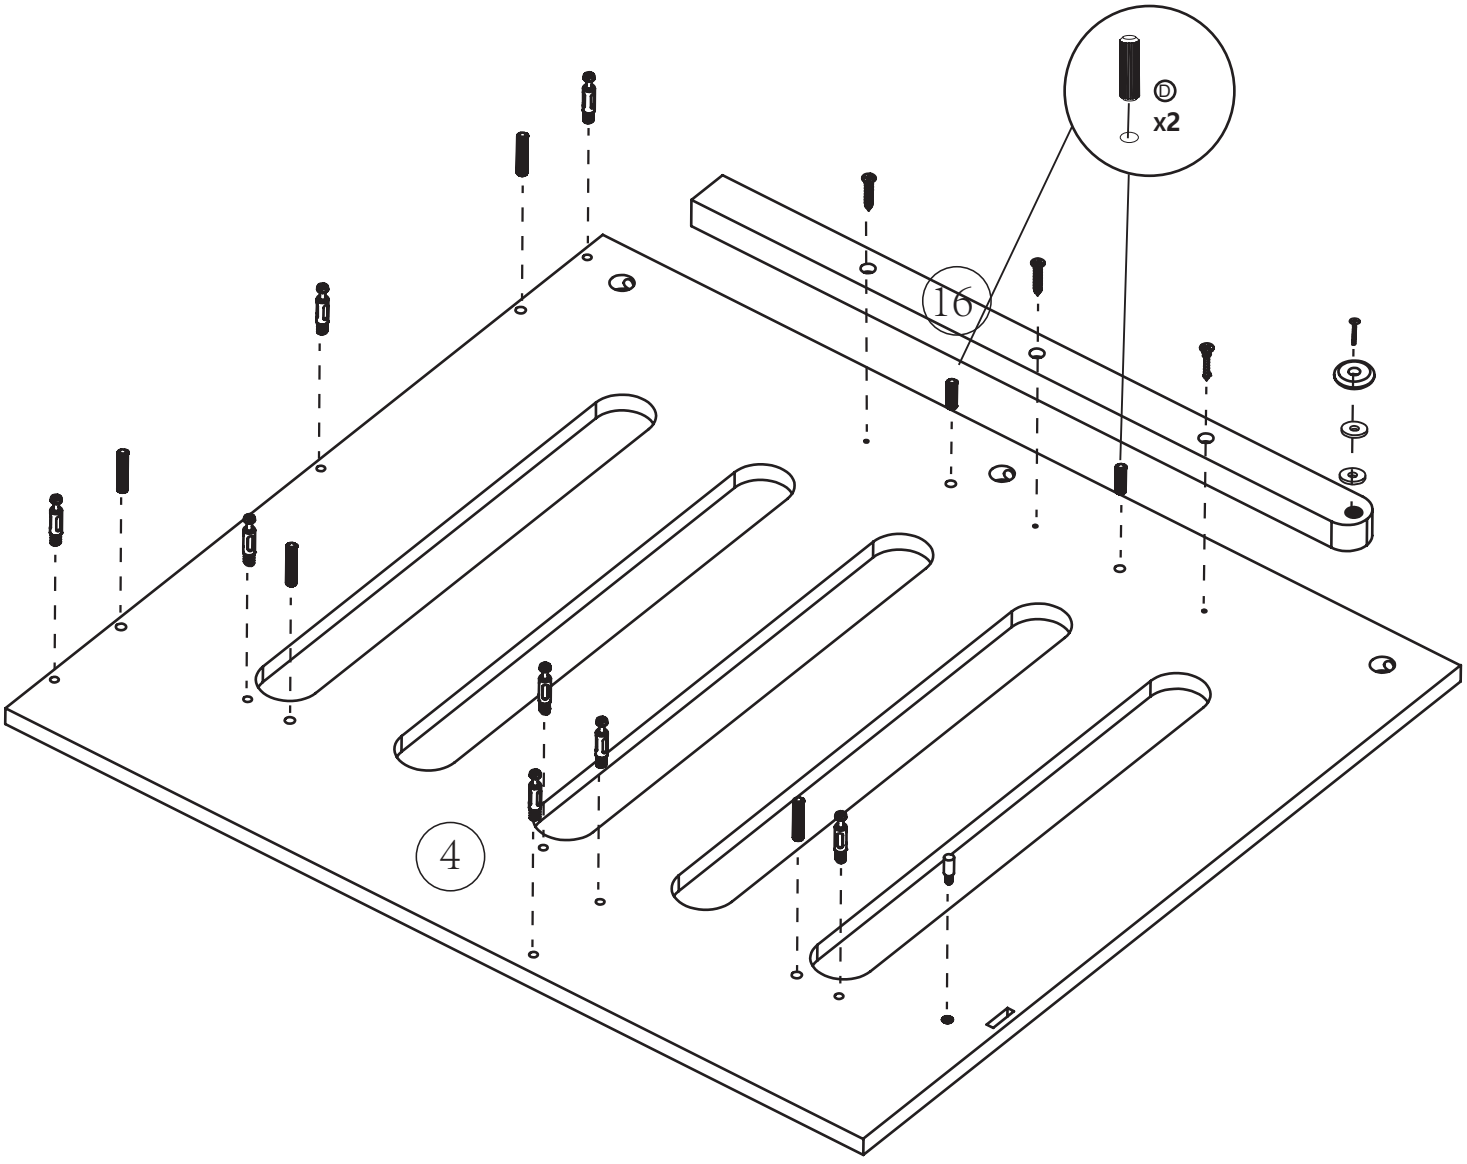


STEP7

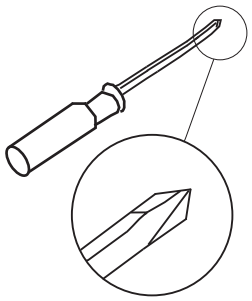


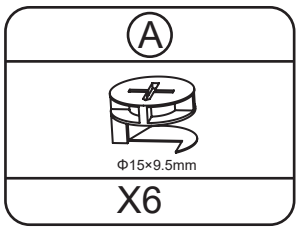


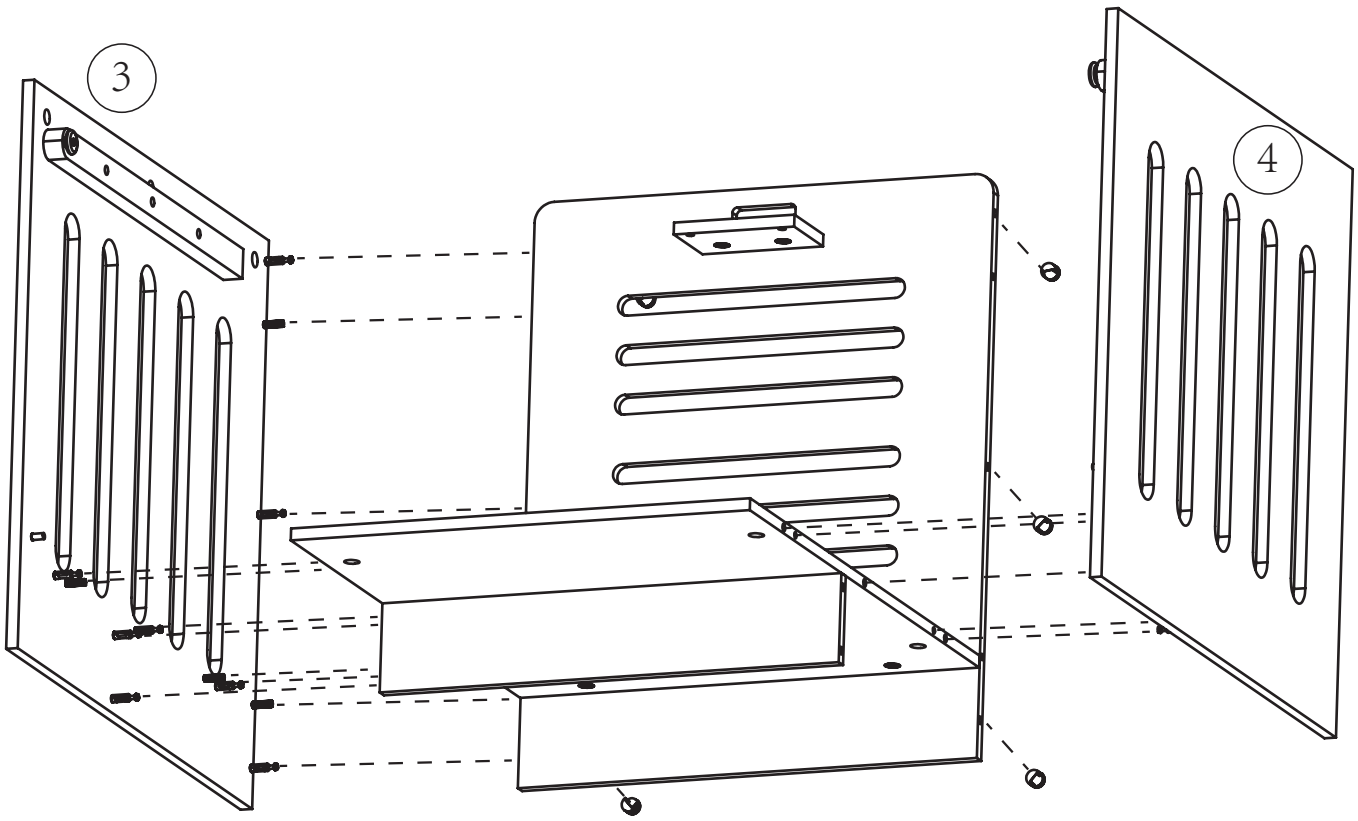


STEP8

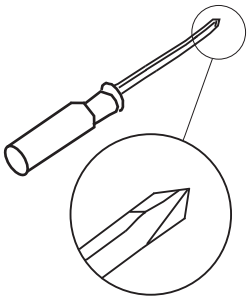


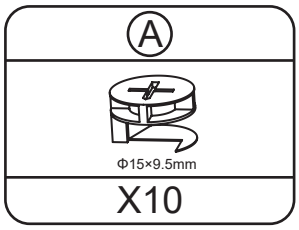

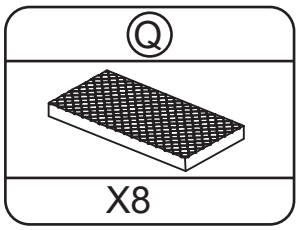

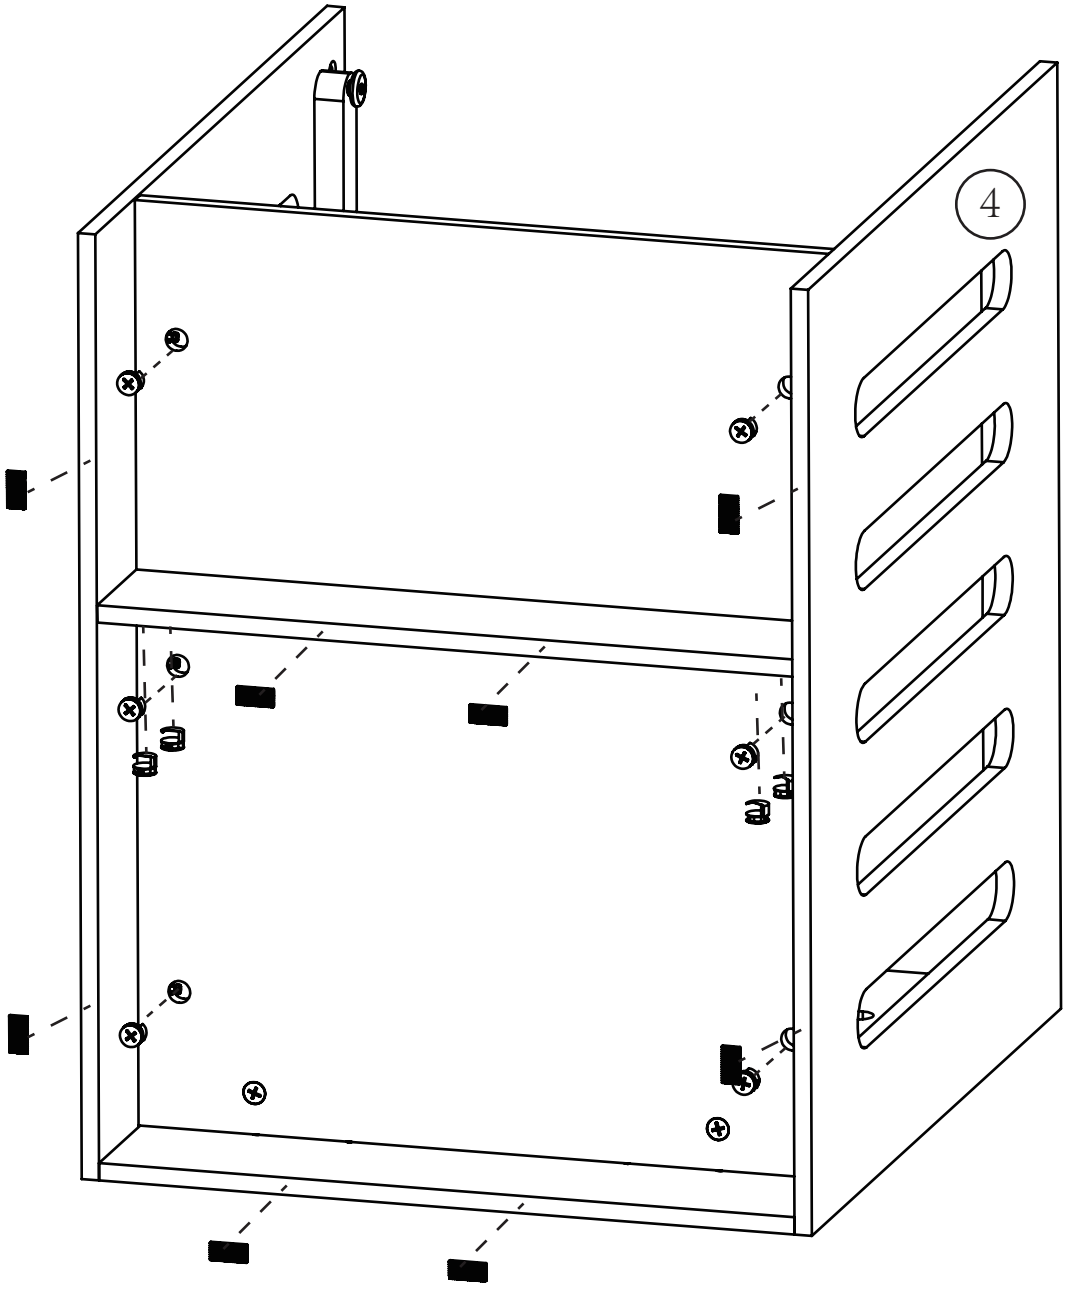

STEP9

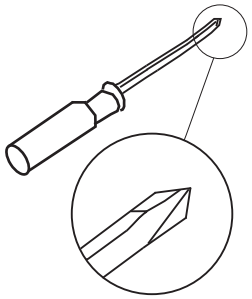



Ⓑ



Φ6.5×35mm


X16

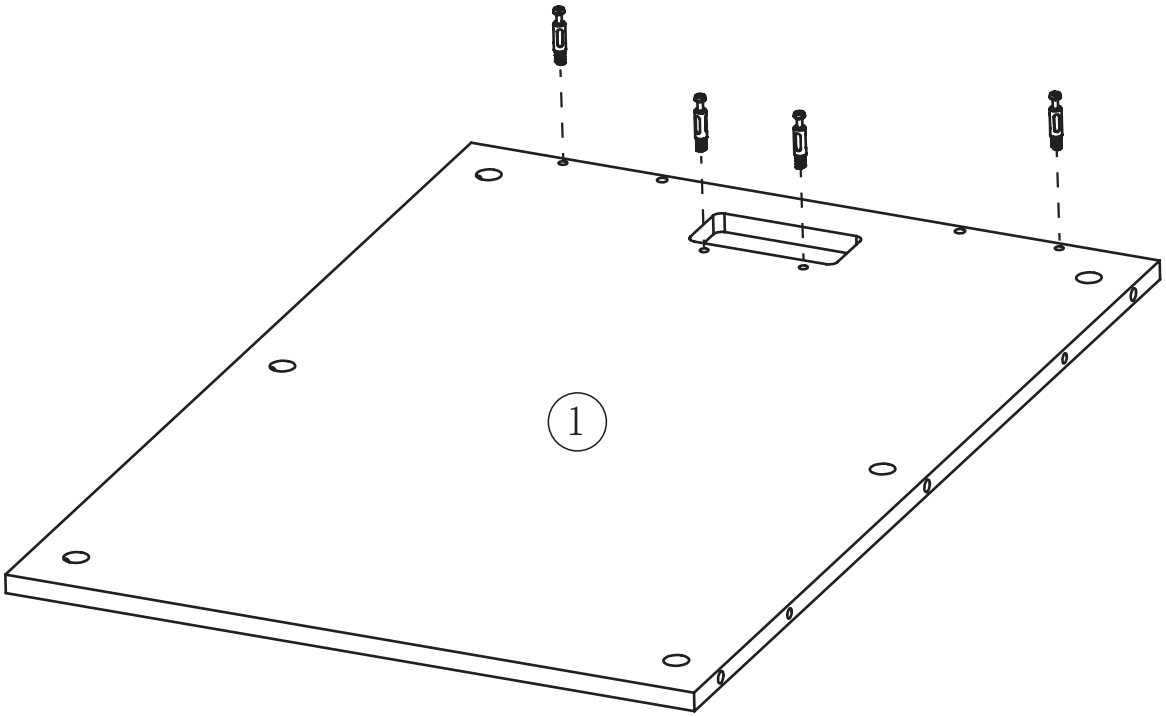


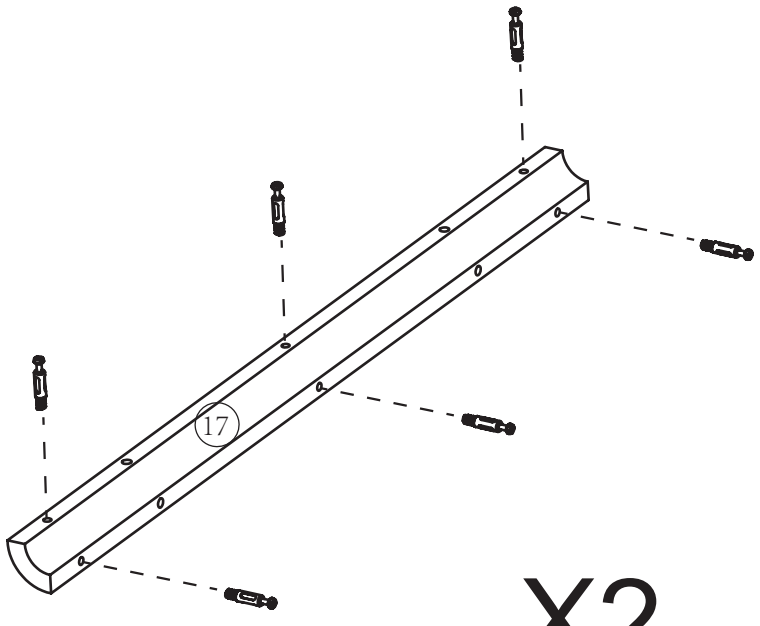



X2

STEP10

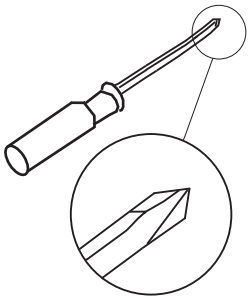


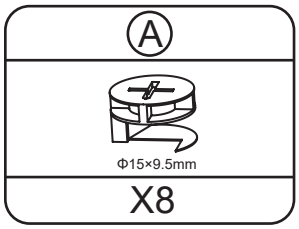

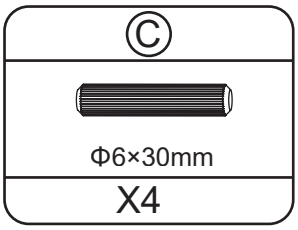


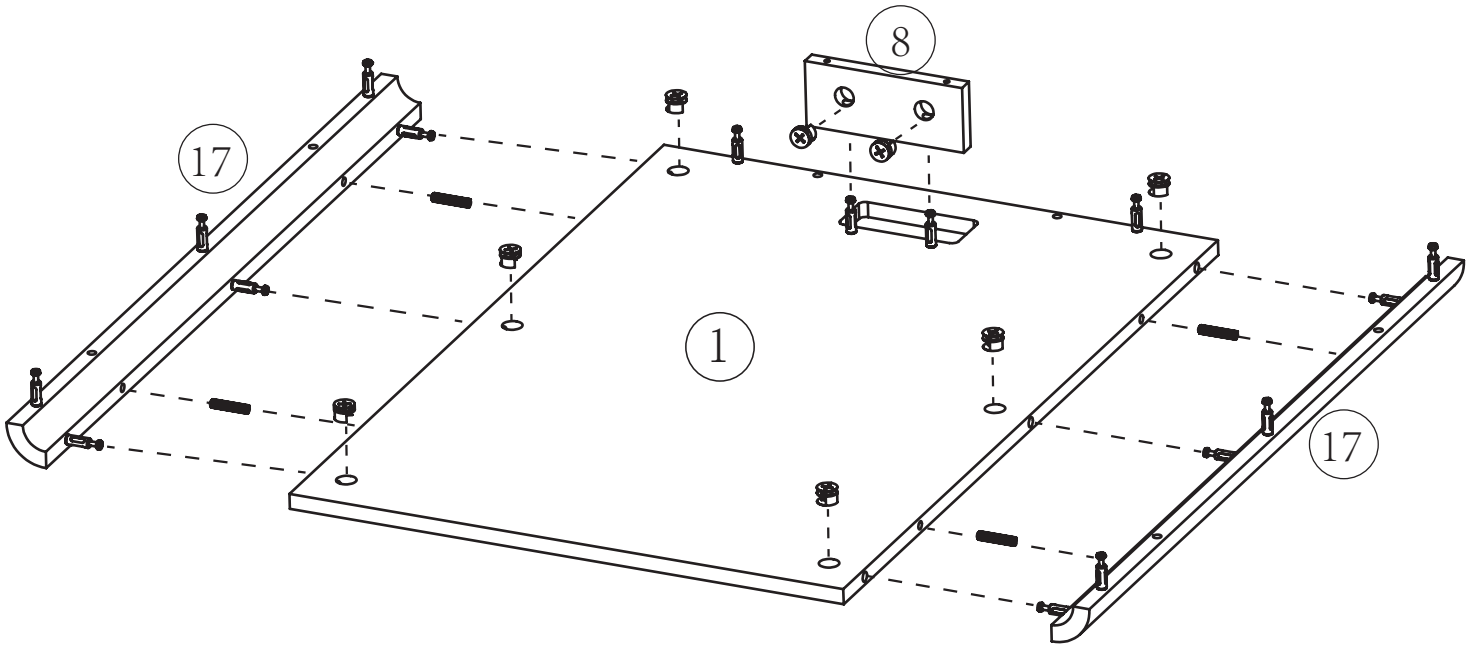


STEP11

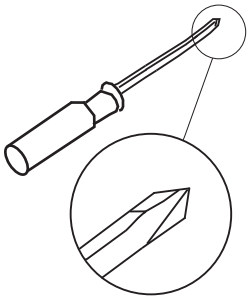


Ⓐ	Ⓒ	Ⓗ
 Φ15×9.5mm	 Φ6×30mm	 Φ5×40mm
X8	X6	X2

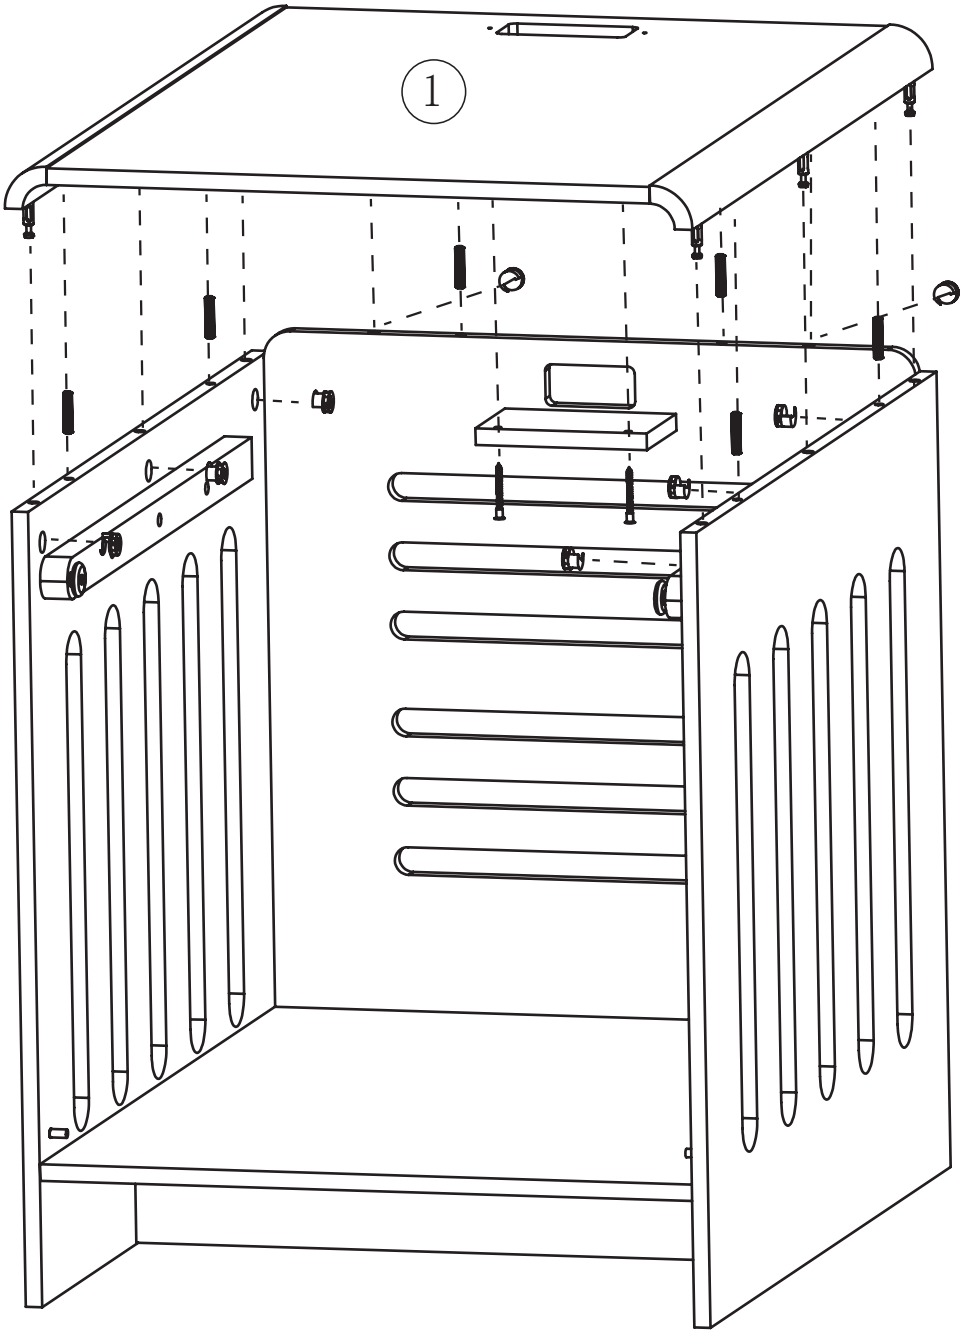


STEP12

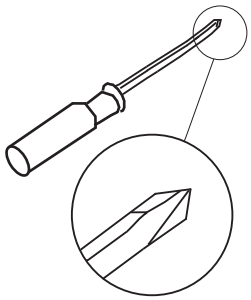



J	O
 Φ3×12mm	
X2	X1

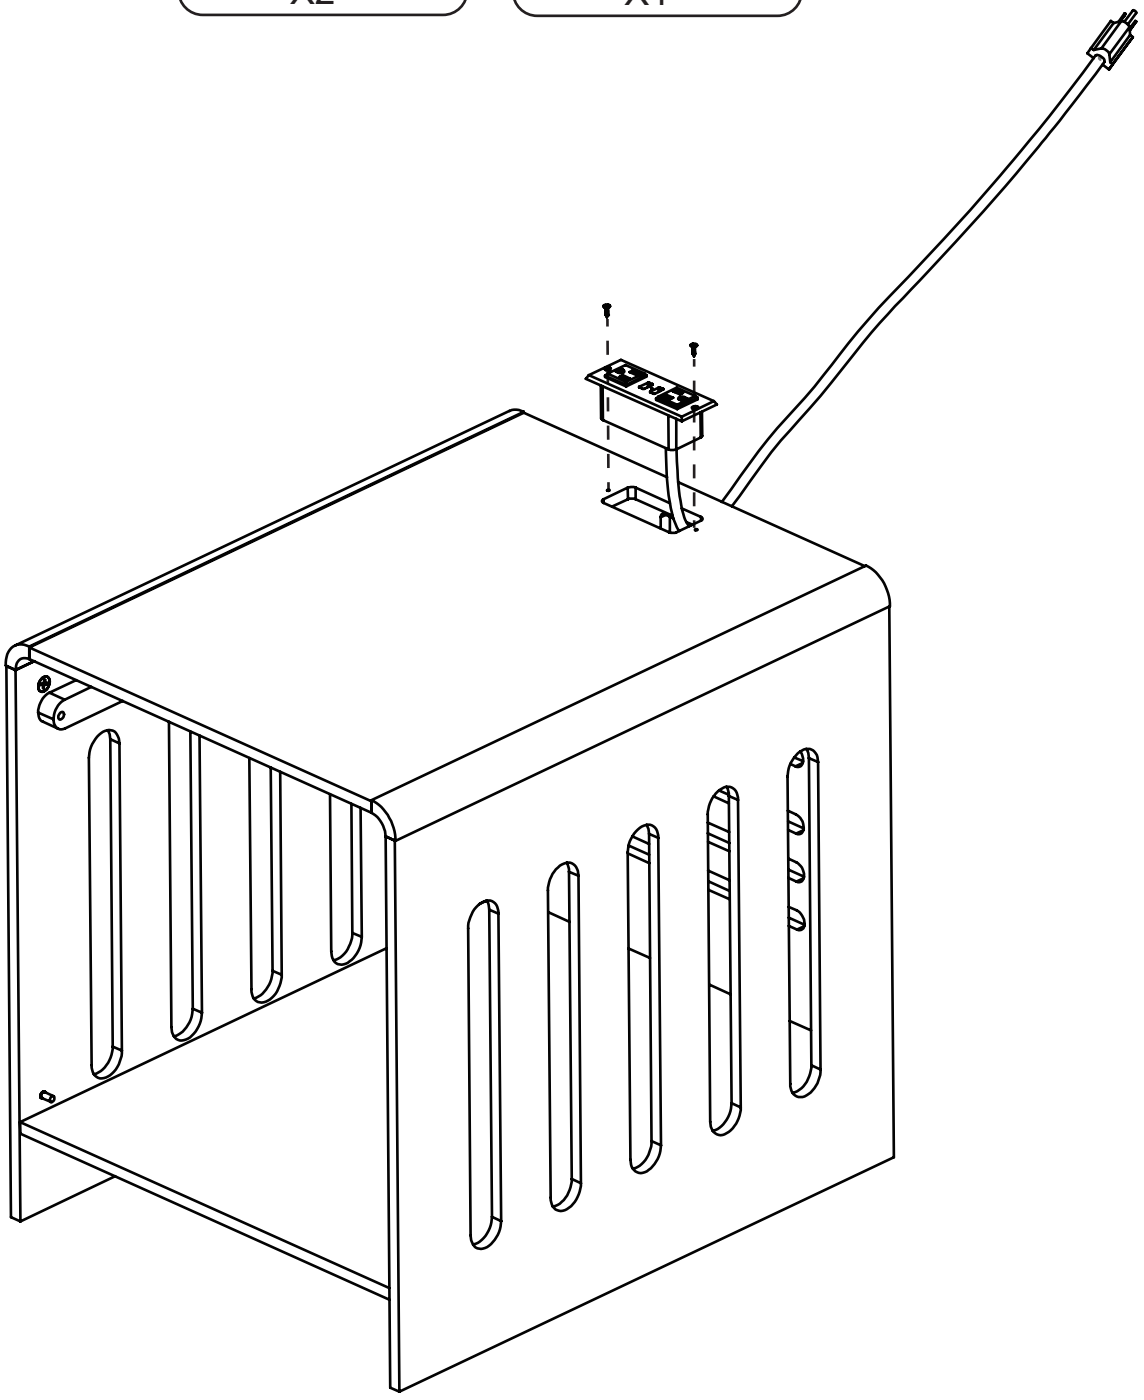


STEP13

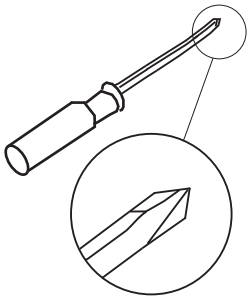


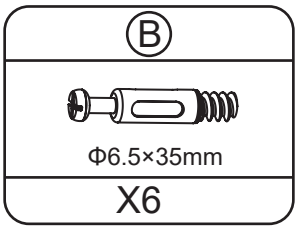


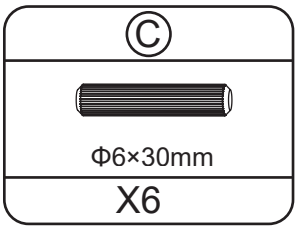


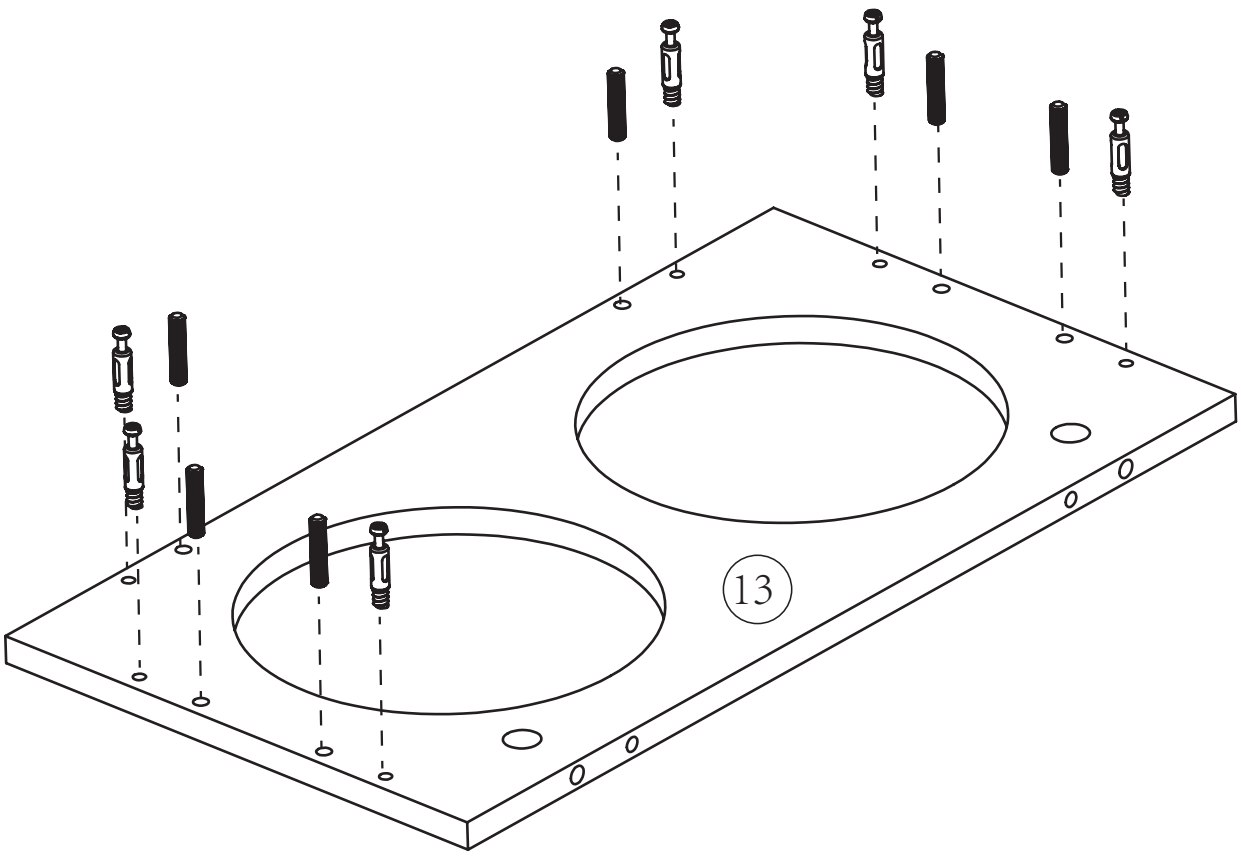


STEP14

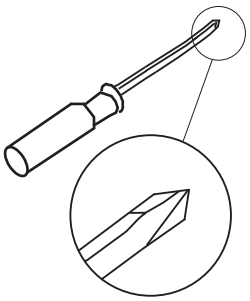

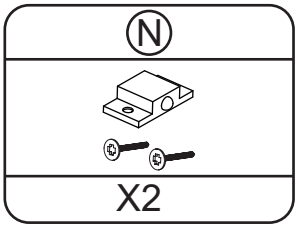


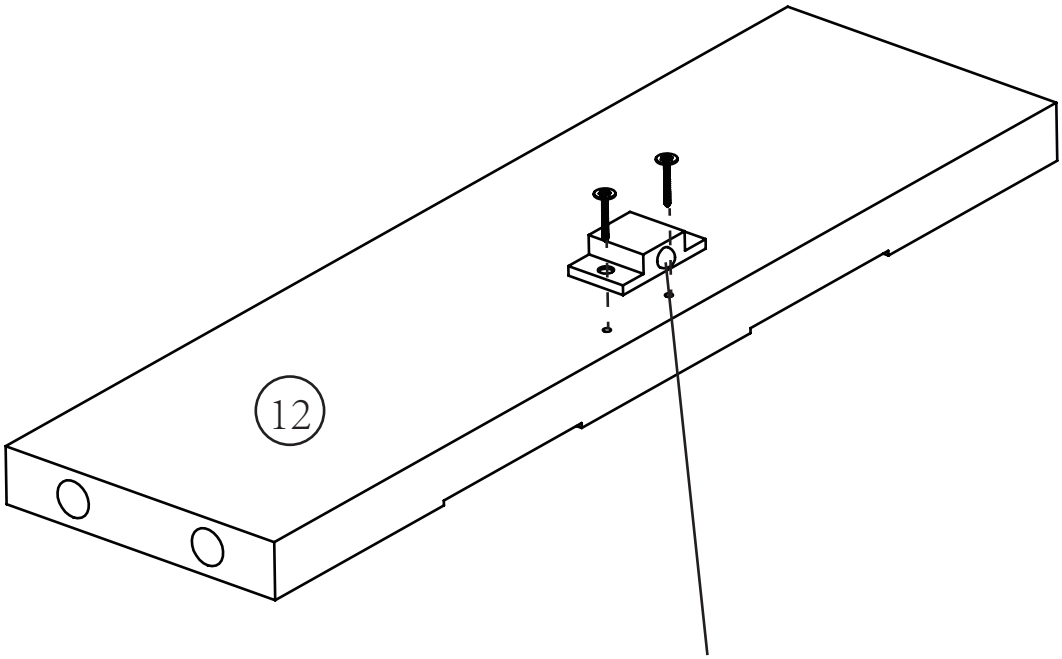



Ensure the large round head faces outward.
Improper installation may prevent the latch from locking securely

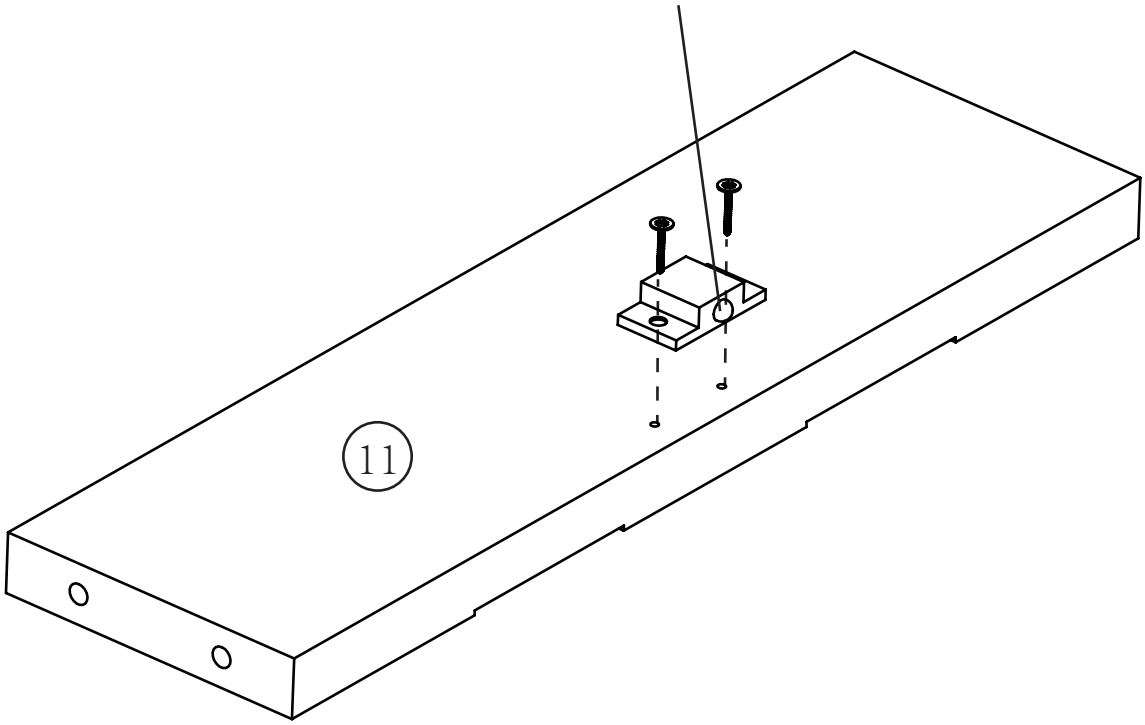


STEP15

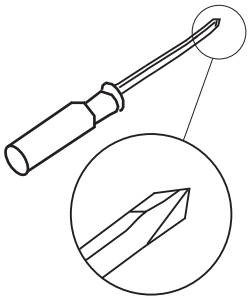


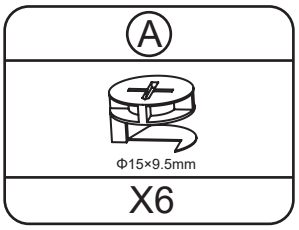


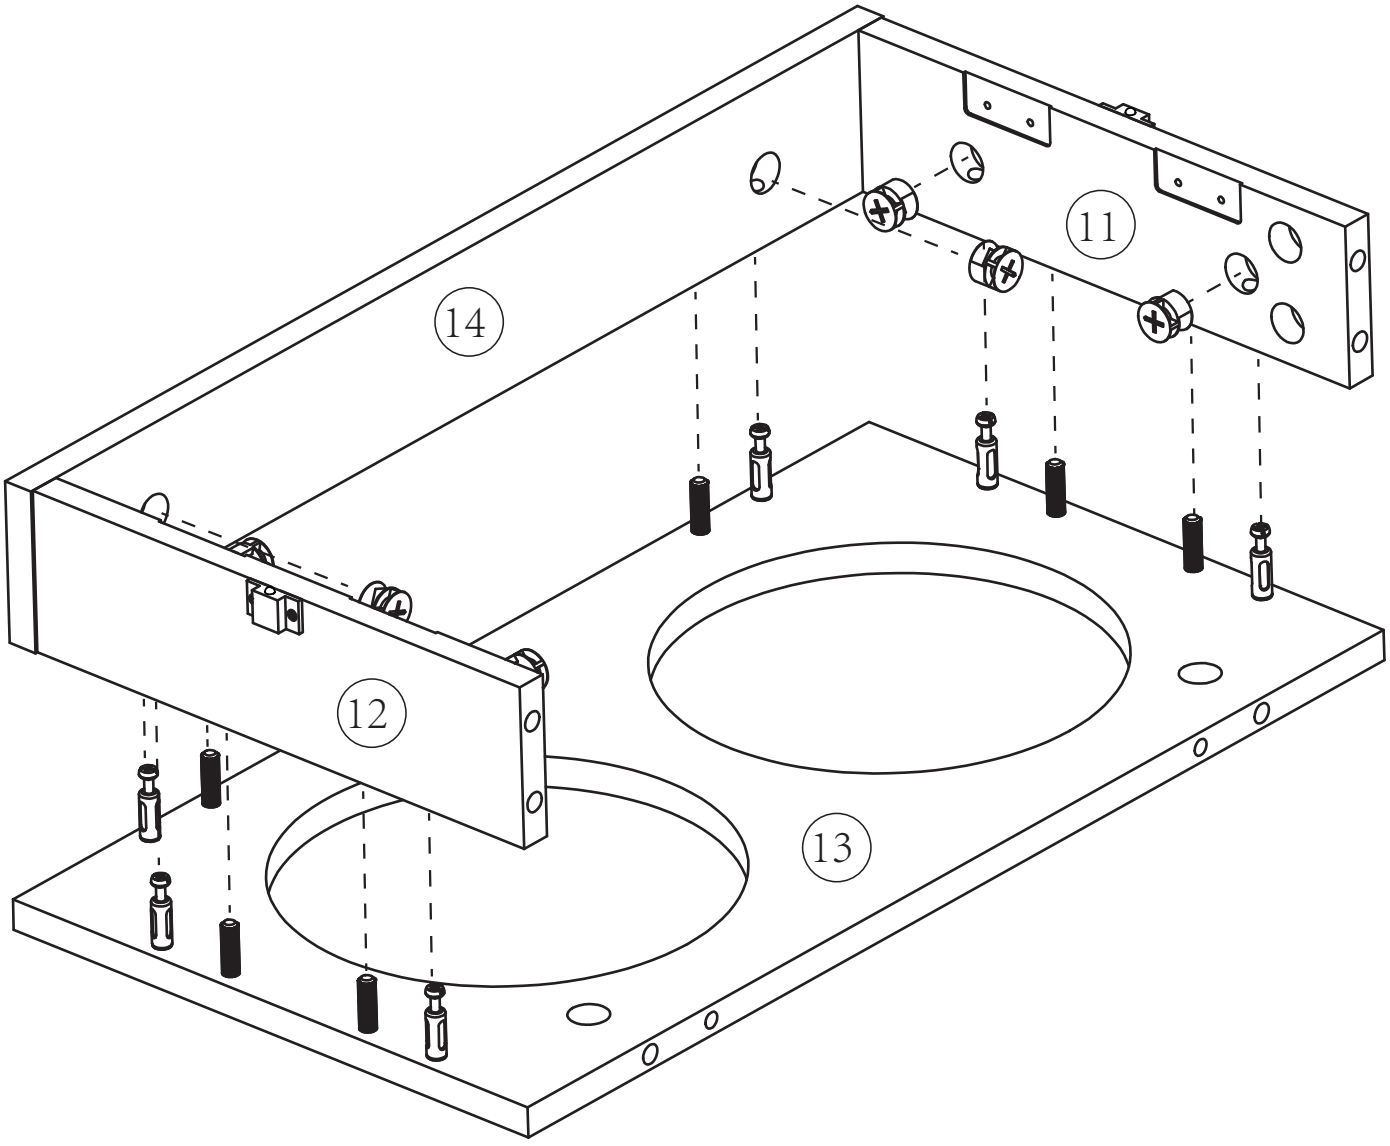


STEP16

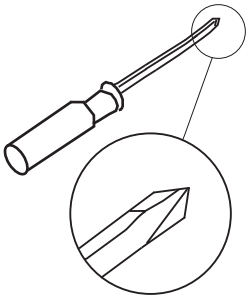


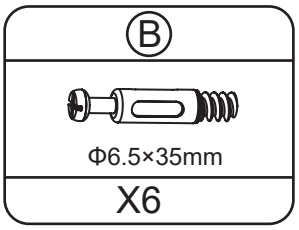


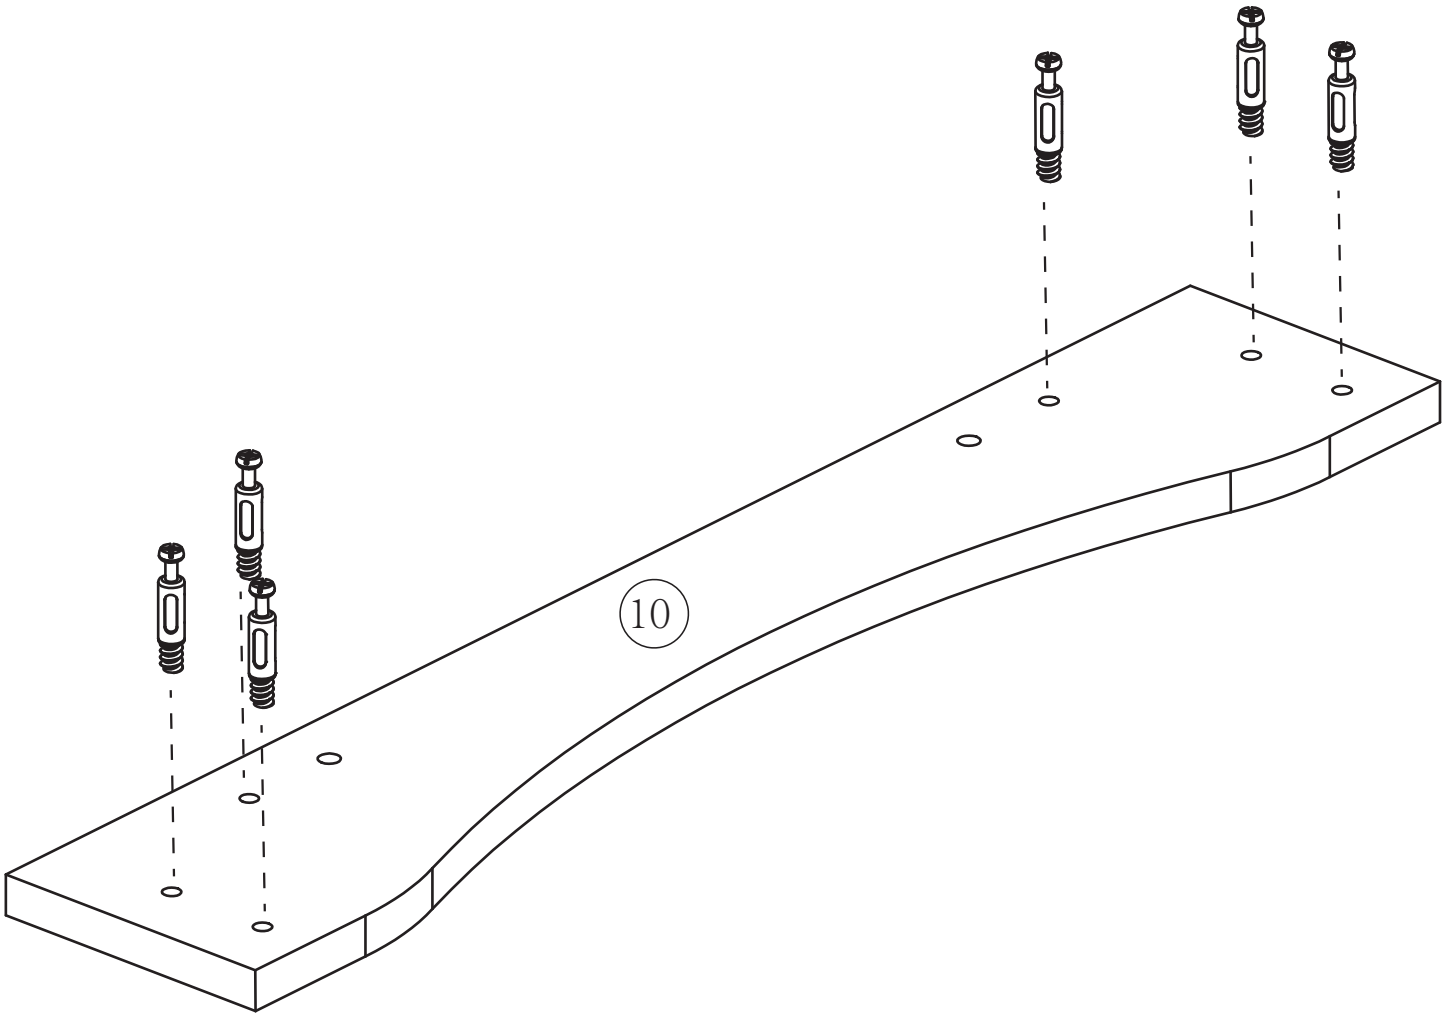



STEP17

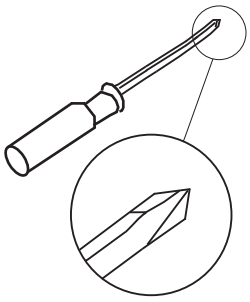

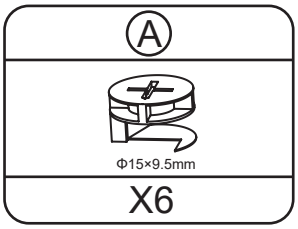



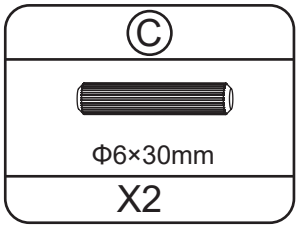


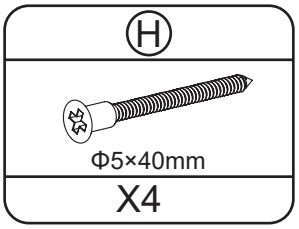


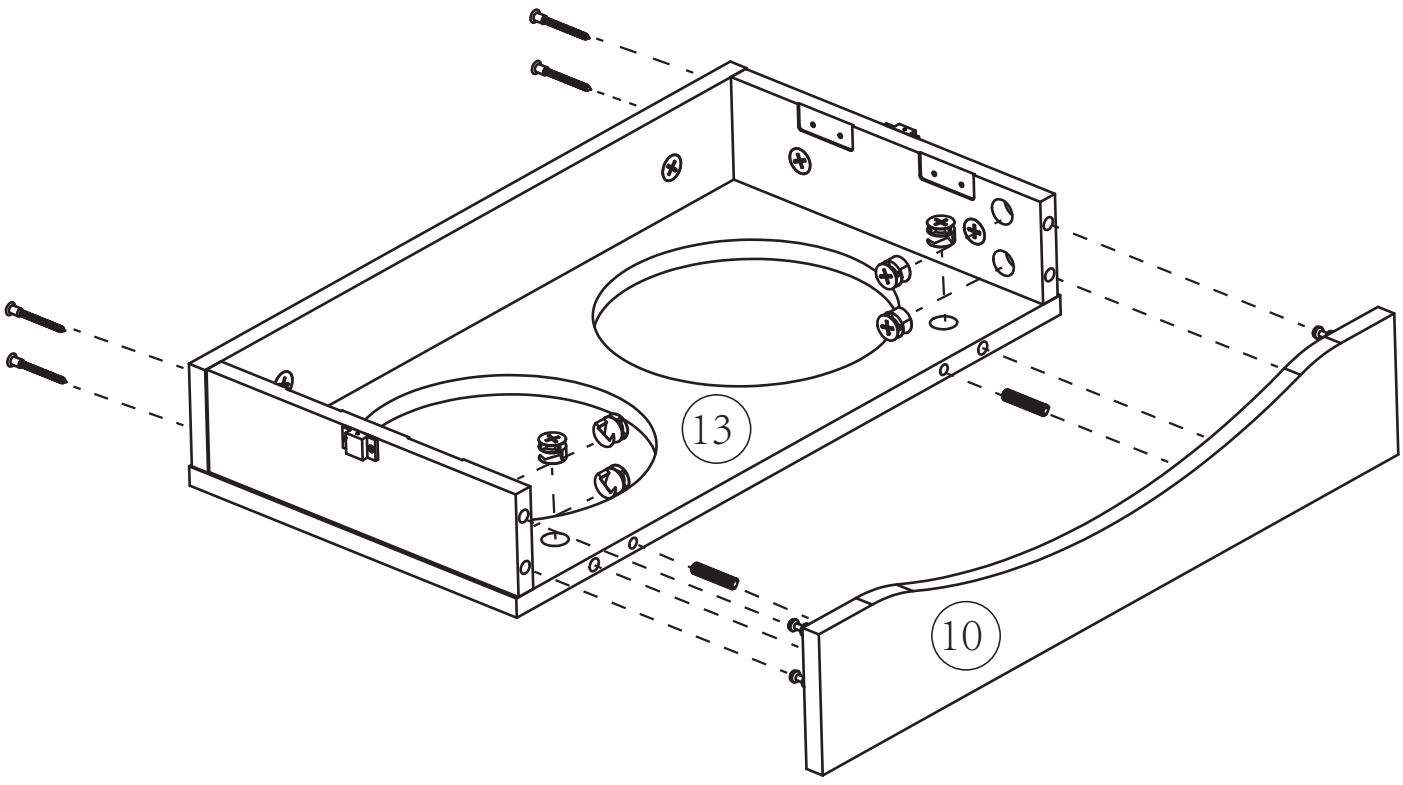


STEP18

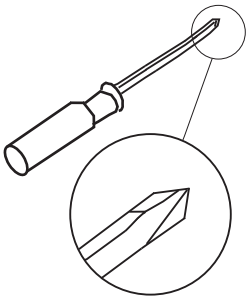



N	J	L
	 Φ3×12mm	
X2	X8	X4

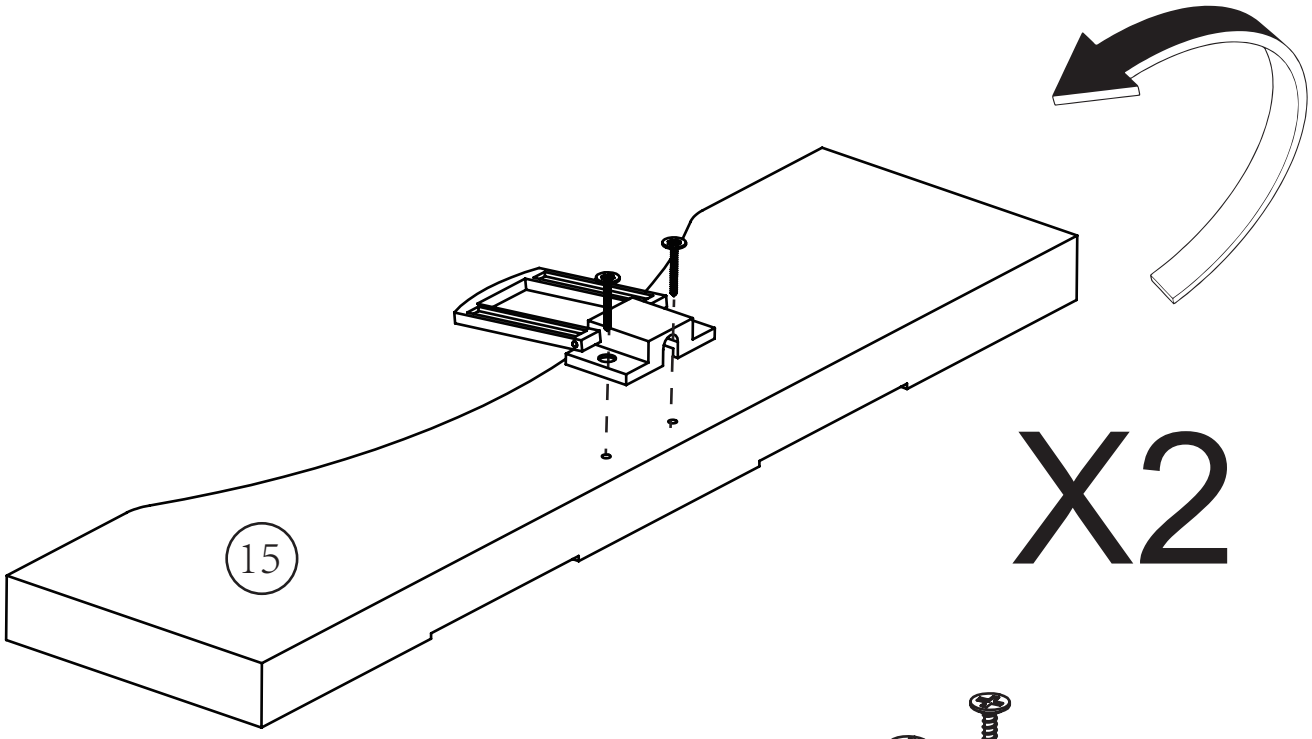


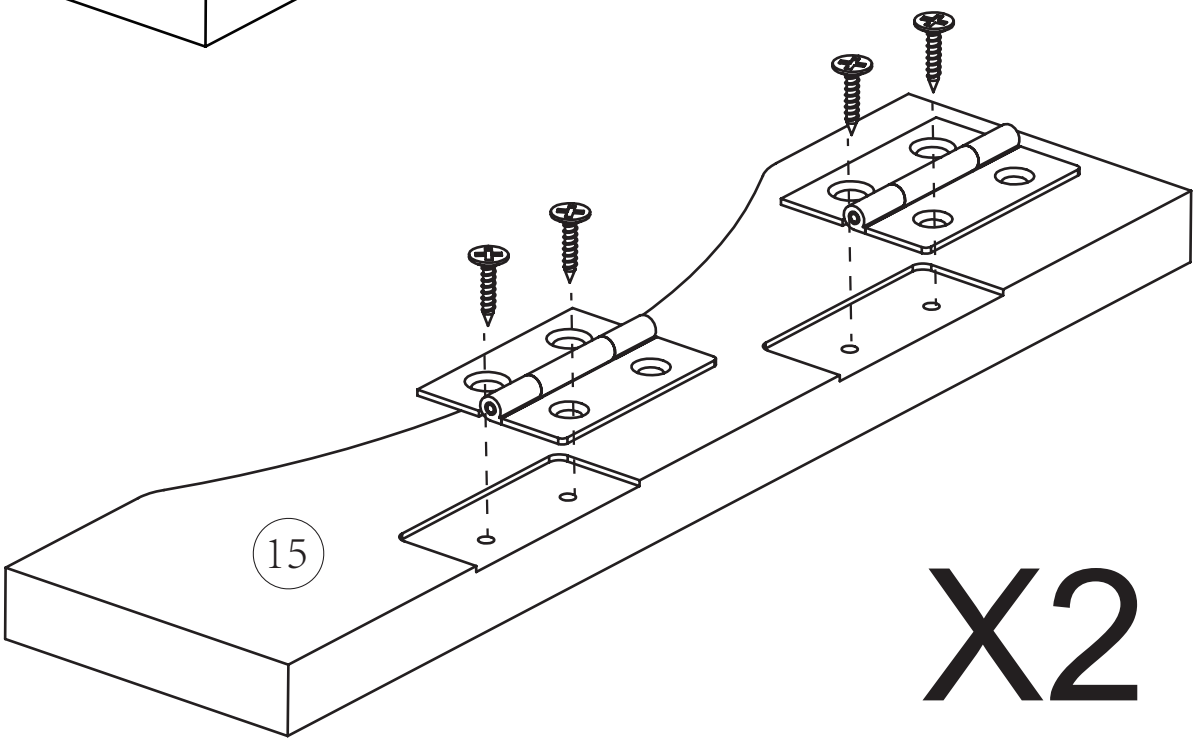


STEP19

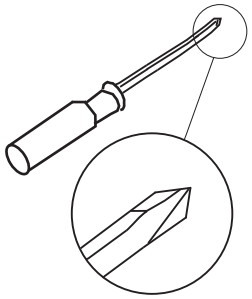


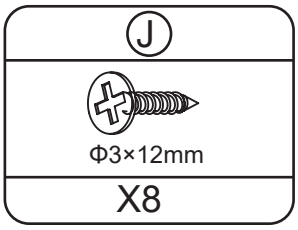


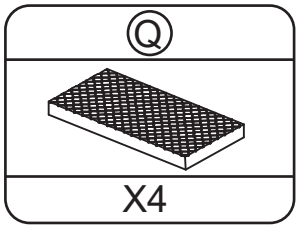


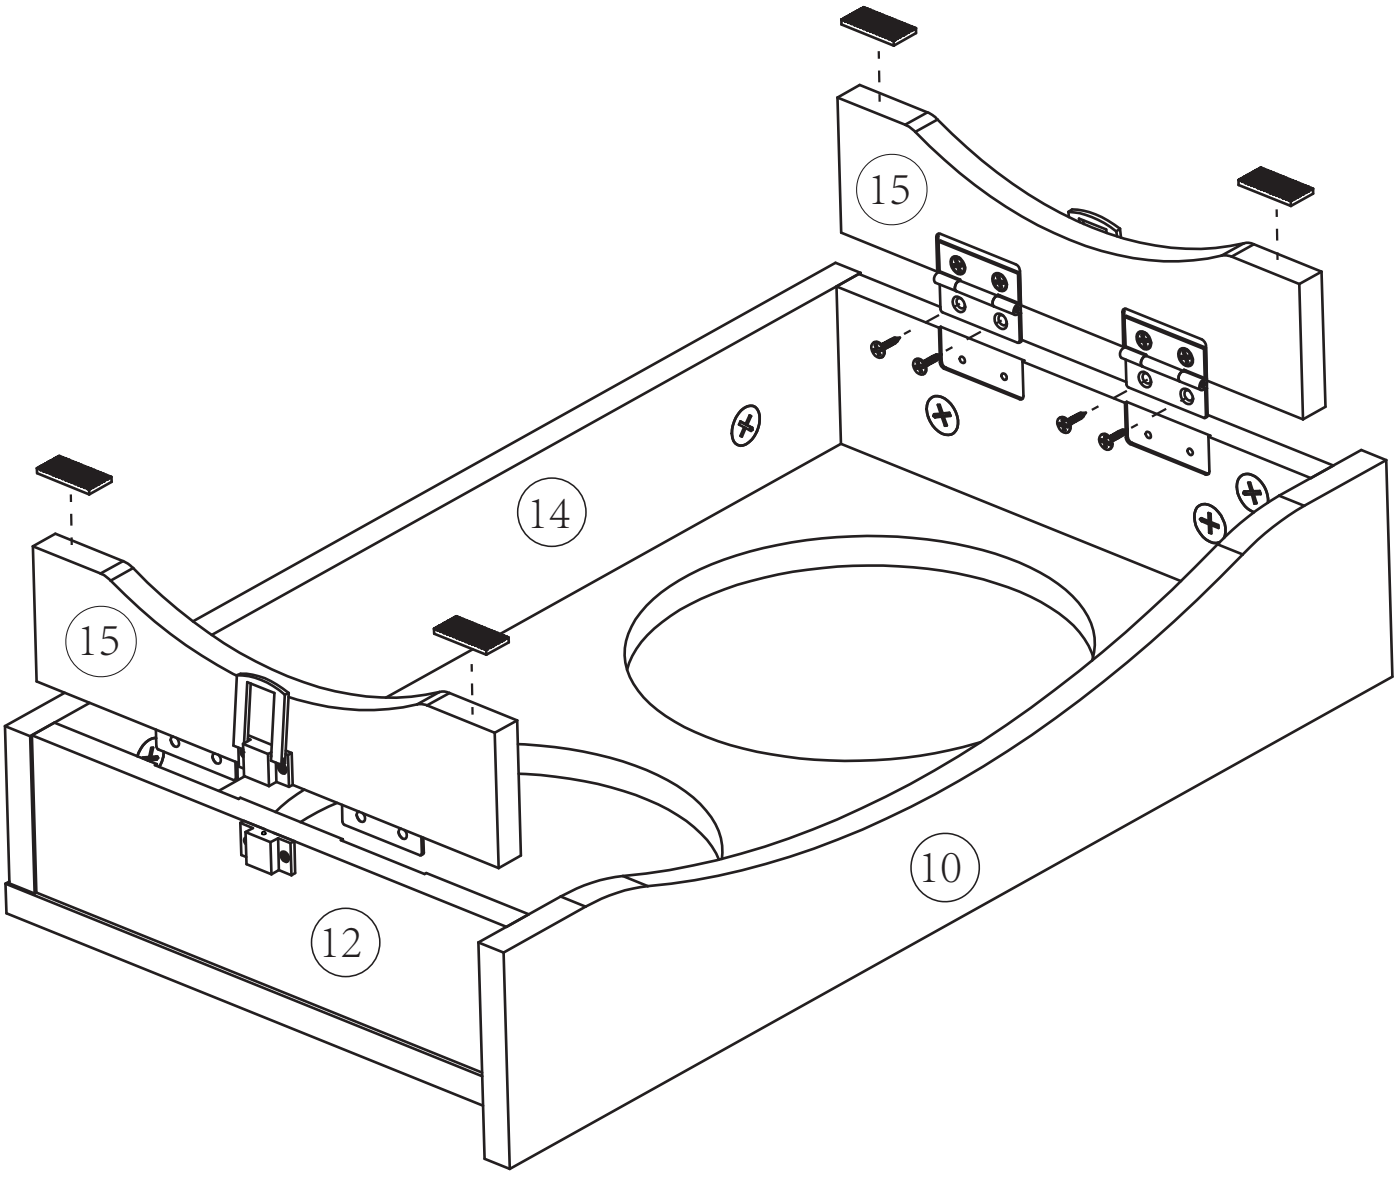


STEP20

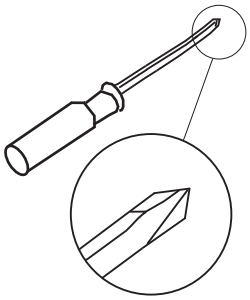


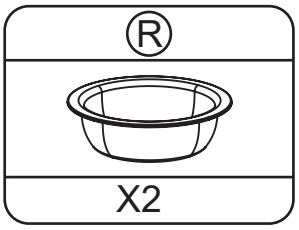


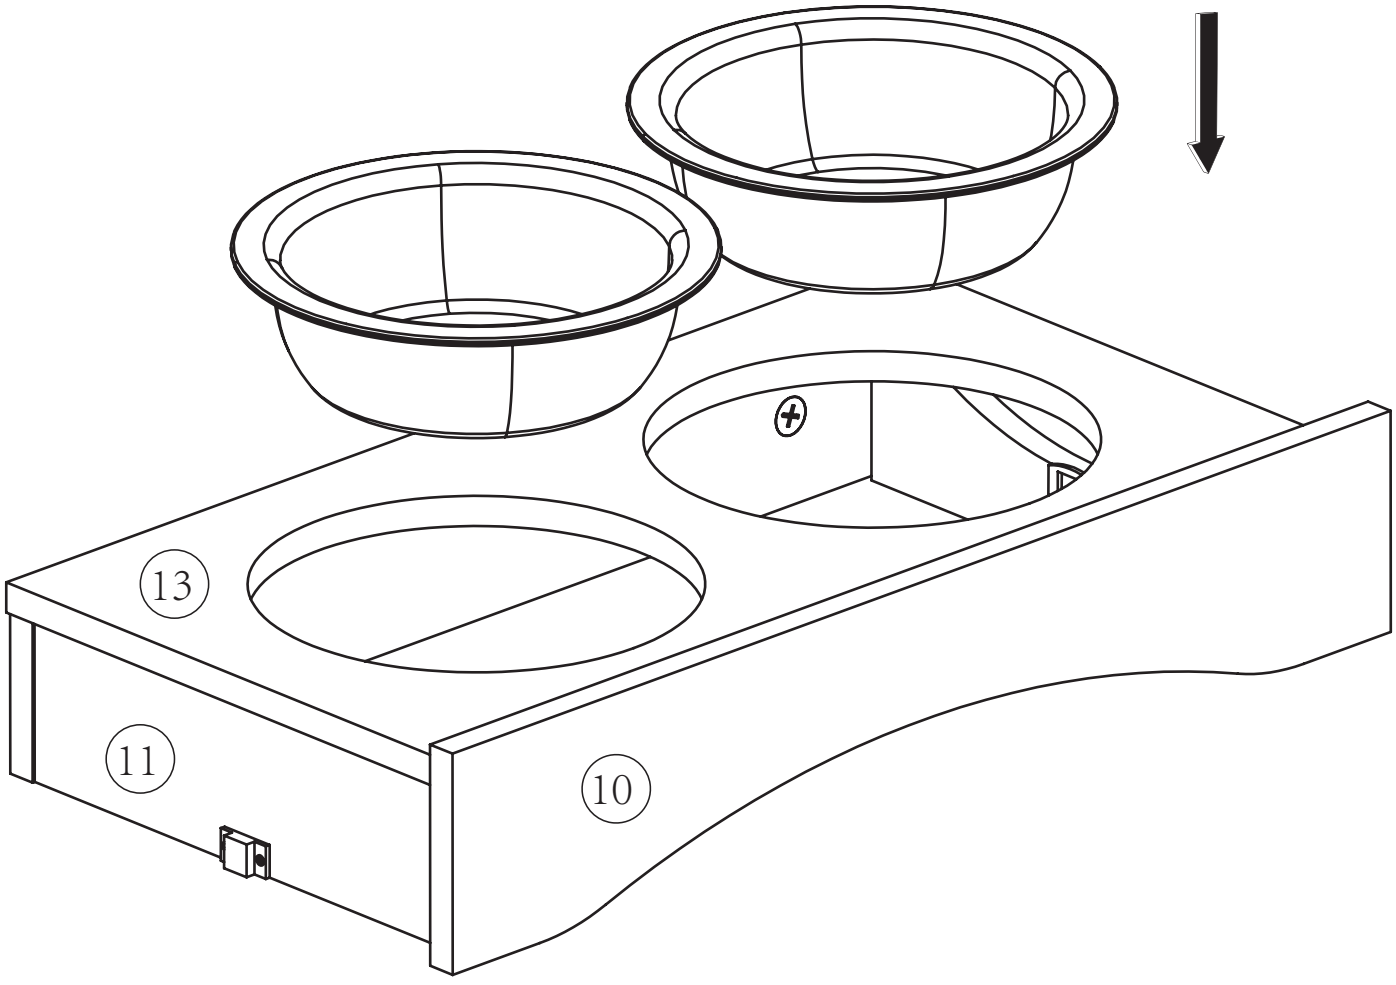



STEP21

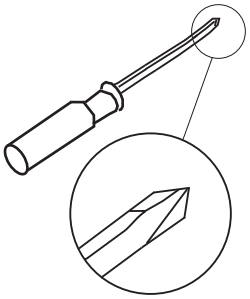


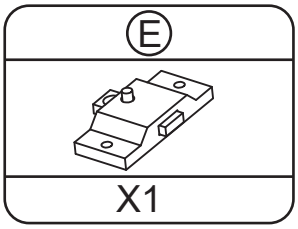

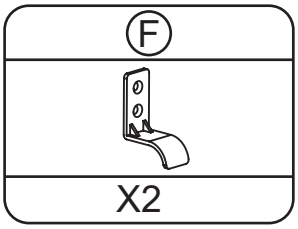


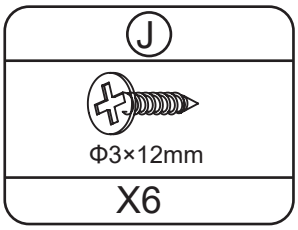

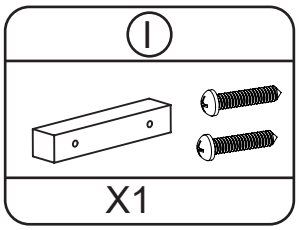

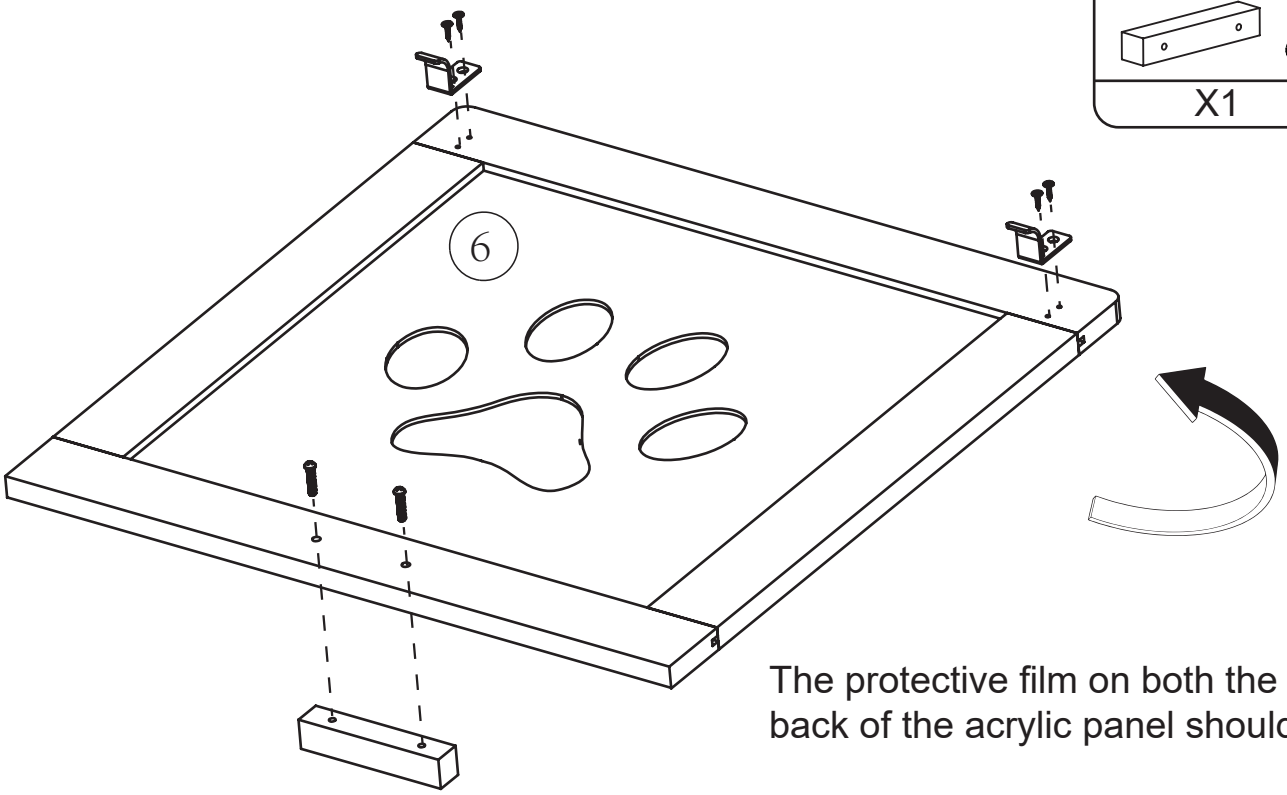



The protective film on both the front and back of the acrylic panel should be removed.

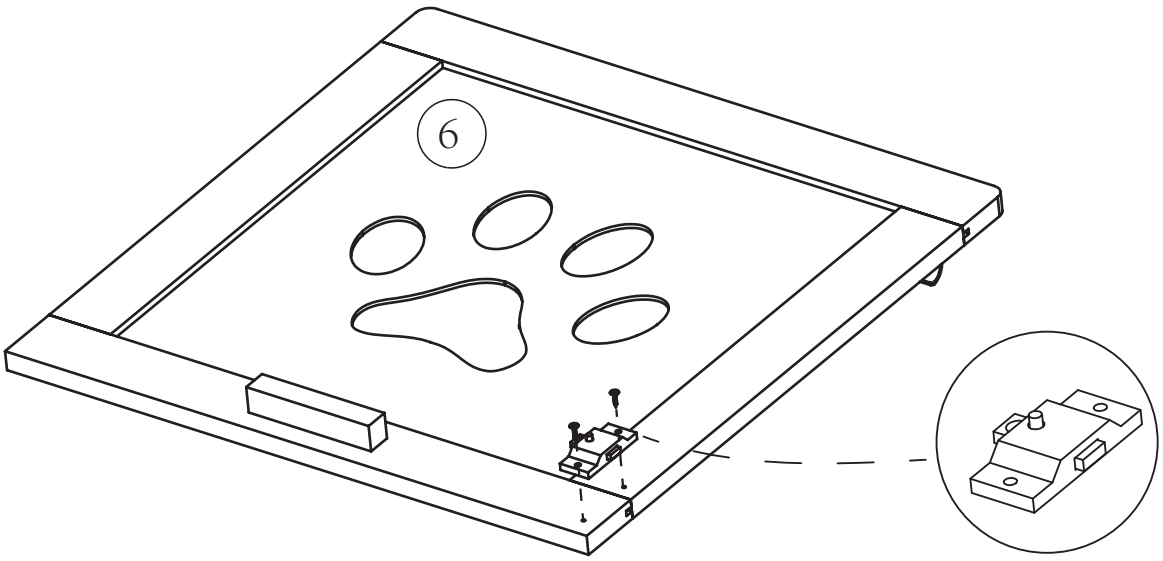


Pay attention to the installation direction.


STEP22

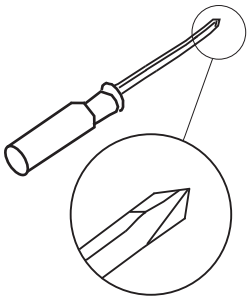

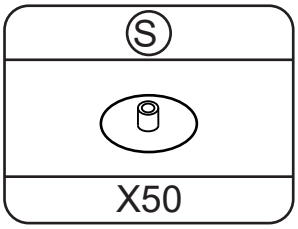

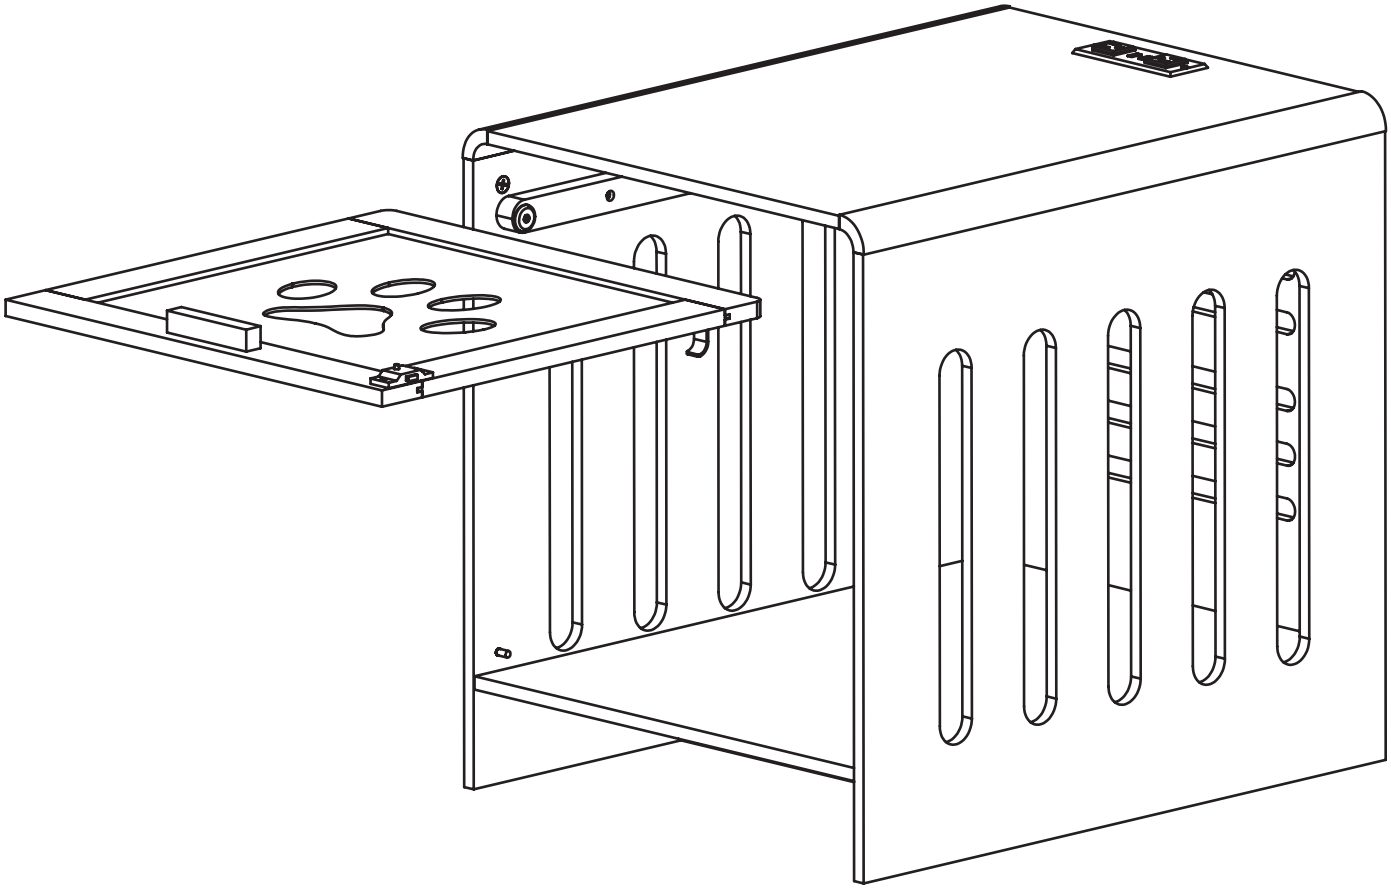

Use plastic hole plugs (S) to cover the exposed parts of the screws.

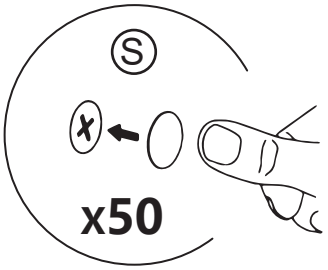

STEP23

