FOLDING ADIRONDACK CHAIR



ASSEMBLY INSTRUCTIONS:

- Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish.
- Do not skip any steps. It is of utmost importance to assemble all of the parts according to the directions.
- Be very careful when folding chair to avoid smashing your hands or fingers.
- Item identification: For ease of identification, all parts are labeled to correspond to the step number in which the part is used.

IMPORTANT:

- Read following instructions carefully before using the chair.
- · Keep fingers away from hinged area of the chair.
- Please contact customer service if you have any problems or discover any missing parts.
- Use the chair on a flat, not-slippery surface only.
- · Regularly check all the fittings. Tighten them if they are loose.

IMPORTANT:

- Keep all children and pets away from assembly area. Children and pets should be supervised while the product is being assembled.
- The assembled product should be located at least 6 feet (2 m) from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.
- · Check all bolts for tightness before and during usage.



| Item No. | Reference Image | Qty |
|----------|-----------------|-----|
| A | CHAIR SEAT | X 1 |
| В | RIGHT CHAIR LEG | X 1 |
| 0 | LEFT CHAIR LEG | X 1 |
| D | RIGHT CHAIR ARM | X 1 |
| a | LEFT CHAIR ARM | X 1 |

| Item No. | Reference Image | Qty |
|-------------|-----------------|-----|
| (3) | CHAIR BACKREST | X 1 |
| © | BACK RAIL | X 1 |
| • | FRONT RAIL | X 1 |
| 0 | LOCKING BLOCK | X 2 |
| 0 | 6 | X 1 |




| ltem No. | Reference Image | Qty |
|----------|-----------------|-----|
| 1 | M6x80mm BOLT | X 2 |
| 2 | M6x60mm BOLT | X 4 |
| 3 | M6x50mm BOLT | X 2 |
| 4 | M6x60mm BOLT | X 2 |
| 5 | M6x40mm BOLT | X 5 |
| 6 | M6x40mm BOLT | X 2 |

| Item No. | Reference Image | Qty |
|----------|-----------------|-----|
| 7 | M6 NUT | X 8 |
| 8 | M6 WASHER | X 8 |
| 9 | WRENCH | X 1 |
| 10 | ALLEN WRENCH | X 1 |






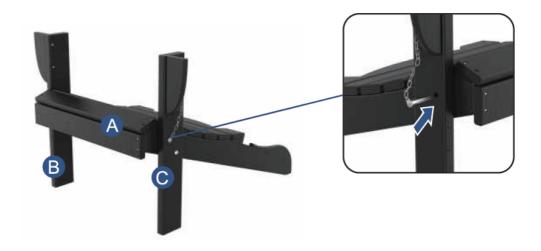







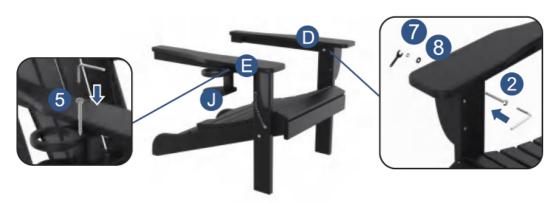

*Repeat the same operation on the other side of the chair.



X2 Q (2 Q X2









^{*}Repeat the same operation on the other side of the chair.





INSTALLATION COMPLETED



TO FOLD AND STORE THE ADIRONDACK CHAIR



Note: During use, if you cannot pull out the latch, please sit on the chair, lean forward a little, and then rock the chair back and forth to pull out the latch.