



Installation & Assembly

• SOFA 3 SEATER

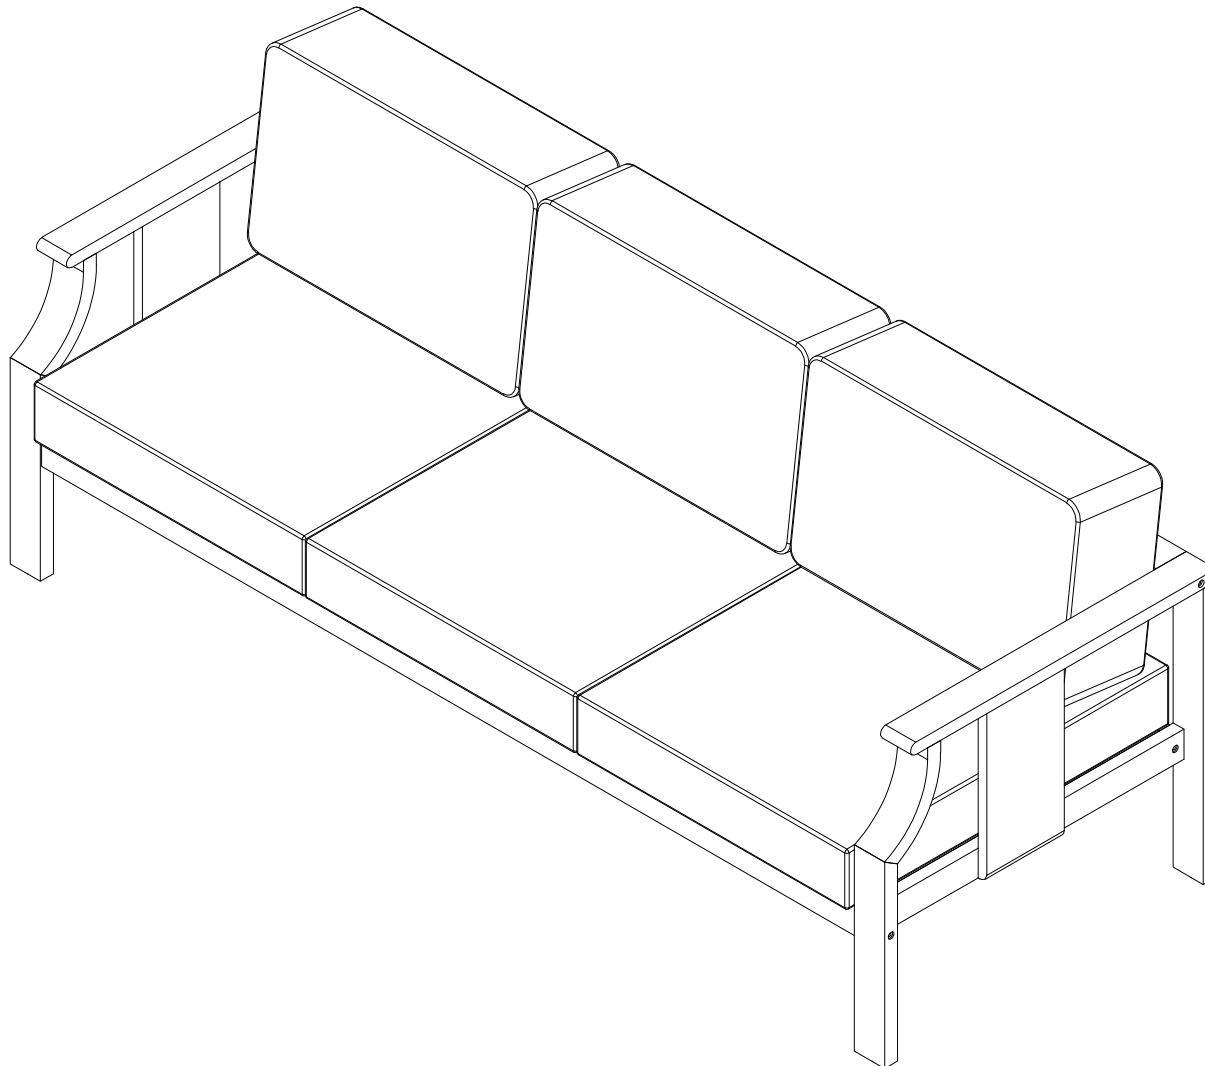


HARDWARE LIST




x10

① BOLT M6x35 mm




x10

② SCREW BOLT M6x40 mm




x2

③ SCREW BOLT M6x60 mm

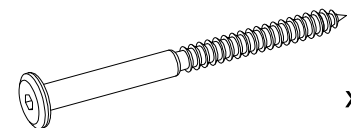

x4











④ SCREW BOLT M6x100 mm

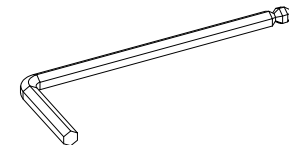


x1


⑤ ALLEN KEY 4x80 mm

PARTS LIST

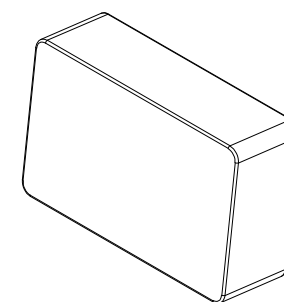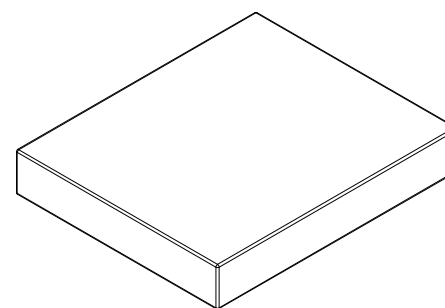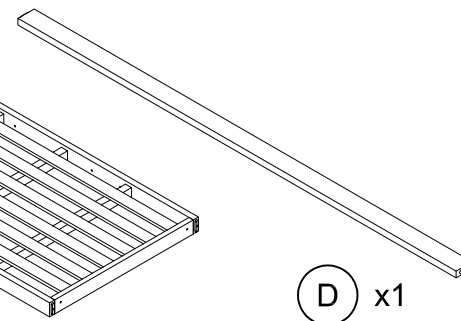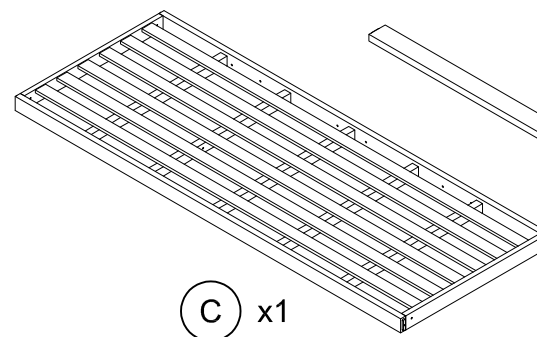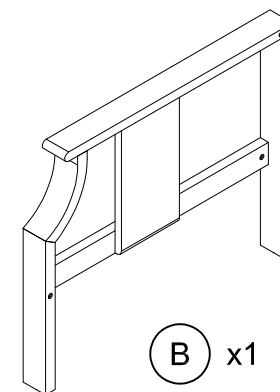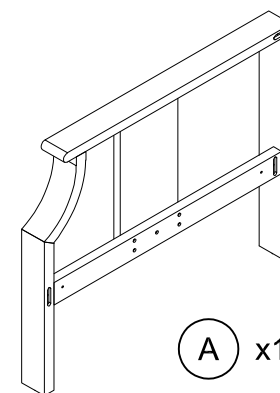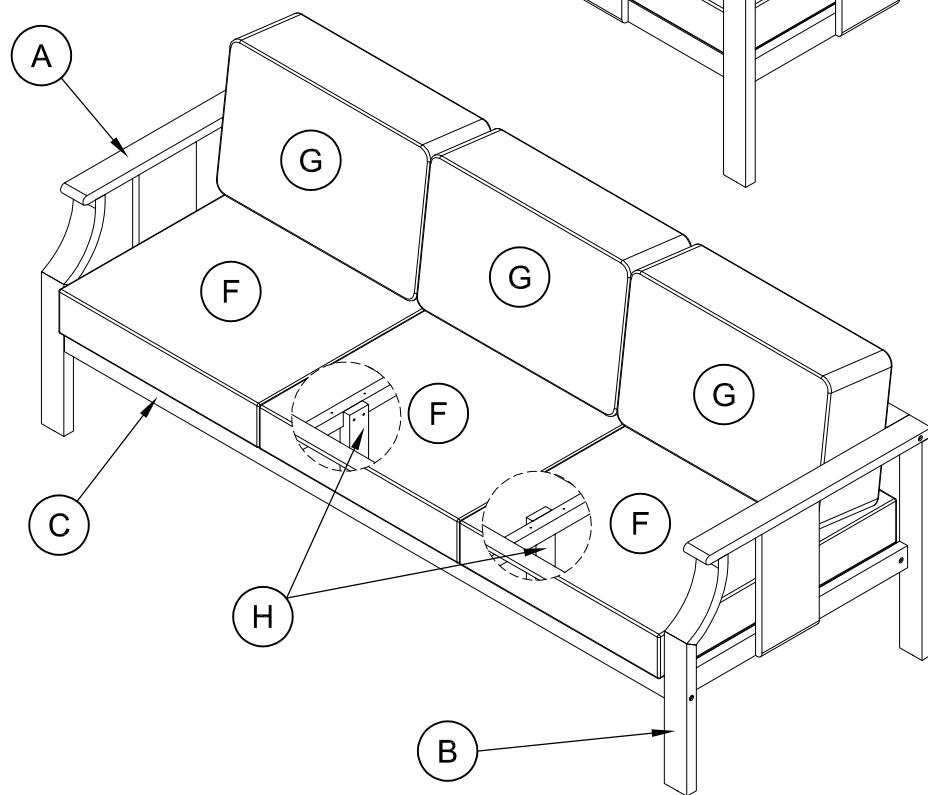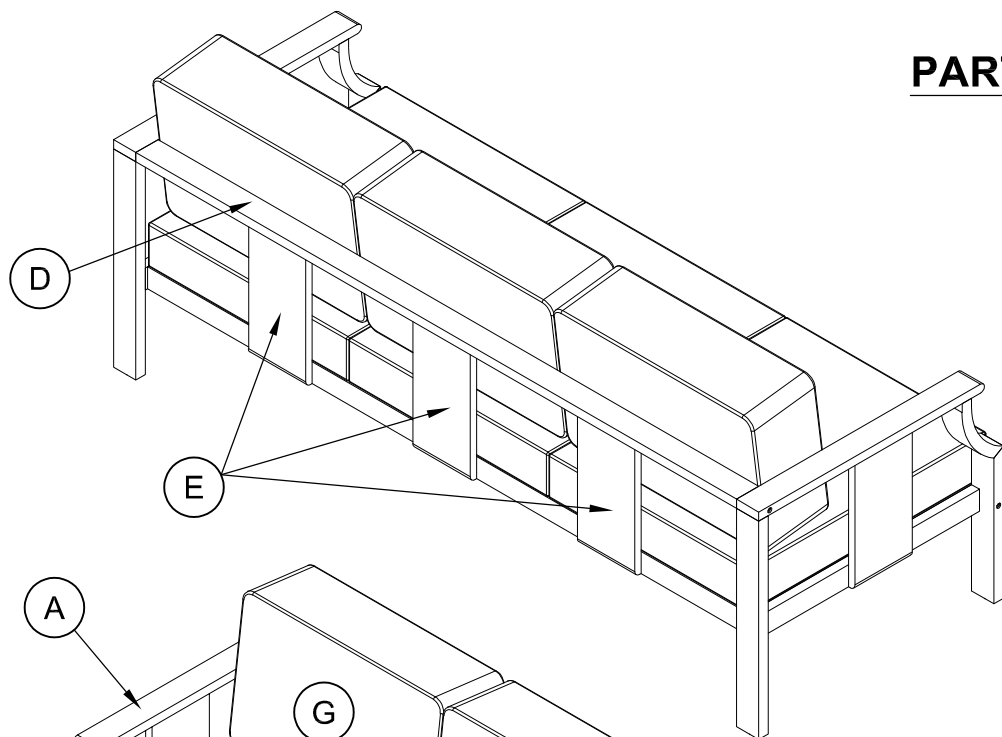


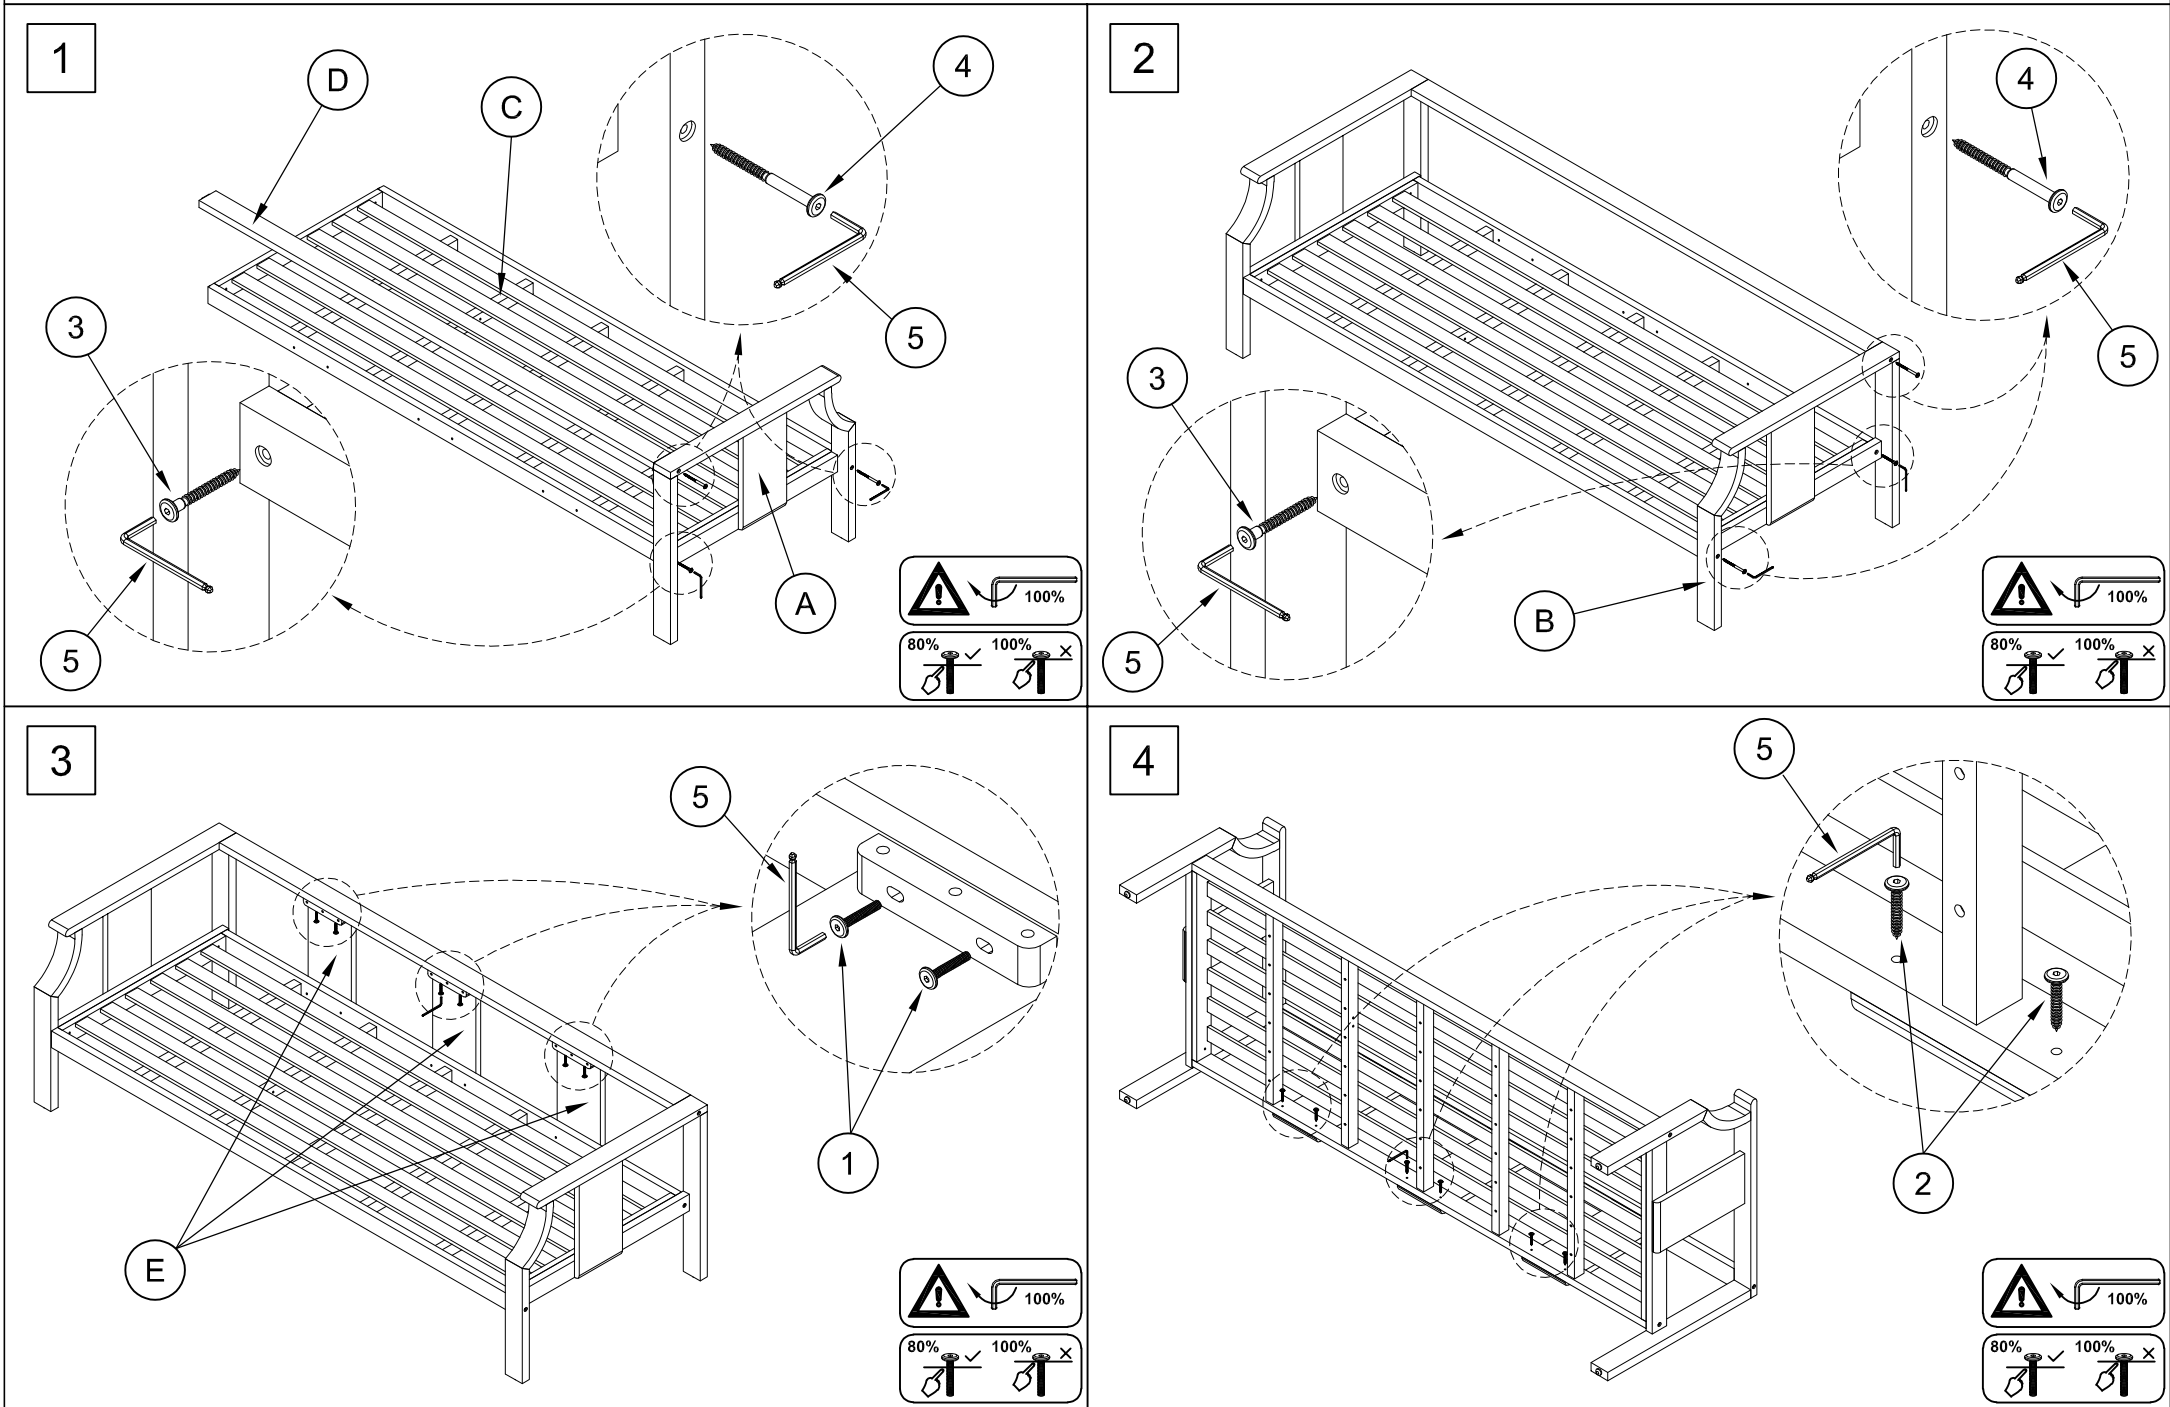


5

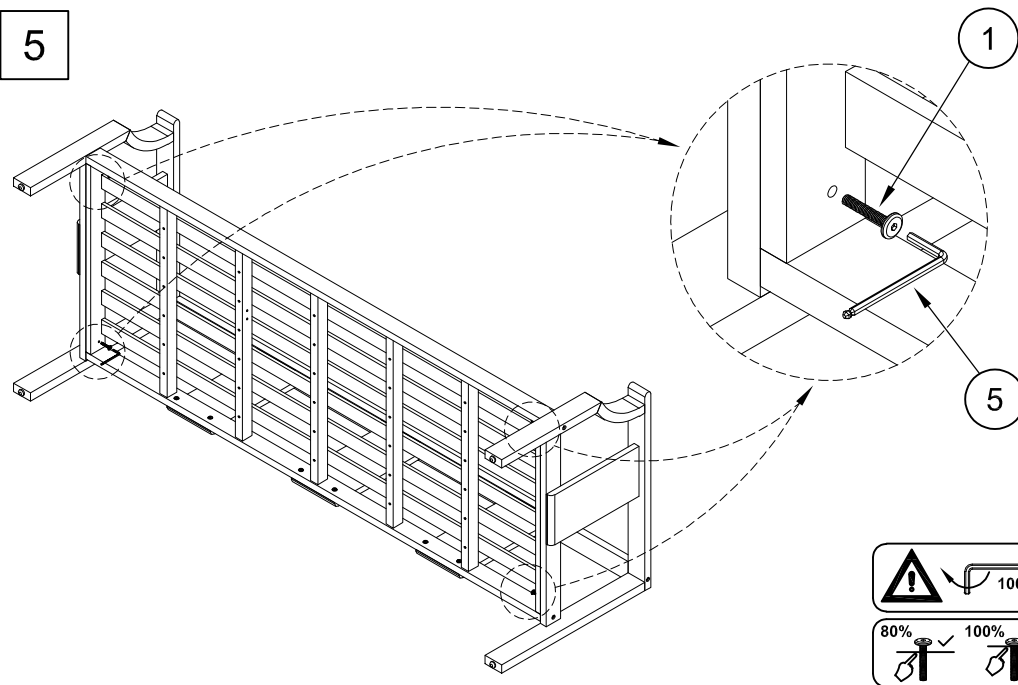


6

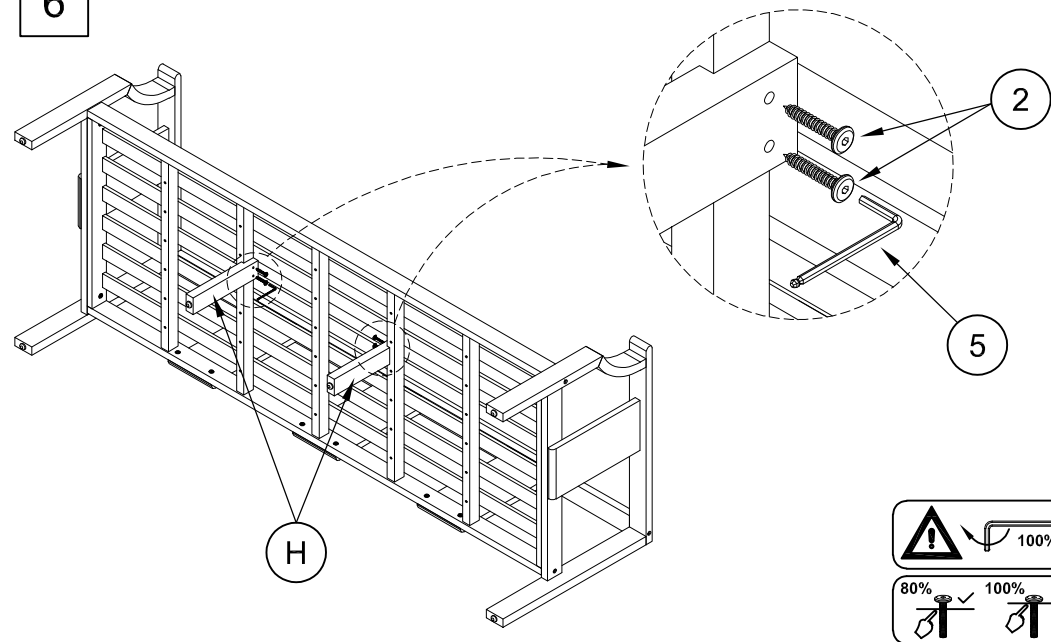

7

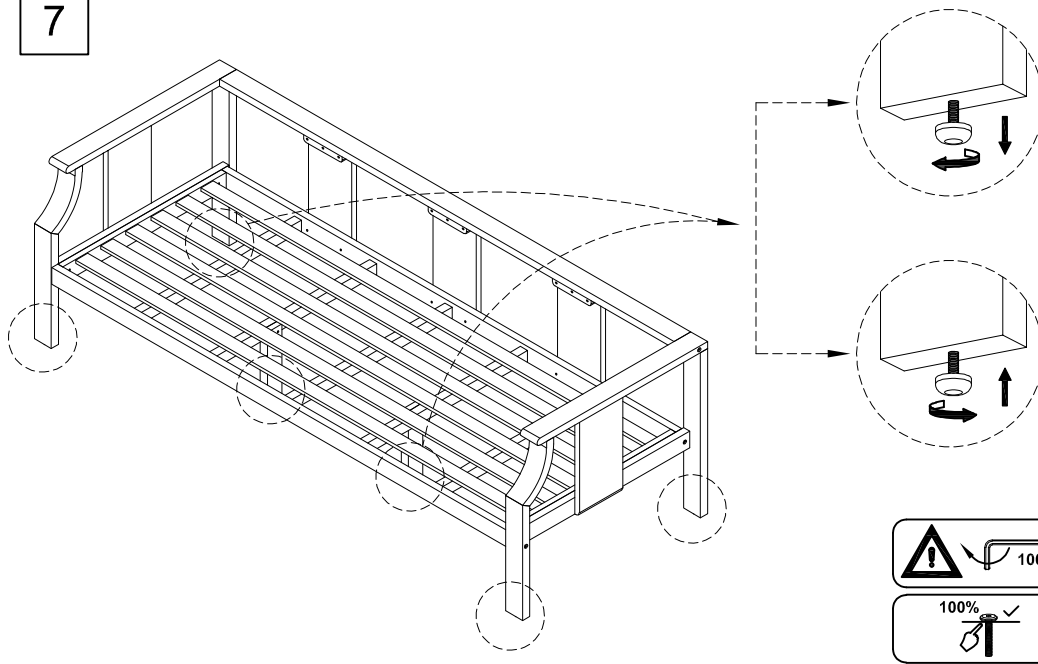

8

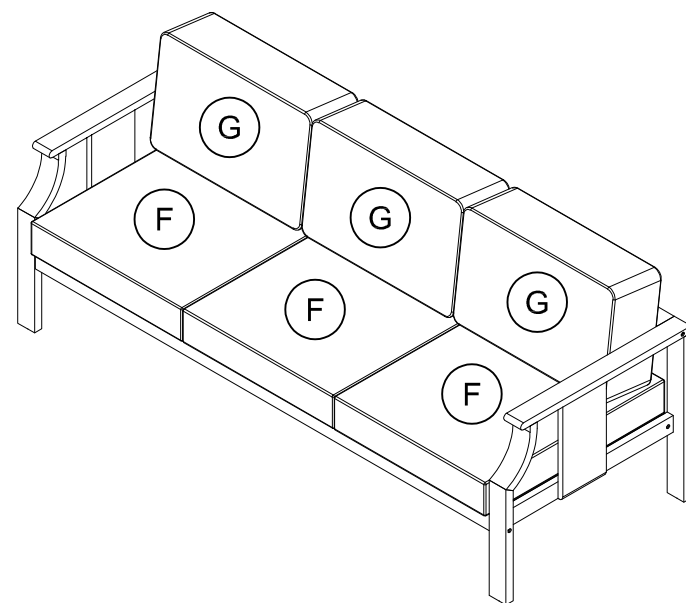

9

FINISH

