


PRE-ASSEMBLED 3-WIDE, 1-TIER UNIT

PLEASE READ INSTRUCTIONS BEFORE INSTALLING LOCKERS.


STEP #1

Stand pre-assembled groups in place. Square up units with shims under REAR LEGS.
TIGHTEN BOLTS AFTER GROUPS ARE SQUARE AND ALIGNED.

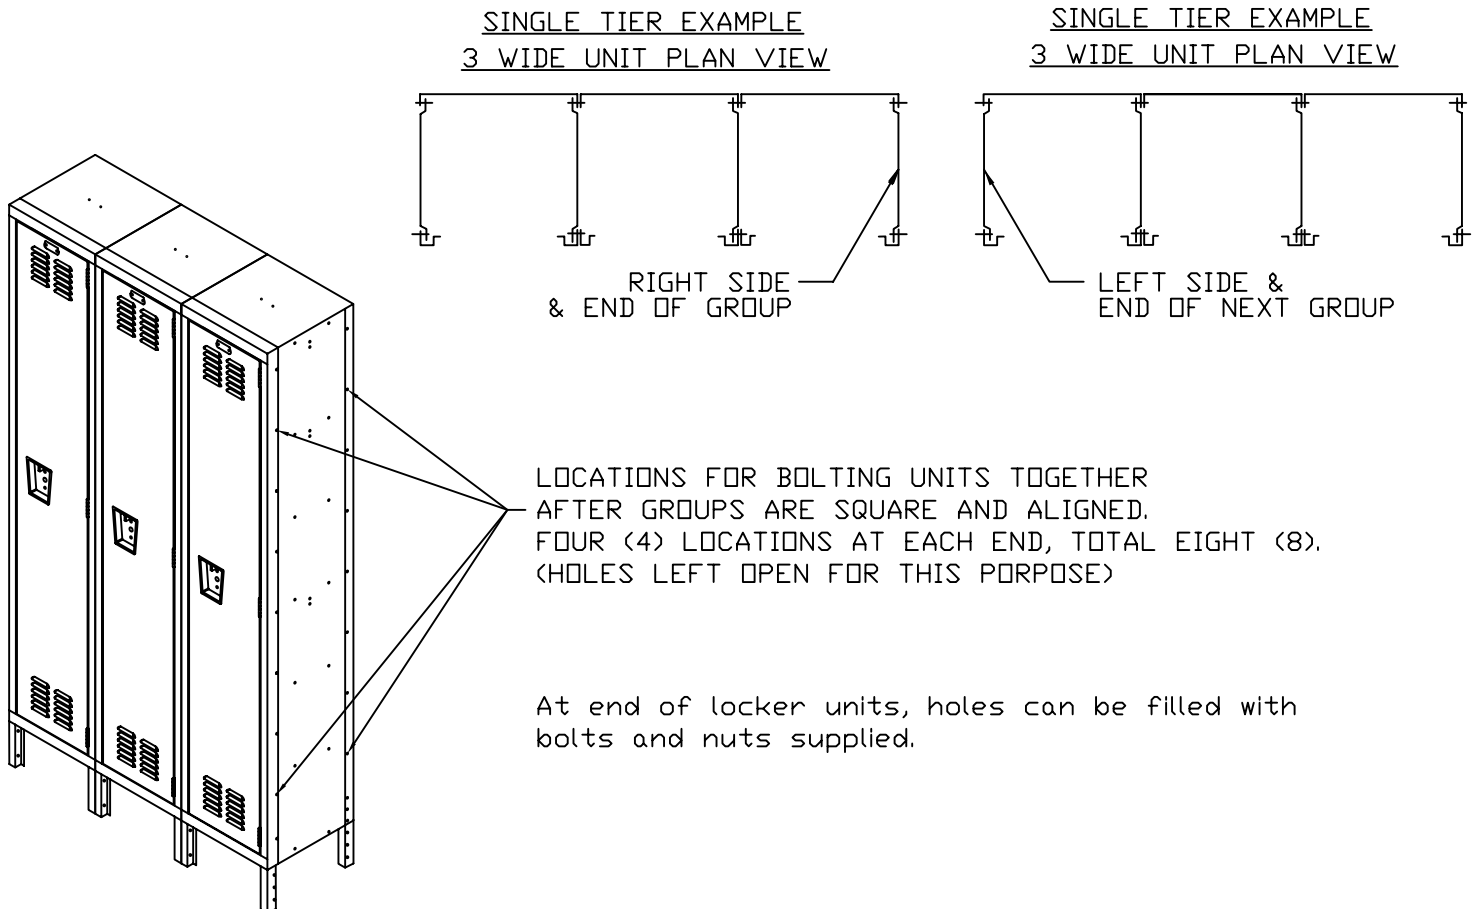


STEP #2

End lockers to be anchored plus Intermediate lockers on 36" centers MAX.
Free standing lockers with legs MUST be anchored to floor through rear legs (see Sht. 2).
Free standing lockers without legs MUST to anchored thru shelf to floor. Installer MUST use blocking under shelf to fill in space at bottom of locker.

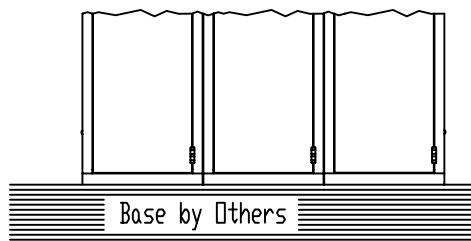

Front Elevation

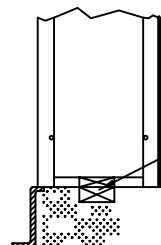

Vertical Section

Anchor with screws every 36" (max) and at the end of each row.
(SLEEPER BY OTHERS)



5711 Distribution Drive, Memphis, TN 38141
Tel (901) 375-0022 Fax (901) 375-0899

REVISIONS			PRE-ASSEMBLED 3-WIDE ANCHORING METHODS		
NO.	DATE	BY			
3.	-	-			
4.	-	-	DRWN BY JMH	DATE 04-19-05	SCALE NONE
5.	-	-	CHK'D RDW	DATE 04-19-05	DRWG NO.
6.	-	-	APP'D	DATE	SA-0522
					SHEET 1 of 2

RECOMMENDED ANCHORING METHODS

ANCHORS SUPPLIED BY OTHERS

WARNING:

FLOOR ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 190 LBS.
WALL ANCHOR MUST HAVE A MINIMUM PULL-OUT VALUE OF 150 LBS.

CLEANING OF LOCKERS:

THE LOCKERS ARE COATED WITH A BAKED-ENAMEL FINISH.
THEY REQUIRE CLEANING WITH A VERY MILD,
NON-ABRASIVE TYPE PRODUCT.

NEVER:

USE A TOXIC CLEANER THAT CONTAINS AMMONIA OR ACID
OR HOSE DOWN WITH WATER.

