




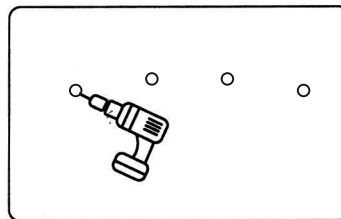



# Installation instructions

	1 pcs	2 pcs	3 pcs	4 pcs
	x1	x2	x3	x4
	x1	x2	x3	x4
	x2	x4	x6	x8
	x4	x8	x12	x16
	x4	x8	x12	x16




## Step 1

Mark on the wall and use a tool to drill a hole.

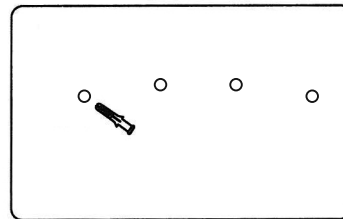


## Step 2

Fix the expansion tube on the wall.

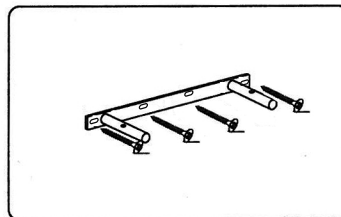


## Step 3

Fix the metal bracket on the wall.

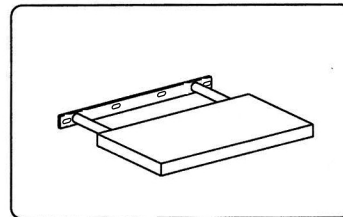


## Step 4

Note: Place the board with holes facing downwards.

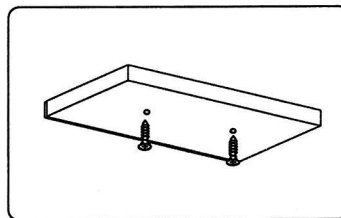

## Step 5

Use short screws to fasten the metal bracket and the wooden board together.

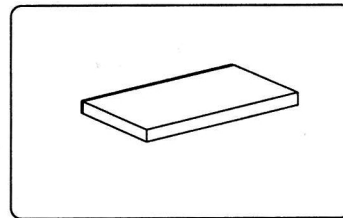

## Step 6

Installation completed.