


# USER GUIDE

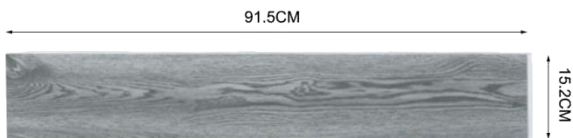

36 PIECES / 5 SQUARE

# SELF-ADHESIVE PVC FLOORING

# SAFETY & WARNINGS

- Subfloors must be clean, flat, dry and structurally sound. The correct preparation of the subfloor is a major part of a successful installation.
- Leave a ¼-inch gap around all edges, poles, cabinets, garage door, railings, or anything that will stop the floor from expanding or contracting.
- When installing baseboard, keep above the ¼-inch gap.
- Do NOT lay over any type of carpet.
- Seal or remove paint before installation.
- Scrape or sand off old glue.
- Wet areas with plywood floors or rough surfaces: lay down a plastic liner before installing tile, we recommend 7mm garden plastic.
- Avoid exposure to direct sunlight for prolonged periods. Exposure may result in discoloration. During peak sunlight hours, the use of the drapes or blinds is recommended.

# INSTALLATION

## Step 1

Clean the floor.



## Step 2

Trim the flooring.



### Step 3

Cut off easily.



### Step 4

Peel off the backing.




### Step 5

Apply the flooring.



### Step 6

Complete.

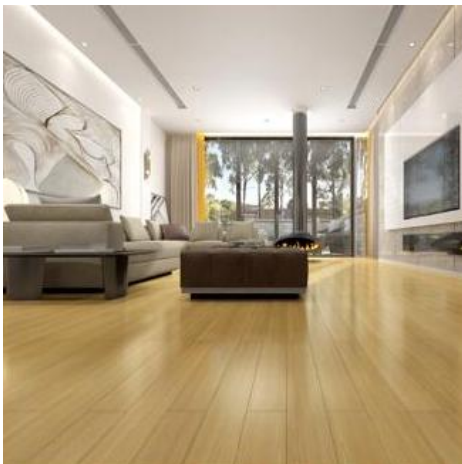

# CLEANING & CARE

- Never use wax, polish, oils, soaps, detergents, shine enhancers, or varnish on the floor.
- For dry maintenance, we recommend a dust mop or vacuum cleaner with soft bristle brush only.
- For slightly damp maintenance, we recommend a floor cleaner which you spray directly and lightly on a duster. Always wipe dry immediately until no more moisture is visible on the floor. The use of other cleaning products might damage your floor.
- Do not use any type of cleaning machine such as spray mops, steam cleaners/mops or power cleaners.
- Wet maintenance is absolutely forbidden. Remove any water immediately. The panels are not suitable for use in damp spaces like saunas.
- Never use scouring products!