













ASSEMBLY INSTRUCTIONS

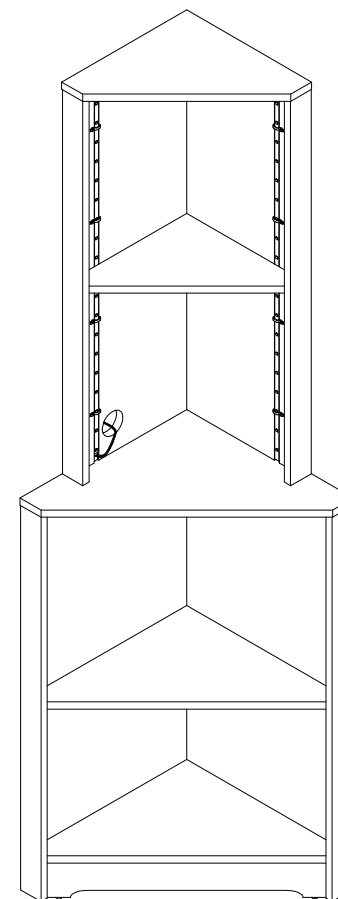














ASSEMBLY INSTRUCTIONS

Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.



Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
Ⓐ	 M5*35mm	x 22	Ⓔ	 M3	x 1
Ⓑ	 Ø15*10mm	x 22			
Ⓒ	 Ø5*48mm	x 22			
Ⓓ	 Ø3.5*14mm	x 14			
Ⓔ	 Ø6*30mm	x 22			
Ⓕ	 Ø4*35mm	x 4			
Ⓖ	 Ø4*35mm	x 4			
Ⓗ	 Ø4*35mm	x 4			
Ⓘ	 Ø4*35mm	x 10			
Ⓙ	 Nylon Cable Tie	x 2			

ASSEMBLY INSTRUCTIONS

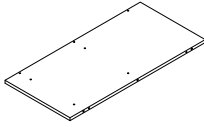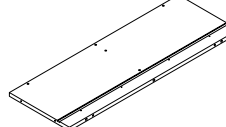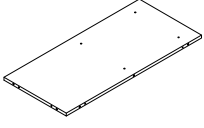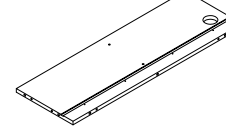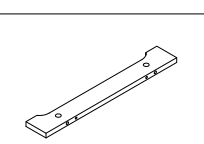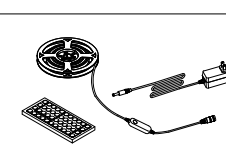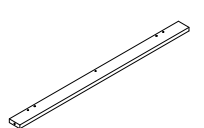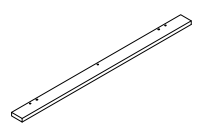Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
①		x 1	⑨		x 1
②		x 1	⑩		x 1
③		x 1	⑪		x 1
④		x 1	⑫		x 1
⑤		x 1	⑬		x 1
⑥		x 2			
⑦		x 2			
⑧		x 1			



ASSEMBLY INSTRUCTIONS

Explosion Diagram

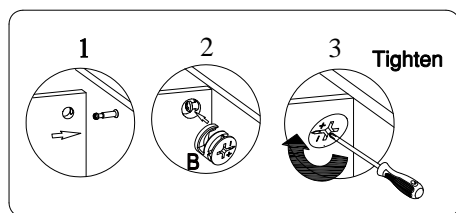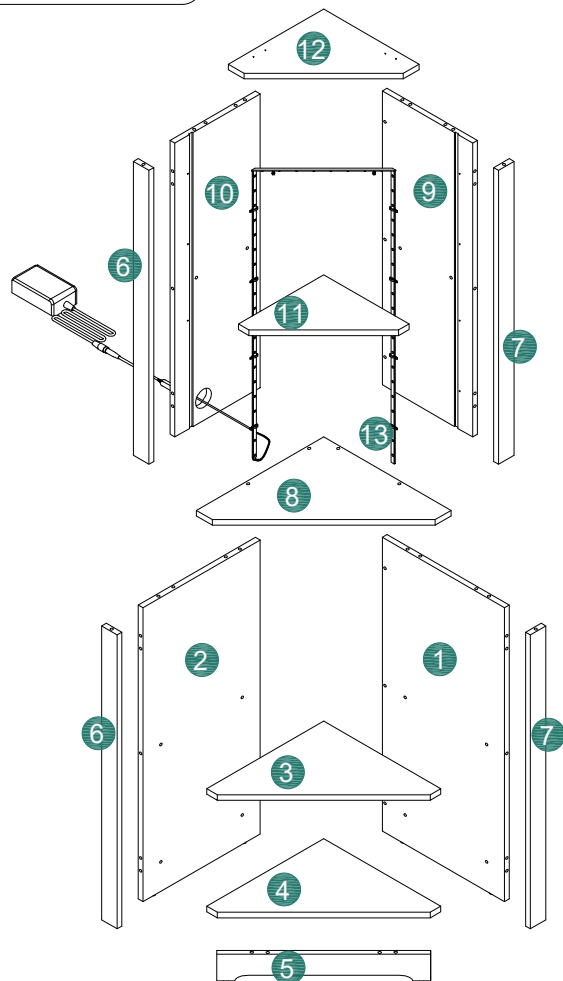

3


ASSEMBLY INSTRUCTIONS

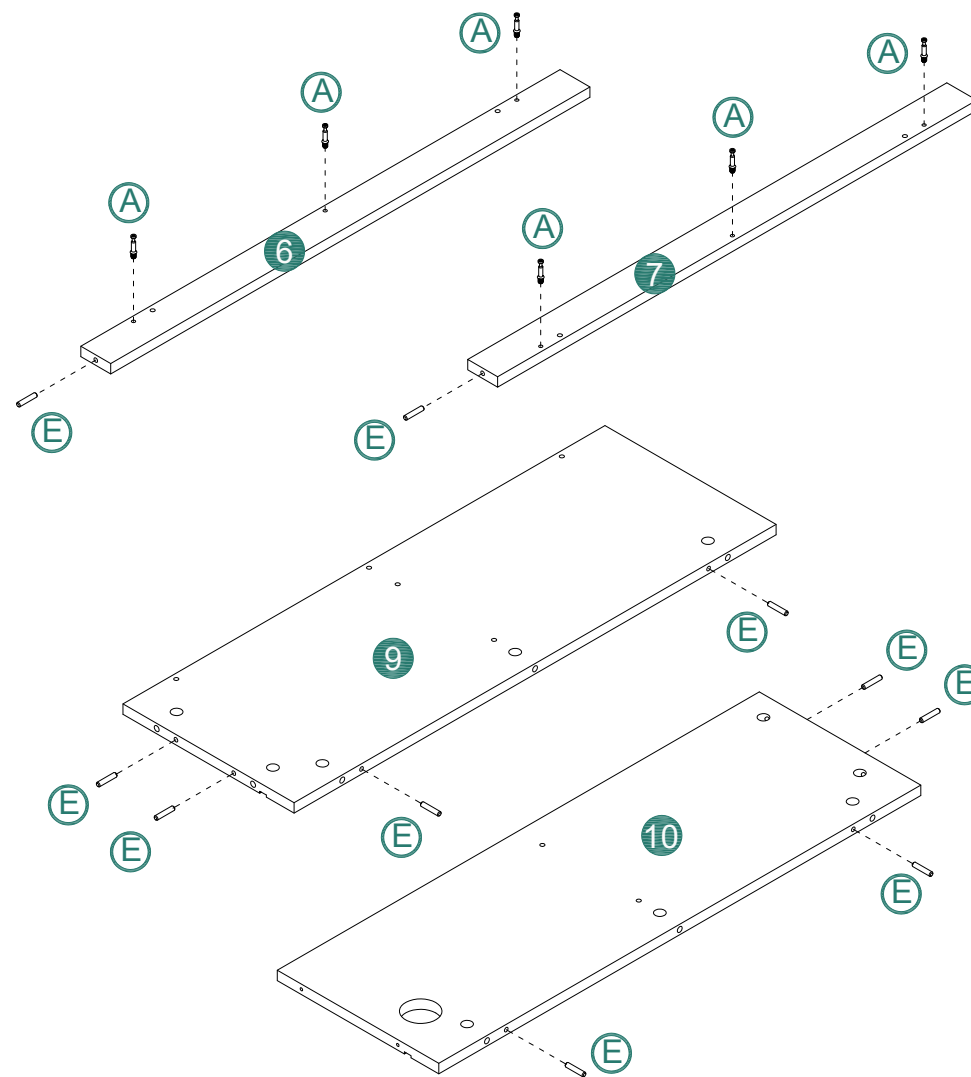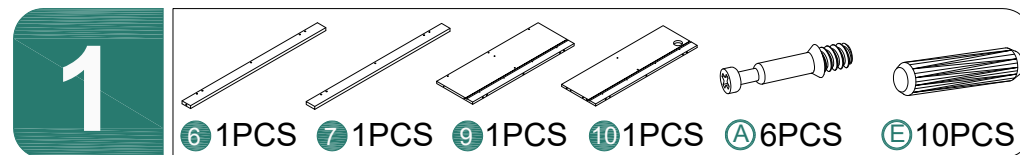

4


ASSEMBLY INSTRUCTIONS

2

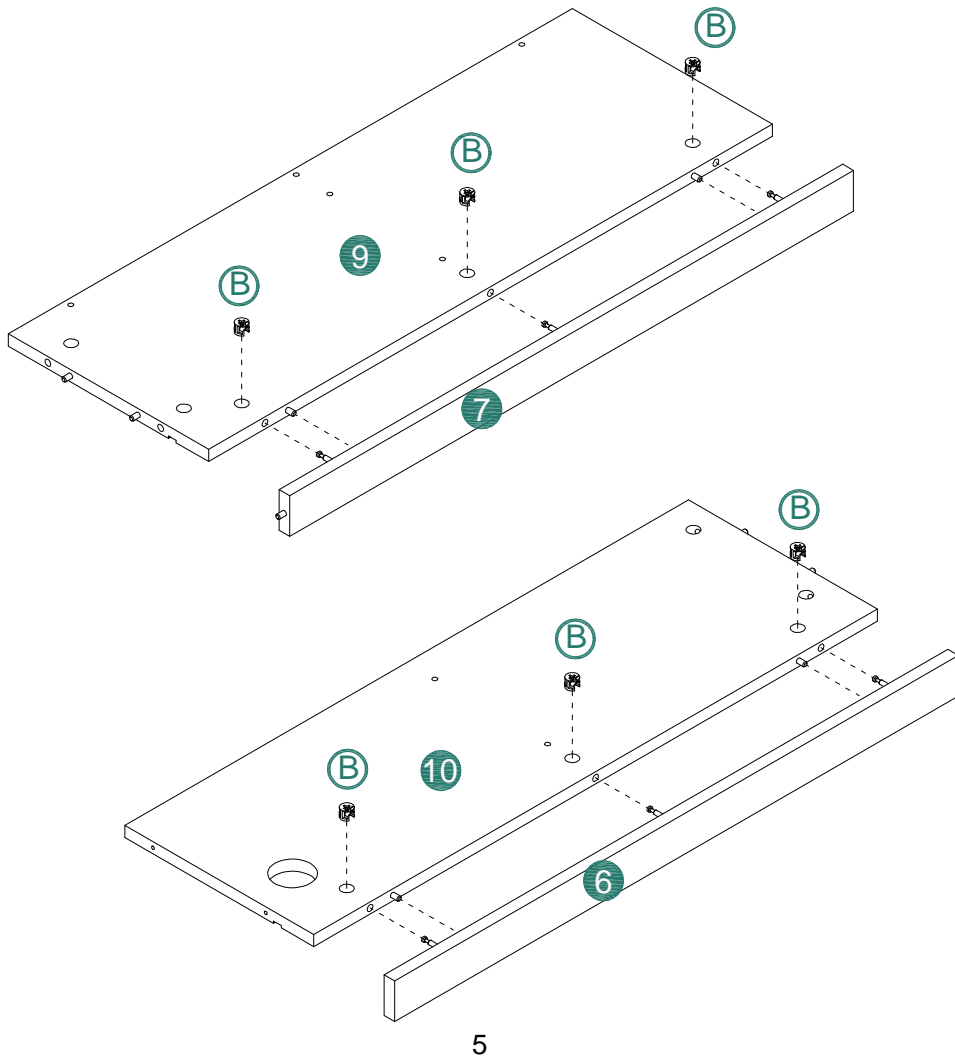

ASSEMBLY INSTRUCTIONS




3

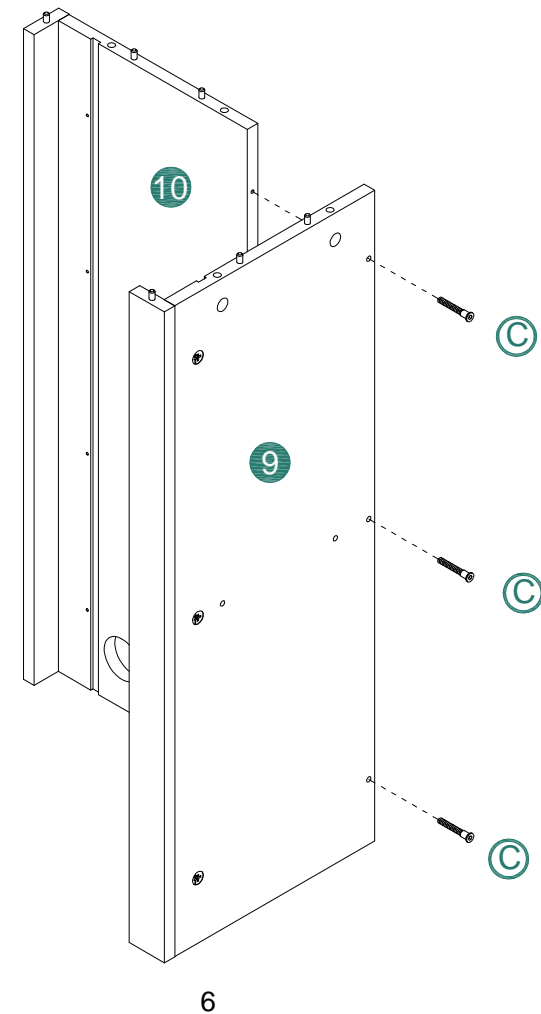

ASSEMBLY INSTRUCTIONS


ASSEMBLY INSTRUCTIONS

4

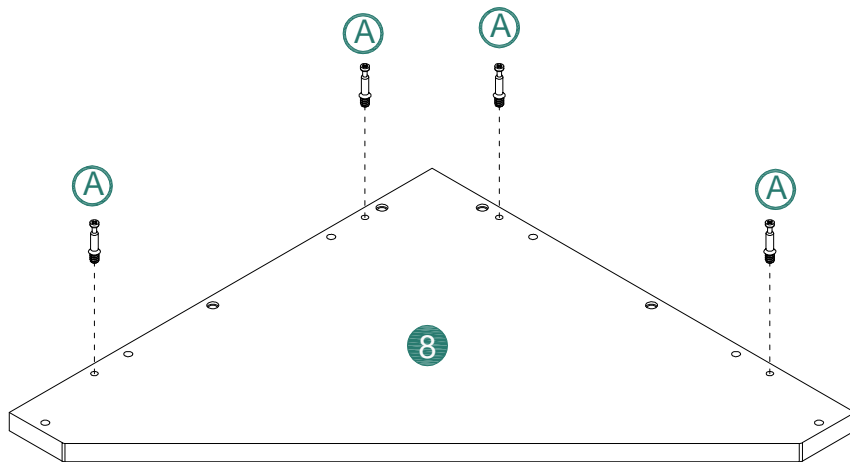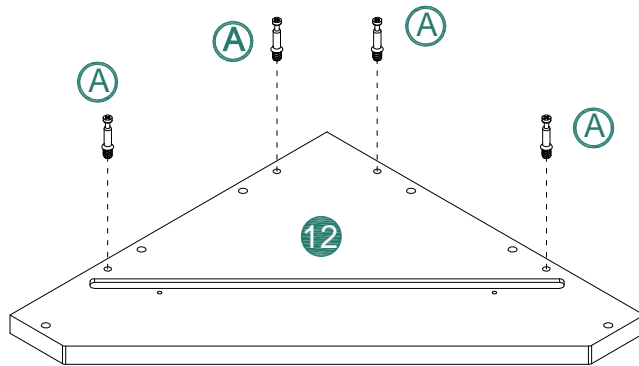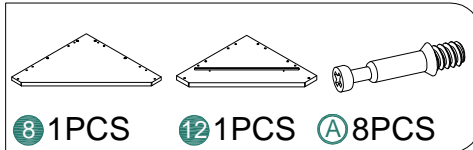

7



5

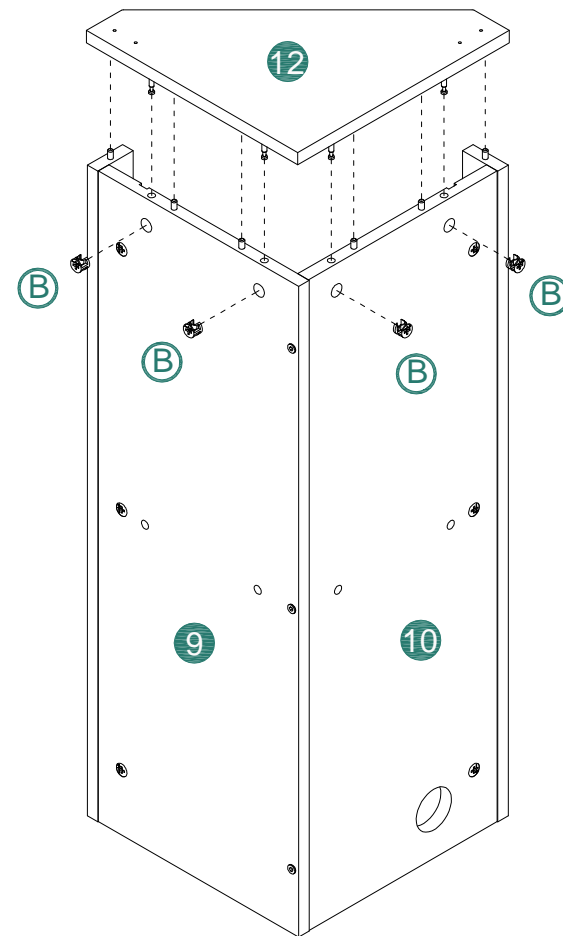

8




ASSEMBLY INSTRUCTIONS

6

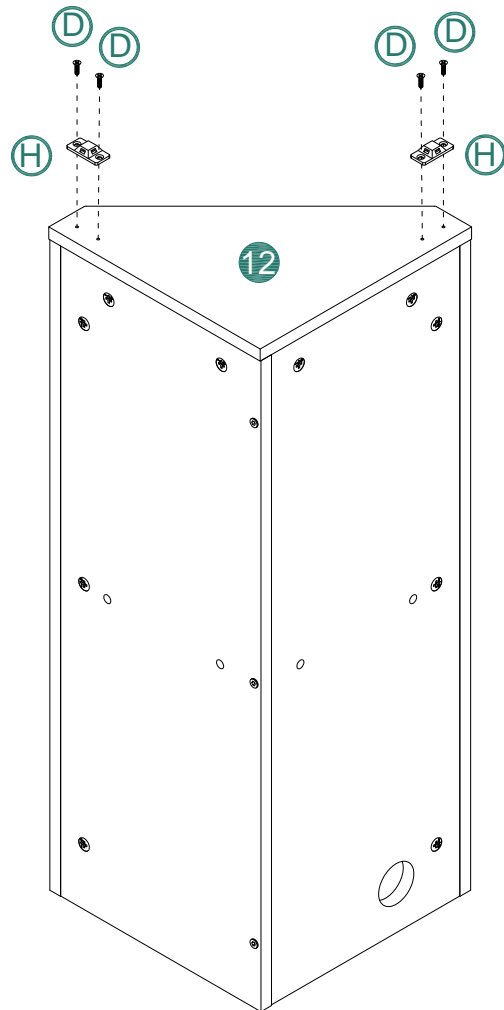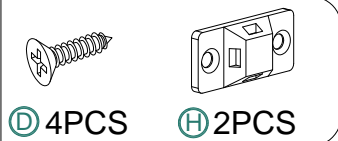

9


7

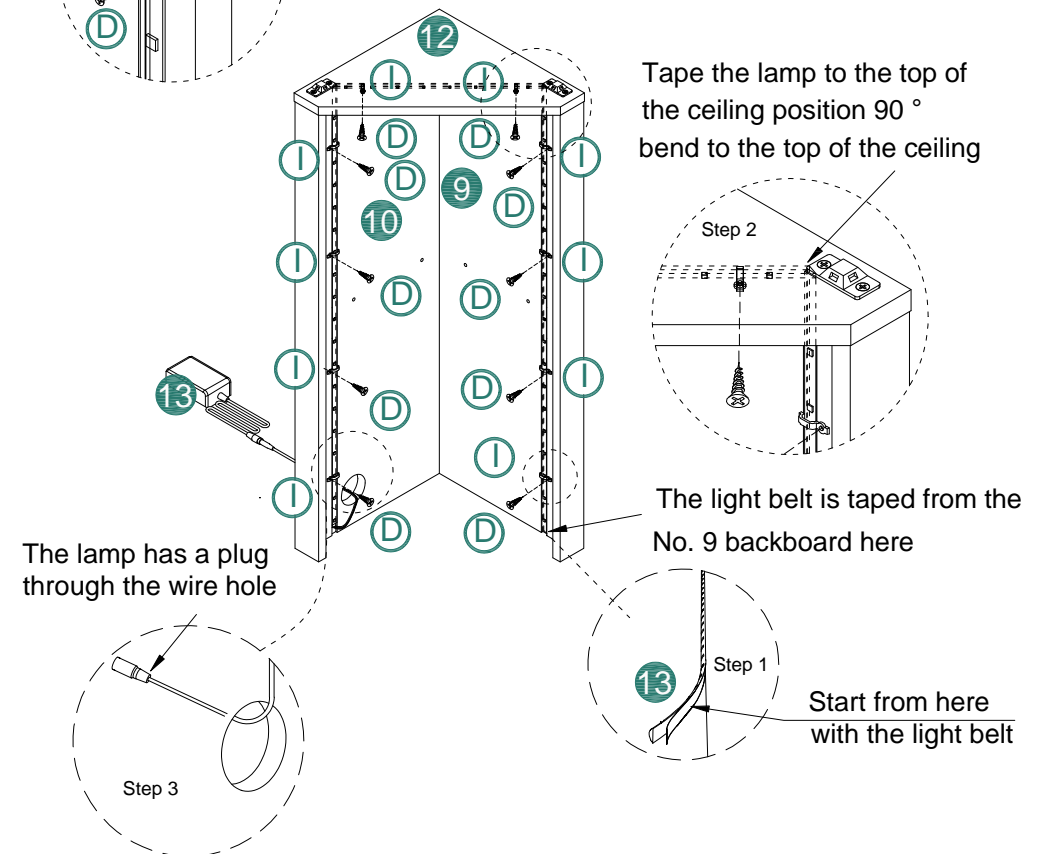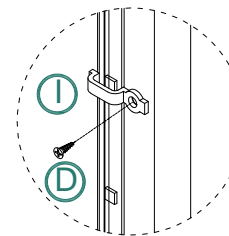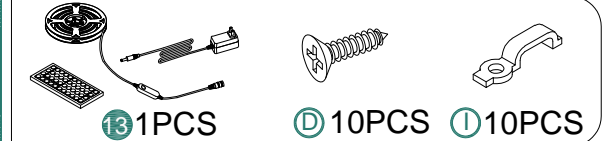


10

8

It is very important to plug in the plug to ensure stability!

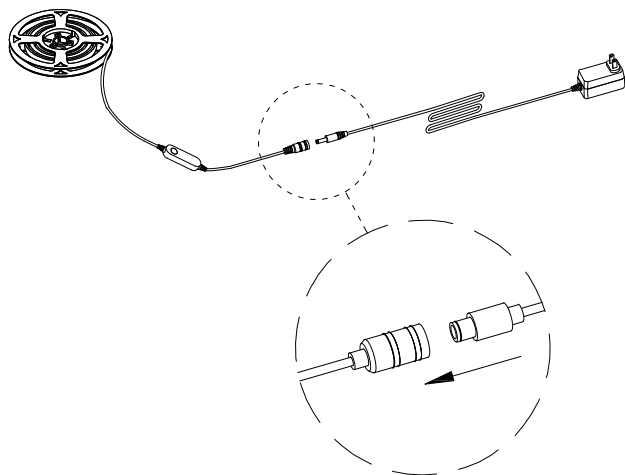


Remove the plastic piece before using the remote.
Read the manual for the remote control.

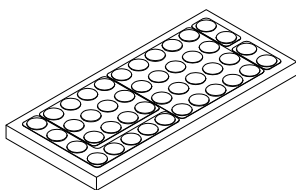


11


9



11 1PCS




C 4PCS

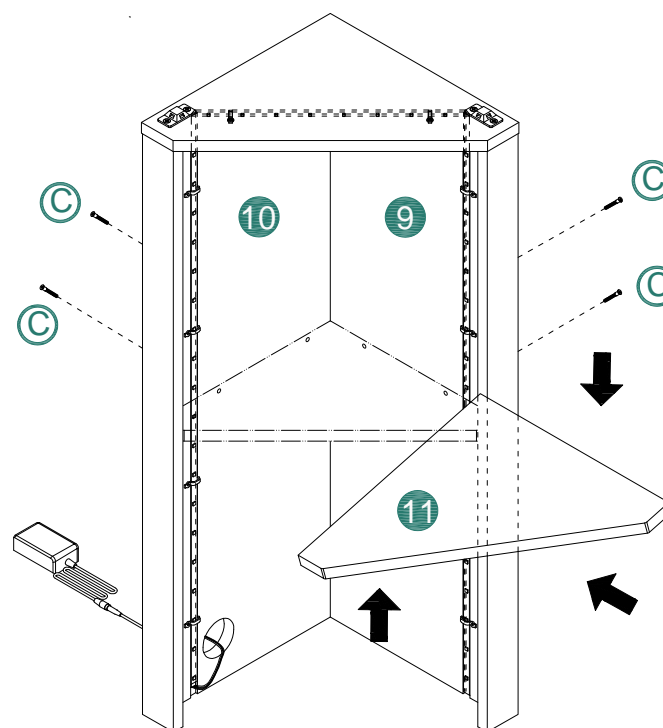


12

ASSEMBLY INSTRUCTIONS

10




© 4PCS

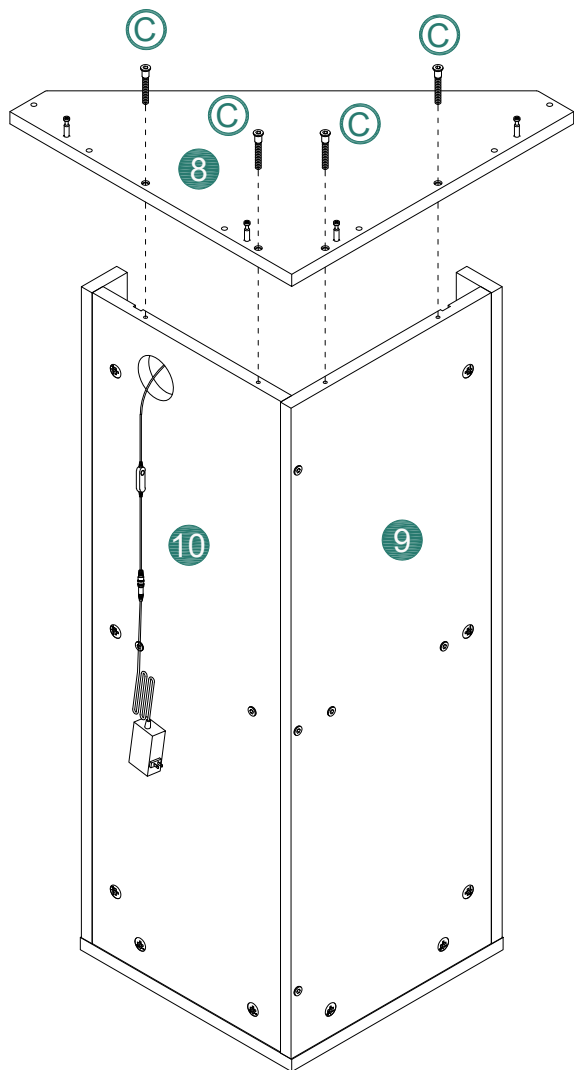


13


11




4 1PCS





5 1PCS



A 2PCS





E 2PCS

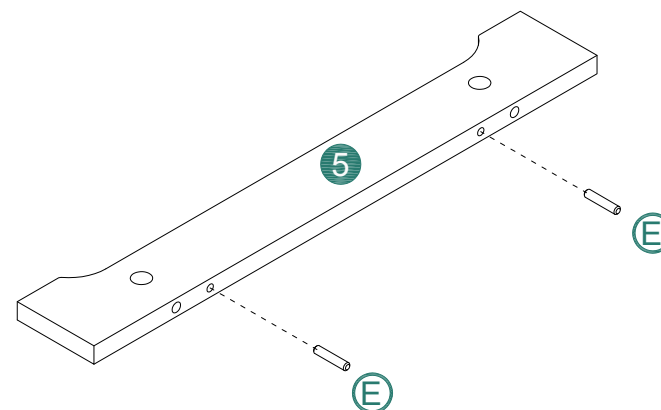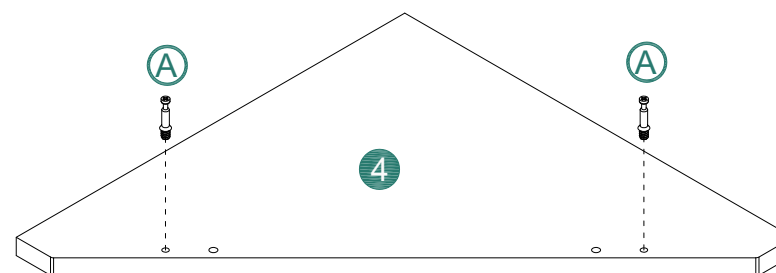

14

ASSEMBLY INSTRUCTIONS



12

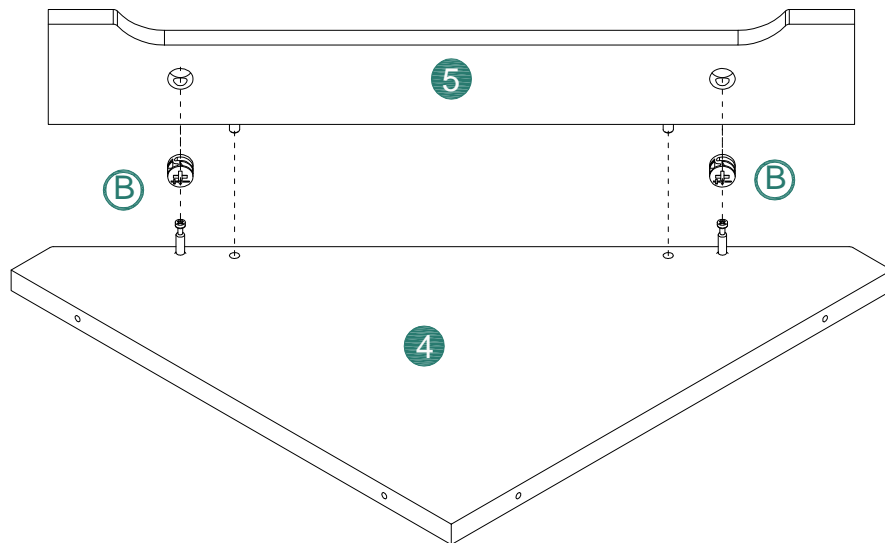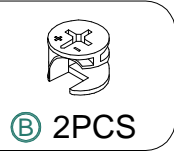

15

ASSEMBLY INSTRUCTIONS


13

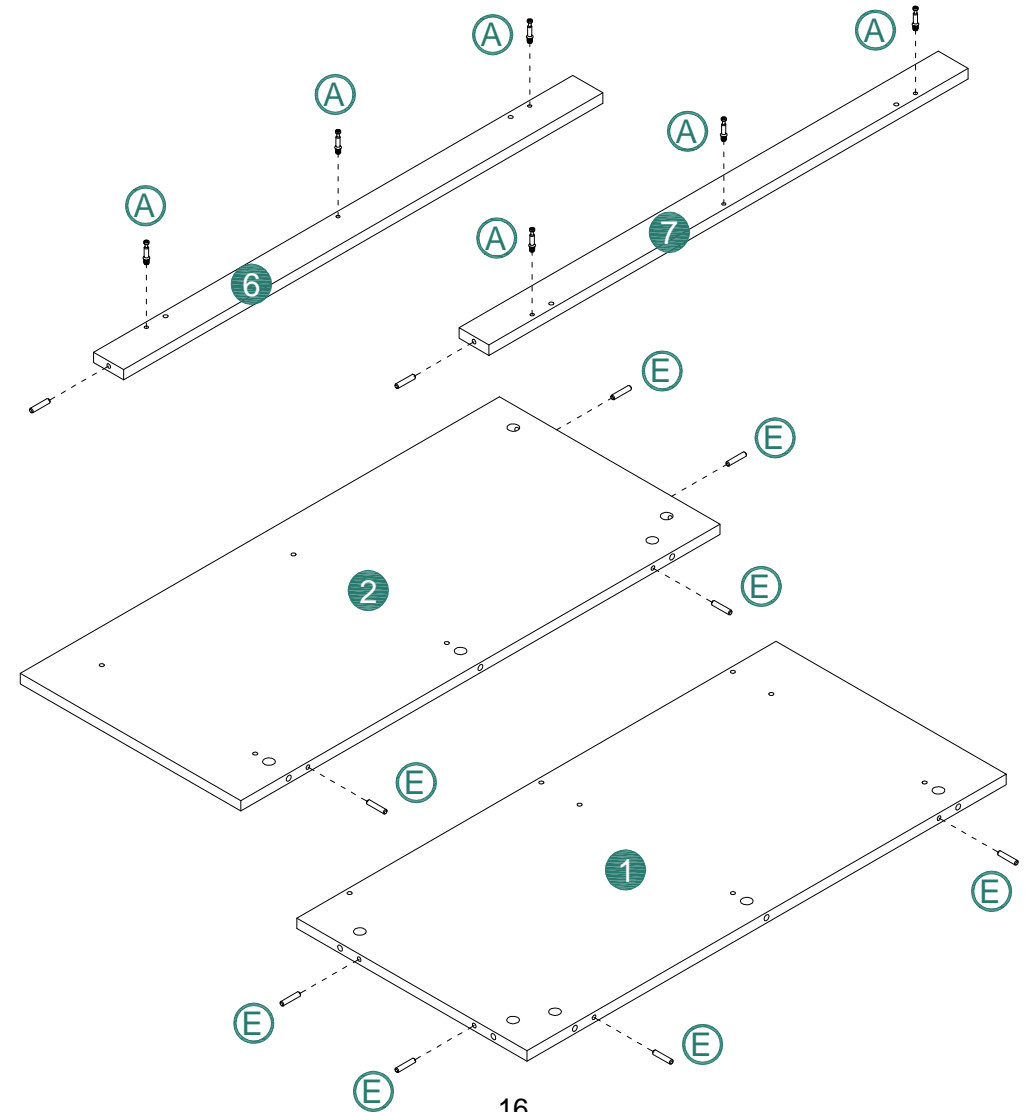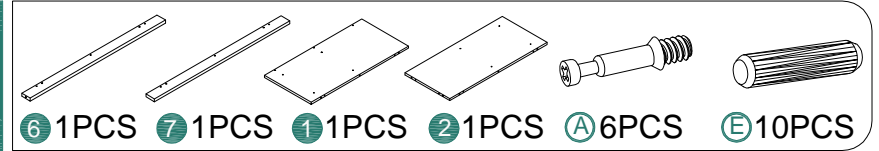

16

ASSEMBLY INSTRUCTIONS



14

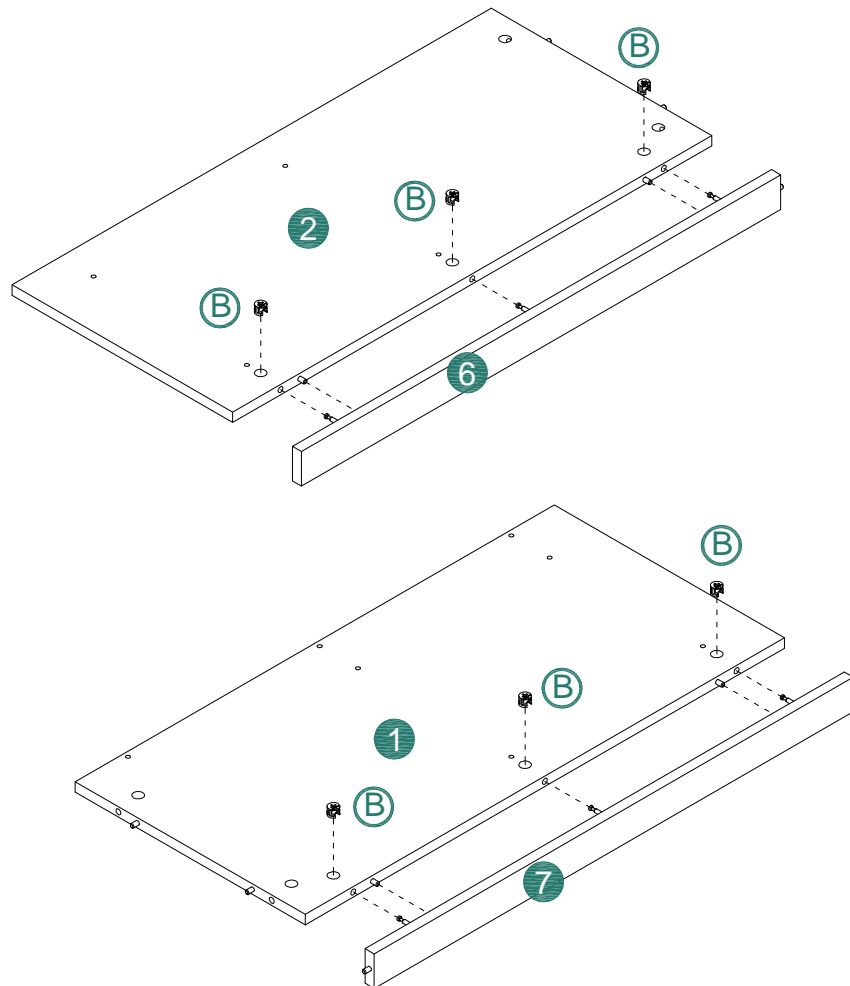

17

ASSEMBLY INSTRUCTIONS


15

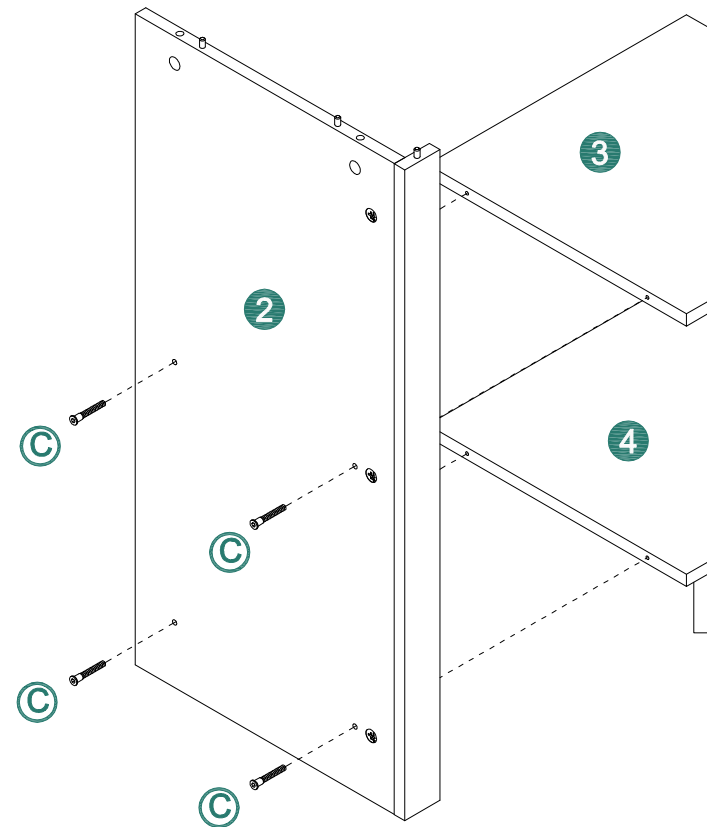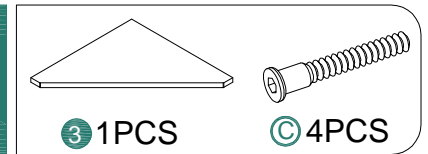

18

ASSEMBLY INSTRUCTIONS


16

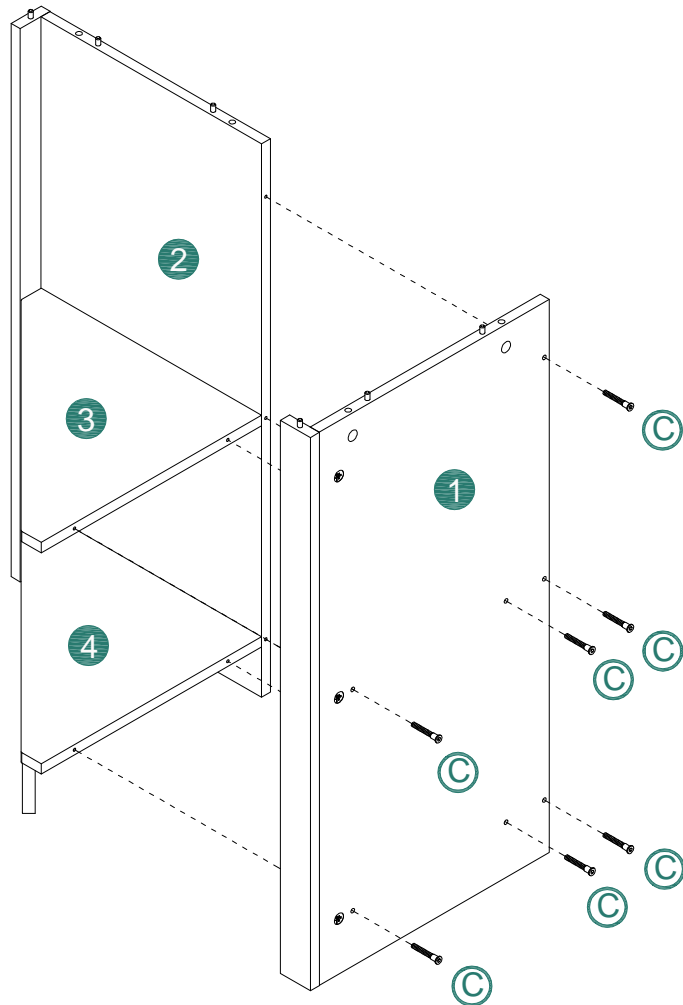

19

ASSEMBLY INSTRUCTIONS


17

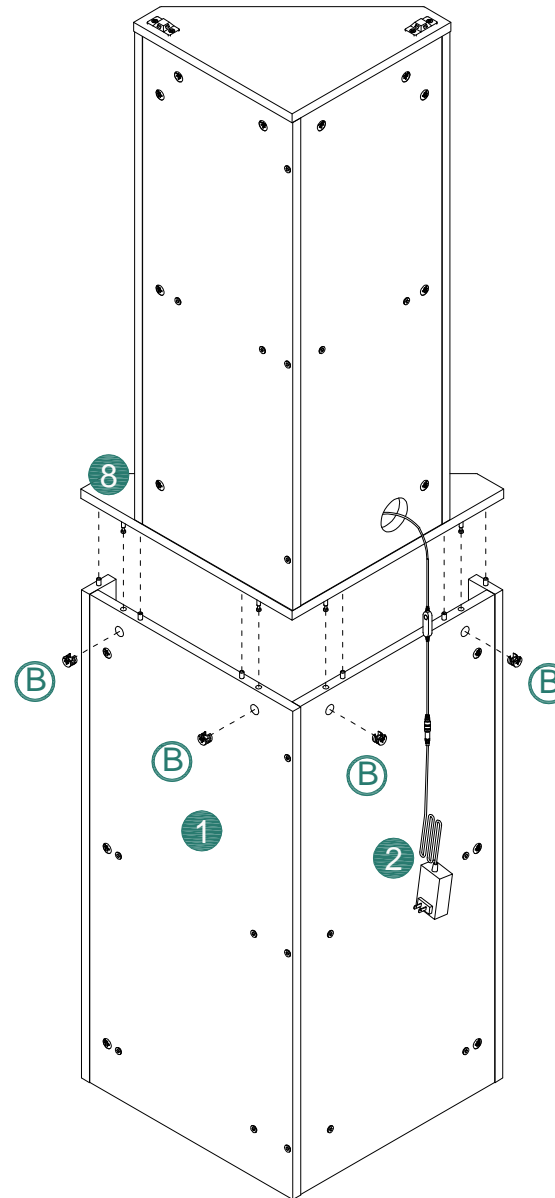

20

ASSEMBLY INSTRUCTIONS

18




(F) 4PCS



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.


1. Place unit in desired location.
2. Locate wall stud nearest unit center.
3. On wall, mark the center of the hole.
4. If a wall stud cannot be located mark hollow wall at unit center.

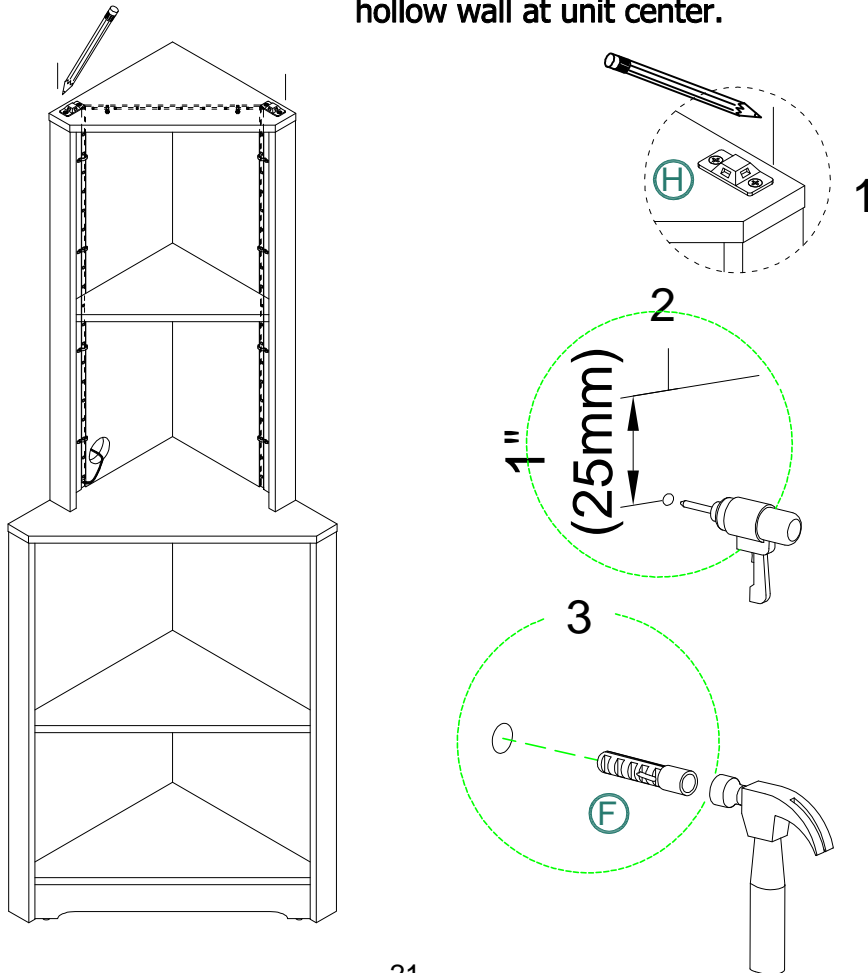


21

ASSEMBLY INSTRUCTIONS

19



(G) 4PCS




(H) 2PCS

Nylon Cable Tie


(J) 2PCS

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert strap thru bracket attached to wall.
3. Pull lightly til strap stops. Assembly is complete.

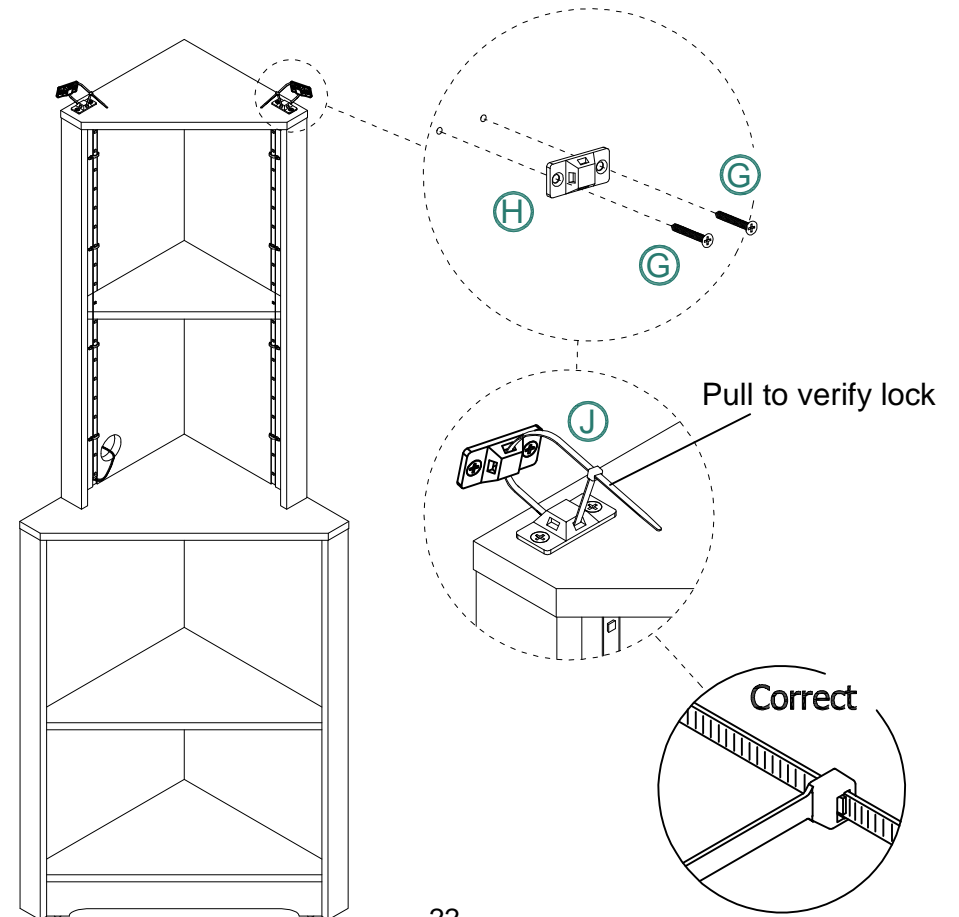

22

20

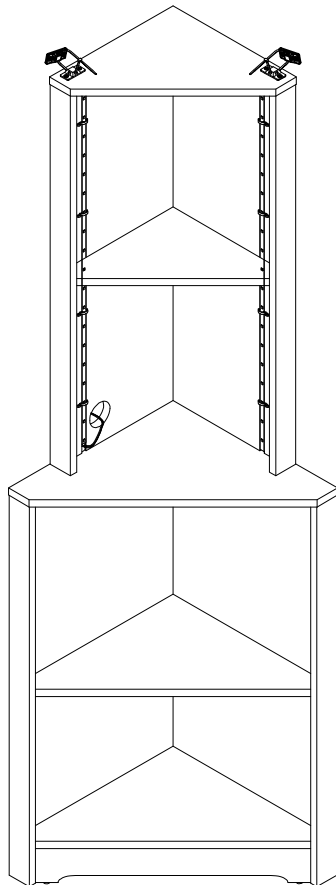

Final Assembly