






ASSEMBLY INSTRUCTION


ITEM: 60001-211/60001-221

NO	PART LIST		QTY
1		BACK REST	1PC
2		CUSHION SEAT	1PC
3		LEG	2PC
NO	HARDWARE LIST		QTY
A		JCBC SCREW M6 X 40mm	1PC
B		JCBC SCREW M6 X 60mm	4PCS
C		JCBC SCREWS M6 x 80mm	4PCS
D		SPRING WASHER M6 x 13mm	9PCS
E		FLAT WASHER M6 x 19mm	9PCS
F		L - KEY M4 X 65mm	1PC



STEP 1

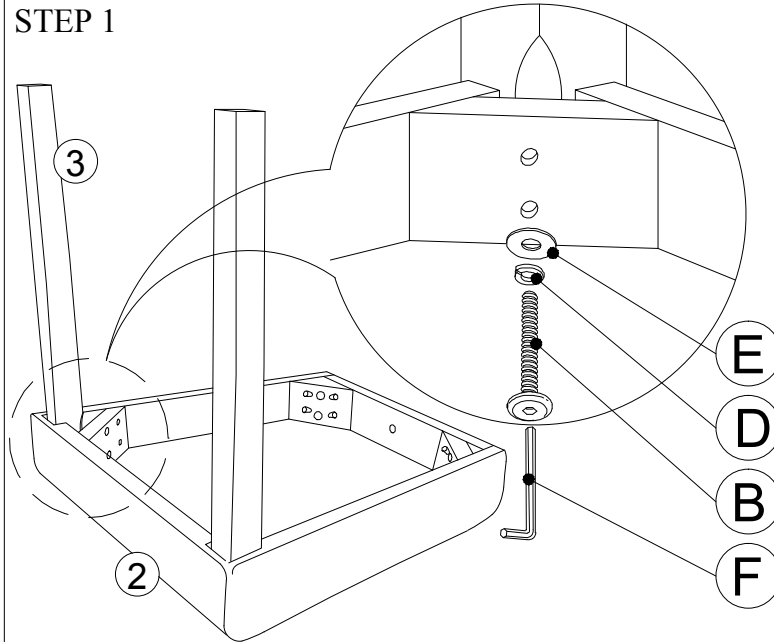

STEP 2

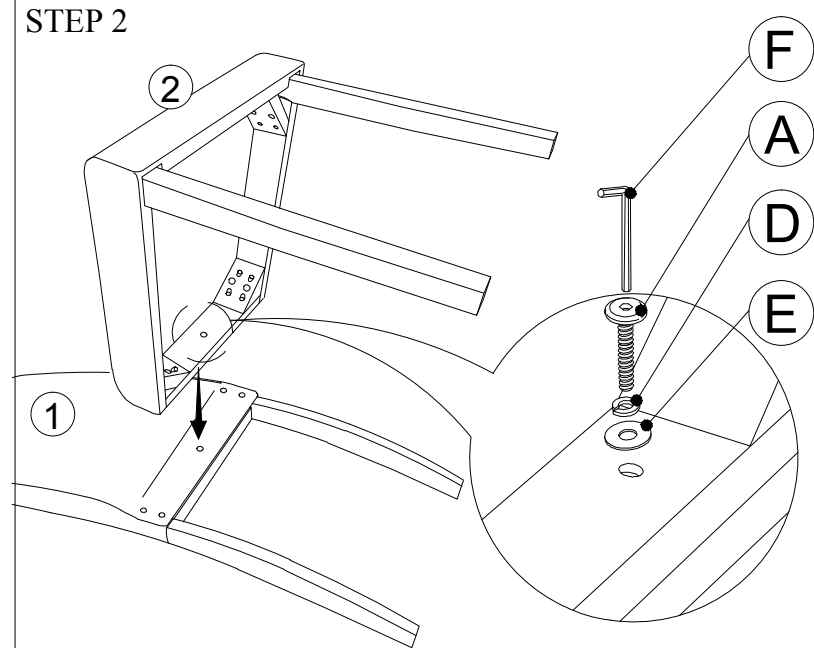

STEP 3

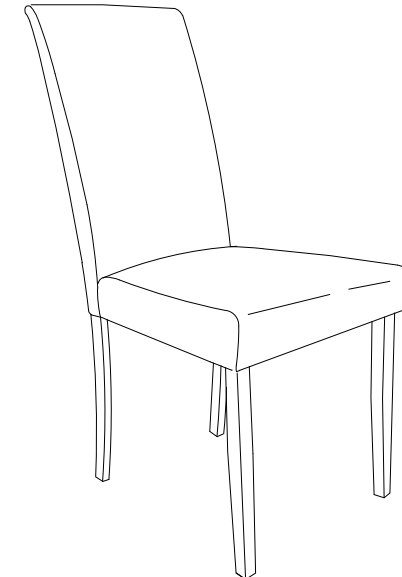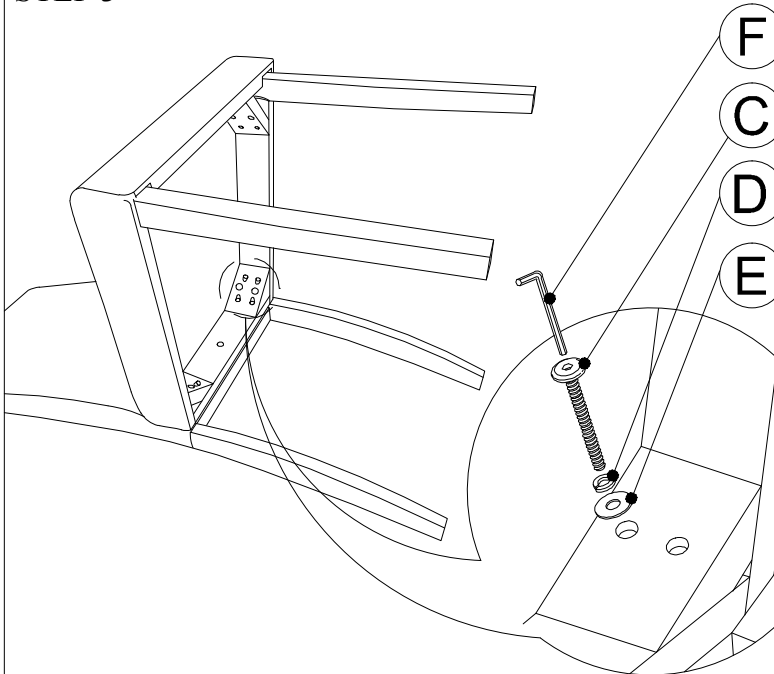

ASSEMBLY
COMPLETED

NOTE: AFTER A FEW DAYS OF ASSEMBLY, IT WILL HAVE ACCLIMATIZED TO ENVIRONMENT. PLEASE TIGHTEN ALL HARDWARE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.