

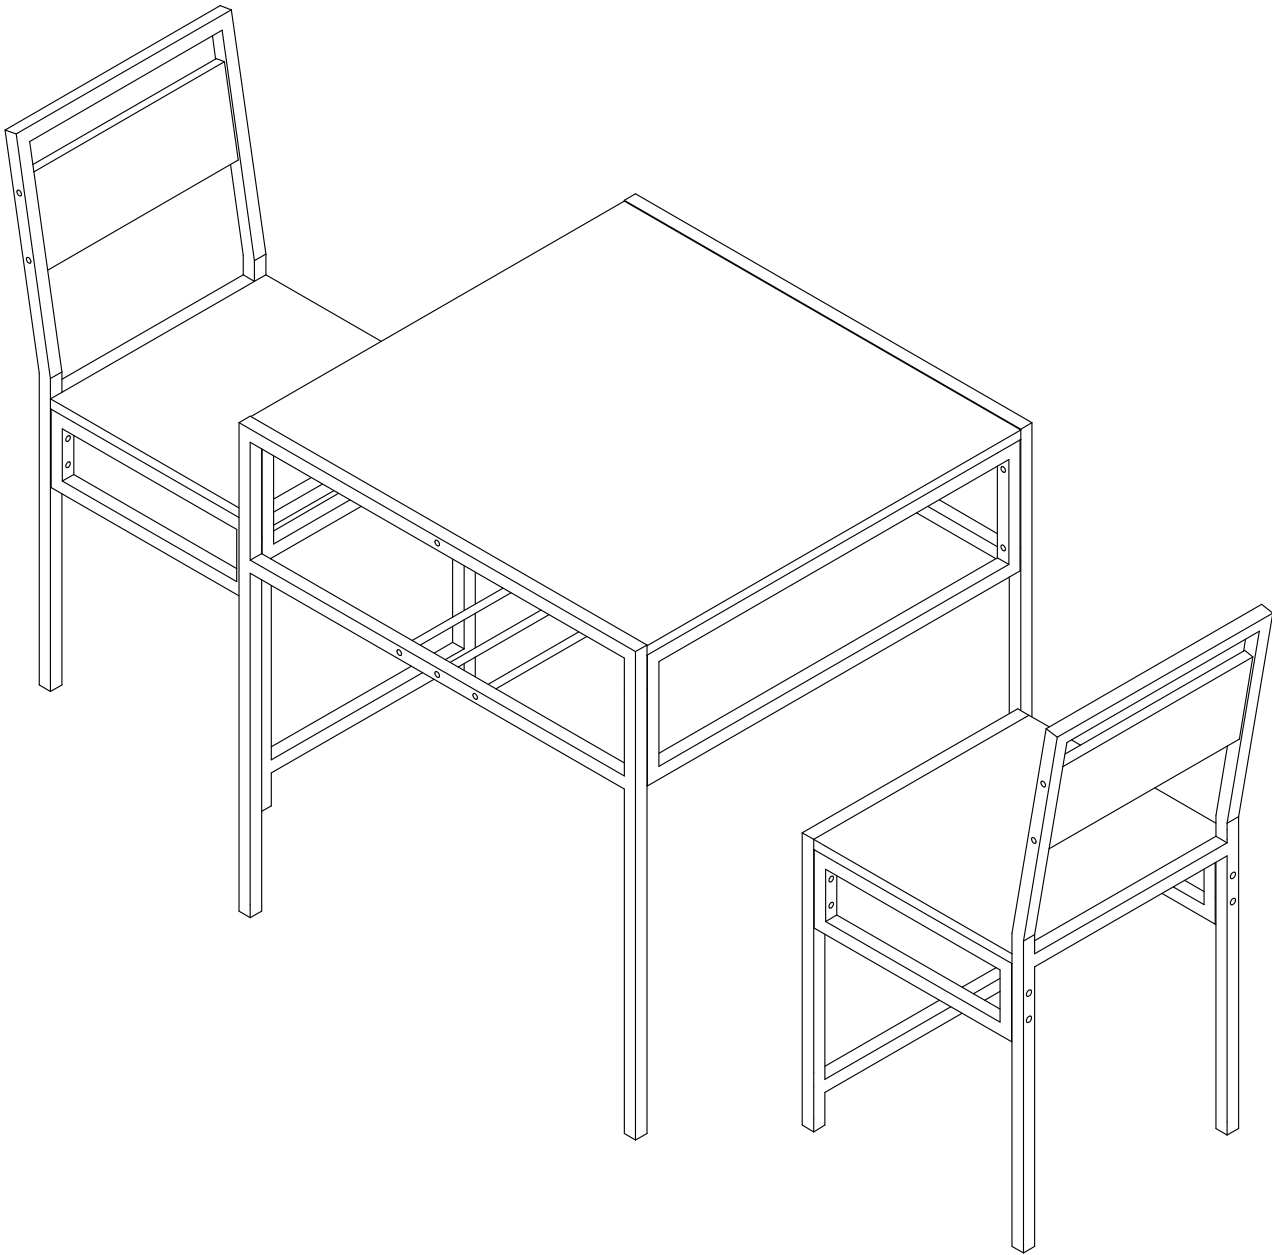
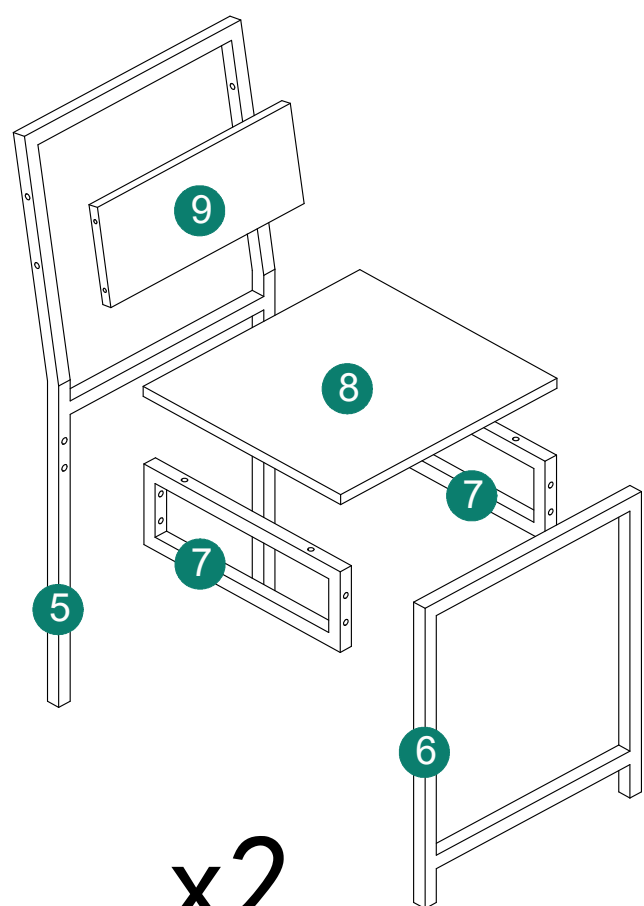
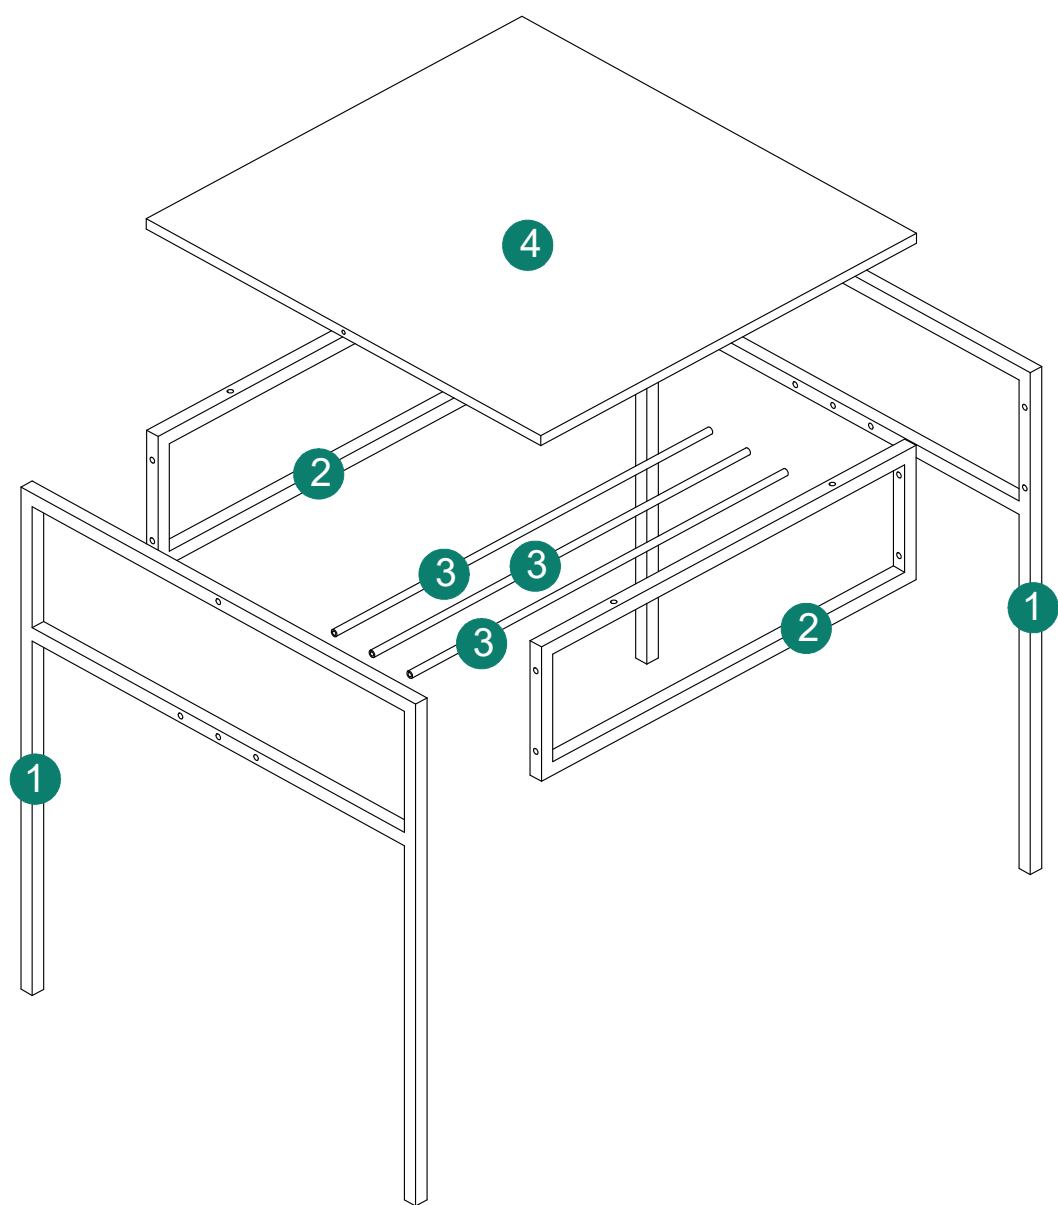
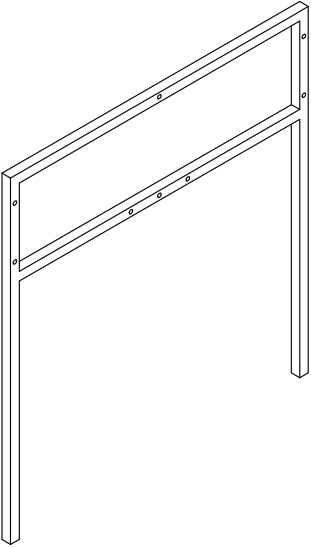
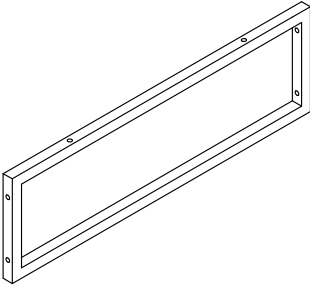
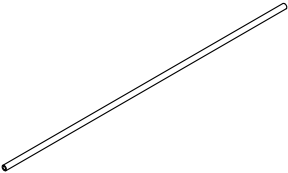
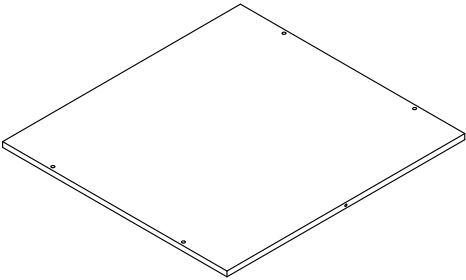
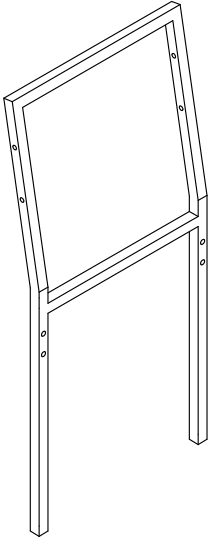
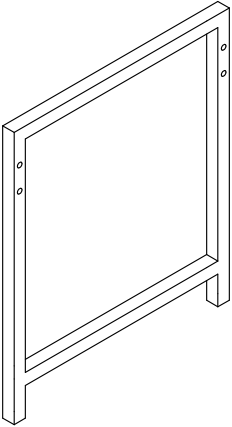
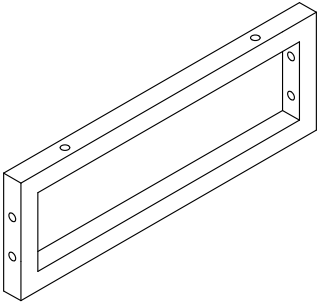
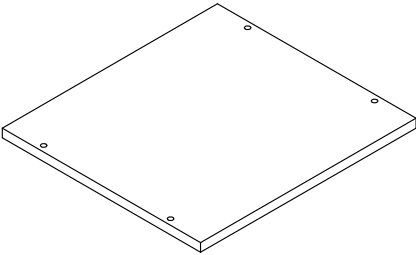
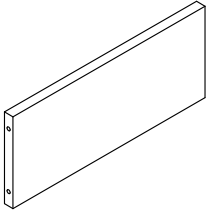
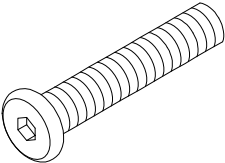


ASSEMBLY INSTRUCTION

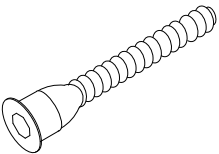


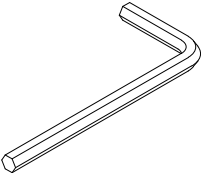


x2

1  2PCS	2  2PCS	3  3PCS
4  1PCS	5  2PCS	6  2PCS
7  4PCS	8  2PCS	9  2PCS
A  M6*30mm 42+3PCS	B  M7*48mm 10+1PCS	 4mm

1




① 2pcs




② 2pcs




Ⓐ 8pcs

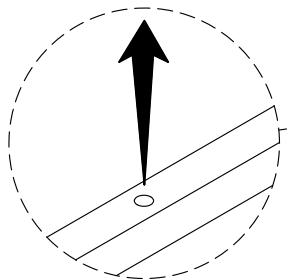

Please note that these holes are oriented upwards.

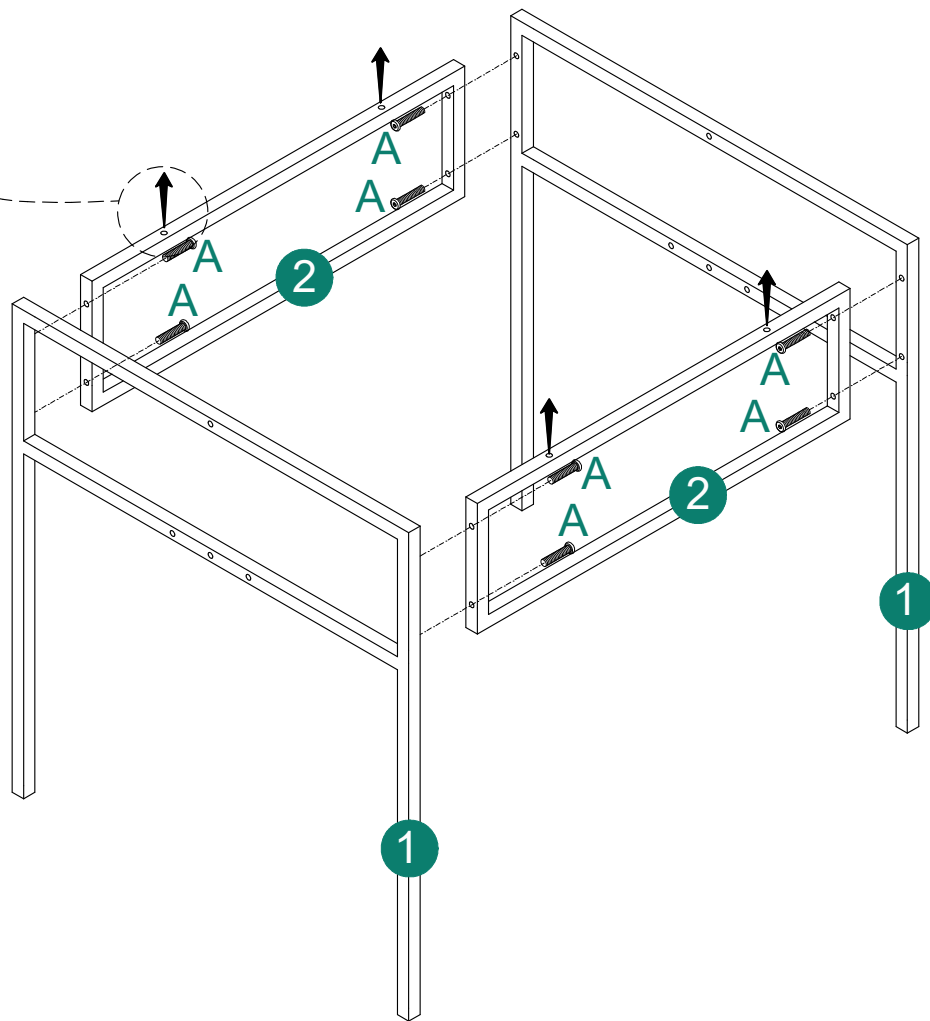


2




③ 3pcs



Ⓐ 6pcs

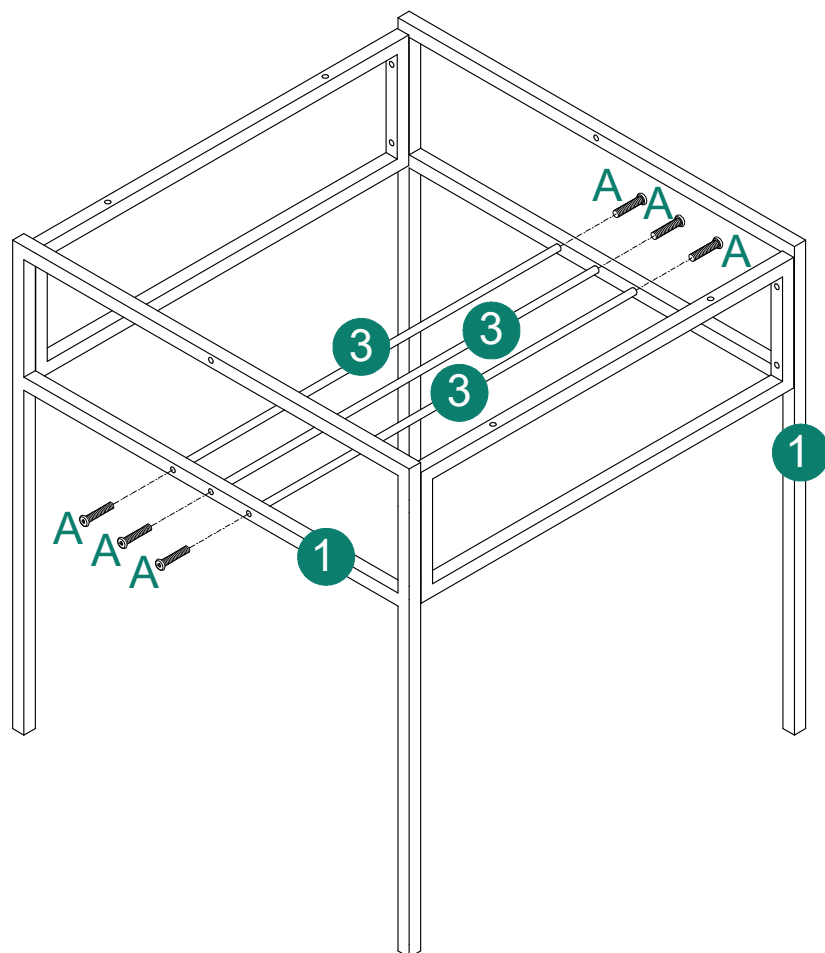


3

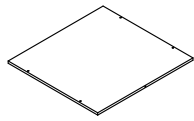


④ 1pcs




Ⓐ 4pcs

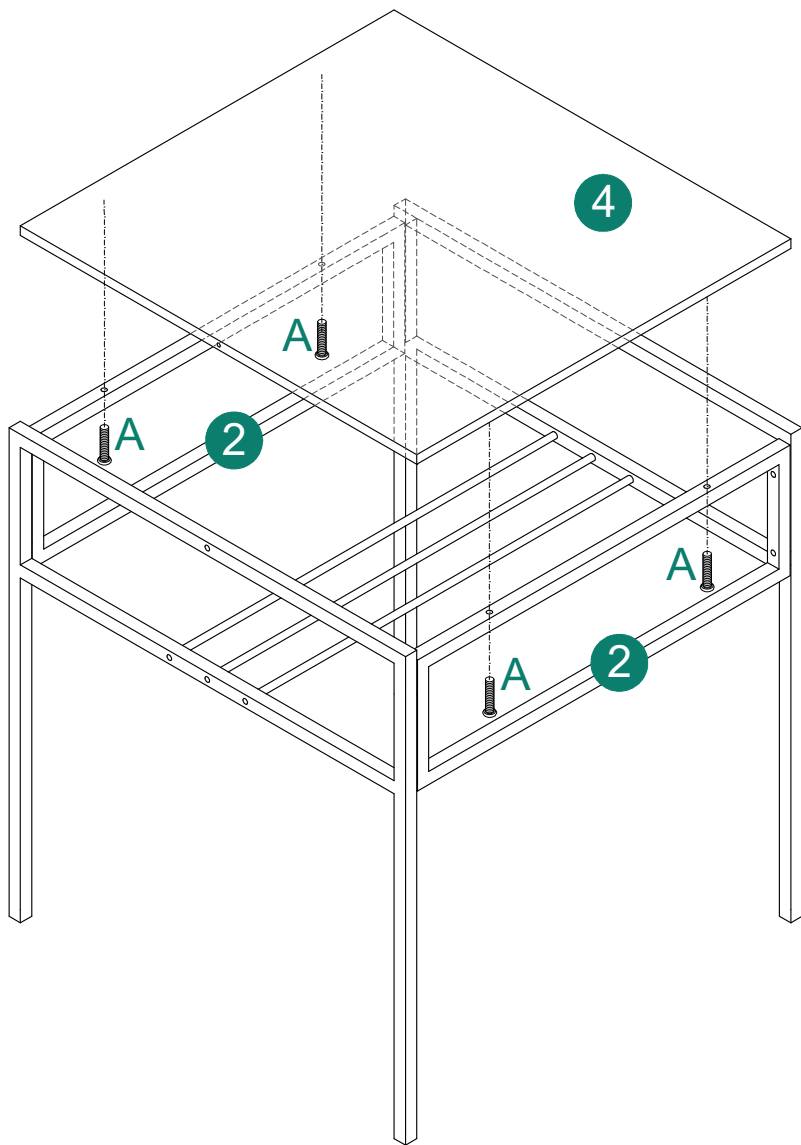

4




Ⓑ 2pcs

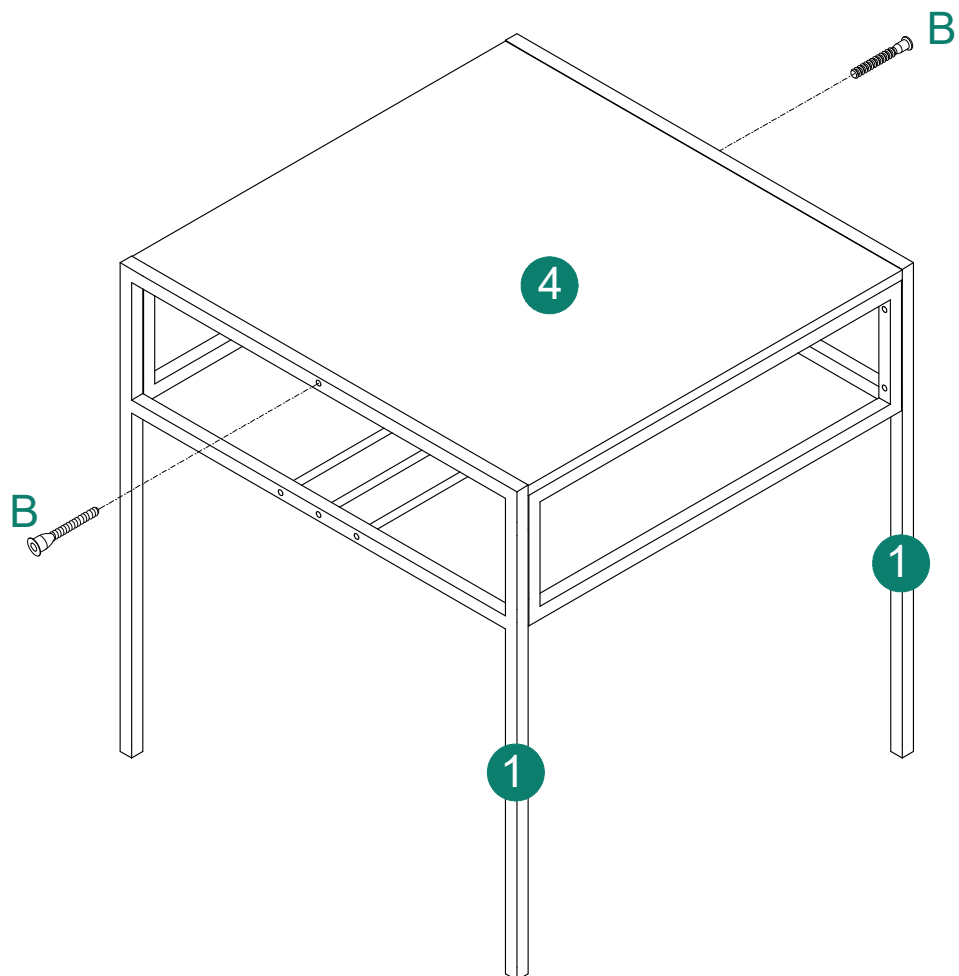

5


- ⑤ 2pcs
- ⑥ 2pcs
- ⑦ 4pcs
- Ⓐ 16pcs

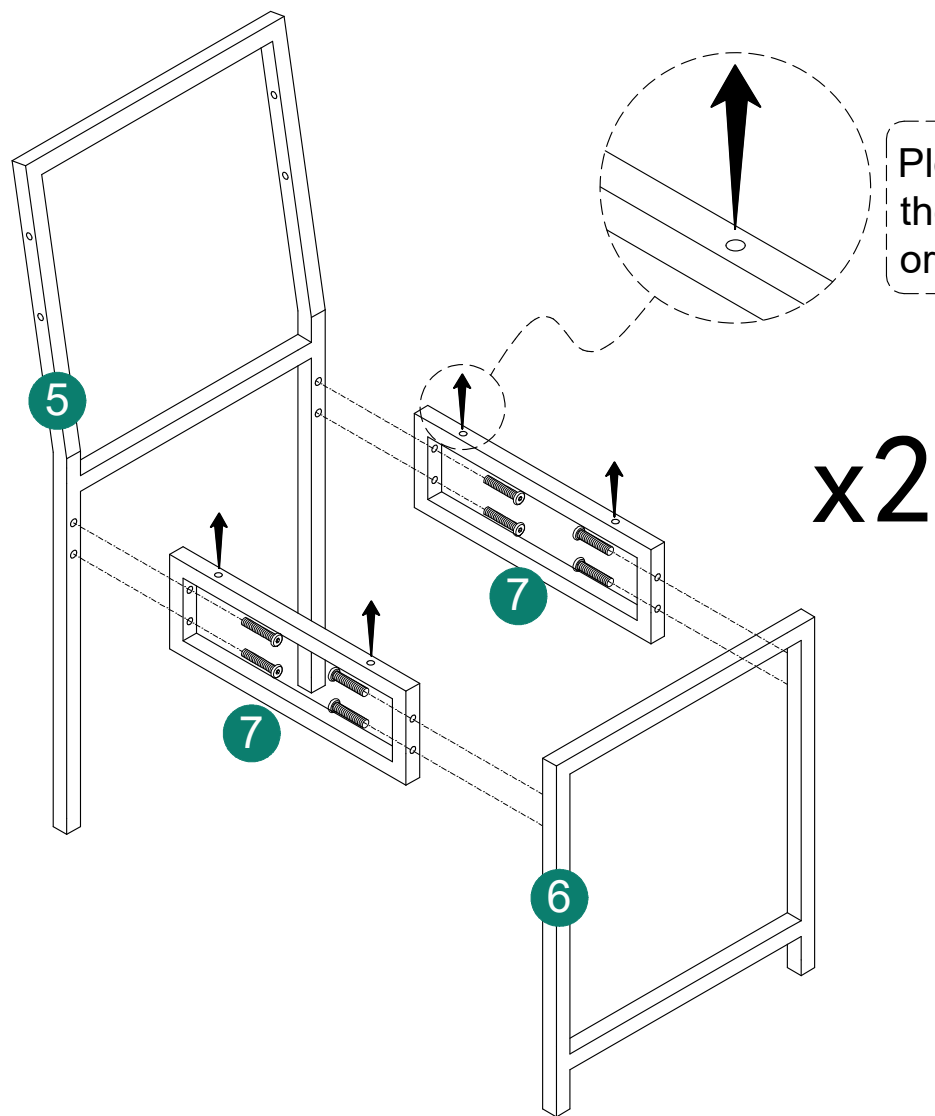


Please note that these holes are oriented upwards.

6

- ⑨ 2pcs
- Ⓑ 8pcs

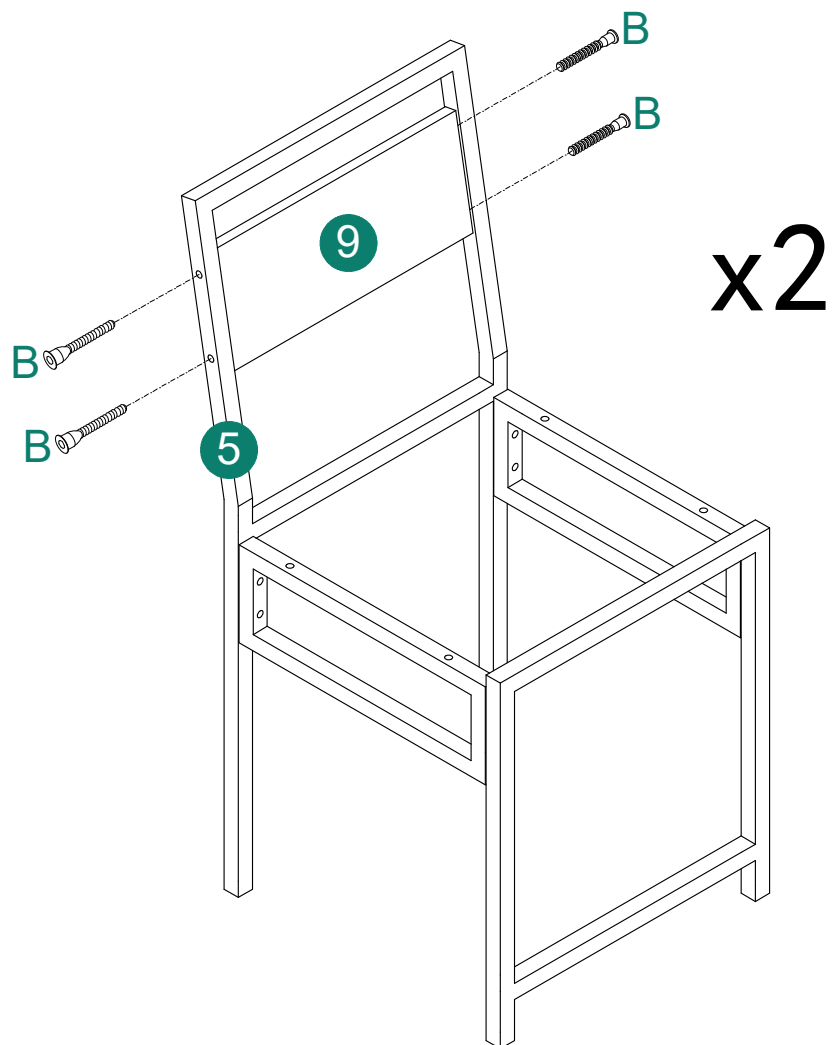


7




⑧ 2pcs



Ⓐ 8pcs

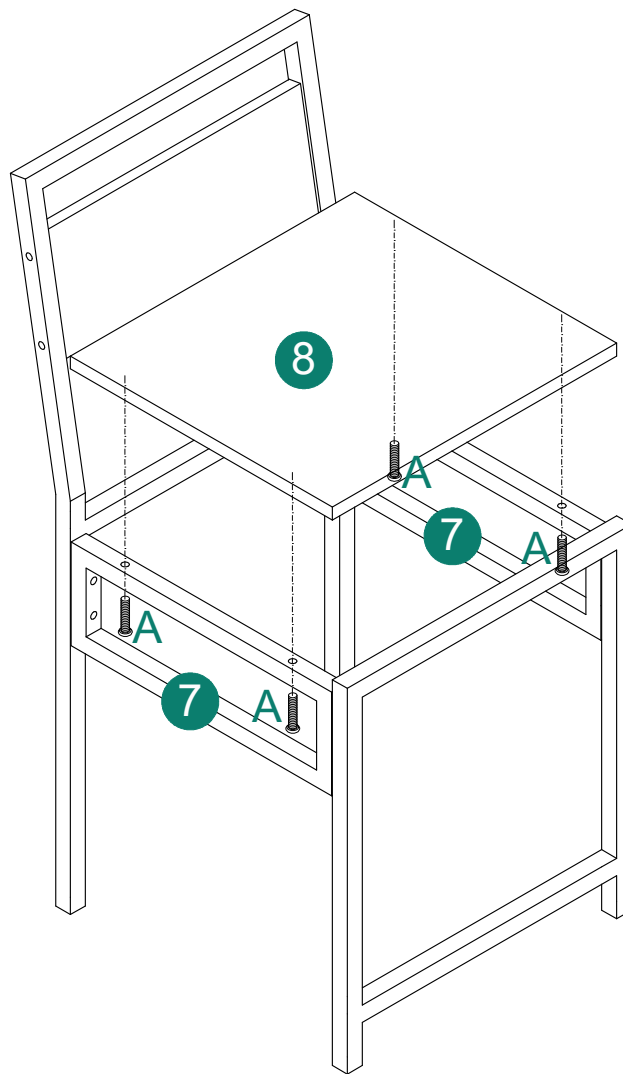

x2

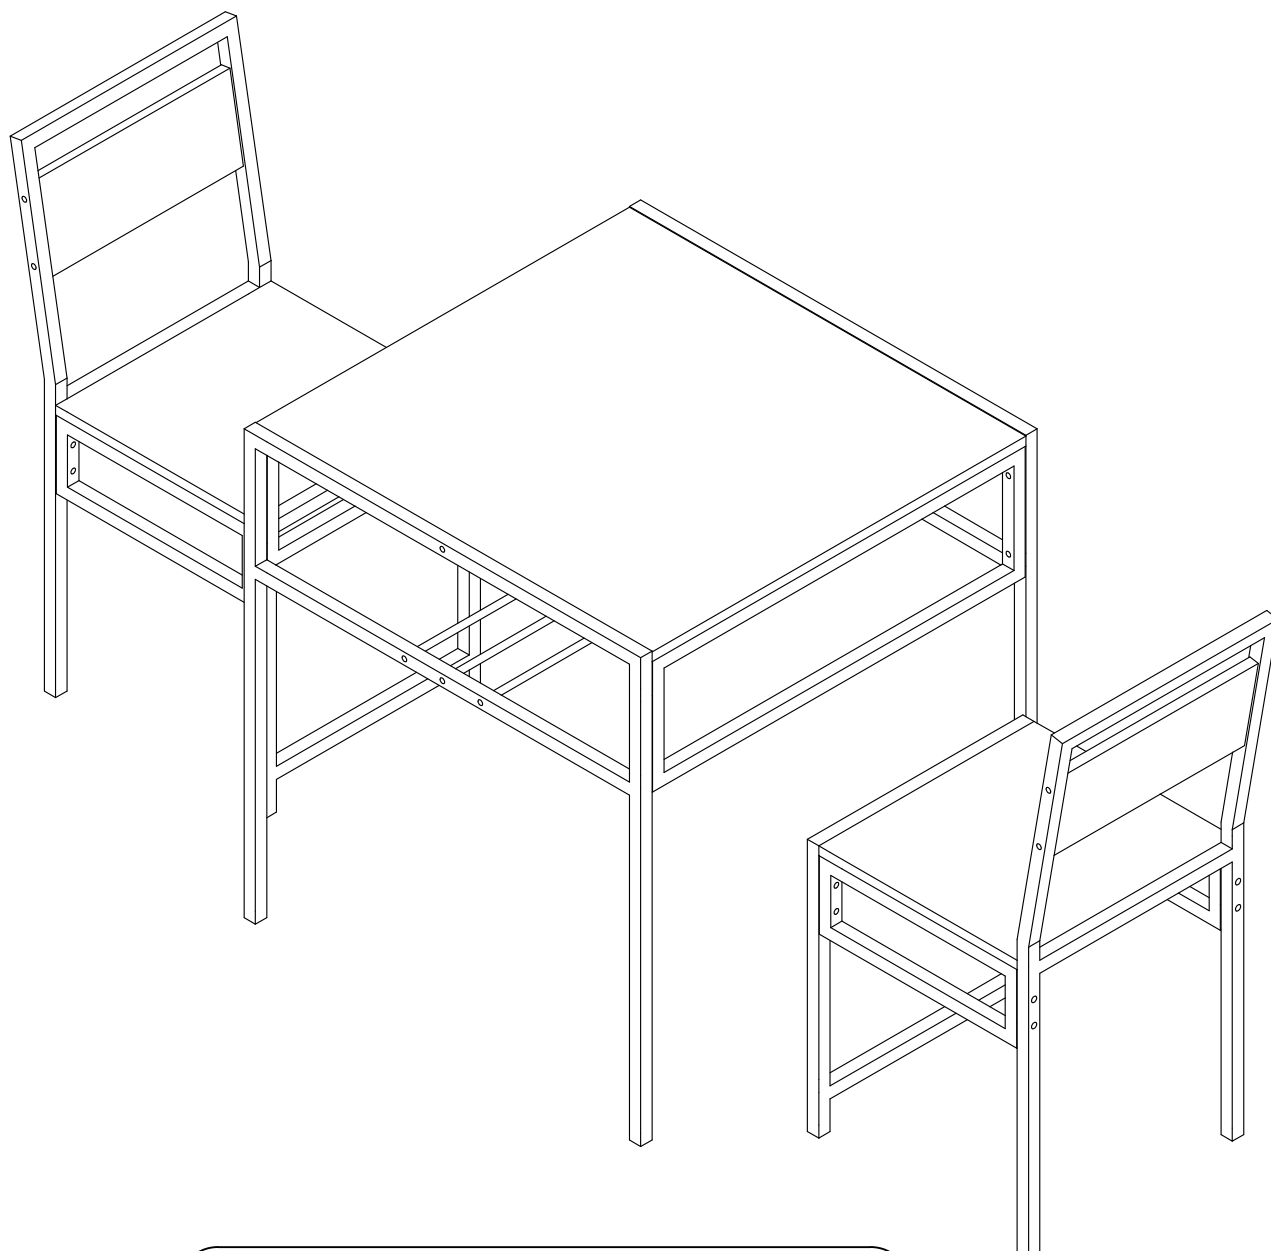

Installation Completed