

## Item # : LCELBAAGDU26 / LCELBADRS26 Elle Counter Height Non Swivel Stool LCELBAAGDU30 / LCELBADRS30 Elle Bar Height Non Swivel Stool







Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.






Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

**\* Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. \***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST		
NO.	COMPONENT	QTY.
A	Back Panel 	1 pc
B	Seat Base 	1 pc
C	Upper Leg 	1 pc
D	Lower Leg 	1 pc
E	Footrest Ring 	1 pc
F	Cushion Seat 	1 pc

HARDWARE LIST		
NO.	COMPONENT	QTY.
1	JCBC Bolt M6 x 45mm 	14 pcs
2	1/4" Spring Washer 	14 pcs
3	1/4" x 16 x 2mm Flat Washer 	10 pcs
4	CB Screw M4 x 32mm 	4 pcs
5	Allen Key M4 x 65mm 	1 pc


\* Phillips screwdriver not included \*

### Step 1

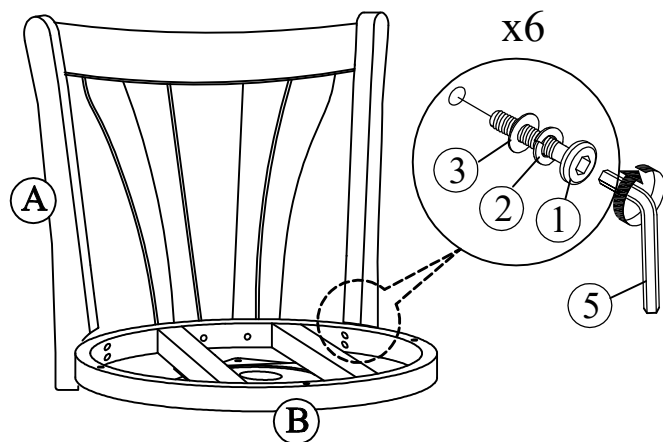


- 1) Attach Seat Frame (B) to the Chair Back (A) by using 6pcs JCBC bolts (1) , 6pcs spring washers (2) and 6pcs flat washers (3). Use Allen Key (5) to secure . Fully tighten all the bolt.

### Step 2

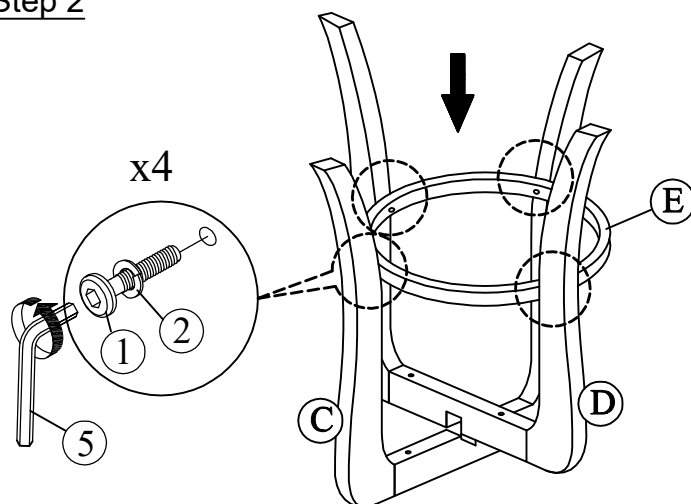


- 1) Attach Lower Leg (D) across Upper Leg (C) to complete the half-lap joint.
- 2) Attach Footest Ring (E) to the Legs by using 4pcs JCBC bolts (1) and 4pcs Spring Washers (2). By using Allen Key (5) to secure. Fully tighten all bolts.

### Step 3

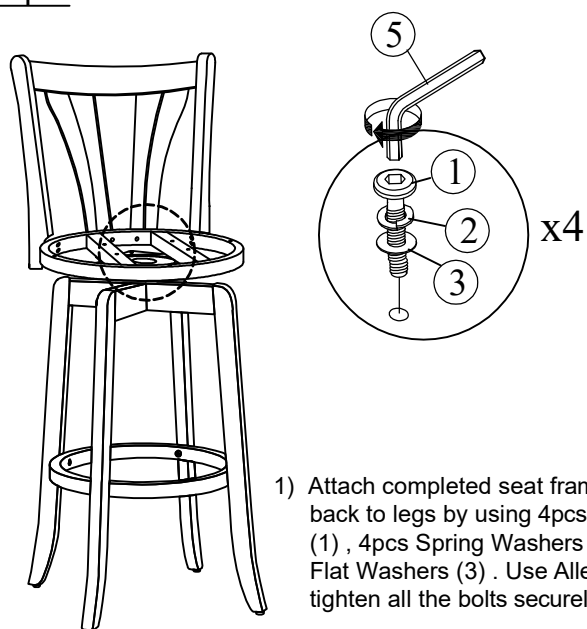

- 1) Attach completed seat frame and chair back to legs by using 4pcs JCBC bolts (1) , 4pcs Spring Washers (2) , 4pcs Flat Washers (3) . Use Allen Key (5) to tighten all the bolts securely.

### Step 4

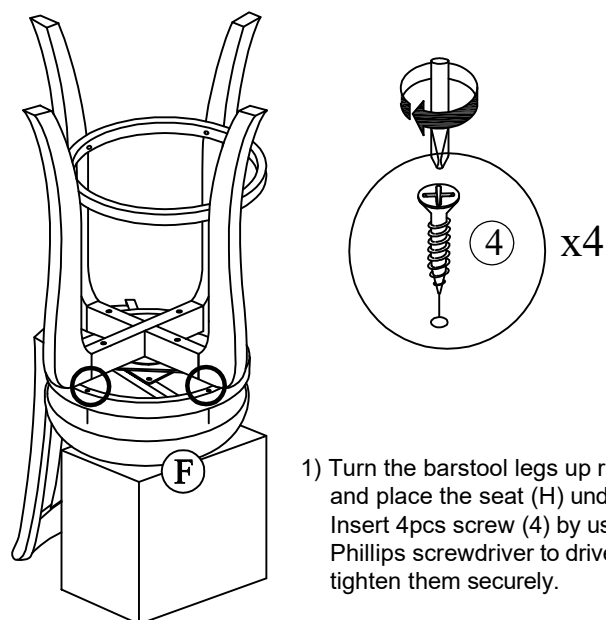

- 1) Turn the barstool legs up right side and place the seat (H) underneath. Insert 4pcs screw (4) by using Phillips screwdriver to drive and tighten them securely.

