


Console Table with 3 Drawers


Installation Instruction

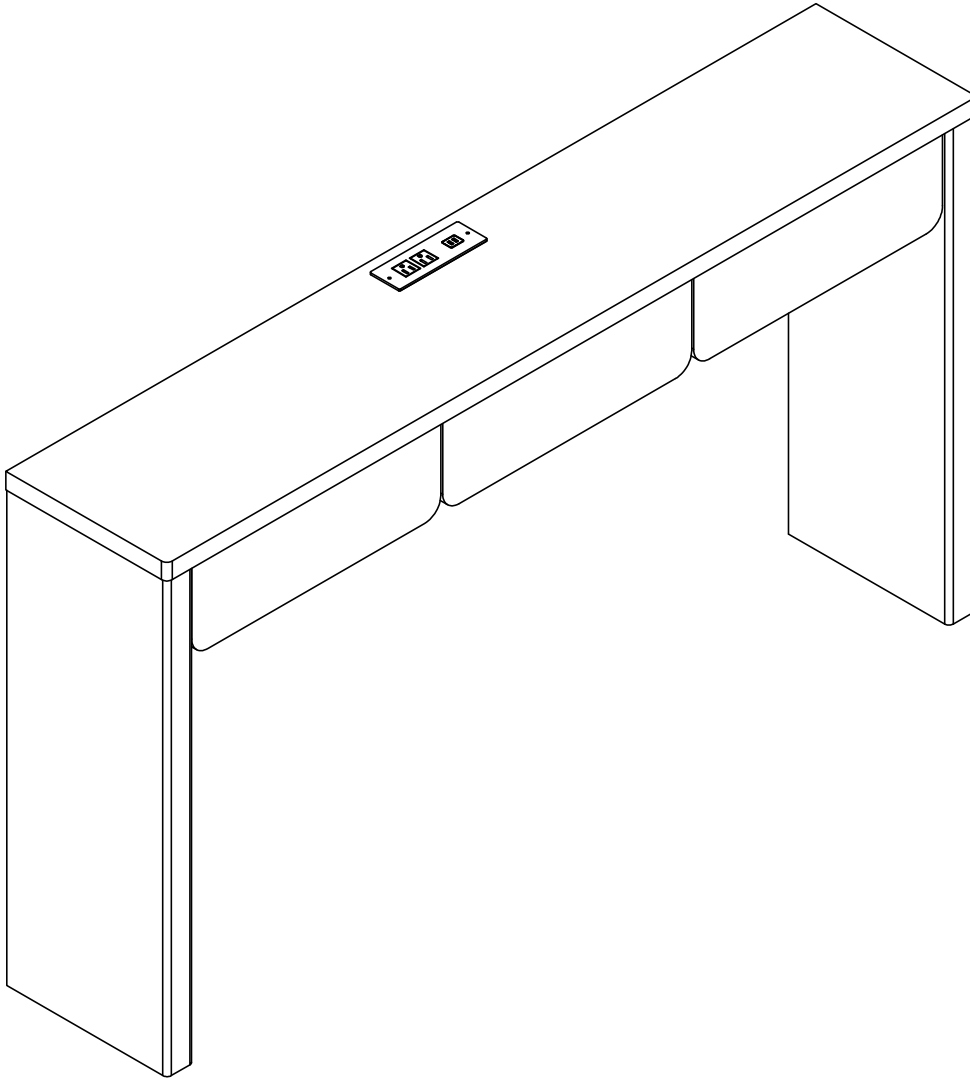

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35

lbs per

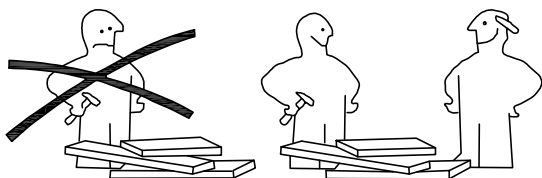


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	32
B	Cam Lock 15X10MM	32
C	Wooden Dowel M8X30MM	10
D	Screw M4X40MM	20
E	Screw M3.5X14MM	2
F	Hole position sticker	32
G	L-shaped metal sheet	2
H	Two-way rail	4
I	Shock absorbing pad 50*50	4
J	Anchor	2
K	Screw M3.5X12MM	14
L	Extension cord	1
M	Angled ironl	2
N	Cam Bolt M4X10MM	6
O	Screw M3.0X16MM	8
P	Two-way rail	2
Q	Silicone pad	6

The Hardware

Ⓐ




Ⓑ



Ⓒ



Ⓓ



Ⓔ




Ⓕ



Ⓖ



Ⓗ



Ⓘ




Ⓙ




Ⓚ



Ⓛ

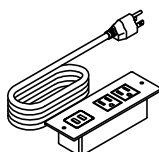

Ⓜ




Ⓝ



Ⓞ



Ⓟ



Ⓠ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully).





Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back board	1
6	Drawer side panel	1
7	Drawer side panel	1
8	Vertical middle panel	2
9	Drawer back board	3
10	Drawer bottom board	1
11	Drawer panel	1
12	Drawer panel	1
13	Drawer side panel	2
14	Drawer side panel	2
15	Drawer bottom board	1
16	Drawer panel	1




The Accessoriess

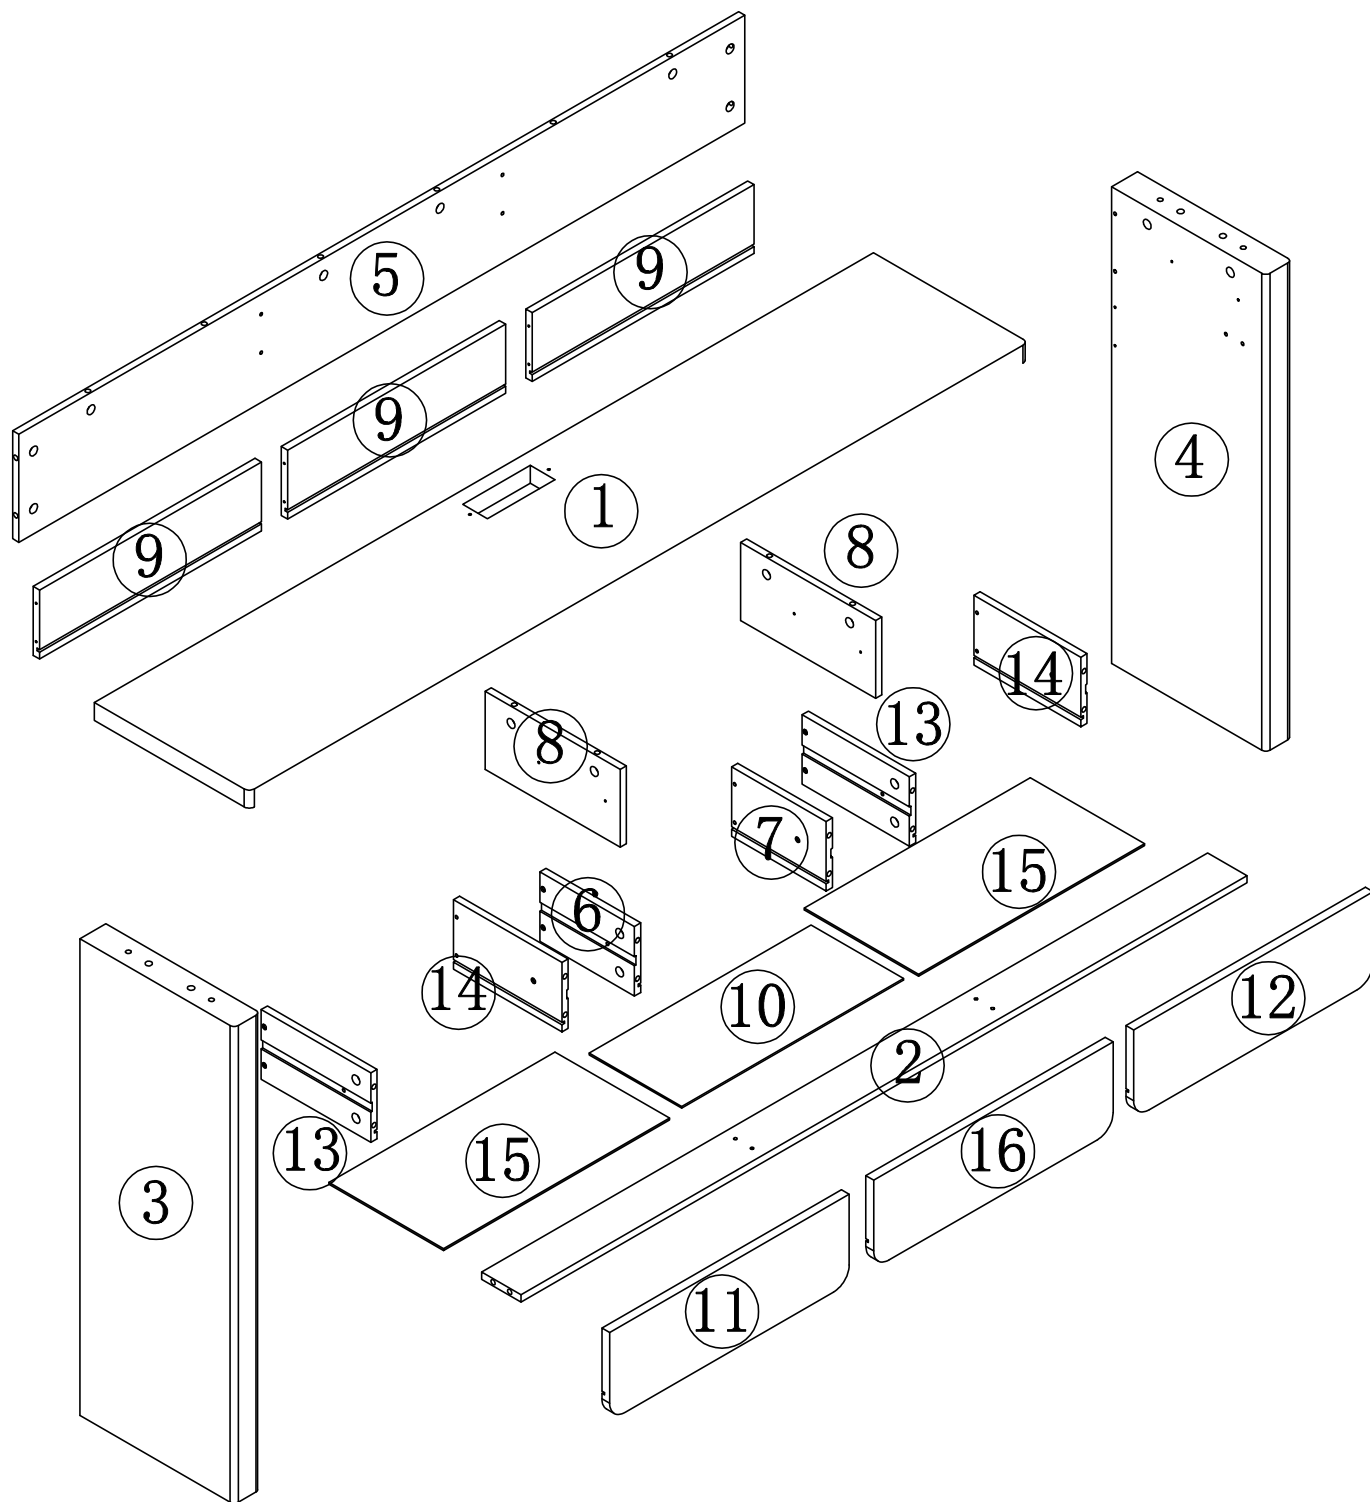

Step 1

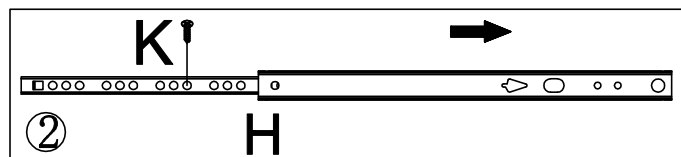
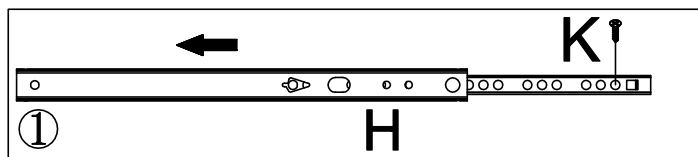
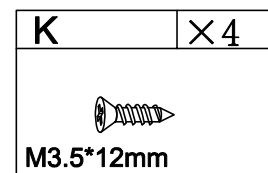
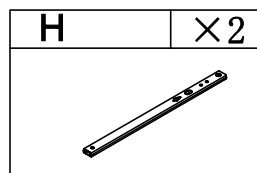


This step uses the numbered H sliding rail.


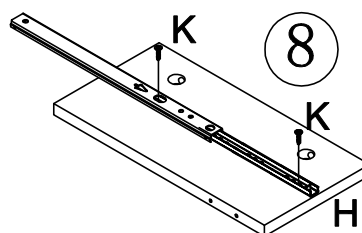
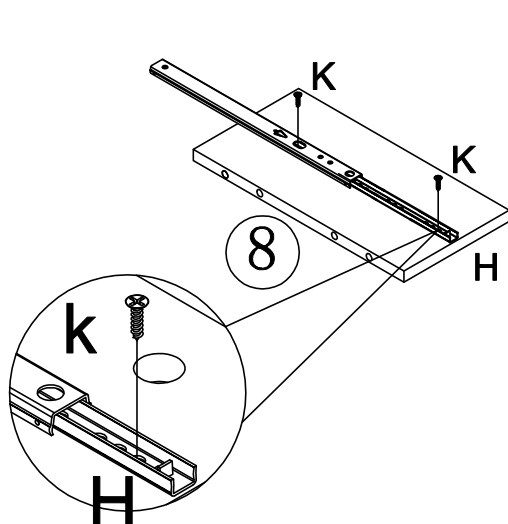



Pay attention to the direction of the holes.

Step 2

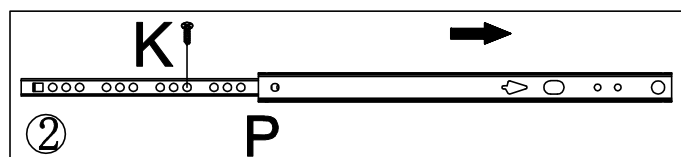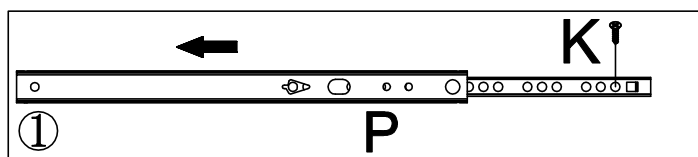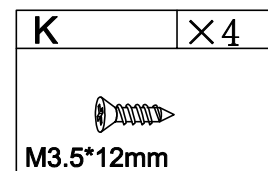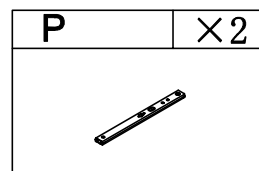



This step uses the numbered P sliding rail.

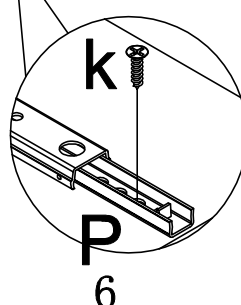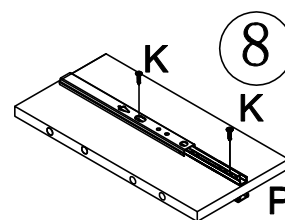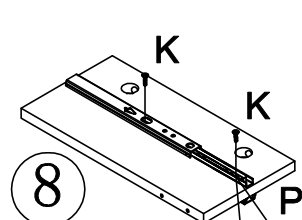


Pay attention to the direction of the holes.

Step 3

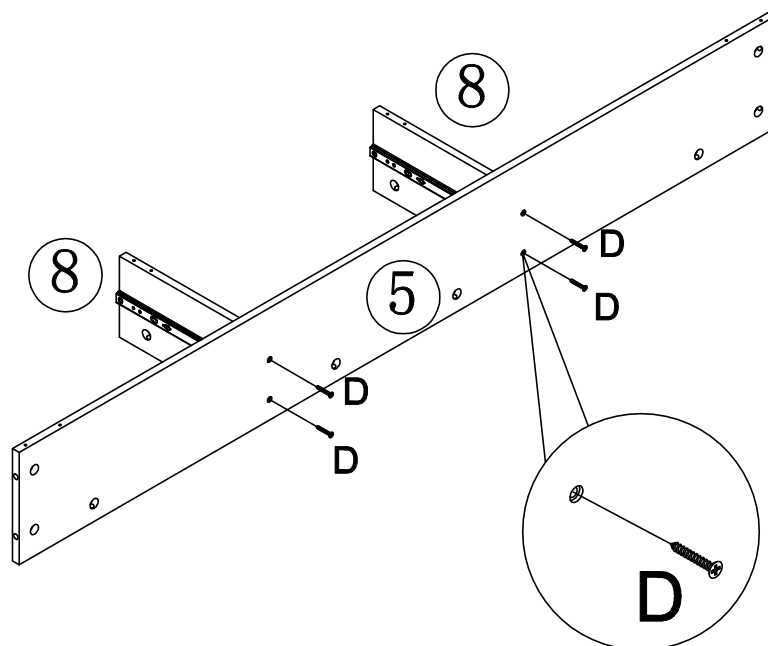



D	×4
	




When installing the No. 8 board, make sure to install the shorter slide rail side inward






Step 4

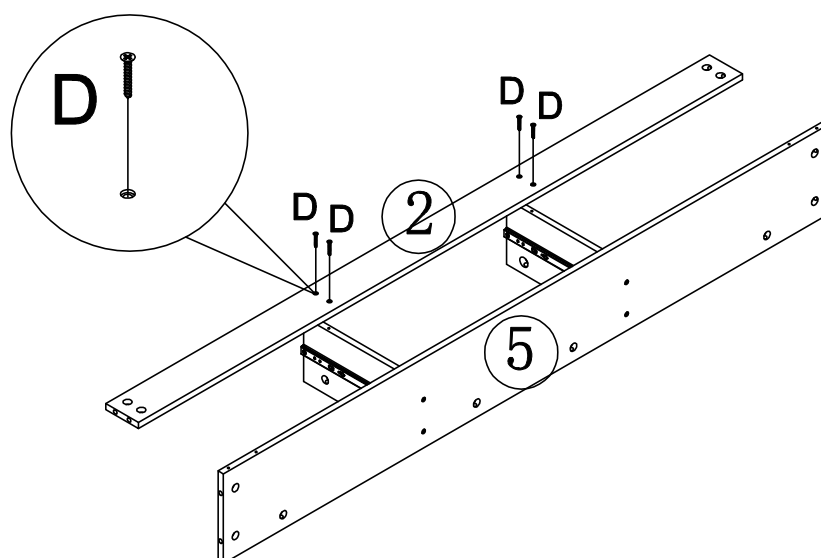



D	×4
	











Step 5

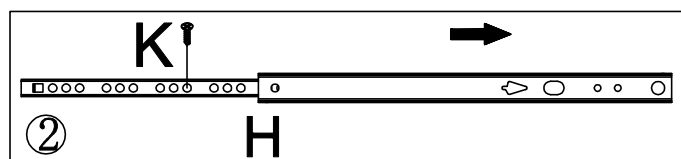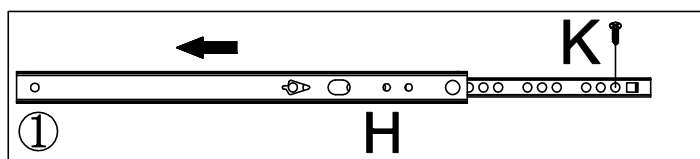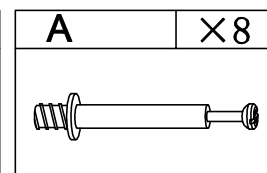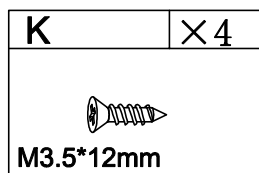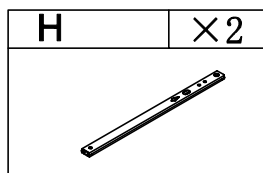



This step uses the numbered H sliding rail.

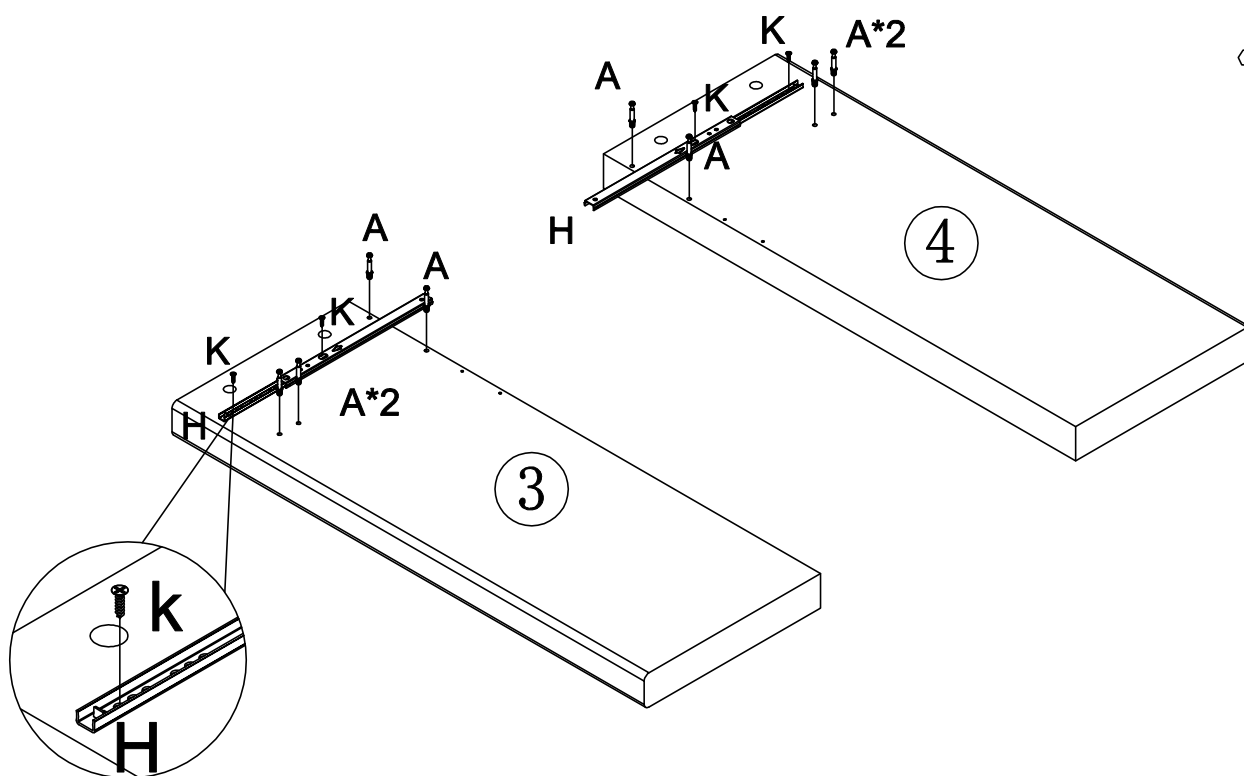


Step 6

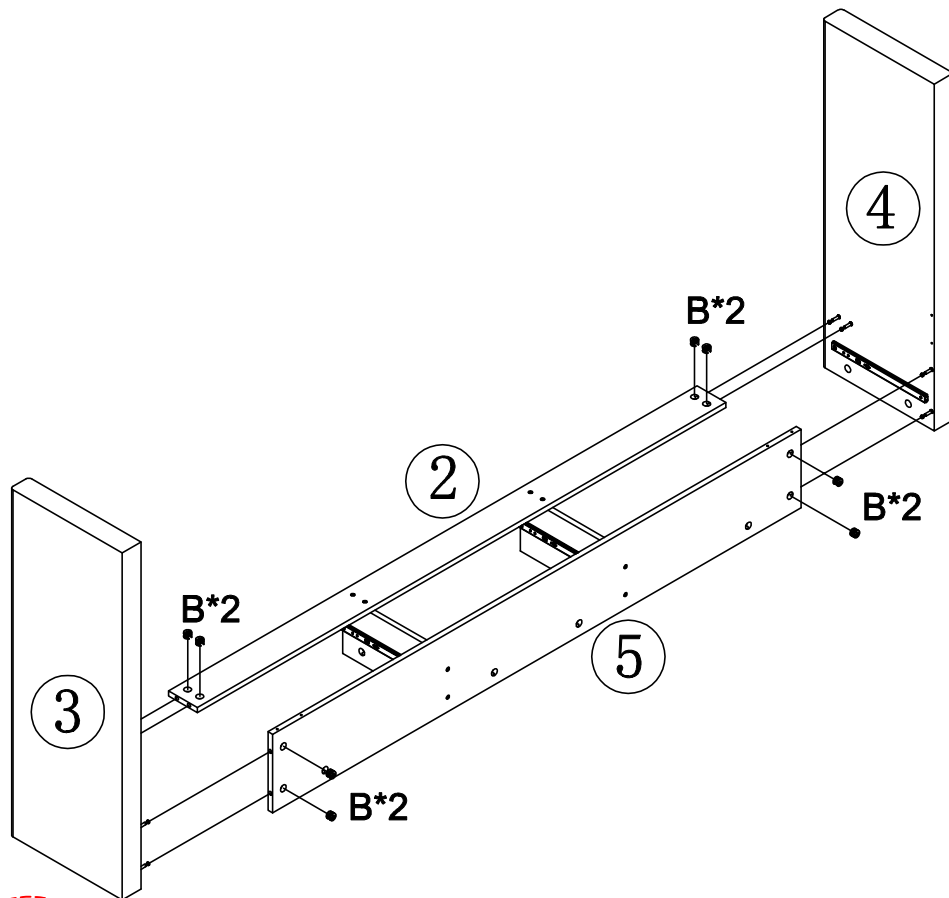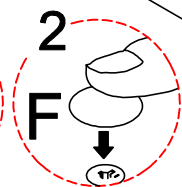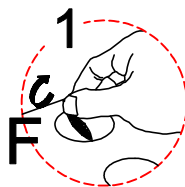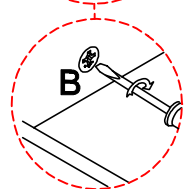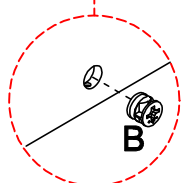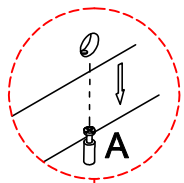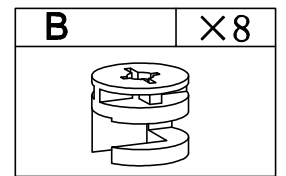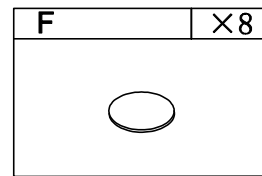


Step 7

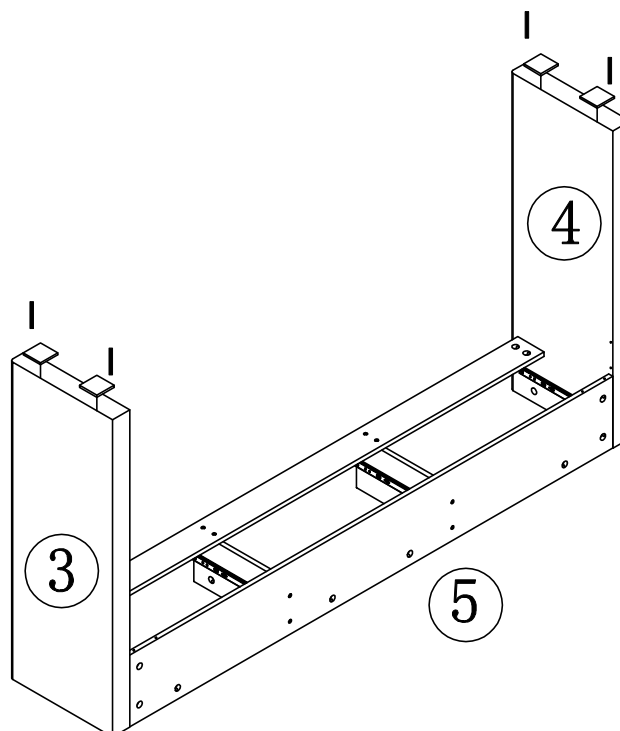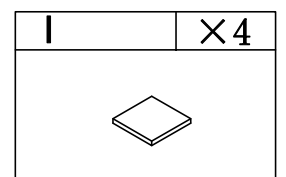


Step 8






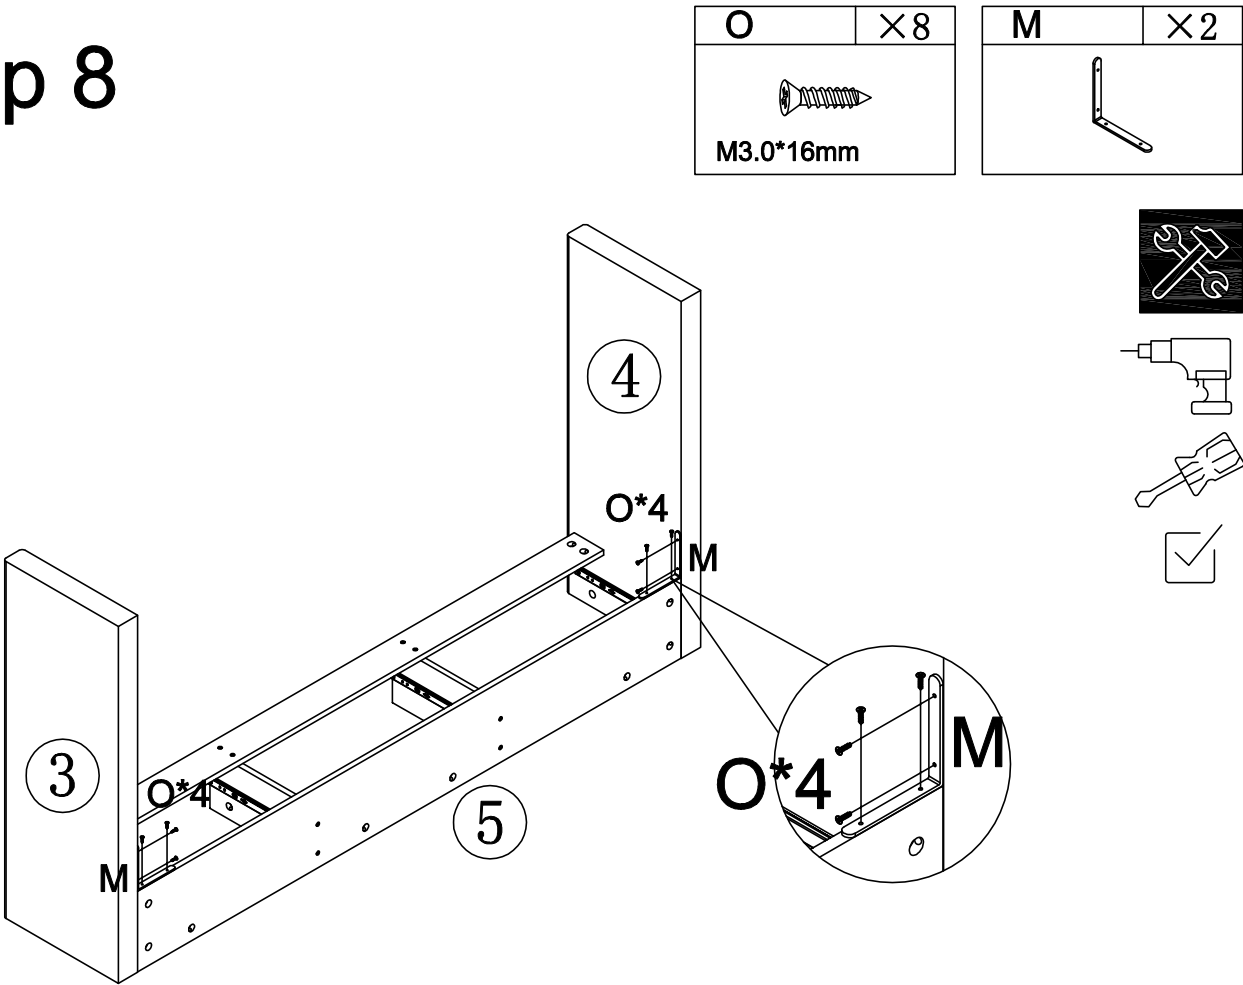


Step 9

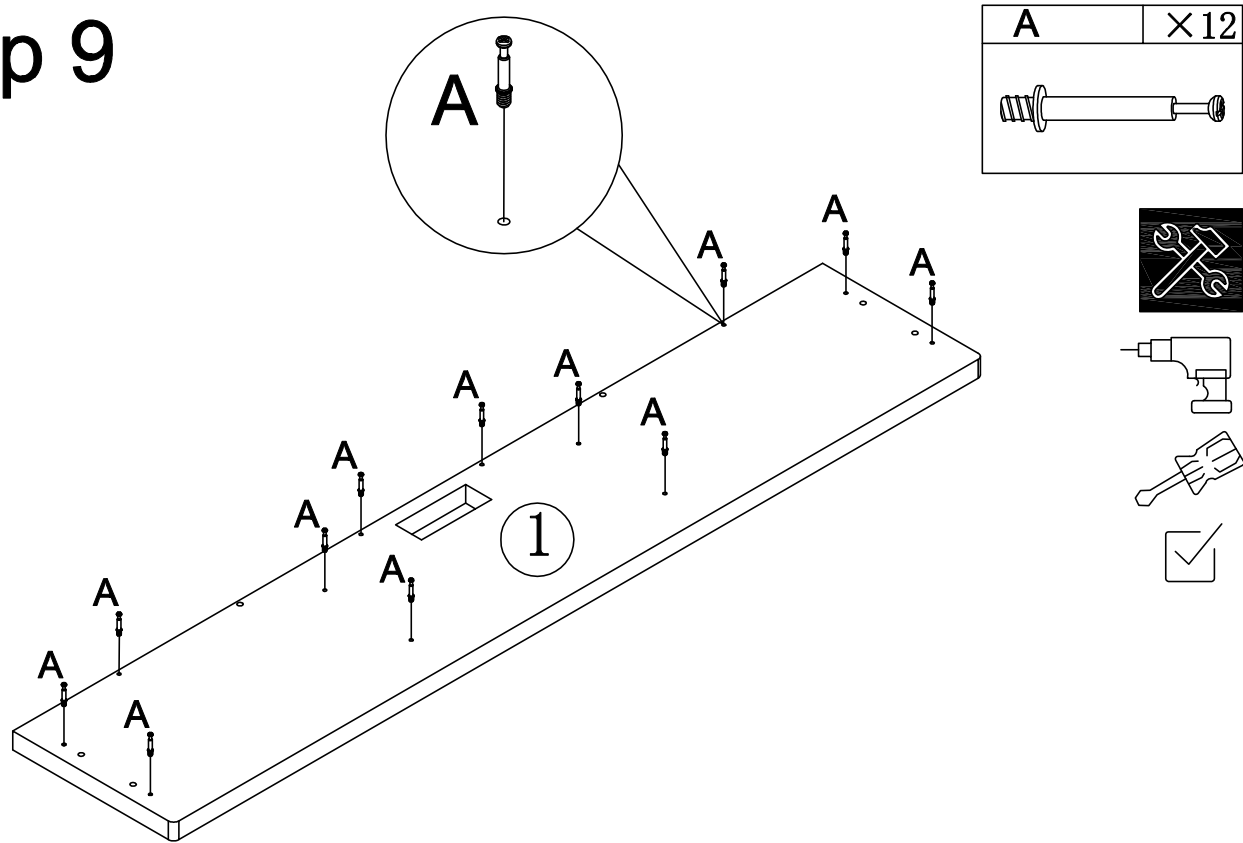




Step 10

F	×12	B	×12	C	×10	Q	×6
							

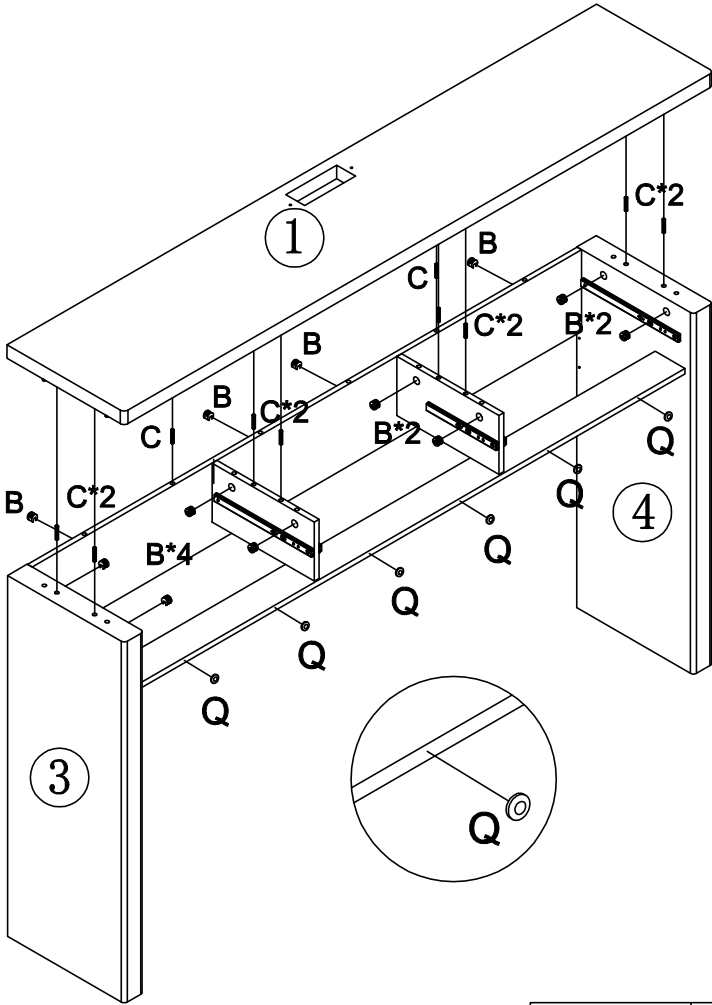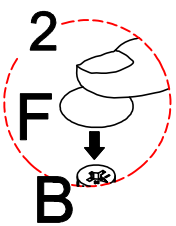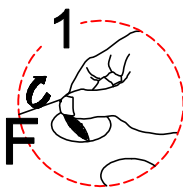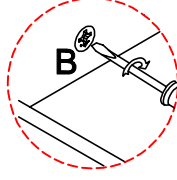
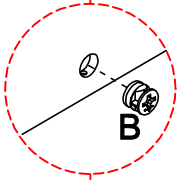
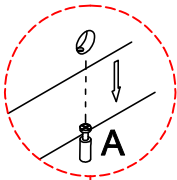


Step 11


A	×12
	

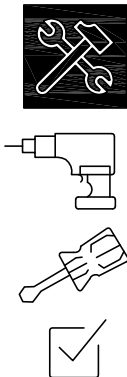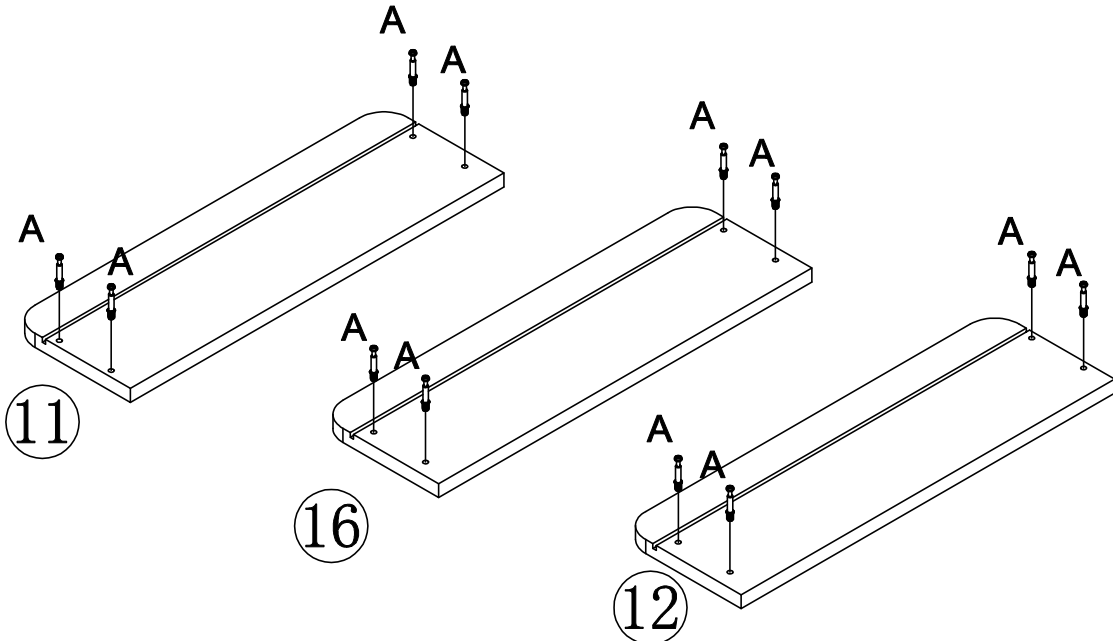

Step 12







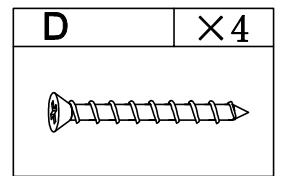
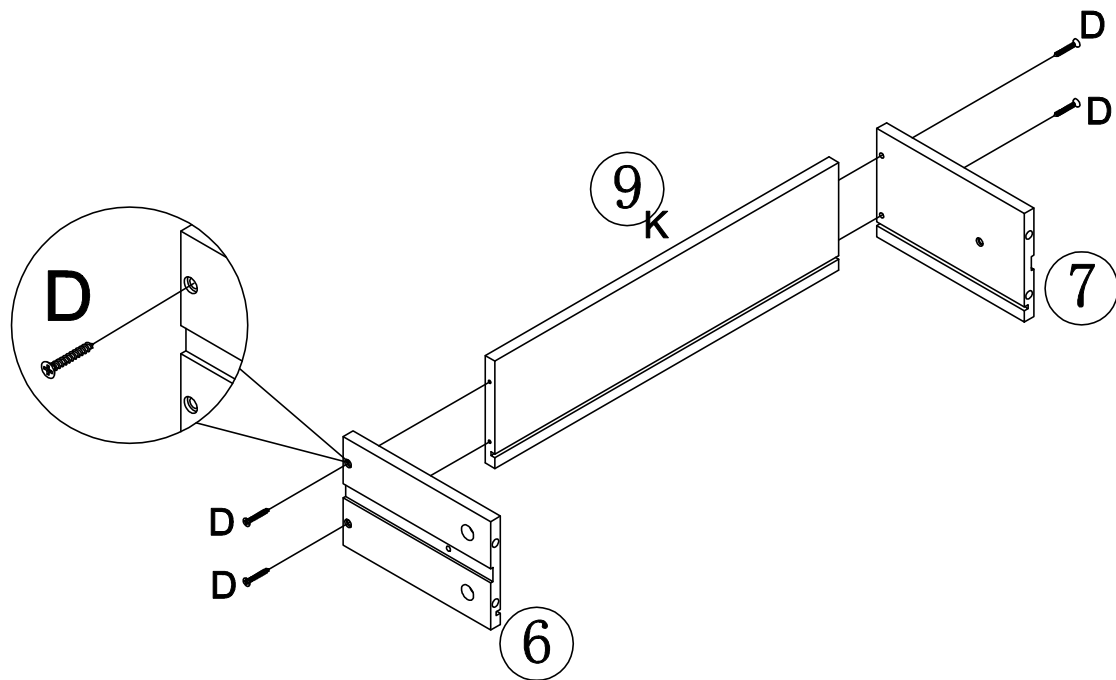


Step 13



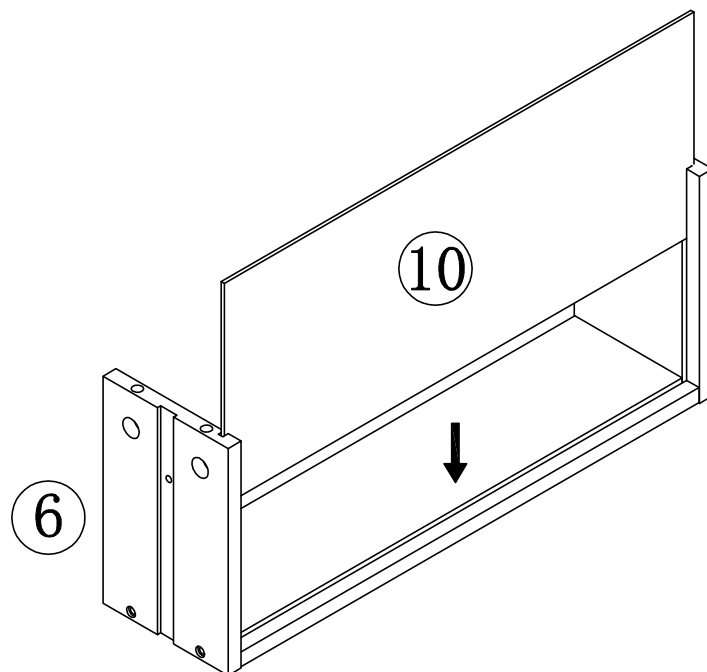


Please insert component
10 into the slot correctly.


Step 14

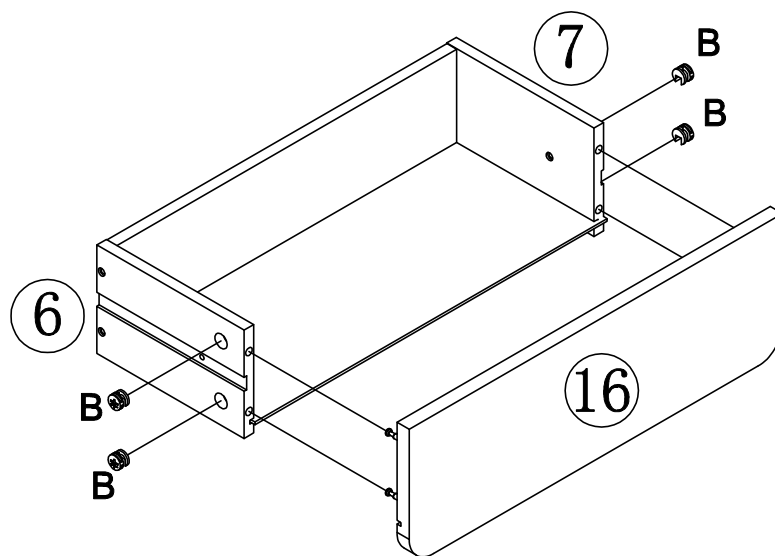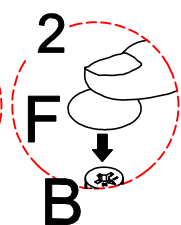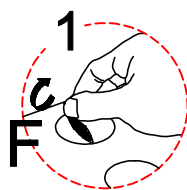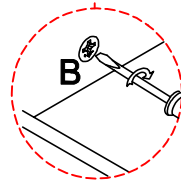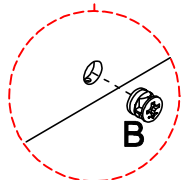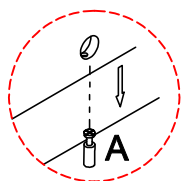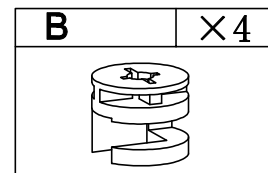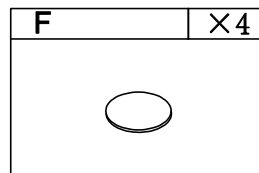

Step 15






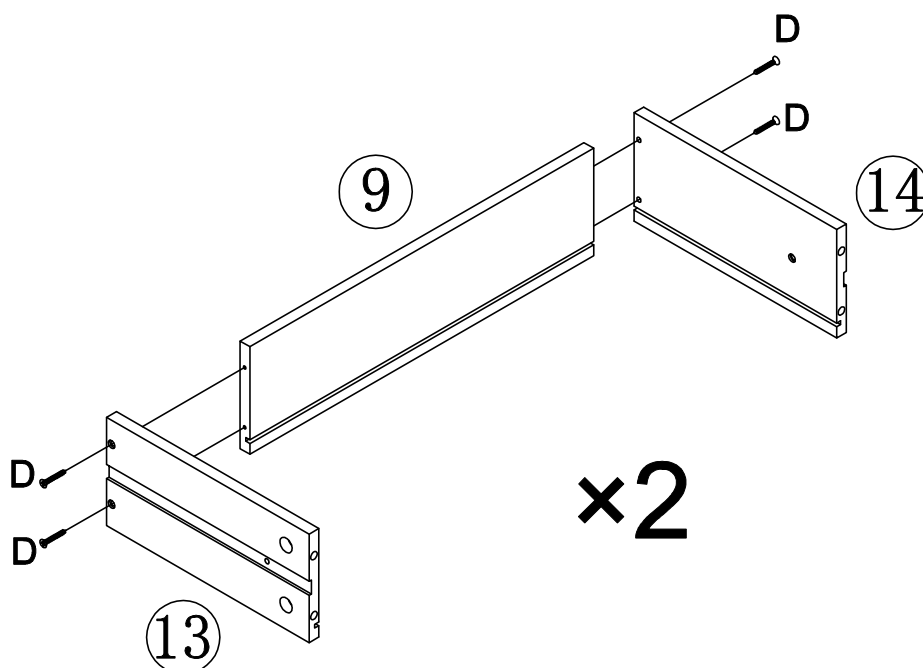

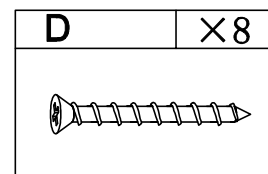


Step 16








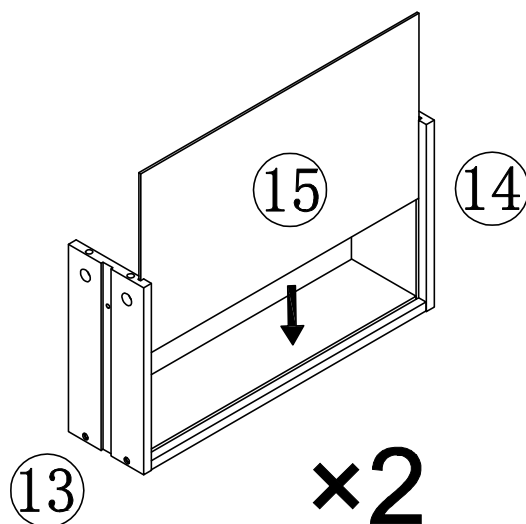


Please insert component 15 into the slot correctly.






Step 17

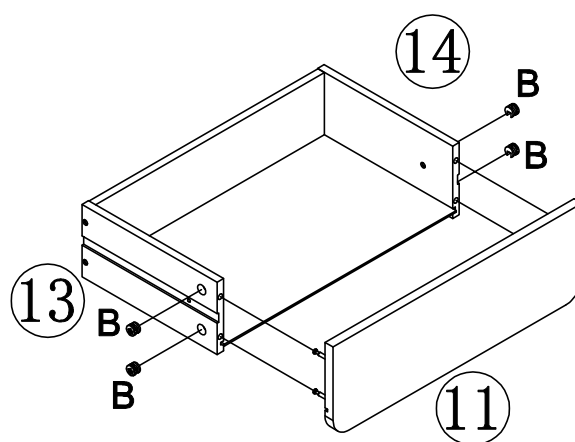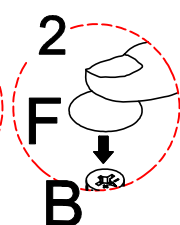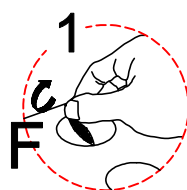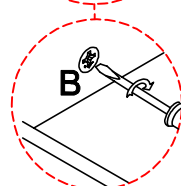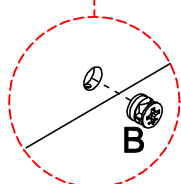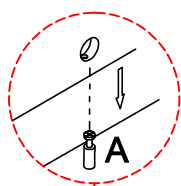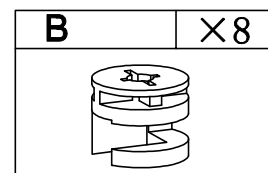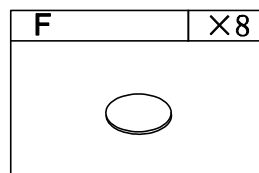





Step 18

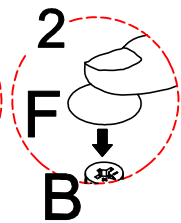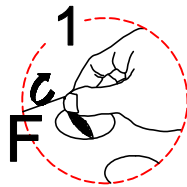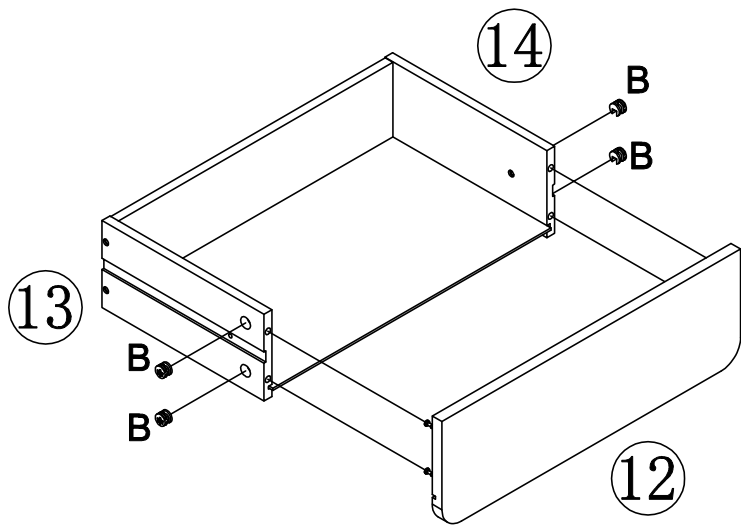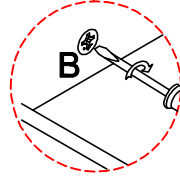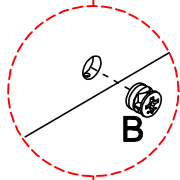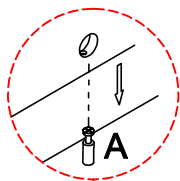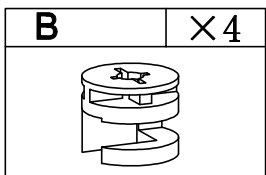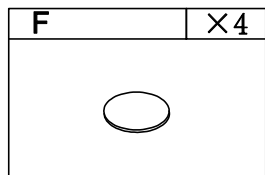






Step 19

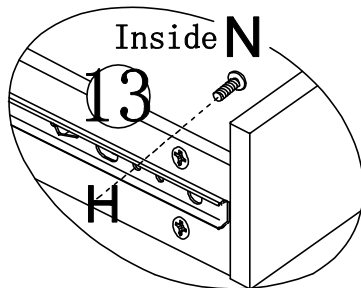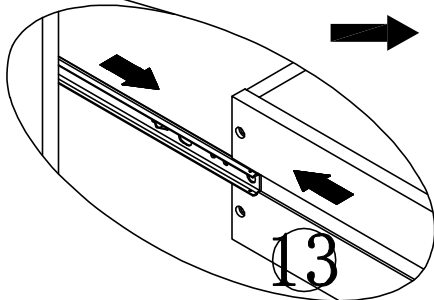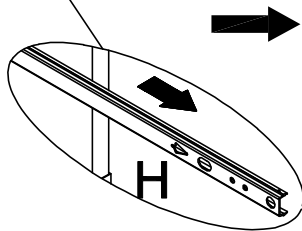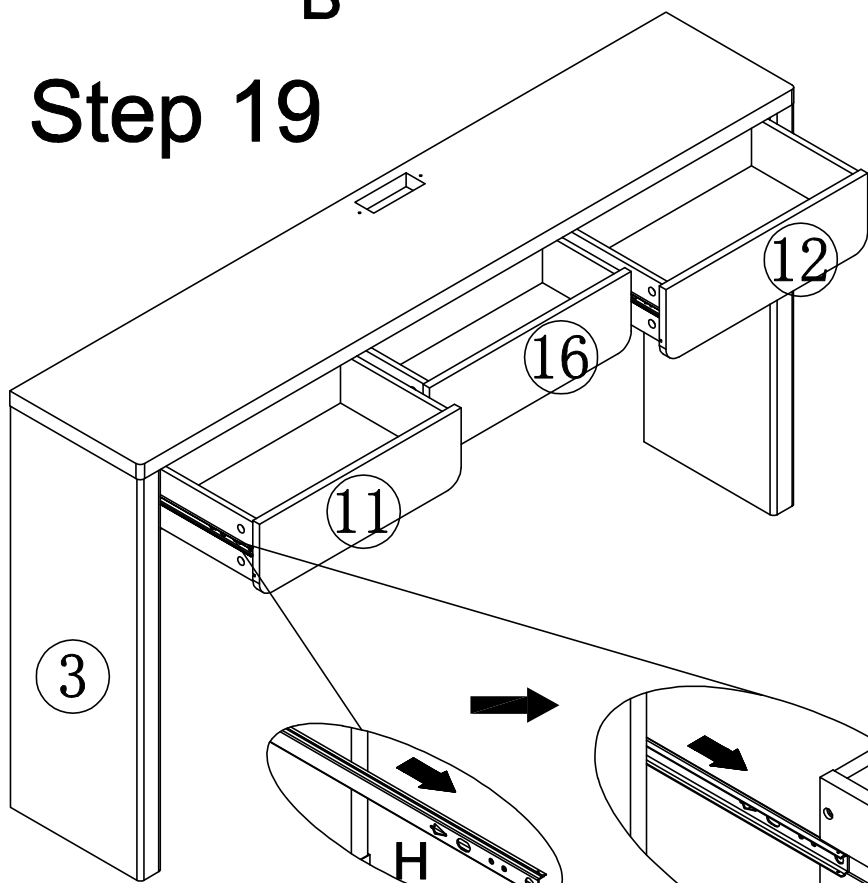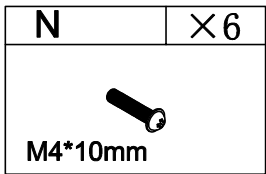




Step 20

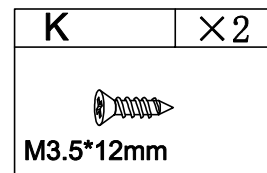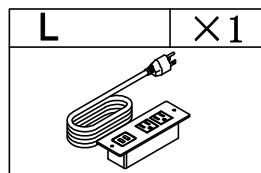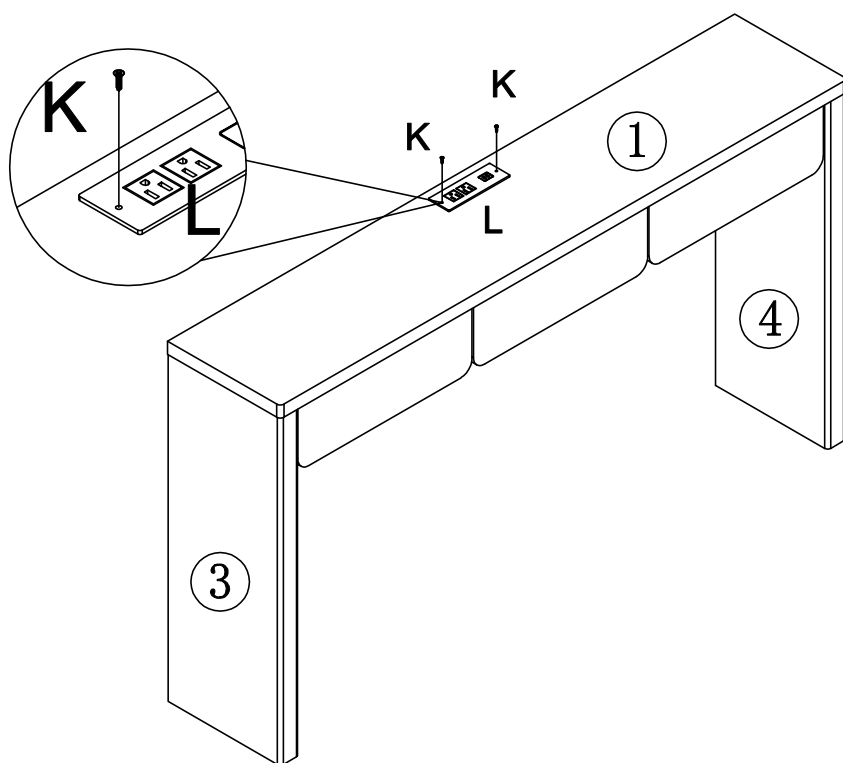


Step 21

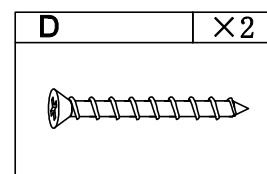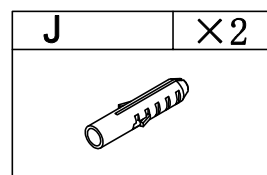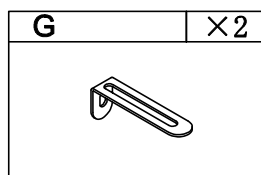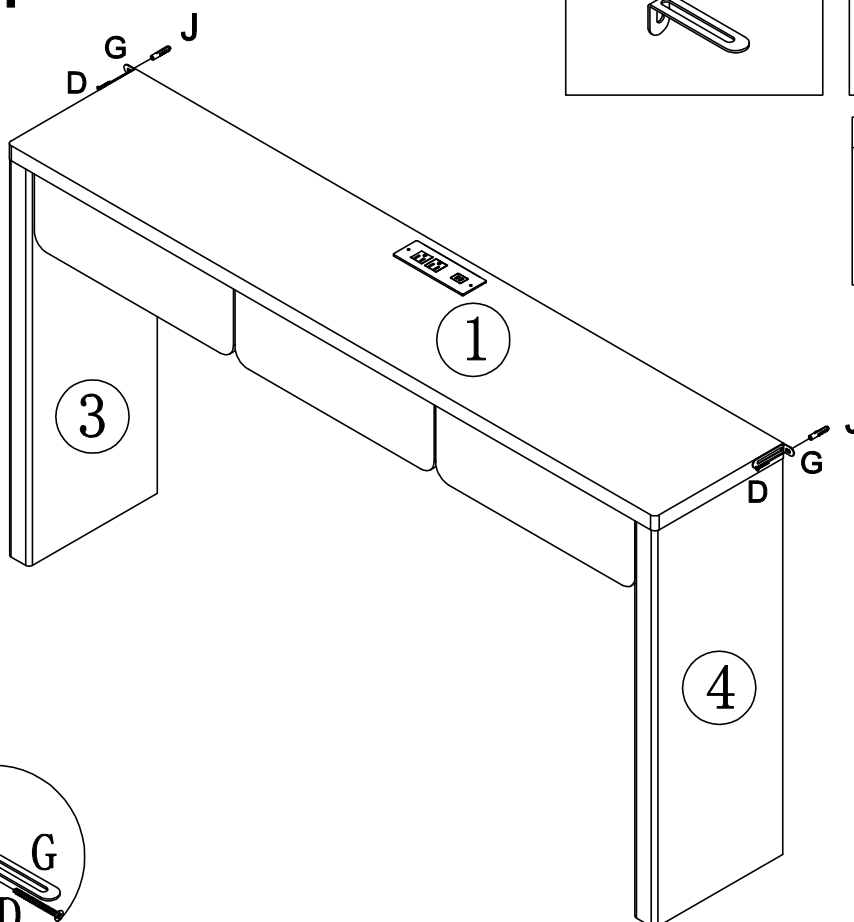

drill hole in wall

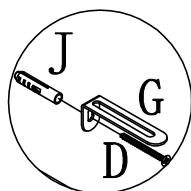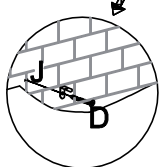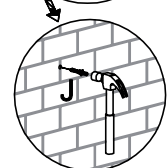

Step 22

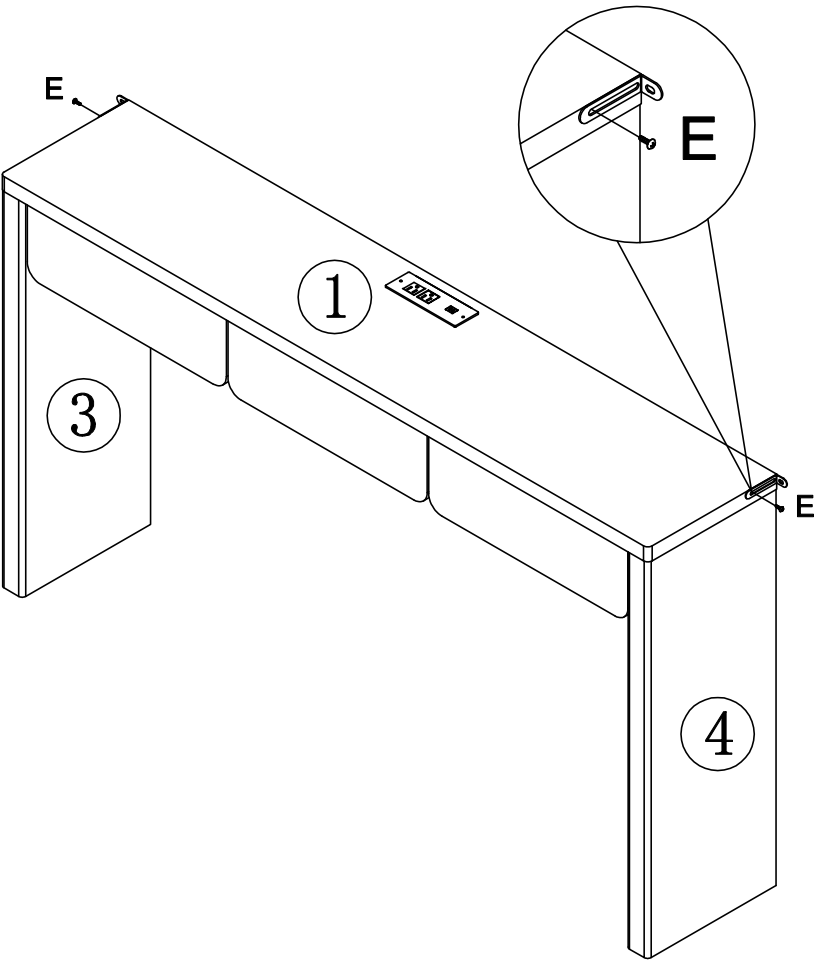

E	X2
	

