


# Assembly Instructions

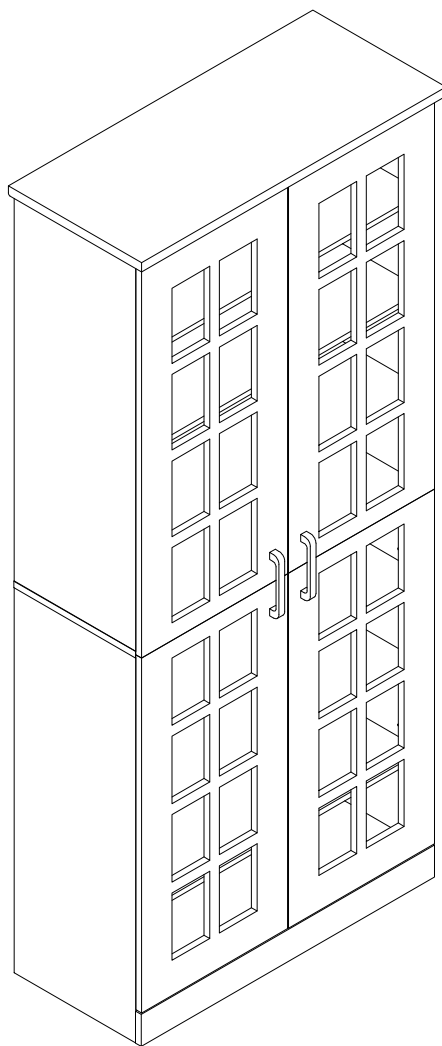

---

High shoe cabinet

---

# Contact Us




## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


### Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

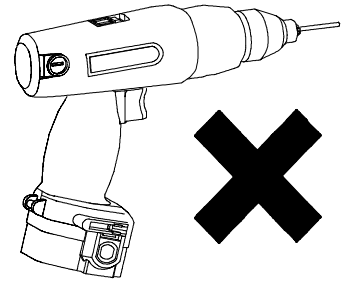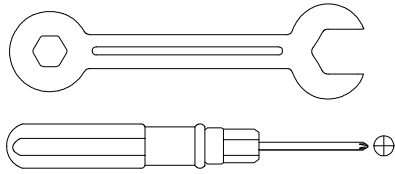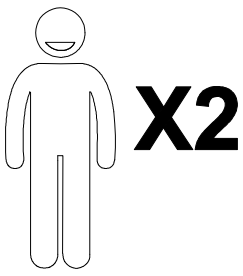


**We recommend using hand tools for assembly.**


**If an electric screwdriver is used, reduce power and torque to avoid damage to the product.**

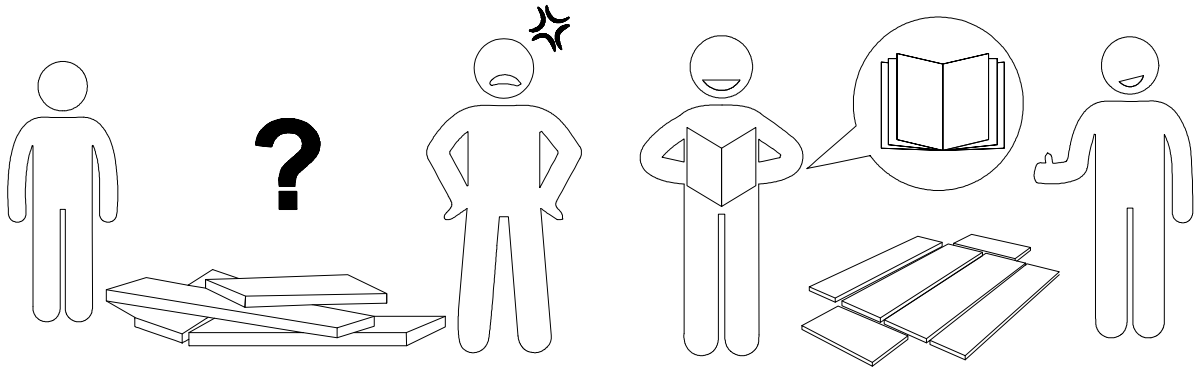

## **Install the Anti-Tip Straps**







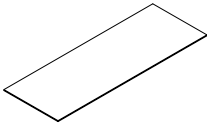
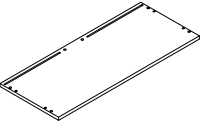
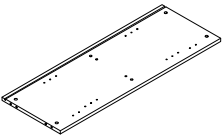
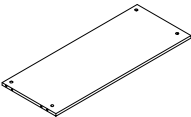
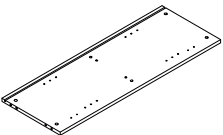
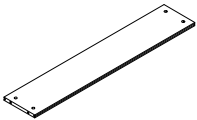
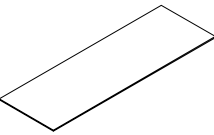
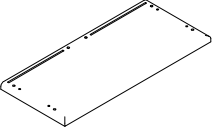
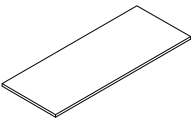
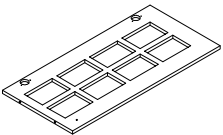
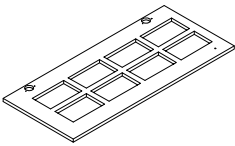
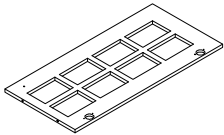
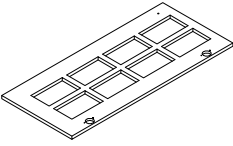
**Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.**

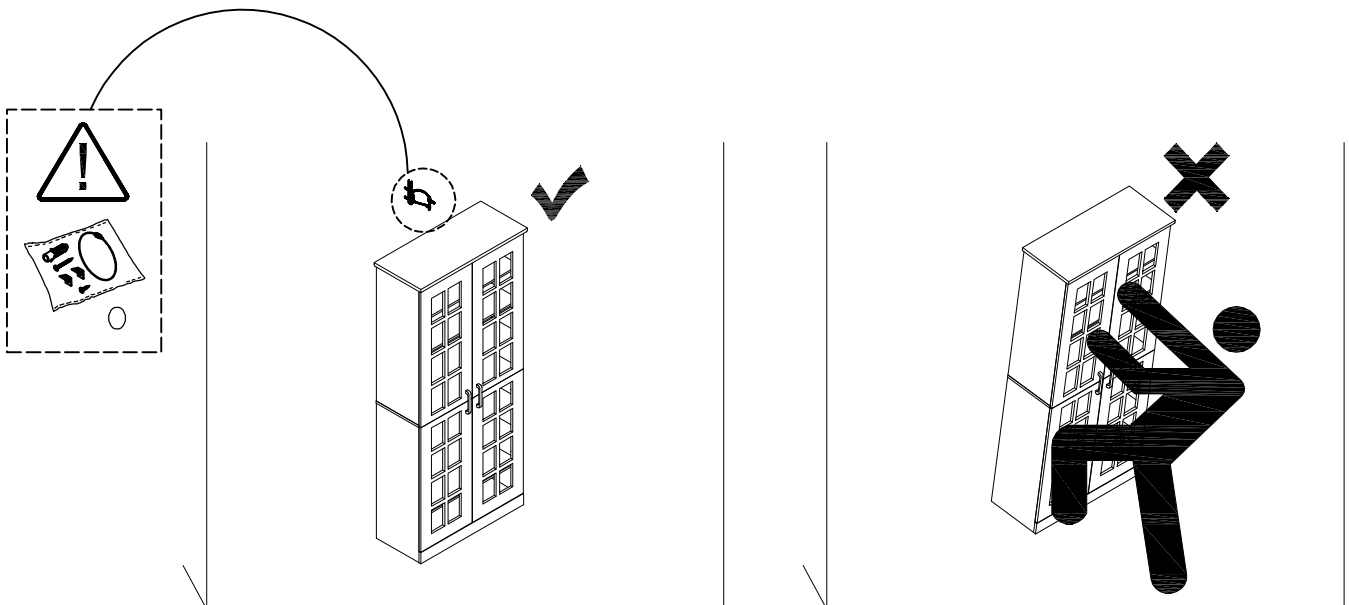




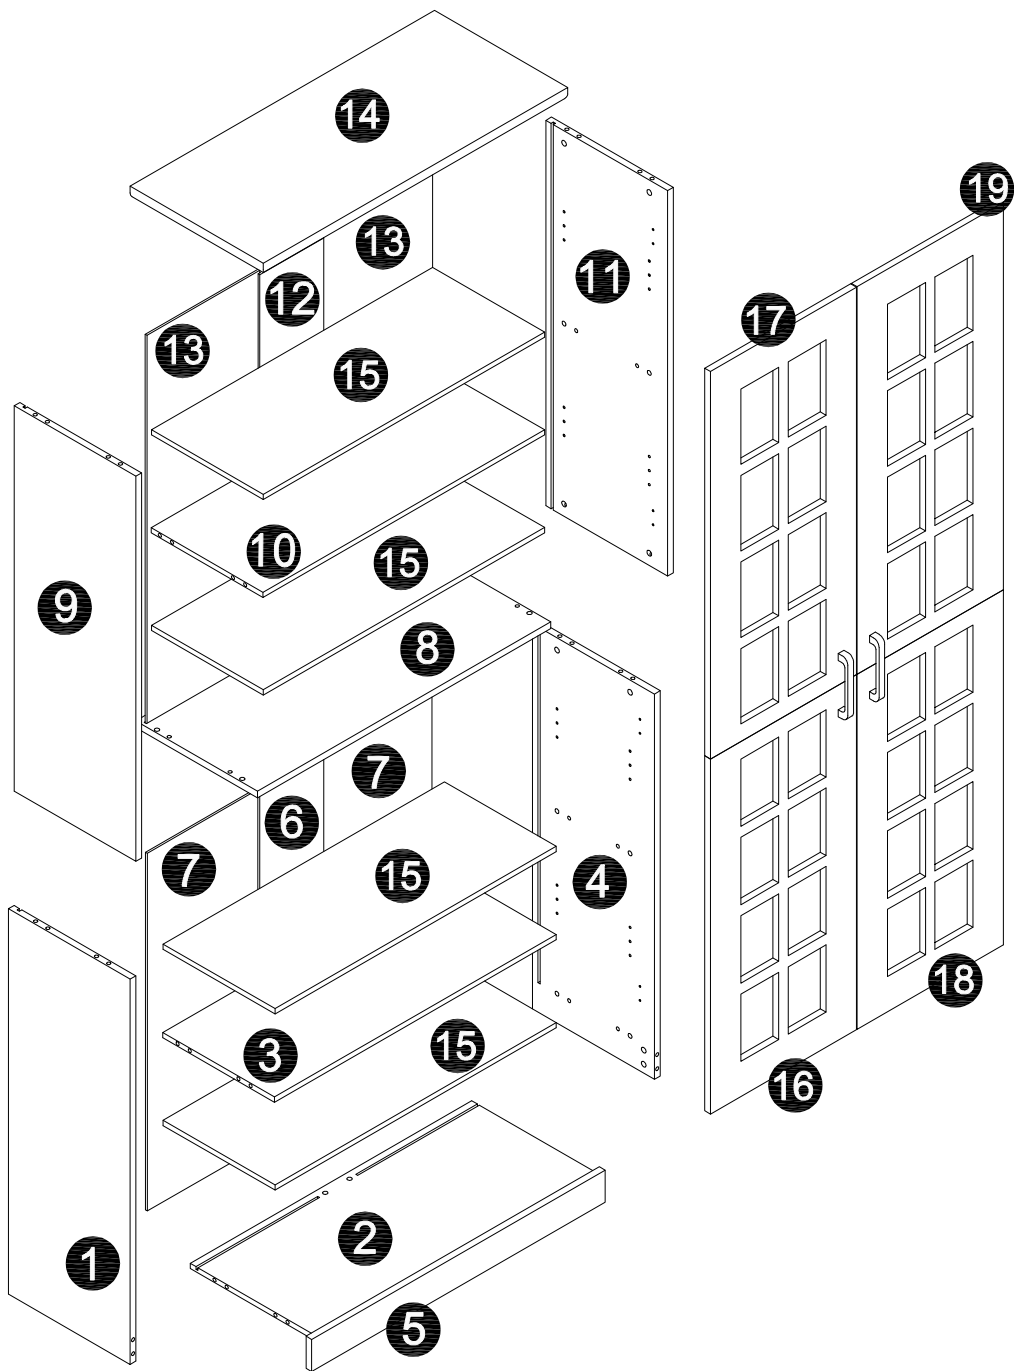

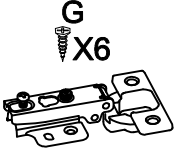








Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.
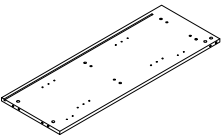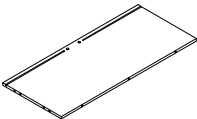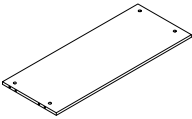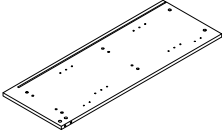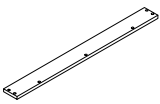
# Parts List

|  |  |   |   |   |
|--|--|---|---|---|
| <p><b>1</b></p>  <p>1 pc</p>    | <p><b>2</b></p>  <p>1 pc</p>    | <p><b>3</b></p>  <p>1 pc</p>     | <p><b>4</b></p>  <p>1 pc</p>    | <p><b>5</b></p>  <p>1 pc</p>     |
| <p><b>6</b></p>  <p>1 pc</p>    | <p><b>7</b></p>  <p>2 pcs</p>   | <p><b>8</b></p>  <p>1 pc</p>     | <p><b>9</b></p>  <p>1 pc</p>    | <p><b>10</b></p>  <p>1 pc</p>    |
| <p><b>11</b></p>  <p>1 pc</p> | <p><b>12</b></p>  <p>1 pc</p> | <p><b>13</b></p>  <p>2 pcs</p> | <p><b>14</b></p>  <p>1 pc</p> | <p><b>15</b></p>  <p>4 pcs</p> |
| <p><b>16</b></p>  <p>1 pc</p> | <p><b>17</b></p>  <p>1 pc</p> | <p><b>18</b></p>  <p>1 pc</p>  | <p><b>19</b></p>  <p>1 pc</p> |   |
|  |  |   |   |   |
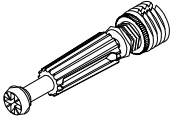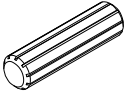
# Hardware List
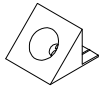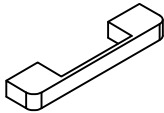
| A   | B   | C   | D   | E   | F   |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| M6x35mm   | Ø12x10mm  | Ø8x30mm   | 16X11X15MM  | Ø4X18MM   | G<br>X6   |
| 39+1 pcs  | 39+1 pcs  | 28+1 pcs  | 16+1 pcs  | 4 pcs   | 8 pcs   |


| G   | H   | I   | J   | K  | L  |
|---|---|---|---|--|--|
|  |  |  |  |  |  |
| Ø3.5X14MM   | 14X12X10MM  | 96#   |   |  | Screwdriver  |
| 56+2 pcs  | 8+1 pcs   | 2 pcs   | 5 pcs   | 1 pc   | 1 pc   |

|  |  |  |  |  |  |
|--|--|--|--|--|--|
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |


|  |  |  |  |  |  |
|--|--|--|--|--|--|
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |

# Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

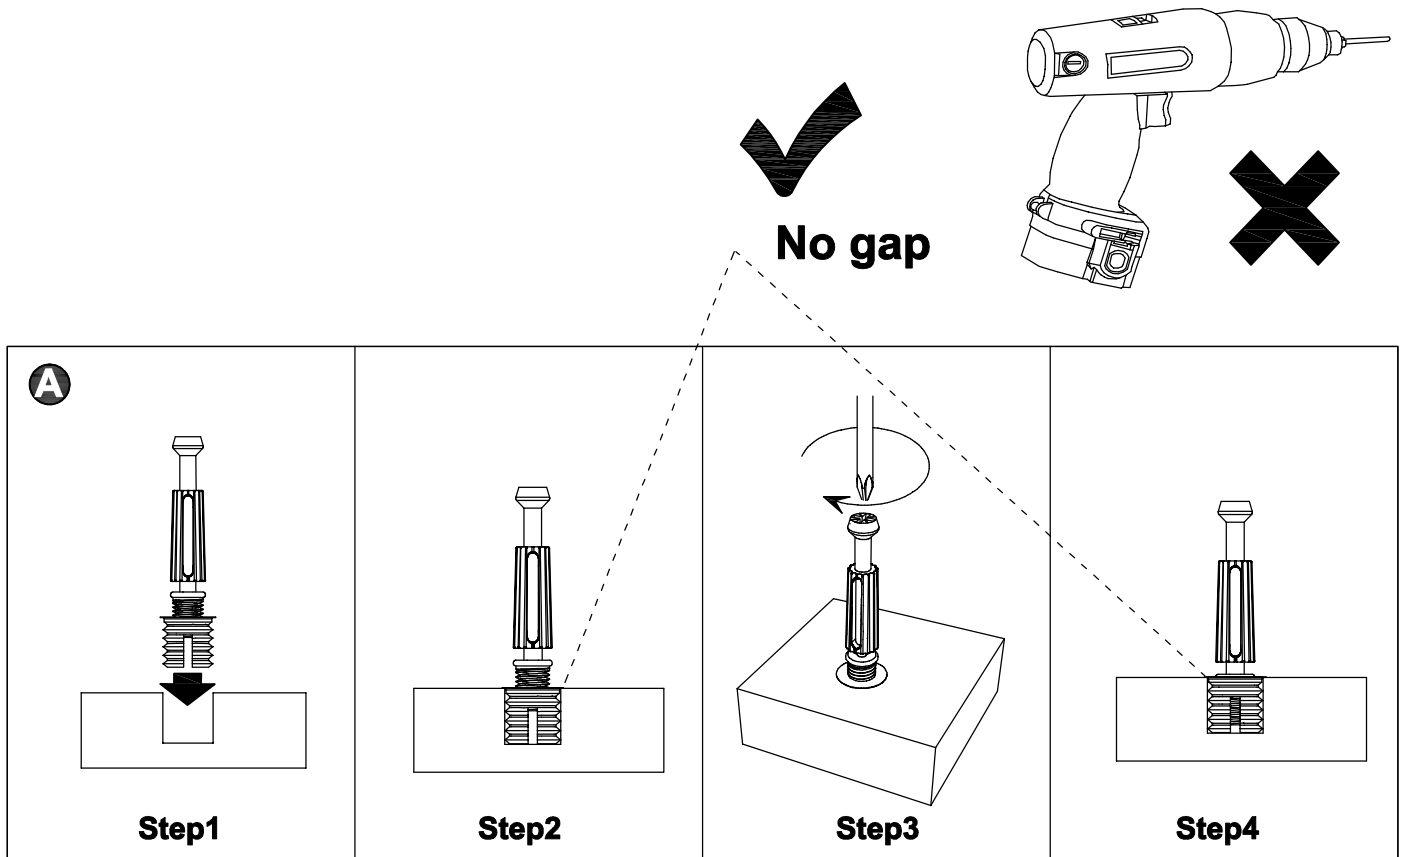



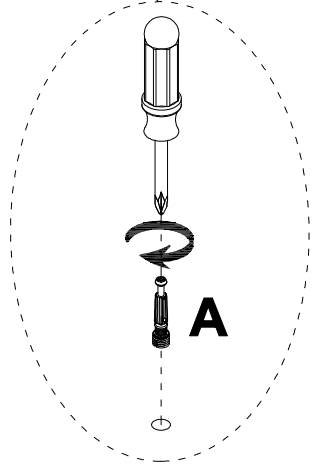
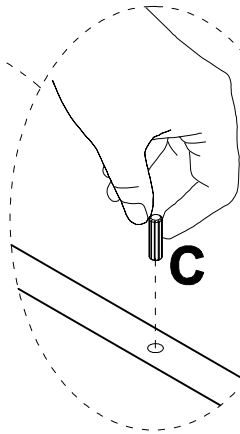
**Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.**

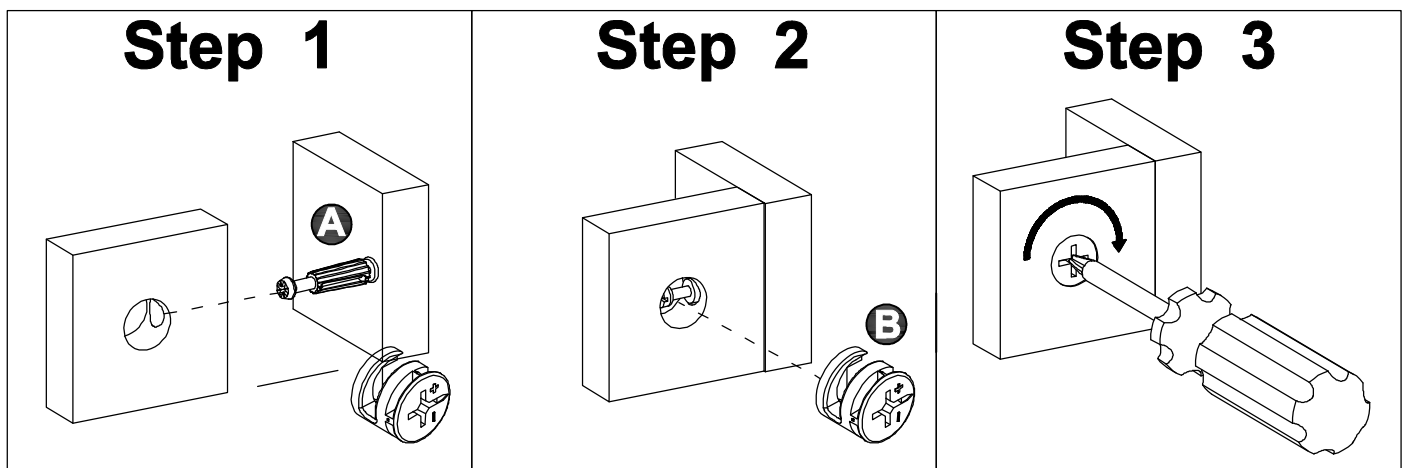


**1**

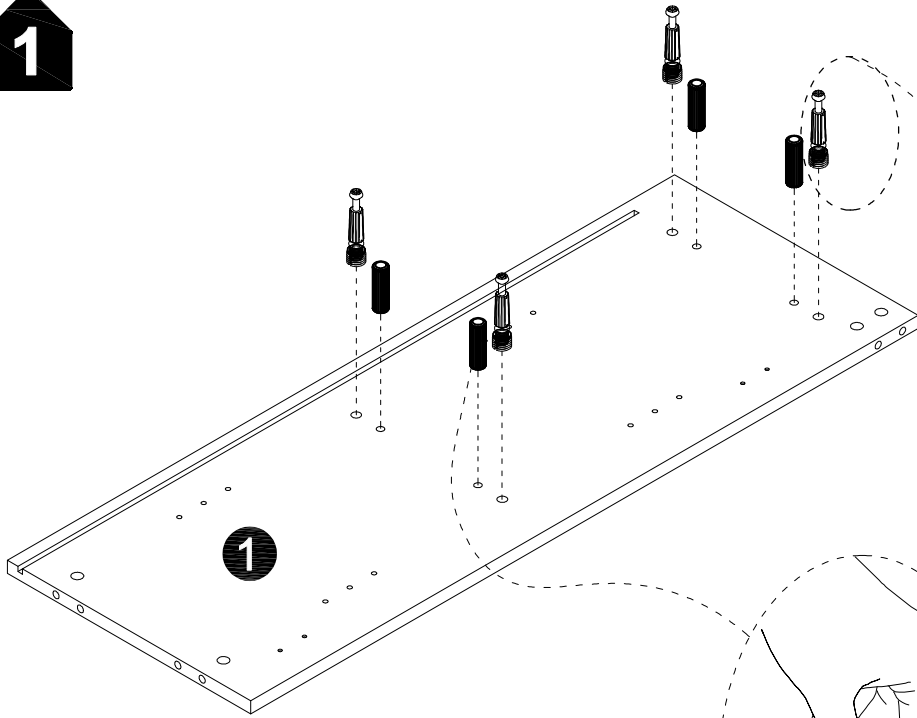

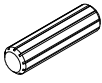
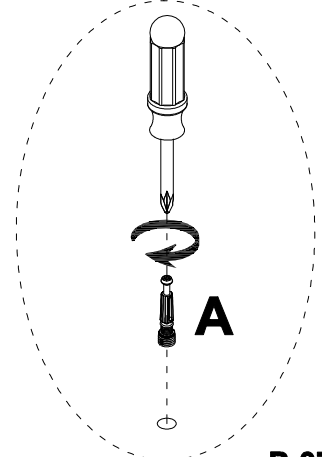
| C   | A   |
|---|---|
|  |  |
| Ø8x30mm   | M6x35mm   |
| 4 pcs   | 4 pcs   |





**2**

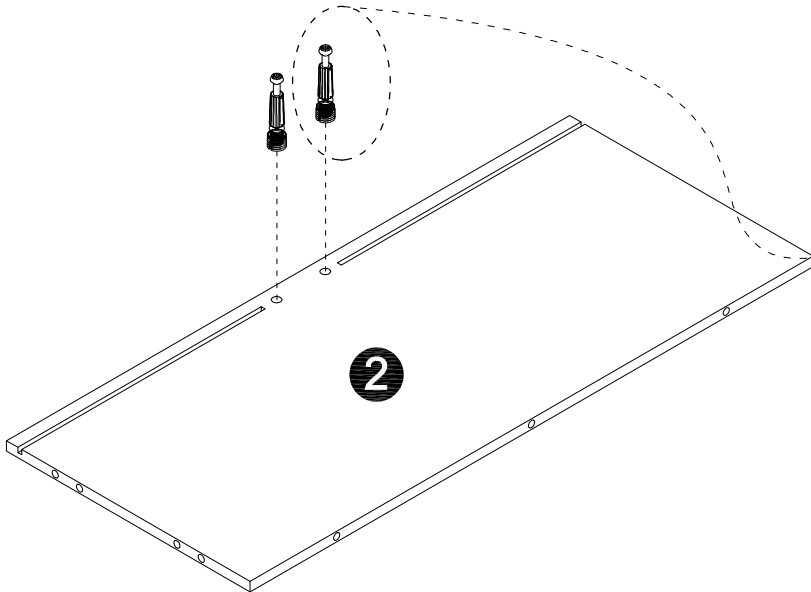


| A   |
|---|
|  |
| M6x35mm   |
| 2 pcs   |




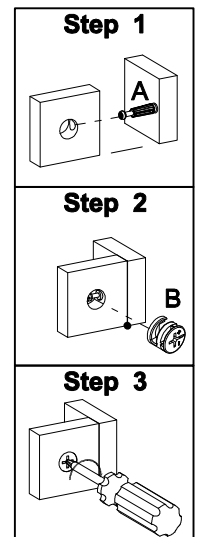
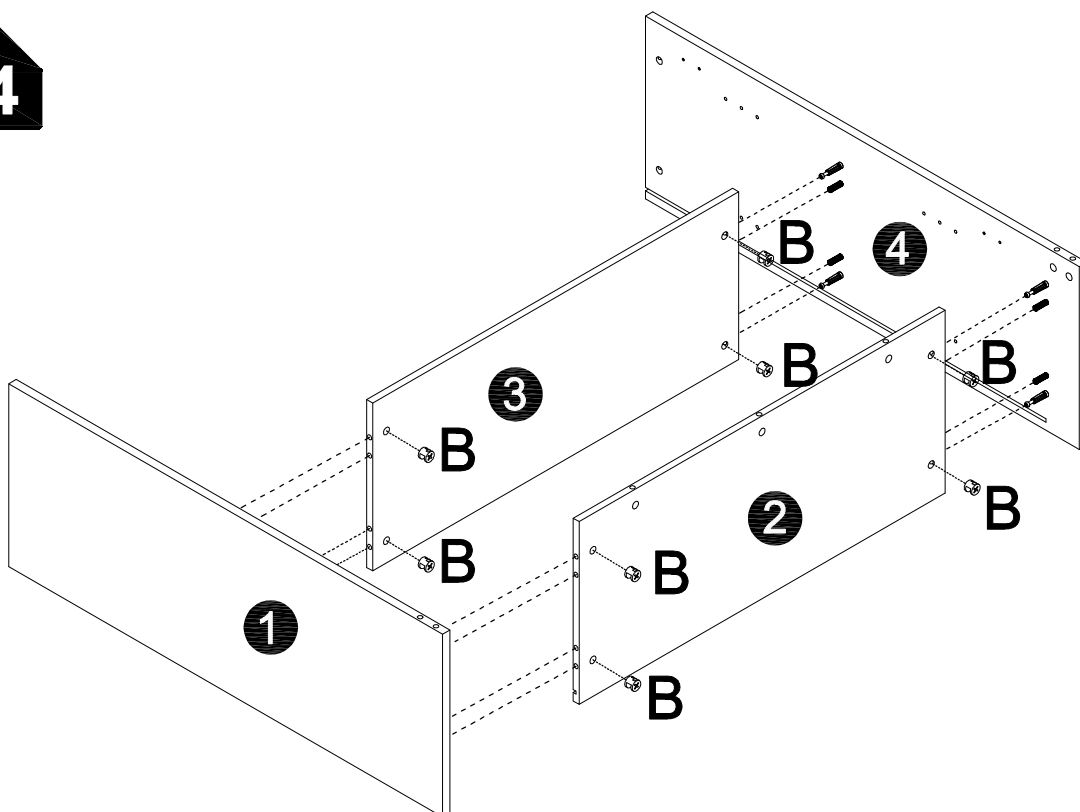
**3**
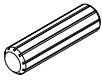
| C   | A   |
|---|---|
|  |  |
| Ø8x30mm<br>4 pcs  | M6x35mm<br>4 pcs  |

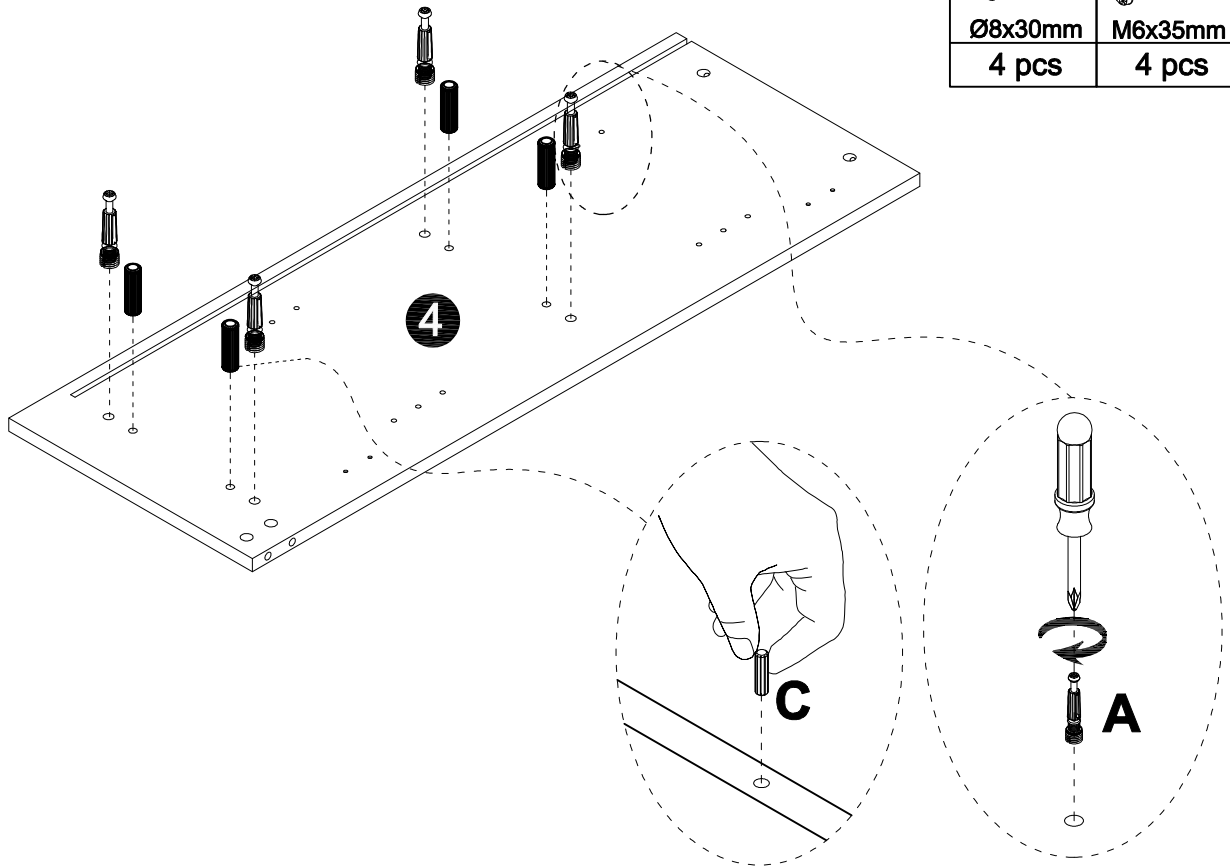


**4**


| B   |
|---|
|  |
| Ø12x10mm<br>8 pcs   |




**5**

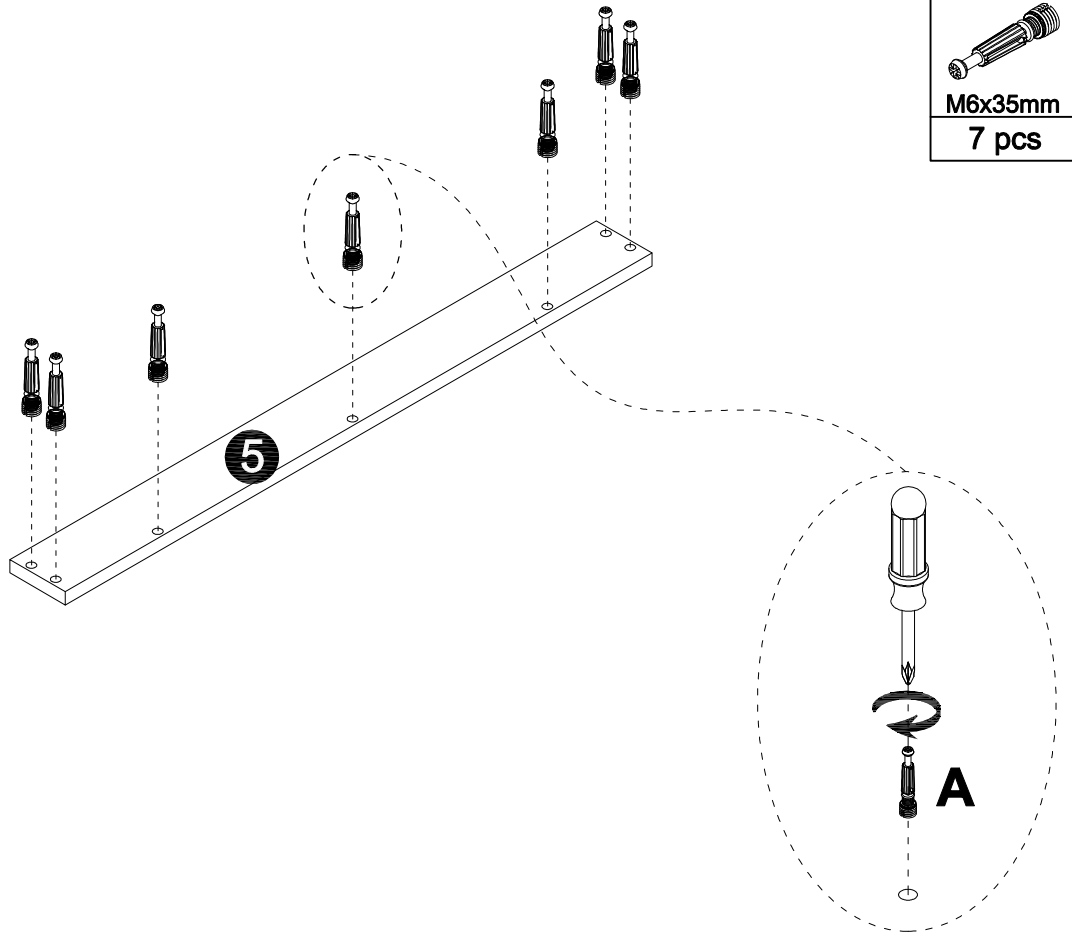


**6**

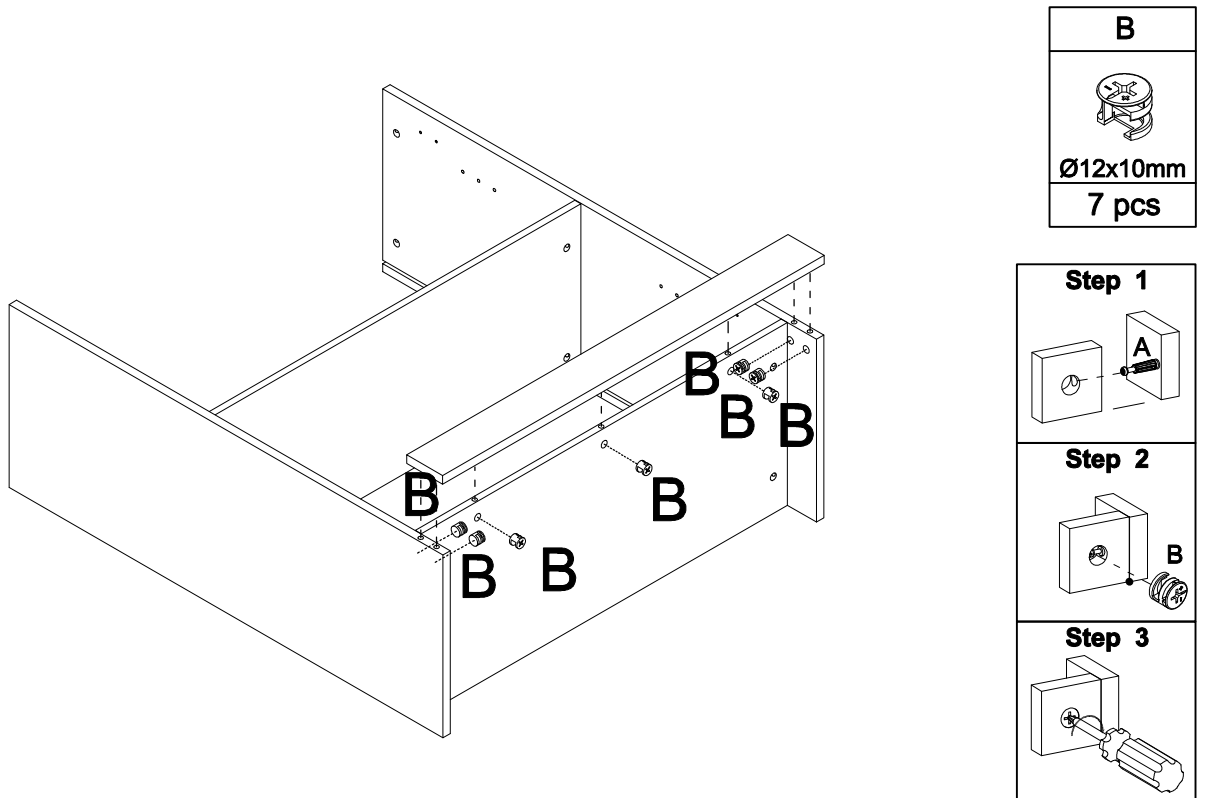


7

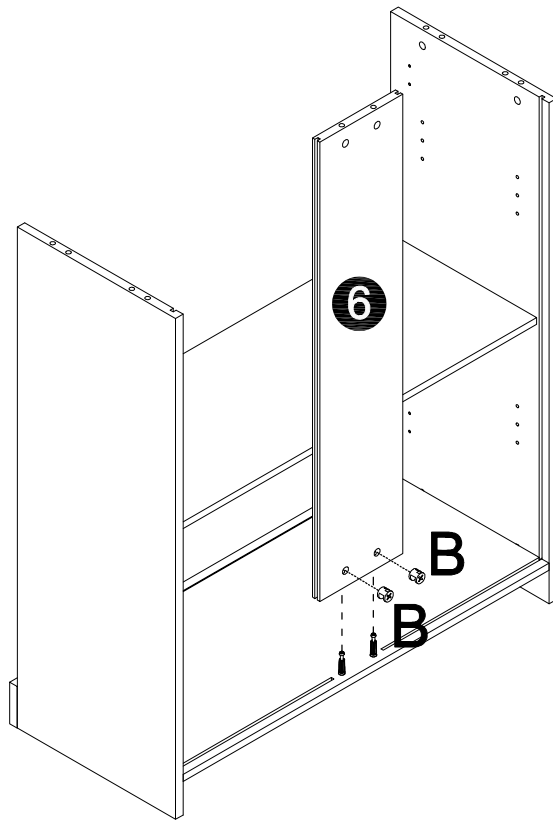


|   |
|---|
| <b>B</b>  |
|  |
| <b>Ø12x10mm</b>   |
| <b>2 pcs</b>  |


**Step 1**

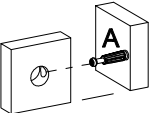


**Step 2**

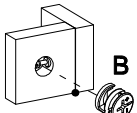


**Step 3**

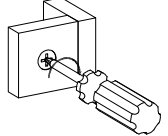



8

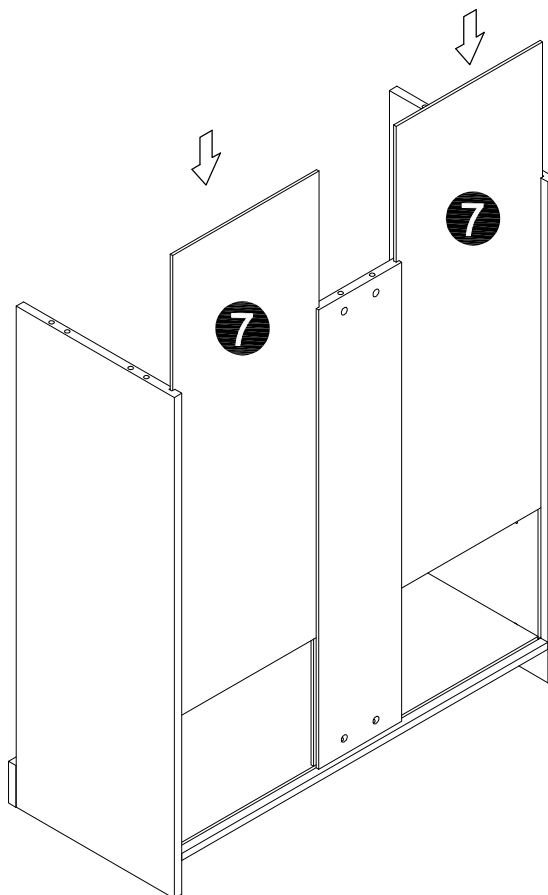



9

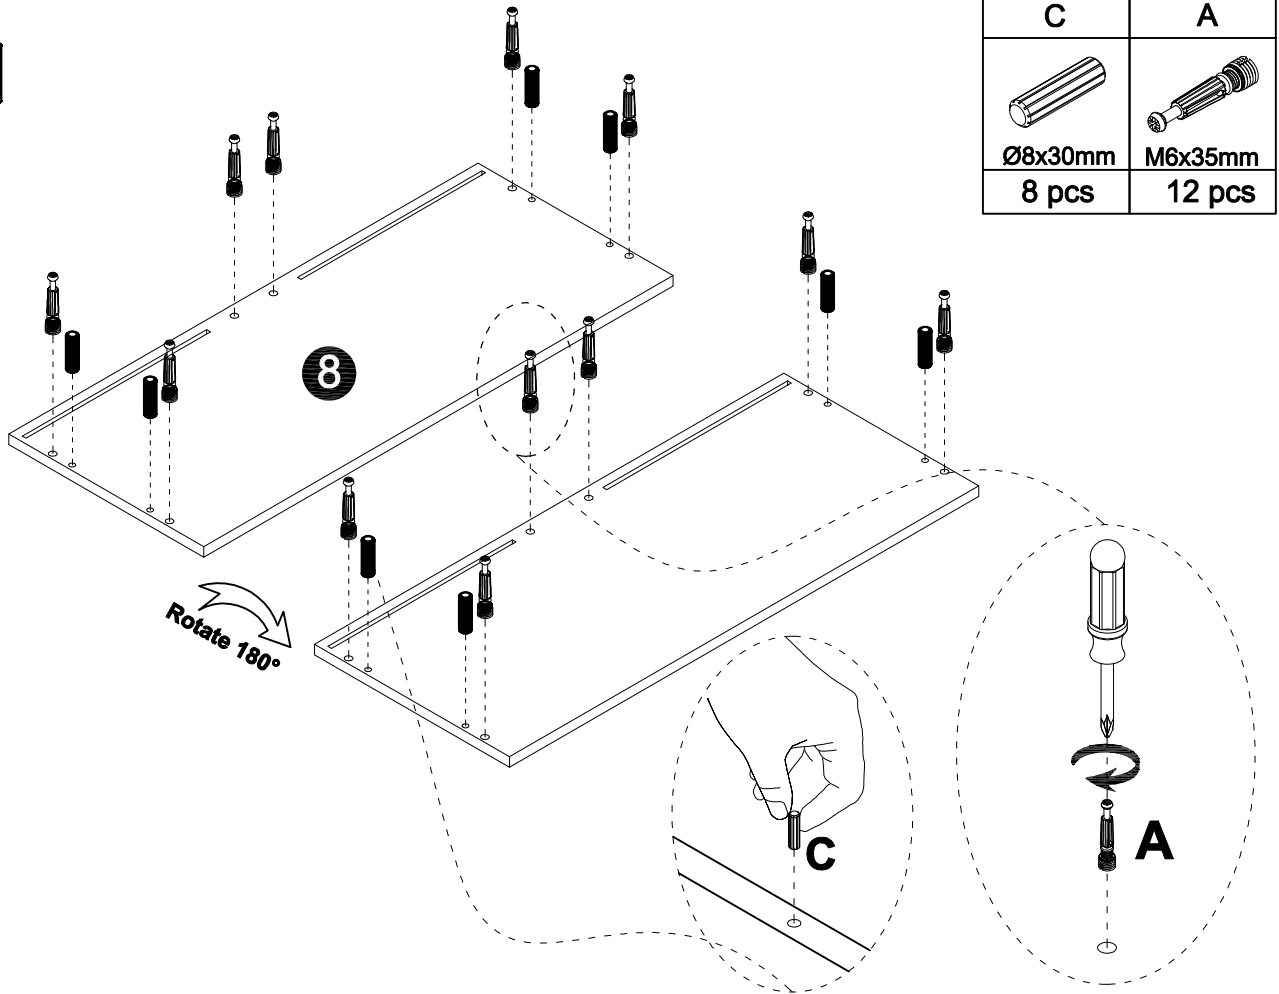

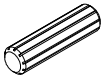
| C   | A   |
|---|---|
|  |  |
| Ø8x30mm   | M6x35mm   |
| 8 pcs   | 12 pcs  |


10

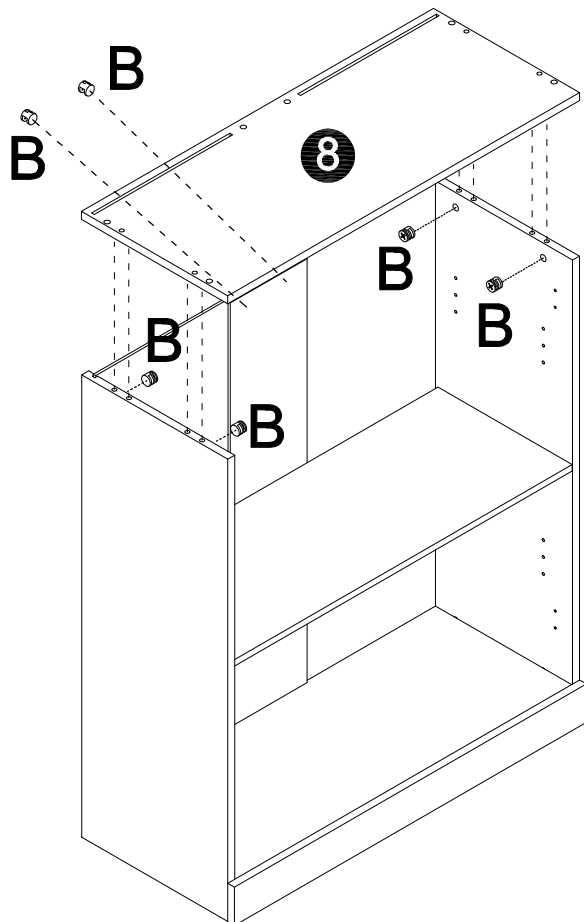



| B   |
|---|
|  |
| Ø12x10mm  |
| 6 pcs   |

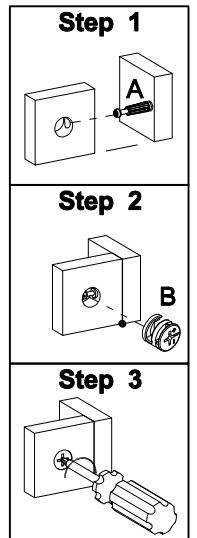



**11**

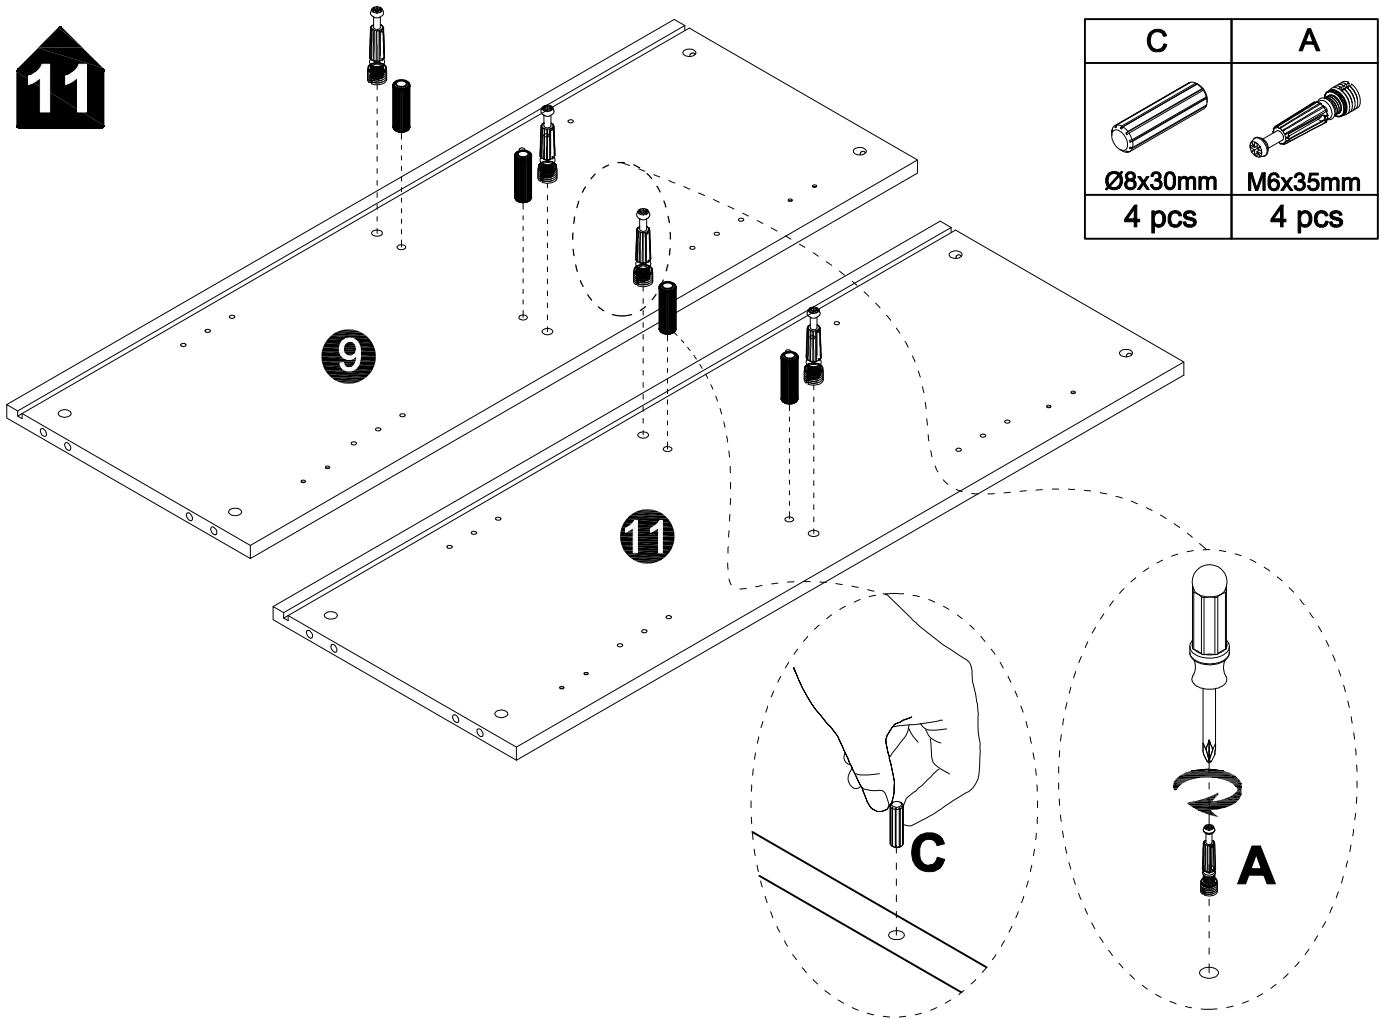

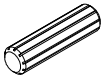
| C   | A   |
|---|---|
|  |  |
| Ø8x30mm   | M6x35mm   |
| 4 pcs   | 4 pcs   |


**12**

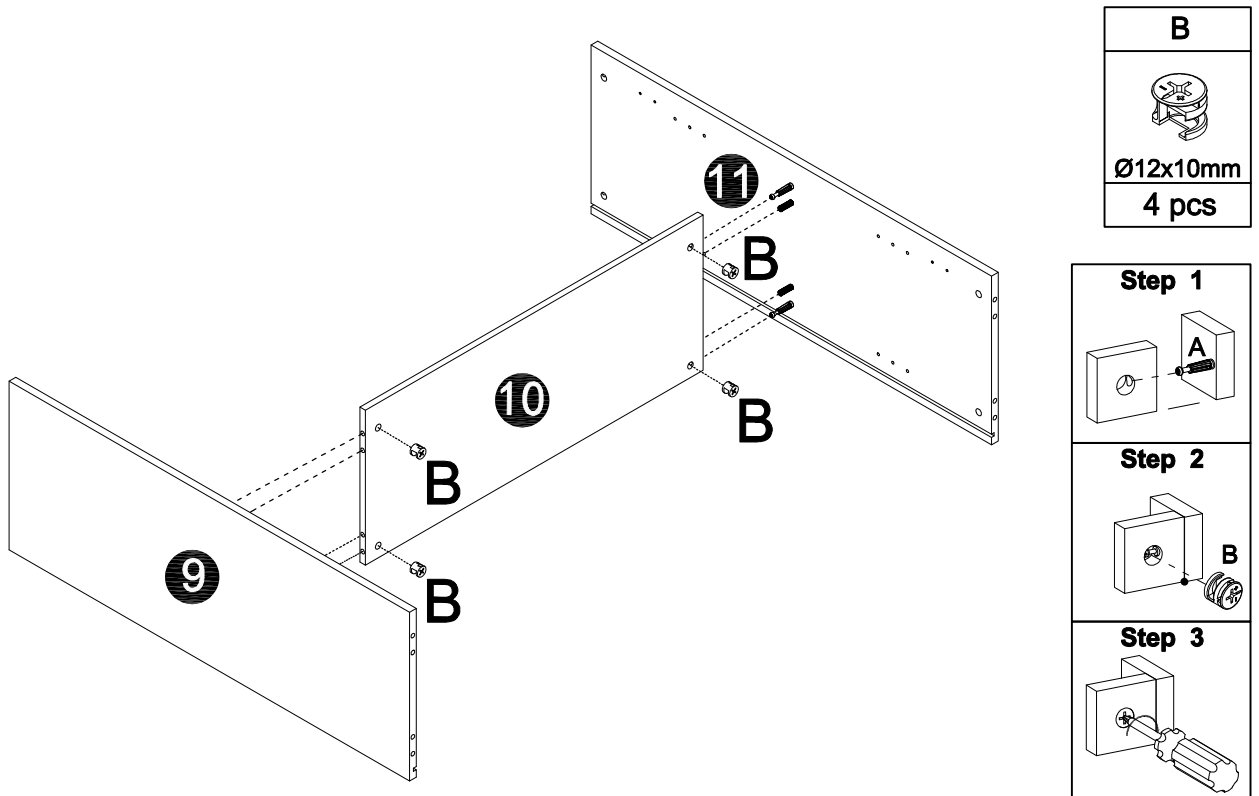


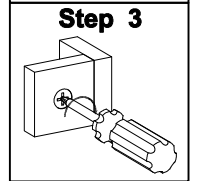
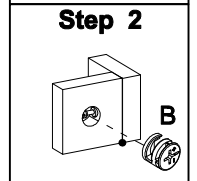
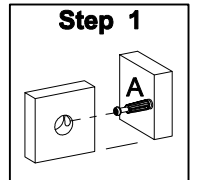
| B   |
|---|
|  |
| Ø12x10mm  |
| 4 pcs   |

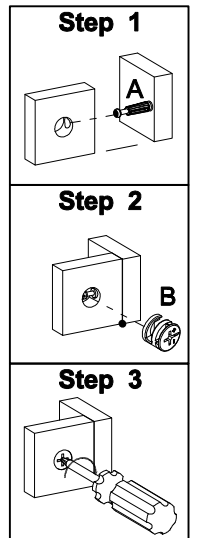


**13**

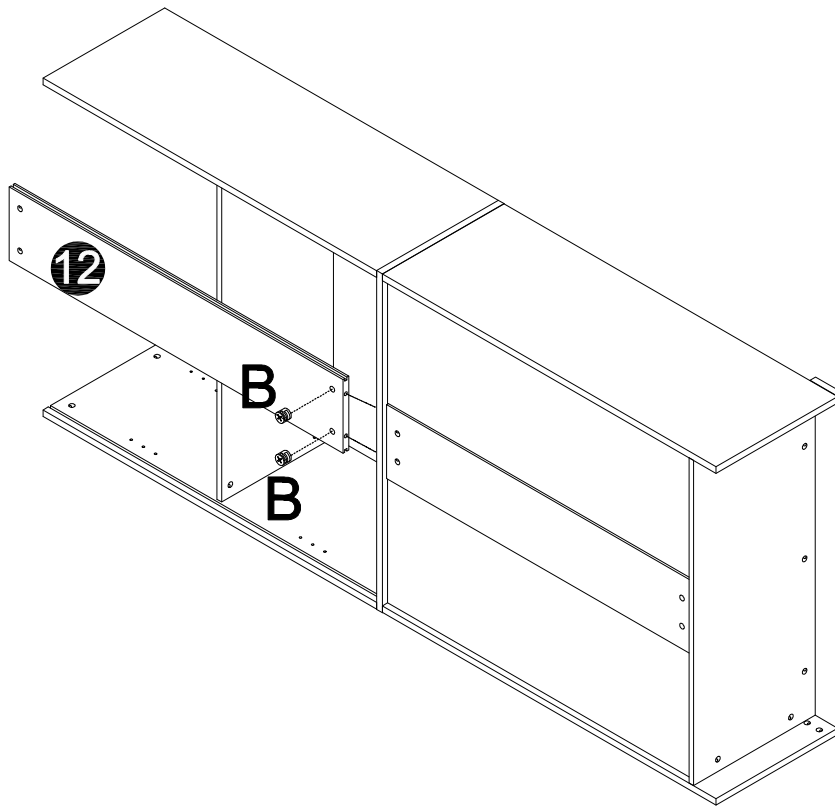


|   |
|---|
| <b>B</b>  |
|  |
| Ø12x10mm  |
| 2 pcs   |




**14**

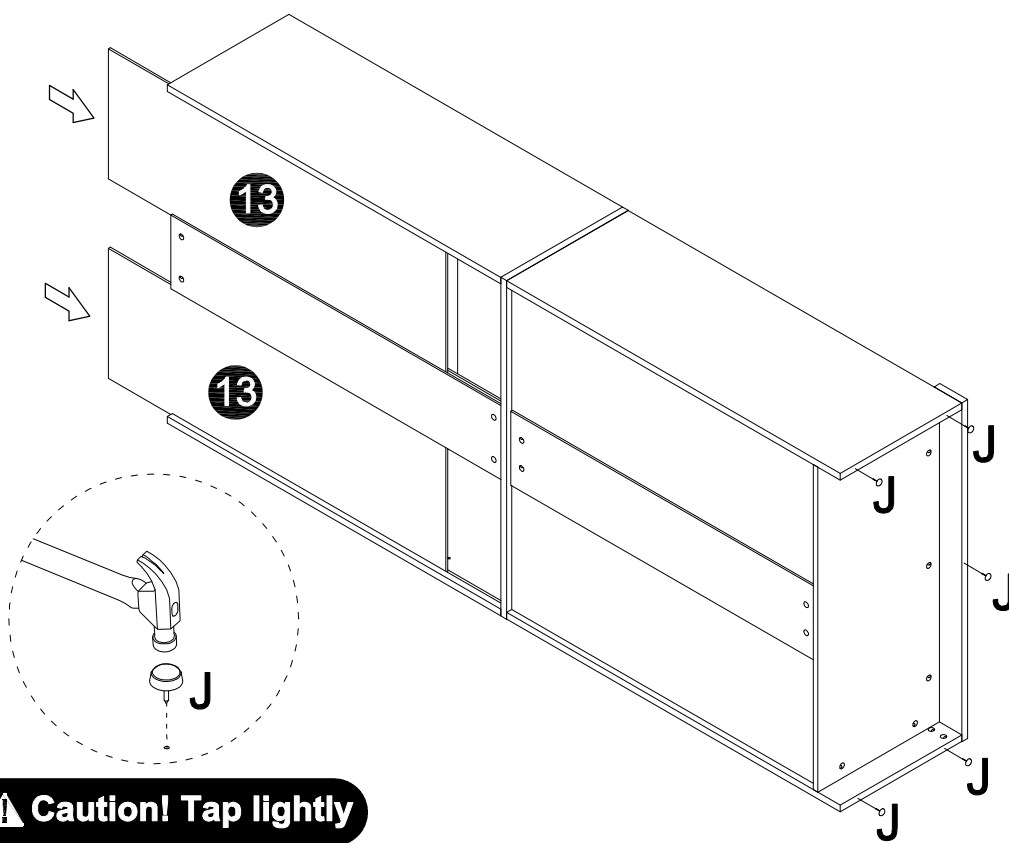


|   |
|---|
| <b>J</b>  |
|  |
| 5 pcs   |

**⚠ Caution! Tap lightly**


**15**

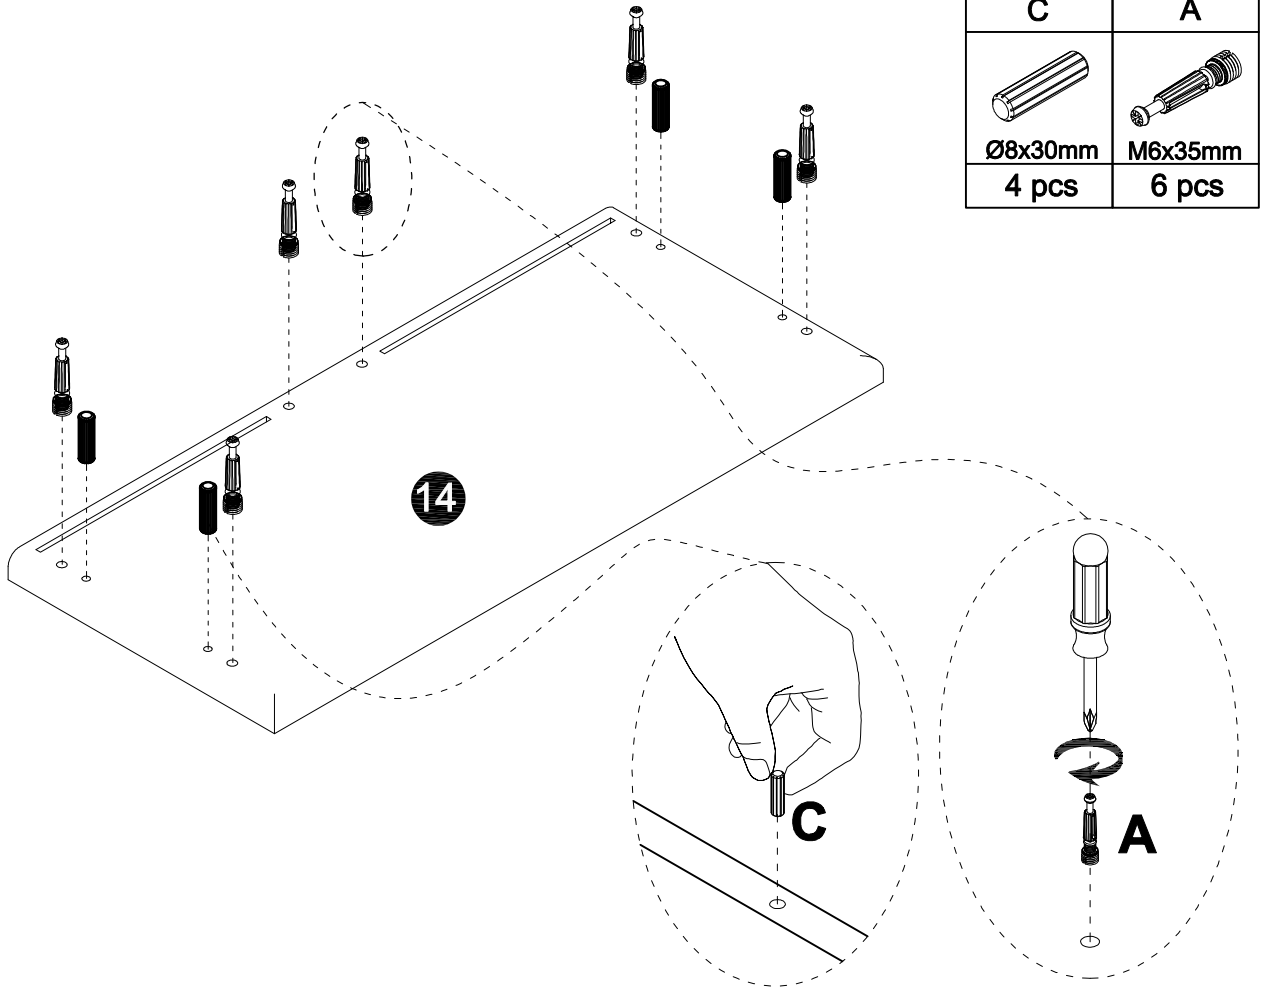


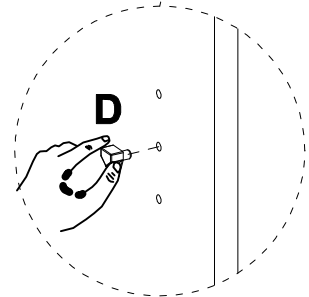
**16**

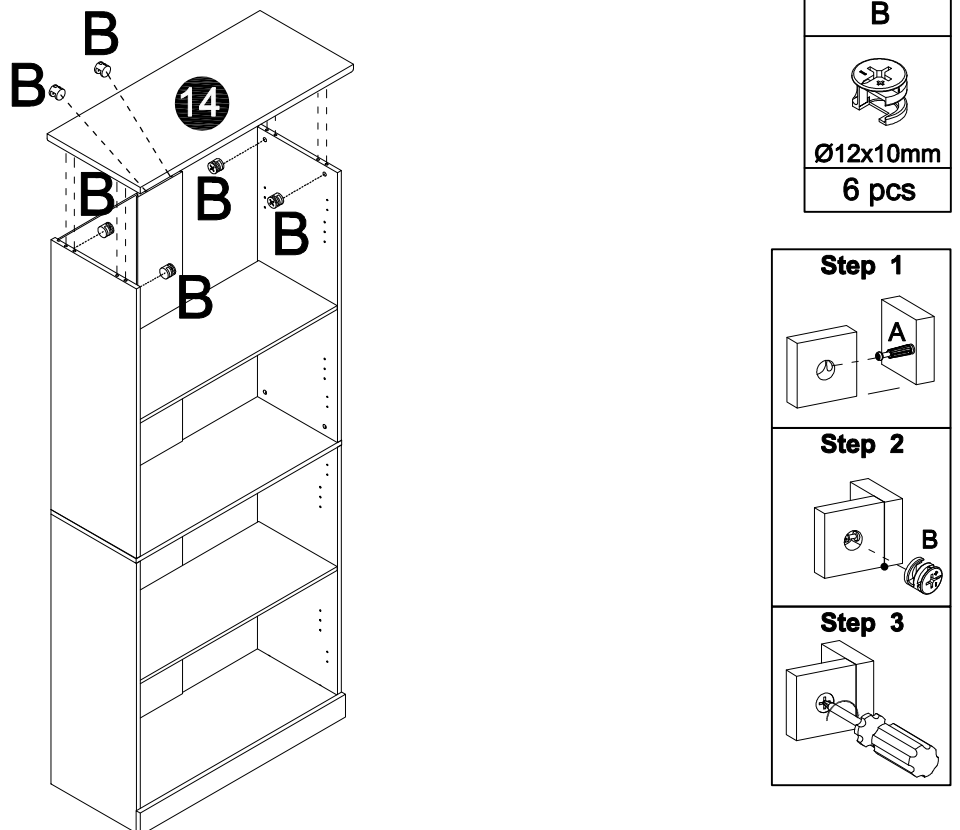


**17**

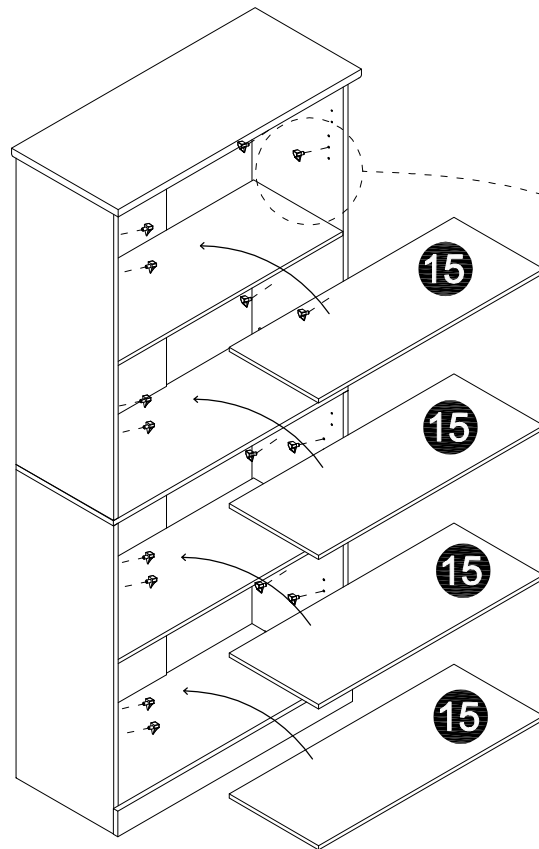




|   |
|---|
| <b>D</b>  |
|  |
| 16X11X15MM  |
| 16 pcs  |




**18**

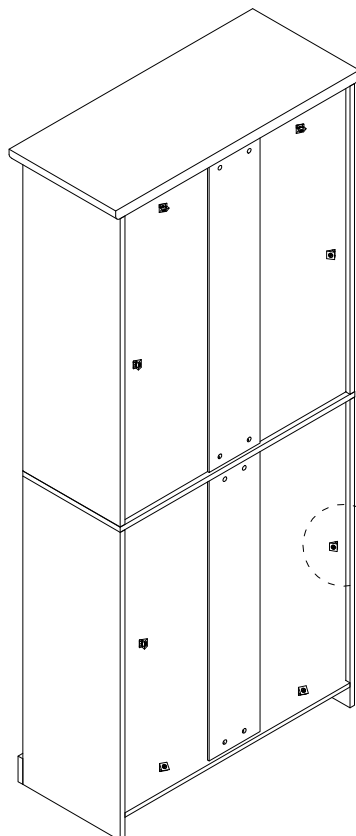


|   |   |
|---|---|
| <b>G</b>  | <b>H</b>  |
|  |  |
| Ø3.5X14MM   | 14X12X10MM  |
| 8 pcs   | 8 pcs   |

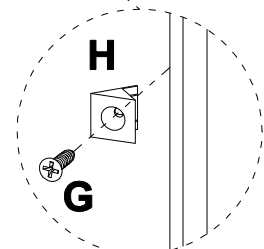


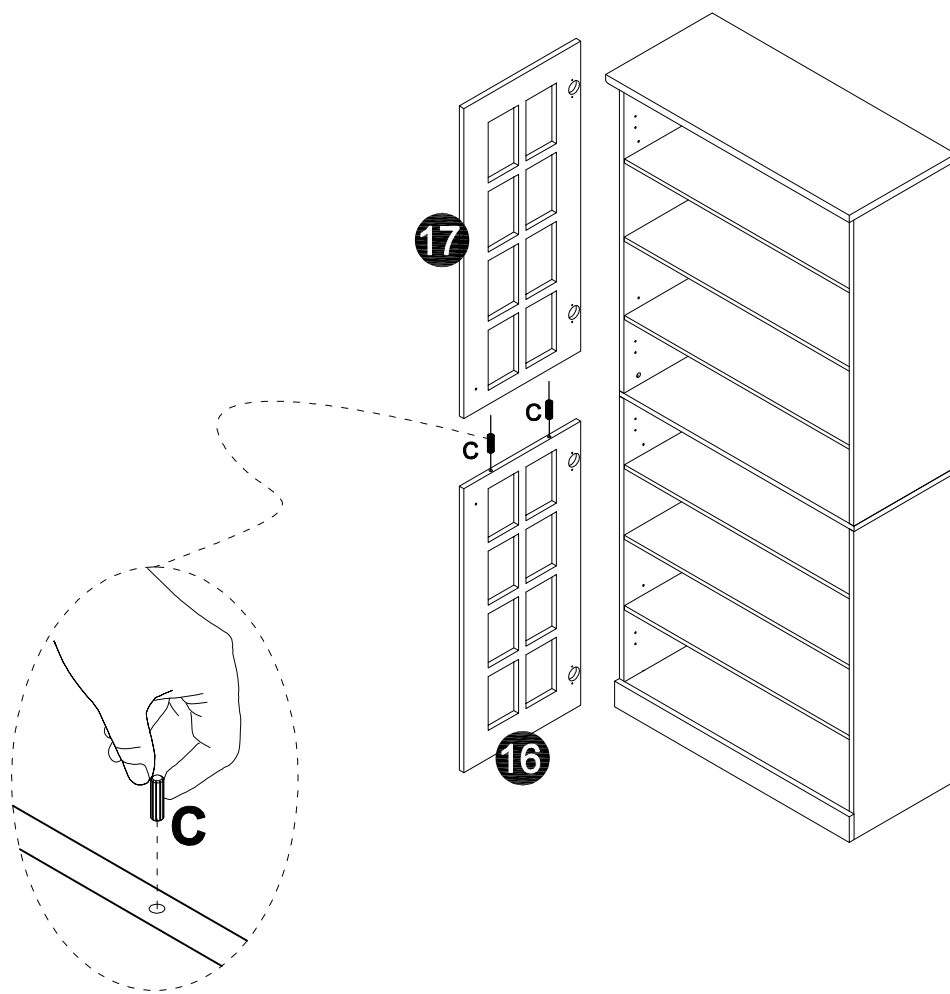

**19**

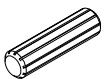

|   |
|---|
| <b>C</b>  |
|  |
| Ø8x30mm   |
| 2 pcs   |

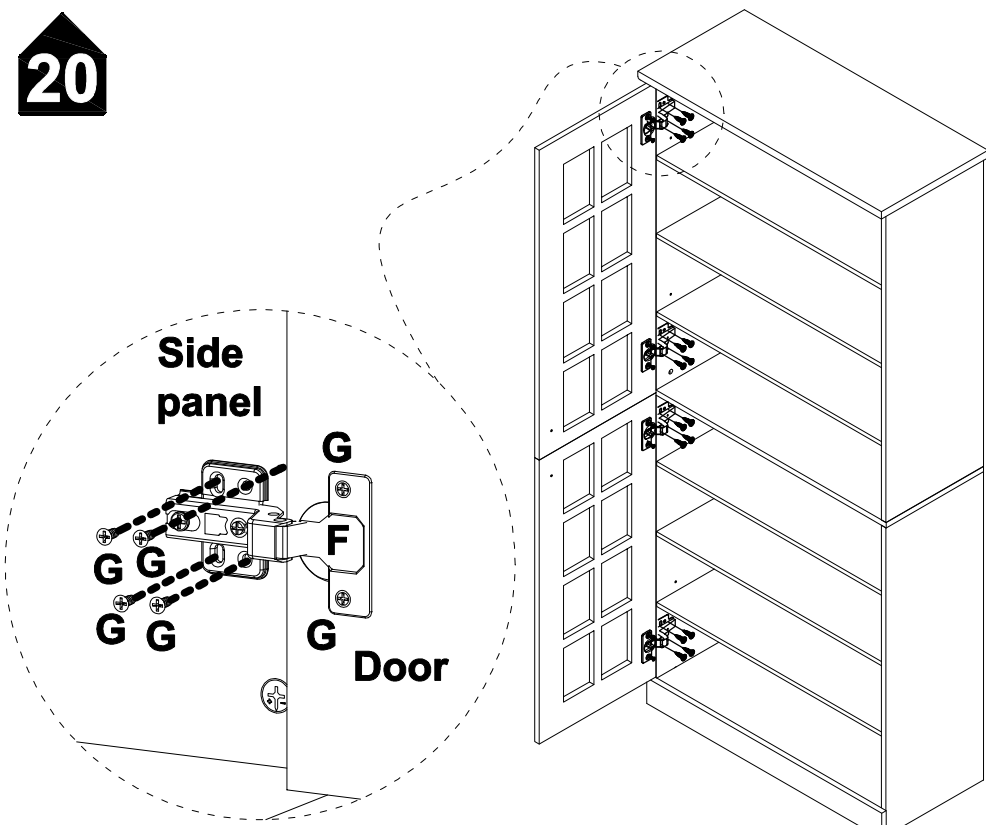
**20**





|   |   |
|---|---|
| <b>G</b>  | <b>F</b>  |
|  |  |
| Ø3.5X14MM   | G X6  |
| 24 pcs  | 4 pcs   |


To prevent the door hinge from falling off, please install 4 screws


21

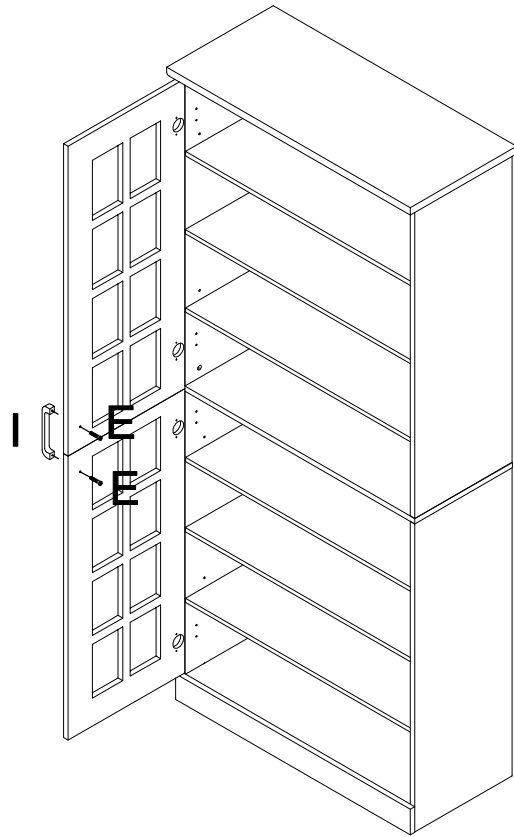

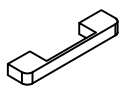
| I   | E   |
|---|---|
|  |  |
| 96#   | Ø4X18MM   |
| 1 pc  | 2 pcs   |


22

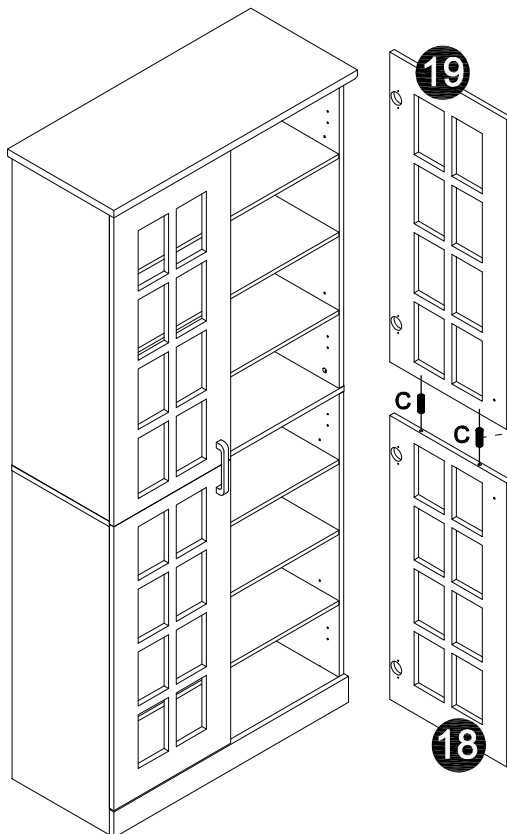

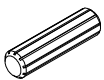

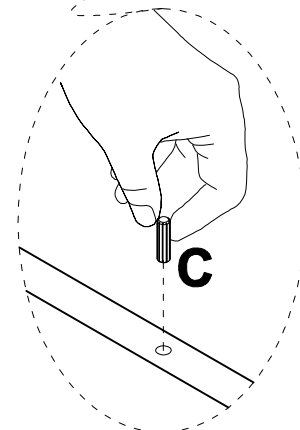
| C   |
|---|
|  |
| Ø8x30mm   |
| 2 pcs   |

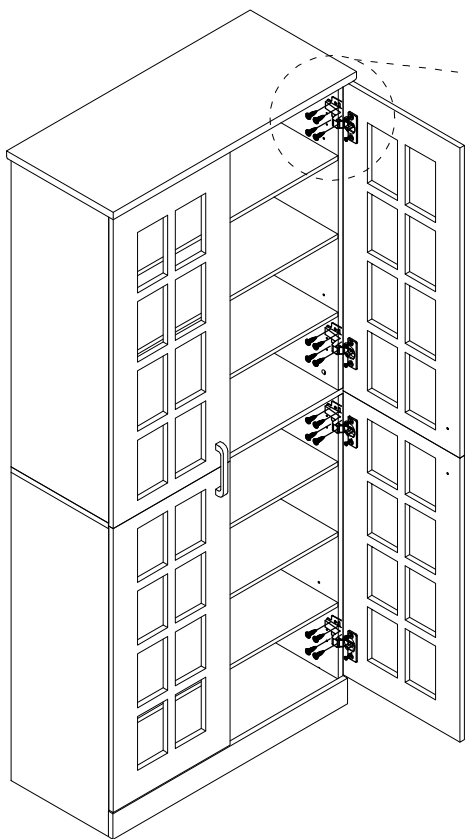

23






| G   | F   |
|---|---|
|  |  |
| Ø3.5X14MM   | G<br>1X6  |
| 24 pcs  | 4 pcs   |

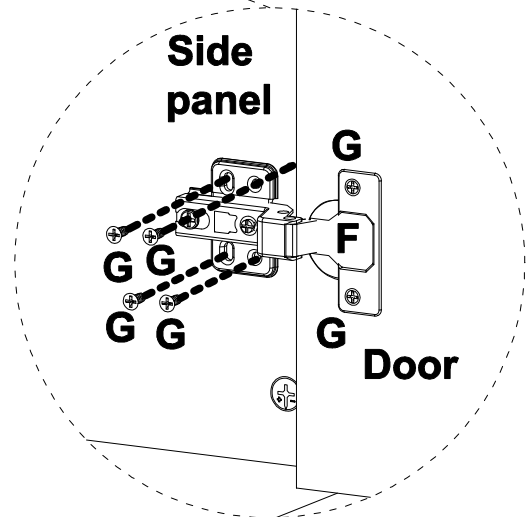

To prevent the door hinge from falling off, please install 4 screws


24

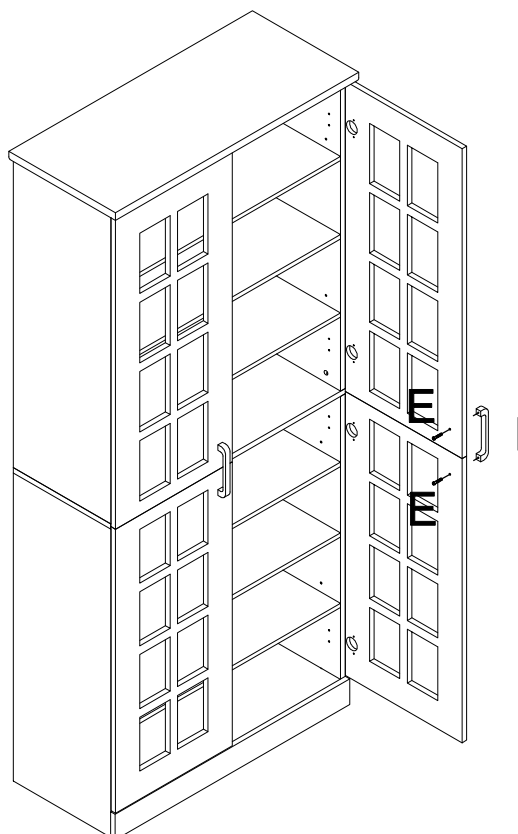
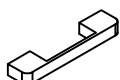
| I   | E   |
|---|---|
|  |  |
| 96#   | Ø4X18MM   |
| 1 pc  | 2 pcs   |


25

Step 1  
Open the door.

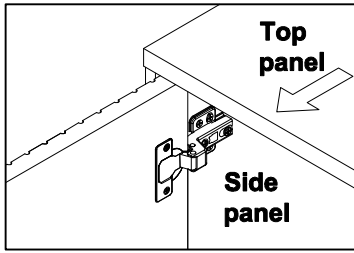



# TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

Step 2  
Adjust the door panel to be flush with side panel and top panel edge.

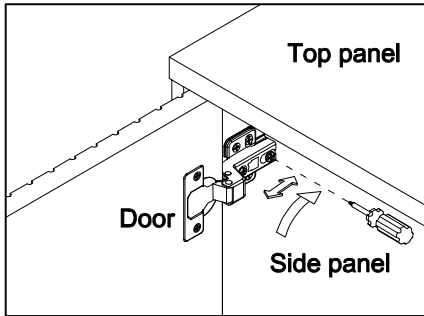



Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

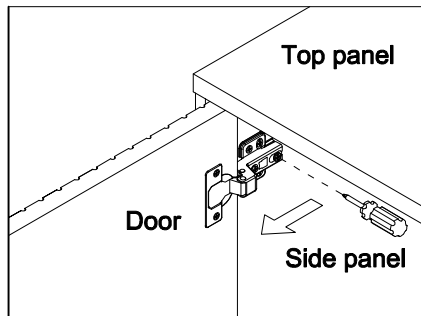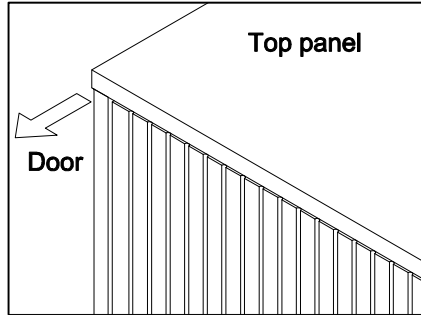


Pull the hinge forward a little.

Step 2b MOVE DOOR INSIDE

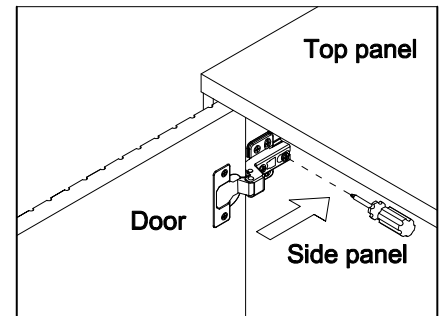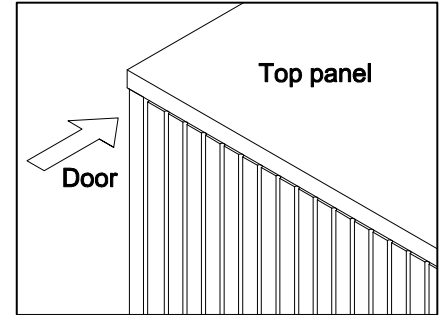



Pull the hinge back a little.

Step 3  
Adjust the gap between door panel and side panel.

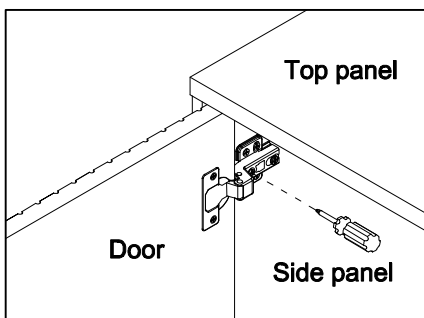



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

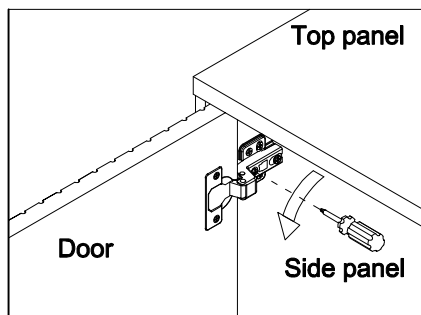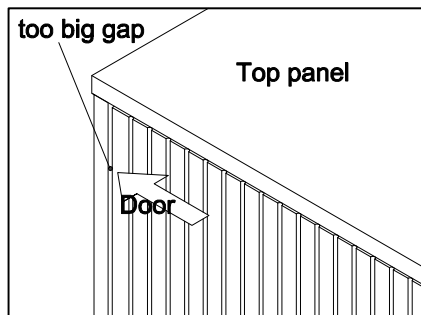


Turn the screw clockwise a little as shown to make the gap small.


Step 3b MOVE DOOR RIGHT

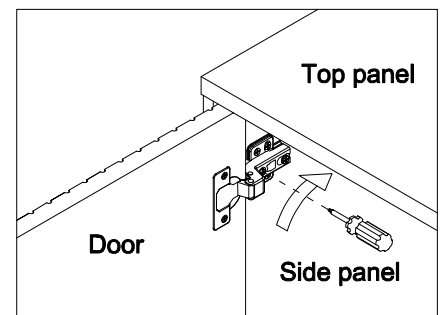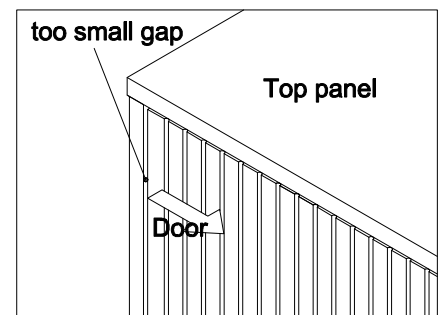


Turn the screw counterclockwise a little as shown to make the gap big.

26

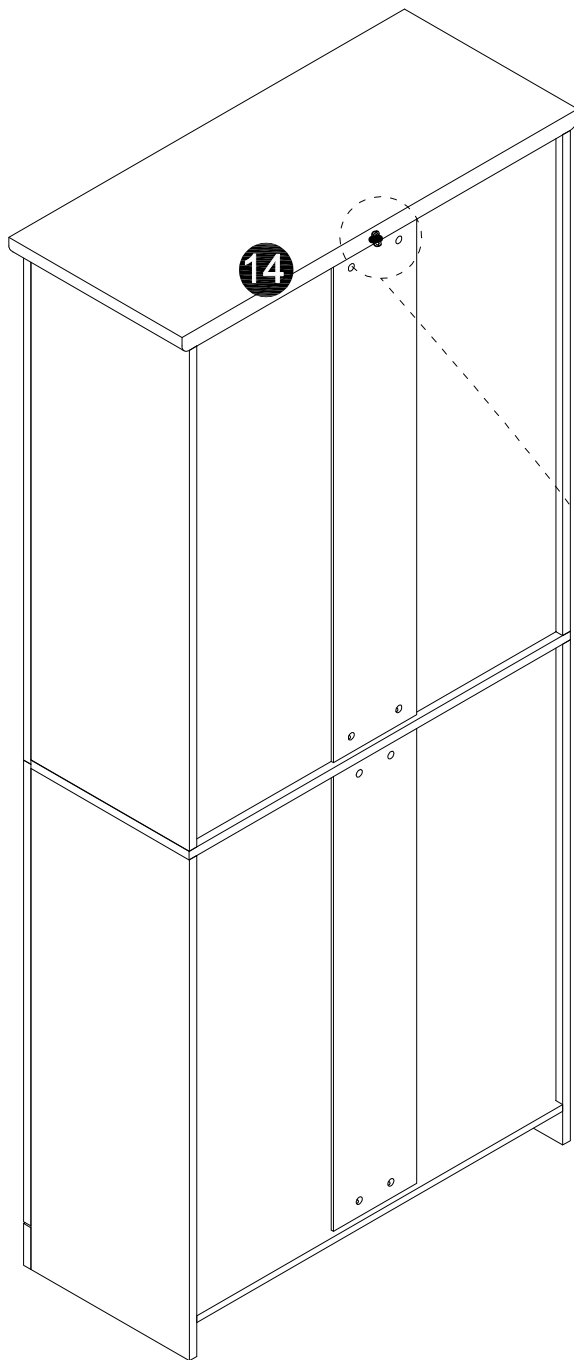


|   |
|---|
| K   |
|  |
| 1 pc  |

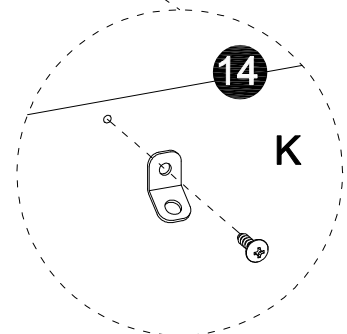


Wall


Step1



Step2

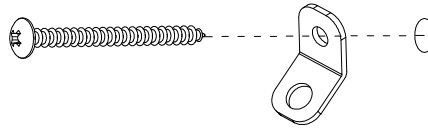

Step3

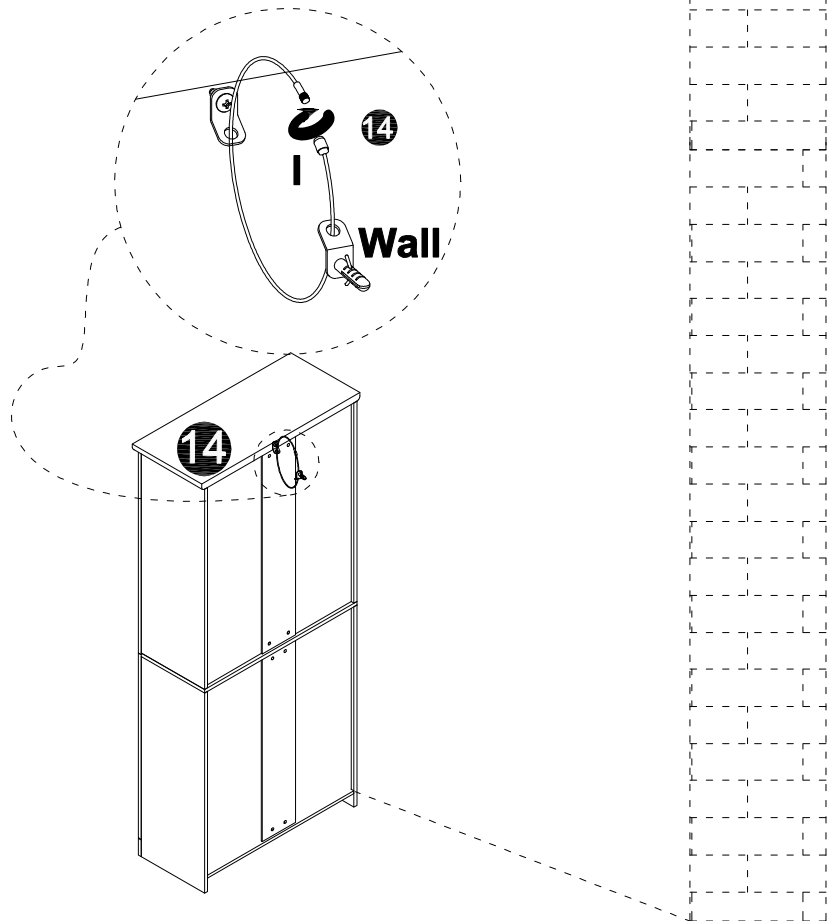

**Thank you for your support!**

