


Instruction instructions


SKU: B041TT

metal loft bed 190X99 cm


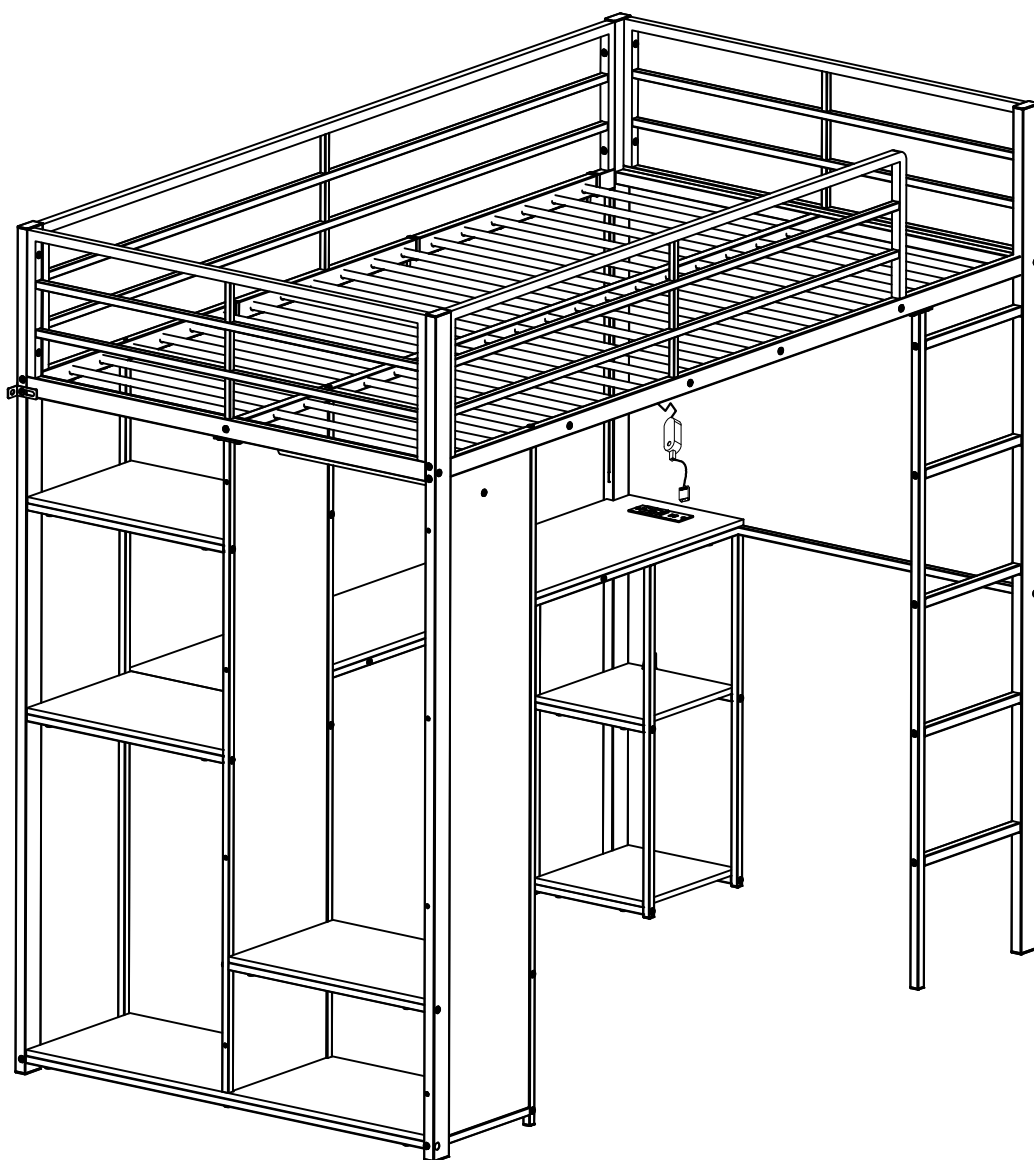


Our product is packaged in two separate boxes.please read the installation instructions carefully before assembly.




Part list

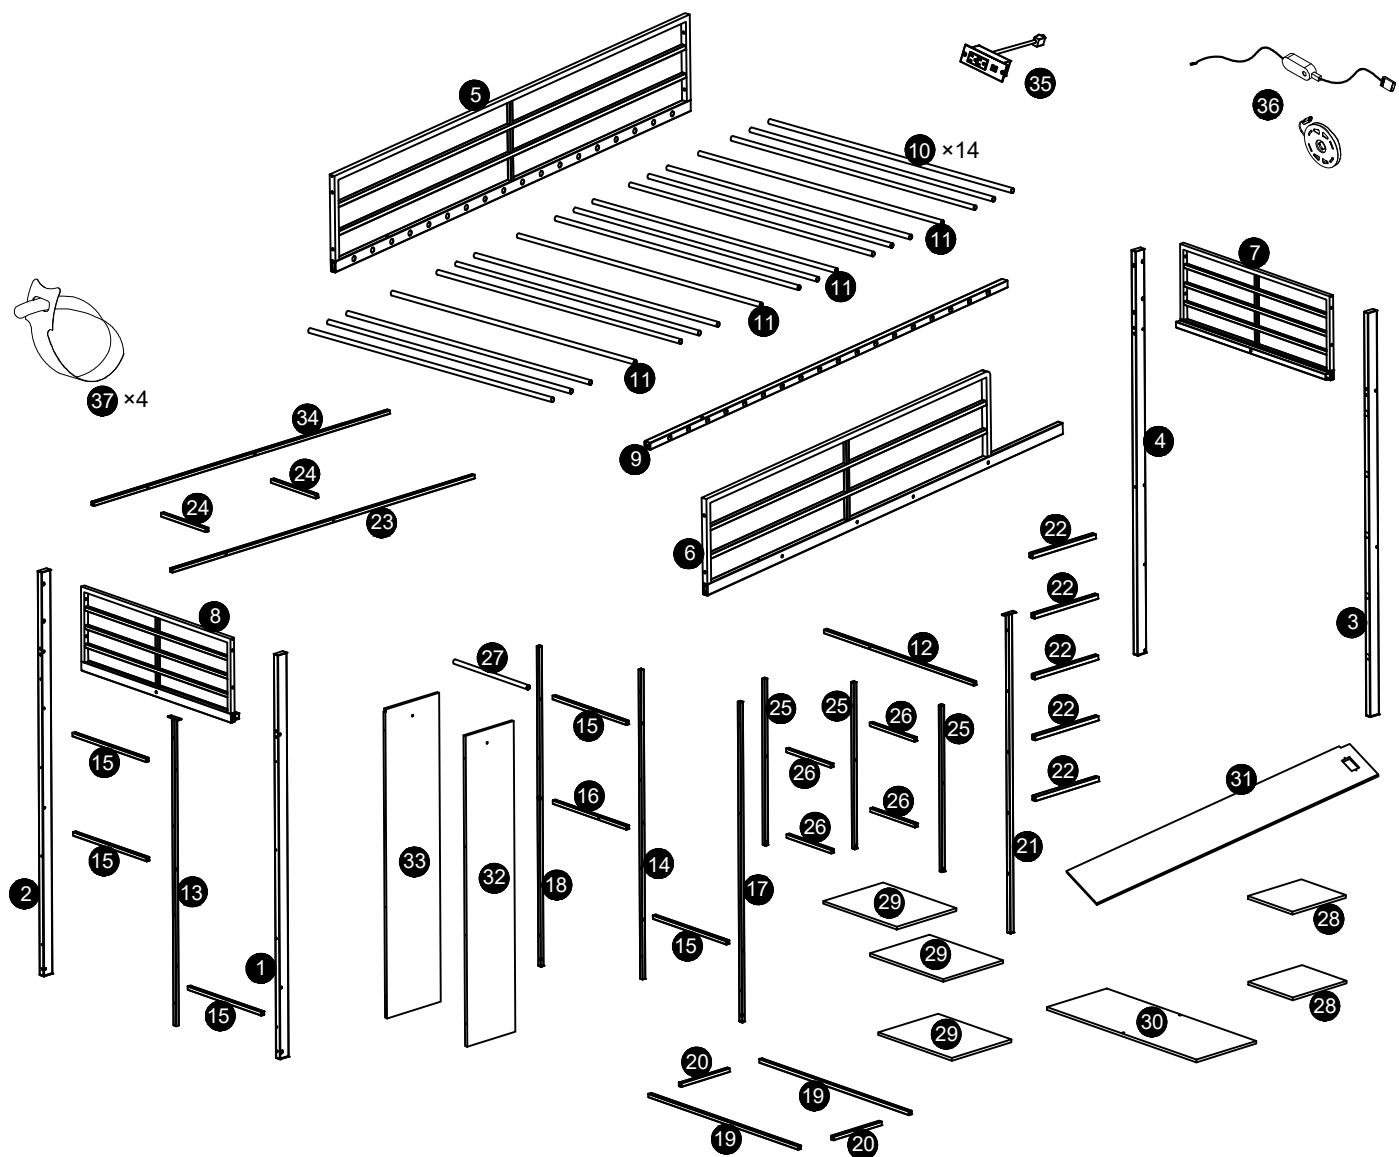

Part list-1


1 1PC 	2 1PC 	3 1PC 
4 1PC 	5 1PC 	6 1PC 
9 1PC 	13 1PC 	14 1PC 
17 1PC 	18 1PC 	21 1PC 
23 1PC 	30 1PC 	31 1PC 
32 1PC 	33 1PC 	34 1PC 


Part list-2

7		1PC	8		1PC	10		20PCS
11		4PCS	12		1PC	15		5PCS
16		1PC	19		2PCS	20		2PCS
22		5PCS	24		2PCS			
25		3PCS	26		4PCS	27		1PC
28		2PCS	29		3PCS	35		1PC
36		1PC	37		4PCS			

Hardware list-1

A	 M6*20mm	×17 +1
D	 M6*60mm	×8 +1
G	 3# Spanner	×1
J		×2
M	 M6*80	×1


B	 M6*25mm	×30 +3
E	 M6*70mm	×13 +1
H	 ST5*60mm	×4 +1
K		×5 +1
N	 4# Spanner	×1

C	 M6*40mm	×60 +6
F	 4# Spanner	×1
I	 ST5*35mm	×12 +1
L	 M6*80	×2
O	 M3*10	×2 +1


1

80%

When starting assembly, all screws should only be tightened to 80%.

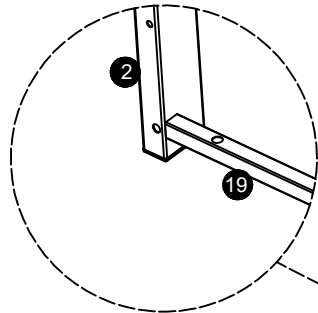


When assembling 19 and 2, ensure that the three circular holes of 19 are aligned vertically.

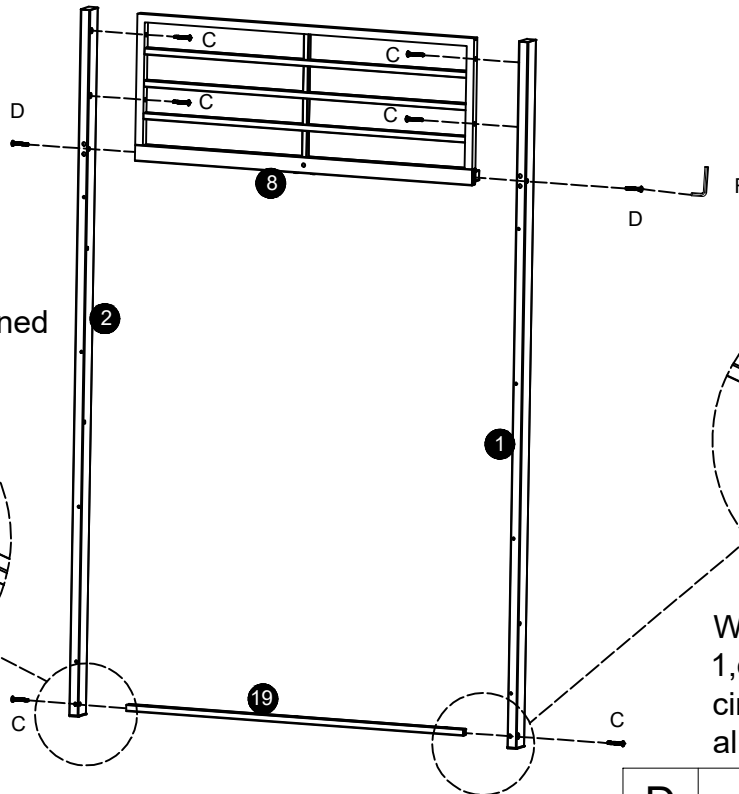


When assembling 19 and 1, ensure that the three circular holes of 19 are aligned vertically.

D		M6*60mm	2PCS
C		M6*40mm	6PCS
F		4# Spanner	

2

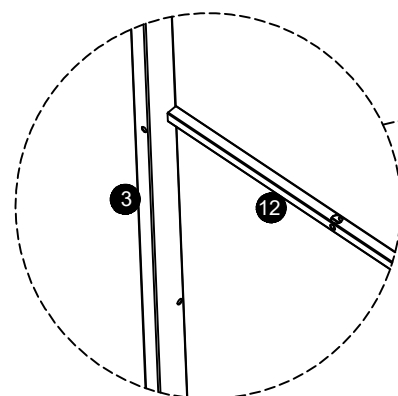


When assembling 12 and 3, make sure the 14mm large hole faces upward.

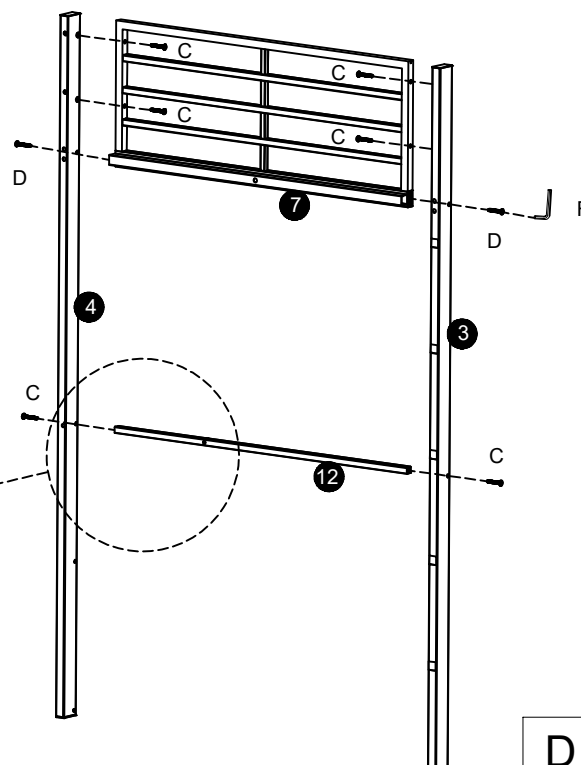


D		M6*60mm	2PCS
C		M6*40mm	6PCS
F		4# Spanner	

3

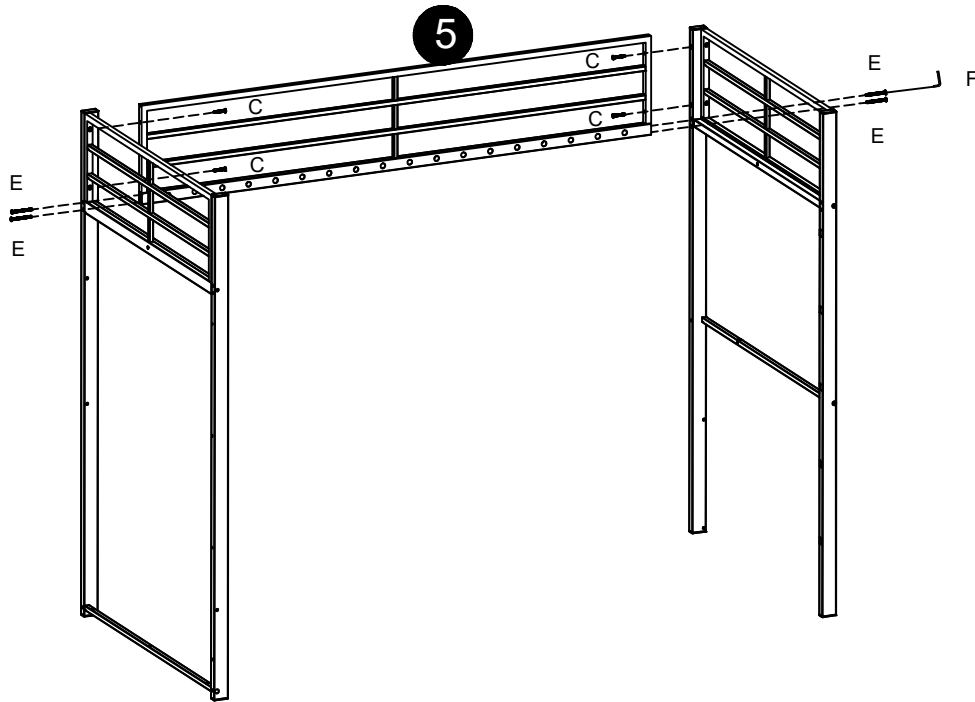

F		4# Spanner	
C		M6*40mm	4PCS
E		M6*70mm	4PCS


4

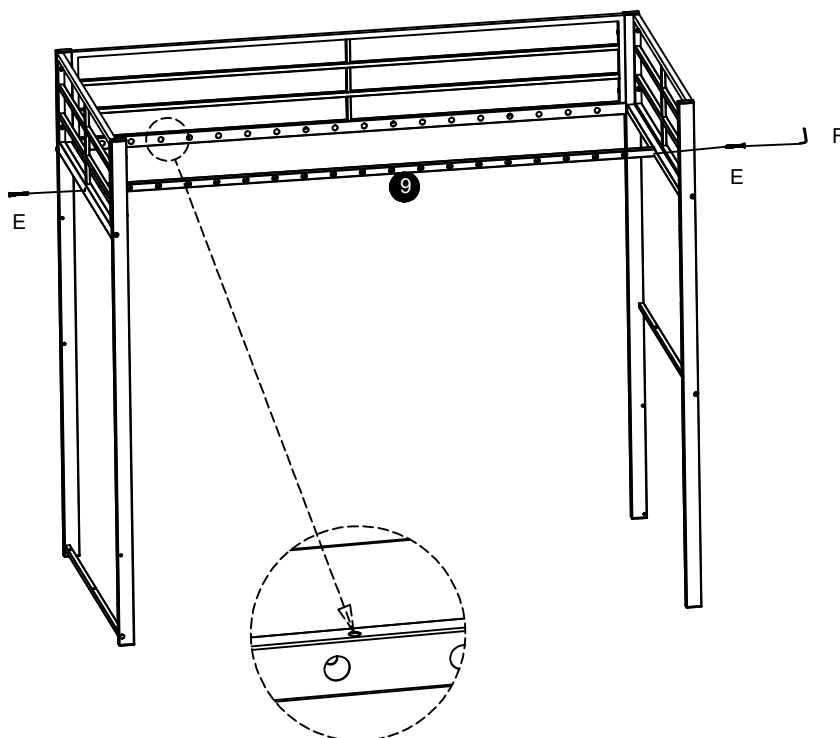

Thread 9 through the middle of 10, noting the presence of an 8mm round hole here.


E		M6*70mm	2PCS
F		4# Spanner	

5

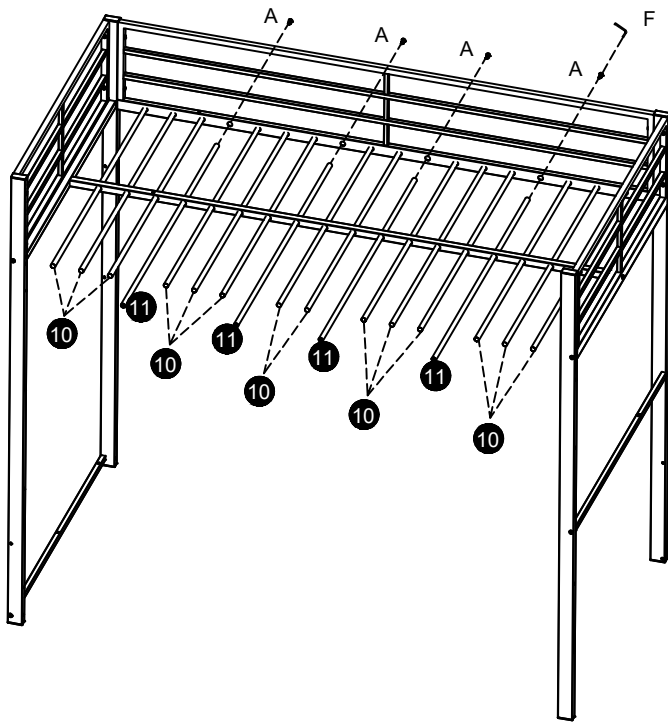


A		M6*20mm	4PCS
F		4# Spanner	

6

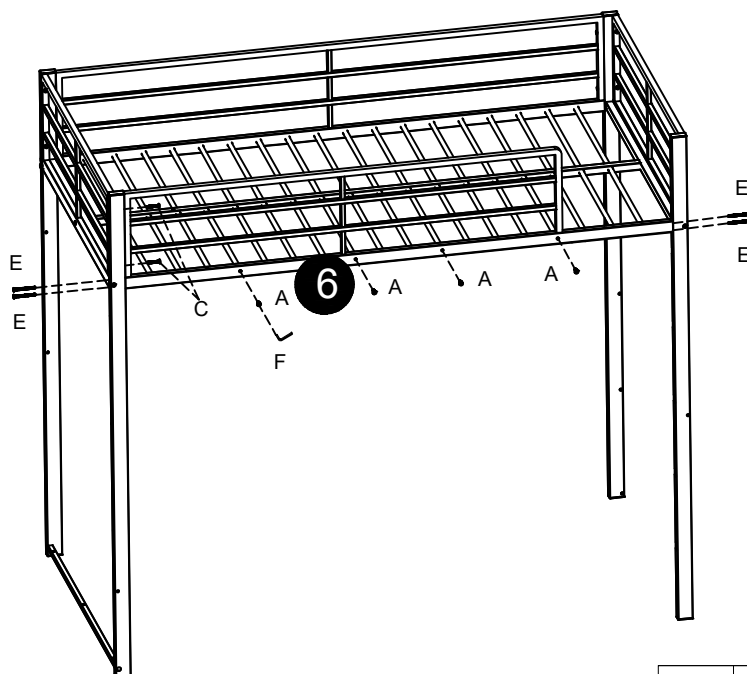

C		M6*40mm	2PCS
A		M6*20mm	4PCS
E		M6*70mm	4PCS
F		4# Spanner	

7

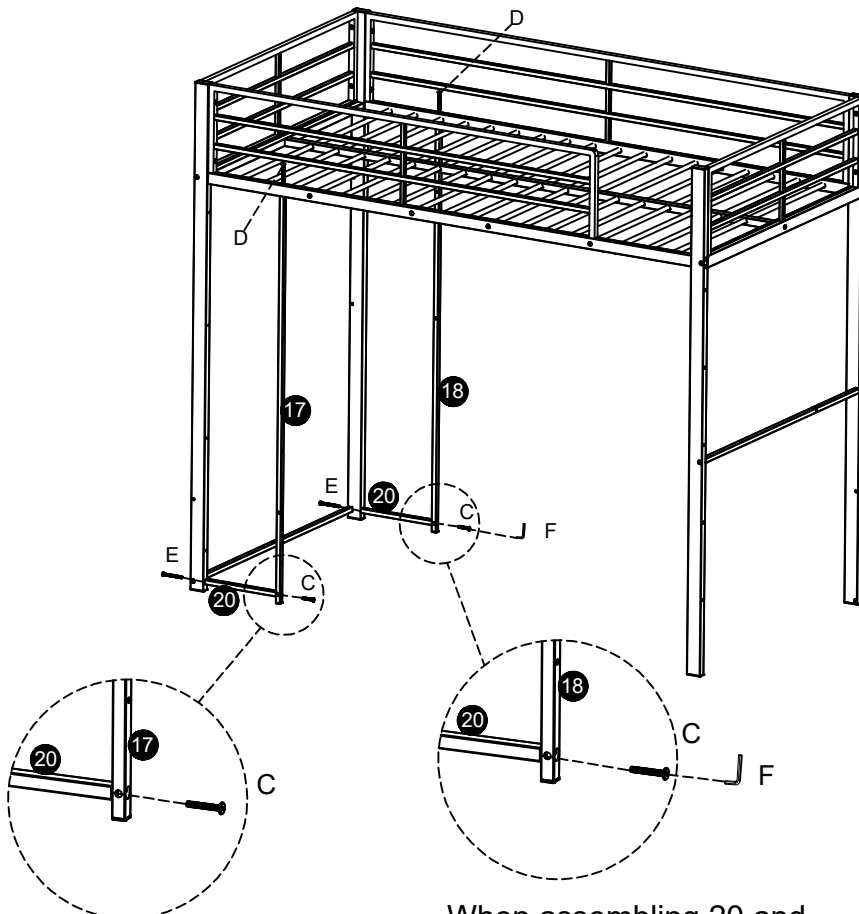


When assembling 20 and 17, pay attention to the hole orientation of 17.

When assembling 20 and 18, pay attention to the hole orientation of 18.


D		M6*60mm	2PCS
C		M6*40mm	2PCS
E		M6*70mm	2PCS
F		4# Spanner	

8


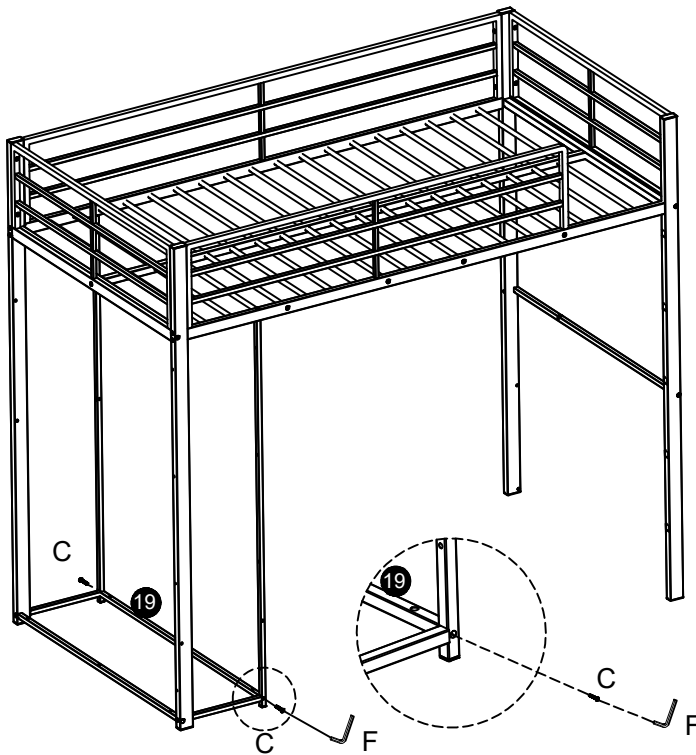


During assembly at 19, ensure the three 8mm through holes are oriented upwards.

C		M6*40mm	2PCS
F		4# Spanner	

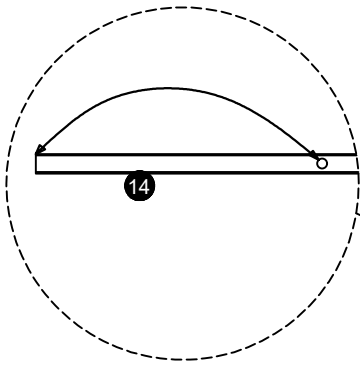


During assembly 14, ensure the 8mm through hole is positioned closer to the head.

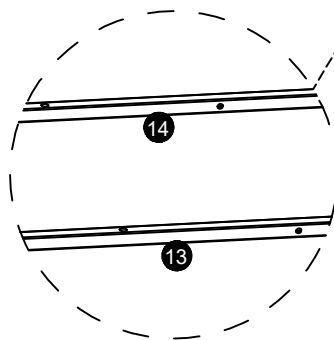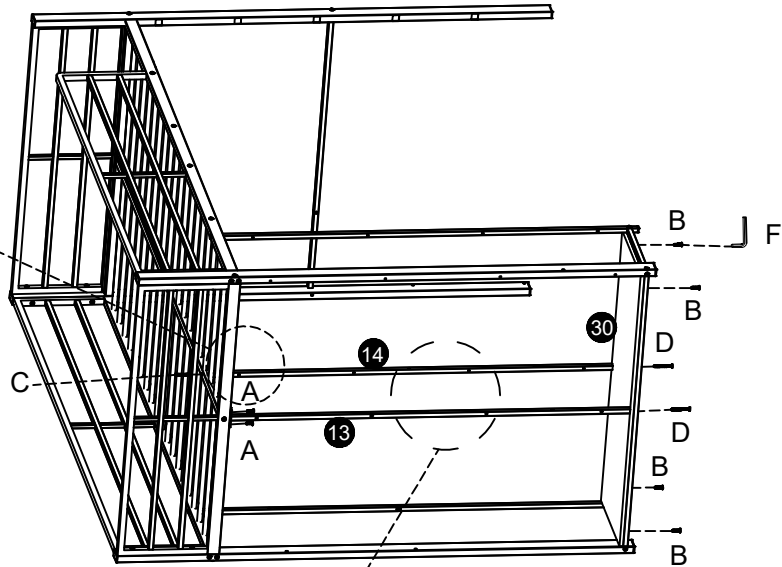

During assembly 14, ensure that the four 6mm round holes on 14 are aligned with the four 6mm round holes on 13 in the same direction.


D		M6*60mm	2PCS
C		M6*40mm	1PC
B		M6*25mm	4PCS
A		M6*20mm	2PCS
F		4# Spanner	

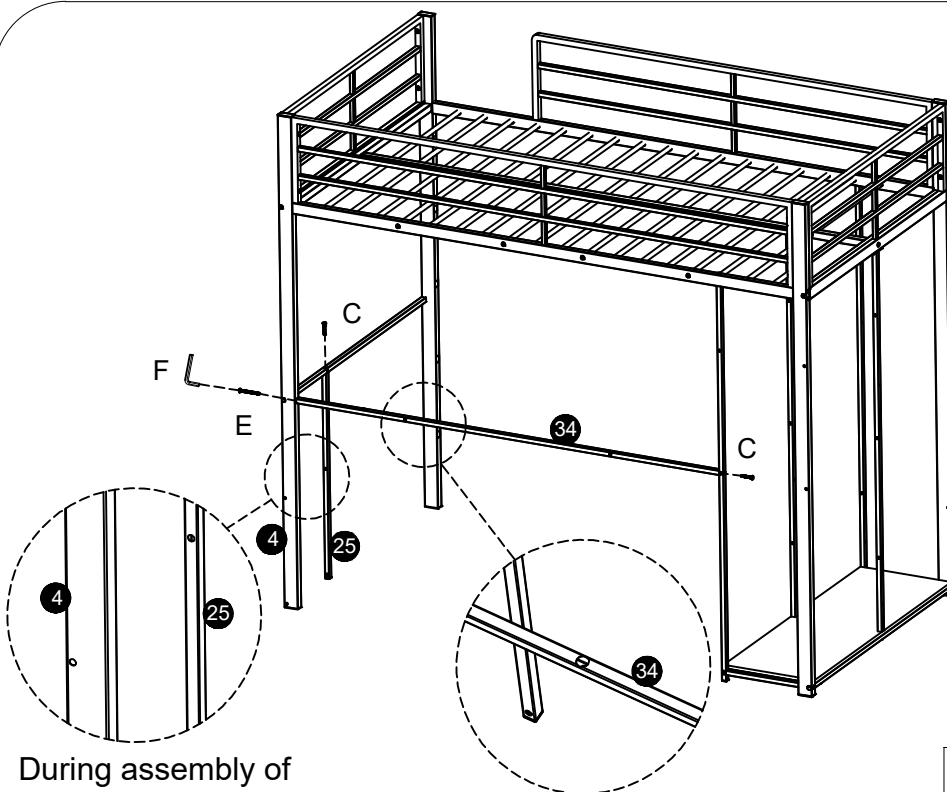


During assembly of 25, ensure the two round holes on 25 align in the same direction as the holes on 4.

During assembly at 34, ensure the 14mm circular hole faces upward.

C		M6*40mm	2PCS
E		M6*70mm	1PC
F		4# Spanner	

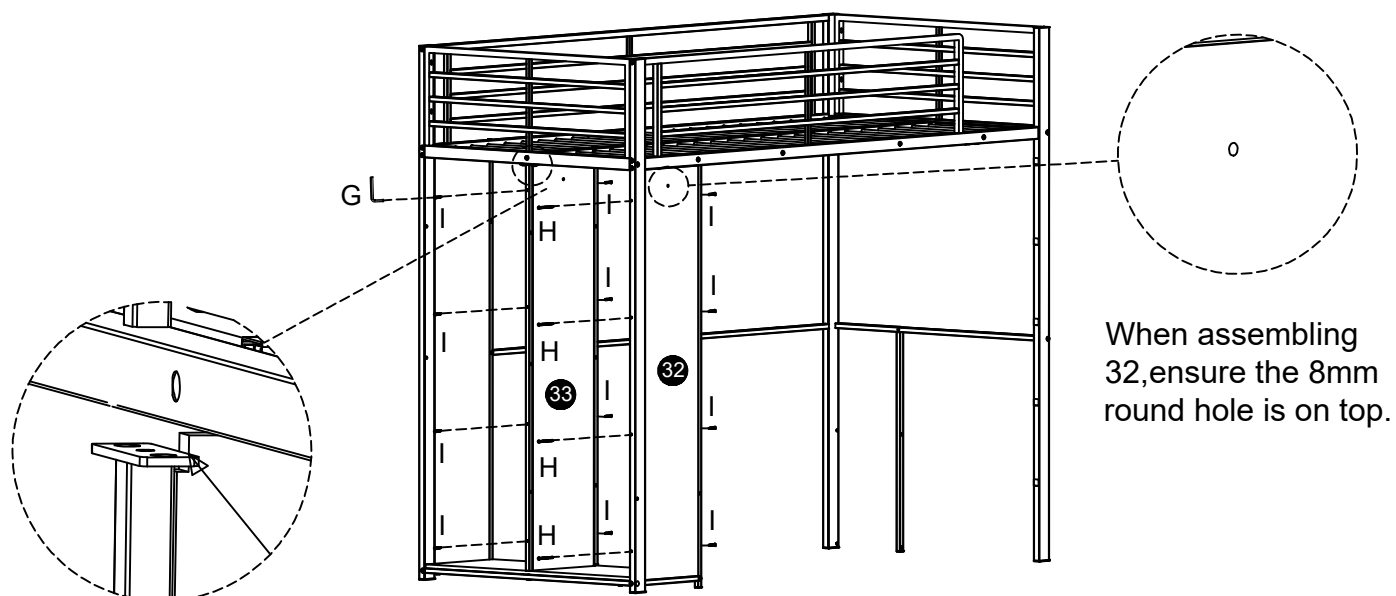


H		ST5*60mm	4PCS
I		ST5*35mm	12PCS
G		3# Spanner	

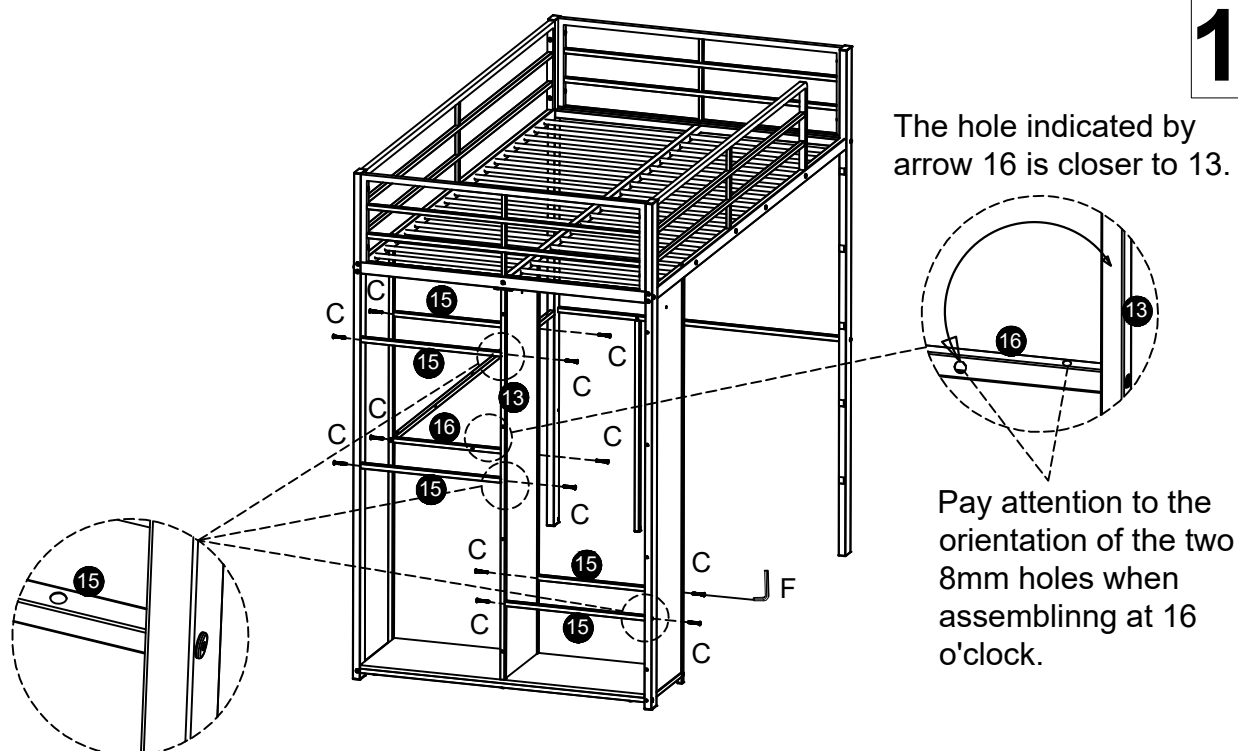

C		M6*40mm	12PCS
F		4# Spanner	


13

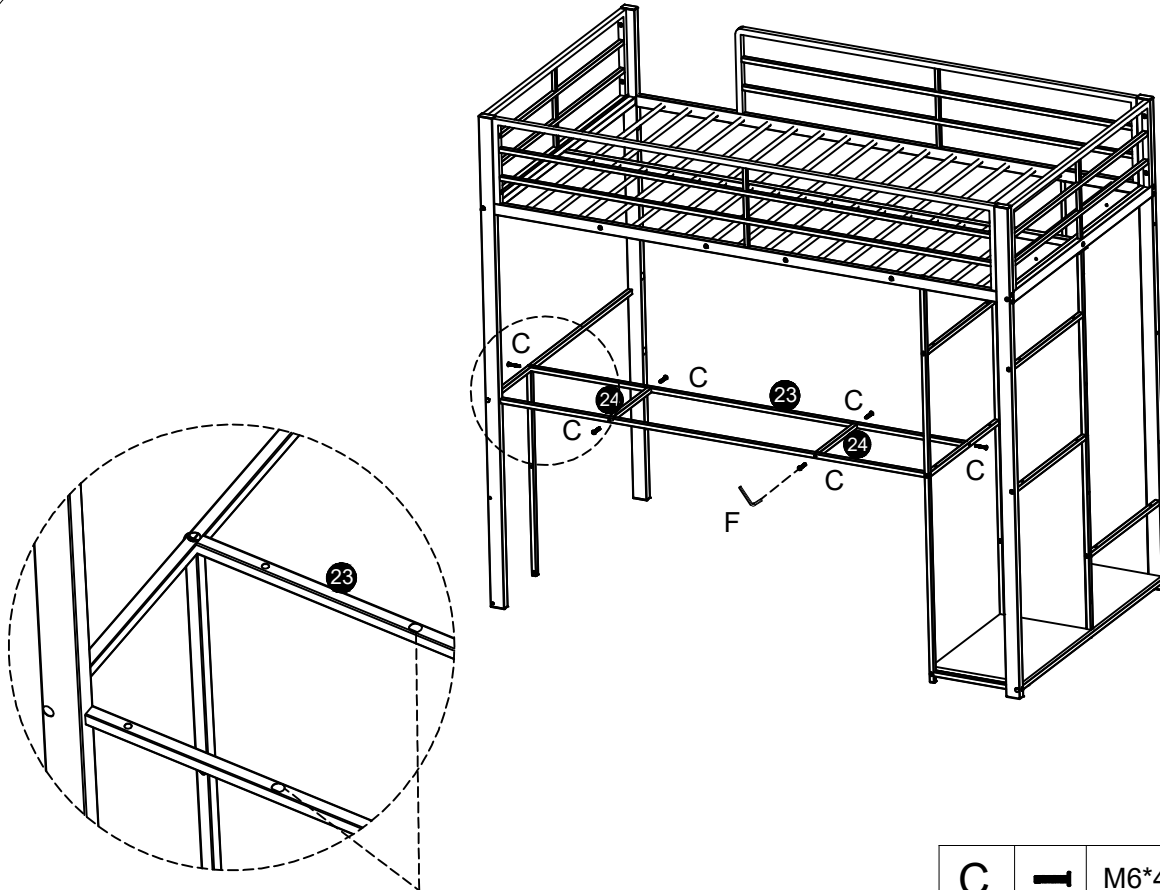

During assembly at 23, ensure the three 8mm through holes are oriented upwards.


C		M6*40mm	6PCS
F		4# Spanner	

14

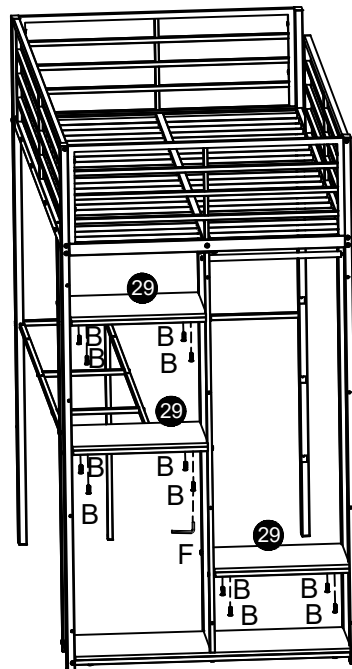

B		M6*25mm	12PCS
F		4# Spanner	


15

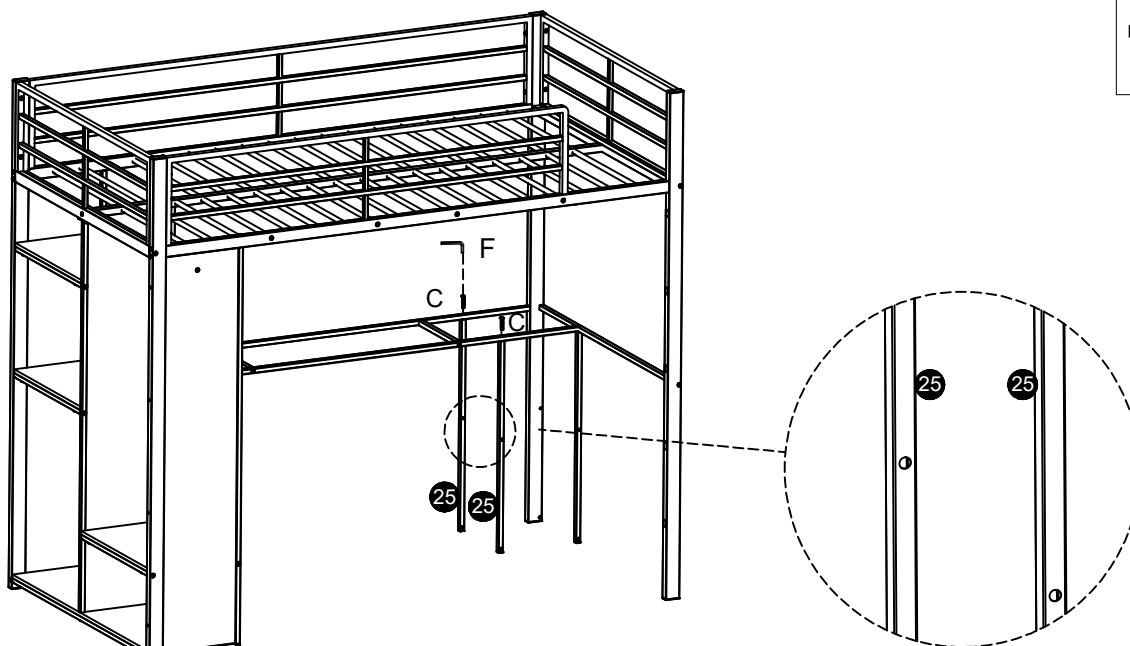

During assembly of 25, ensure the two 8mm round holes are oriented front and back.


C		M6*40mm	2PCS
F		4# Spanner	

16

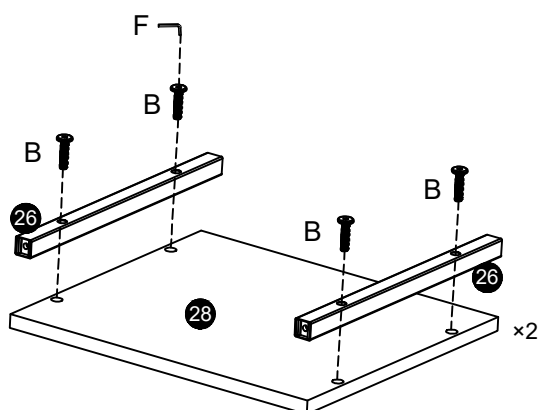


B		M6*25mm	8PCS
F		4# Spanner	

17

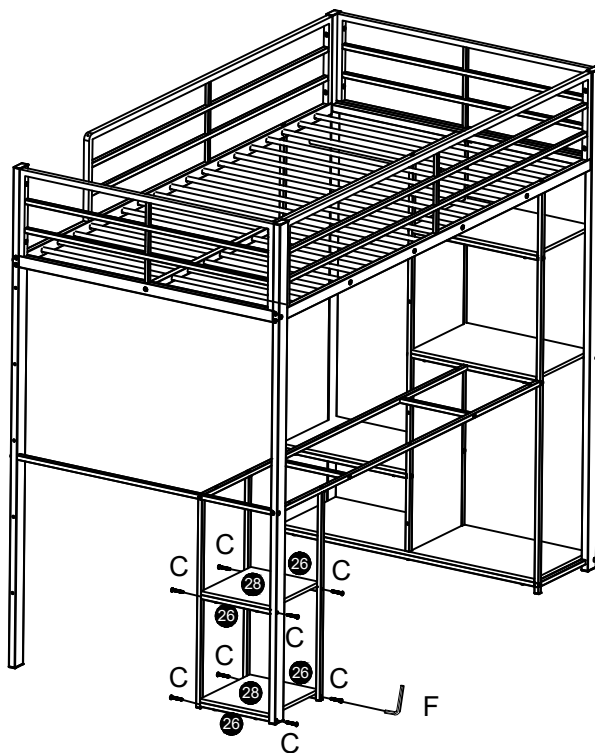

C		M6*40mm	8PCS
F		4# Spanner	


18

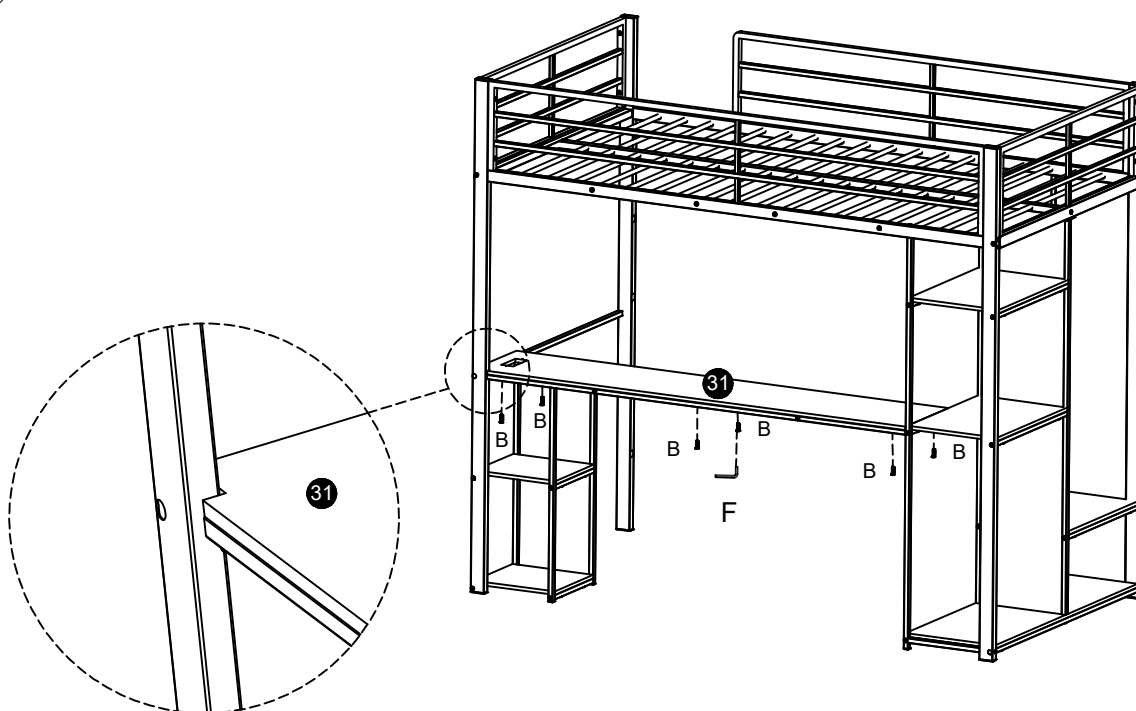

When assembling 31,ensure the notch is here.


B		M6*25mm	6PCS
F		4# Spanner	

19

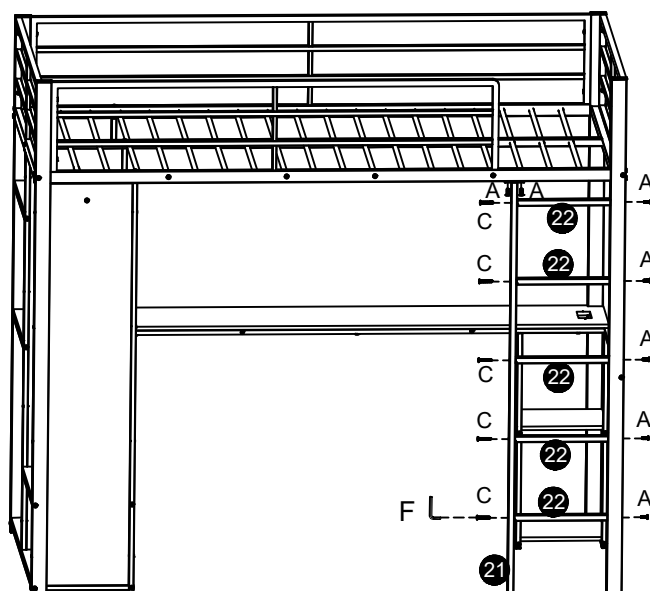

C		M6*40mm	5PCS
A		M6*20mm	7PCS
F		4# Spanner	


20

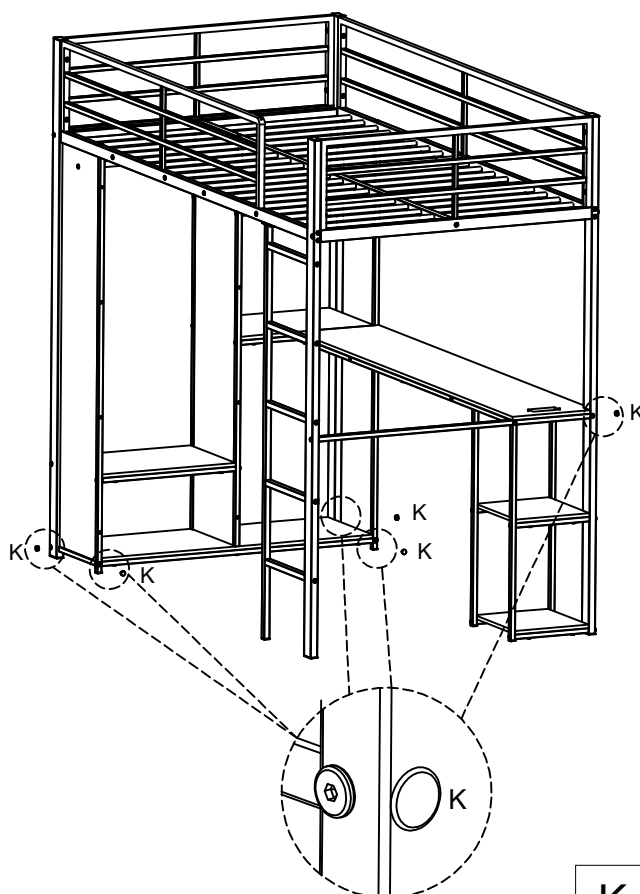

Insert k into the hole as shown in the figure.


K			5PCS
---	--	--	------

21

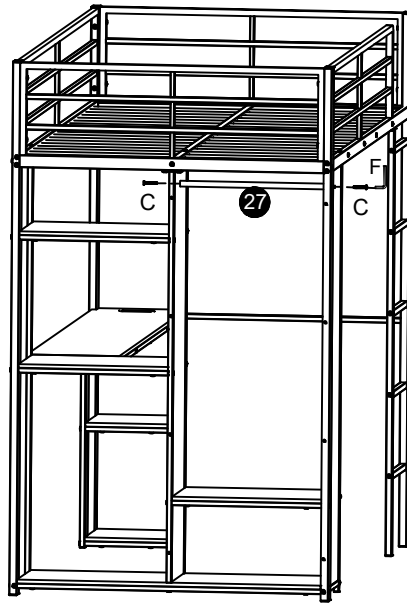


C		M6*40mm	2PCS
F		4# Spanner	

22

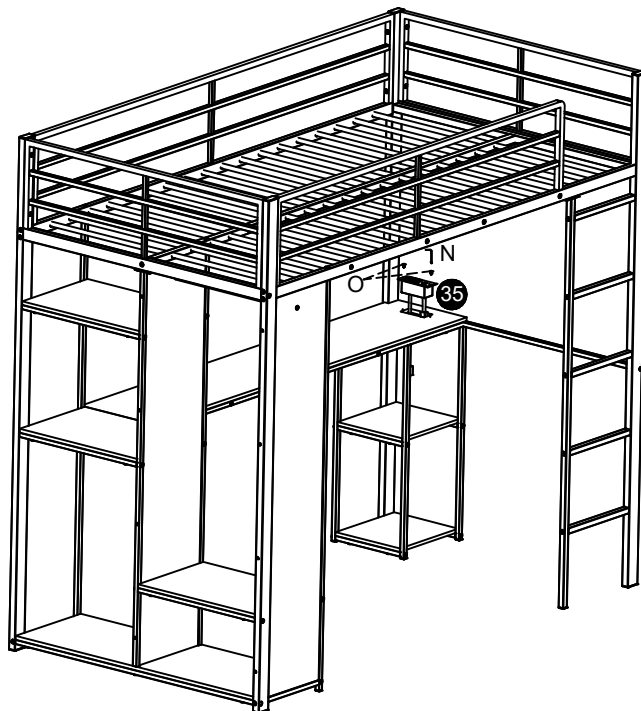


O		M3*10mm	2PCS
N		4# Spanner	

23

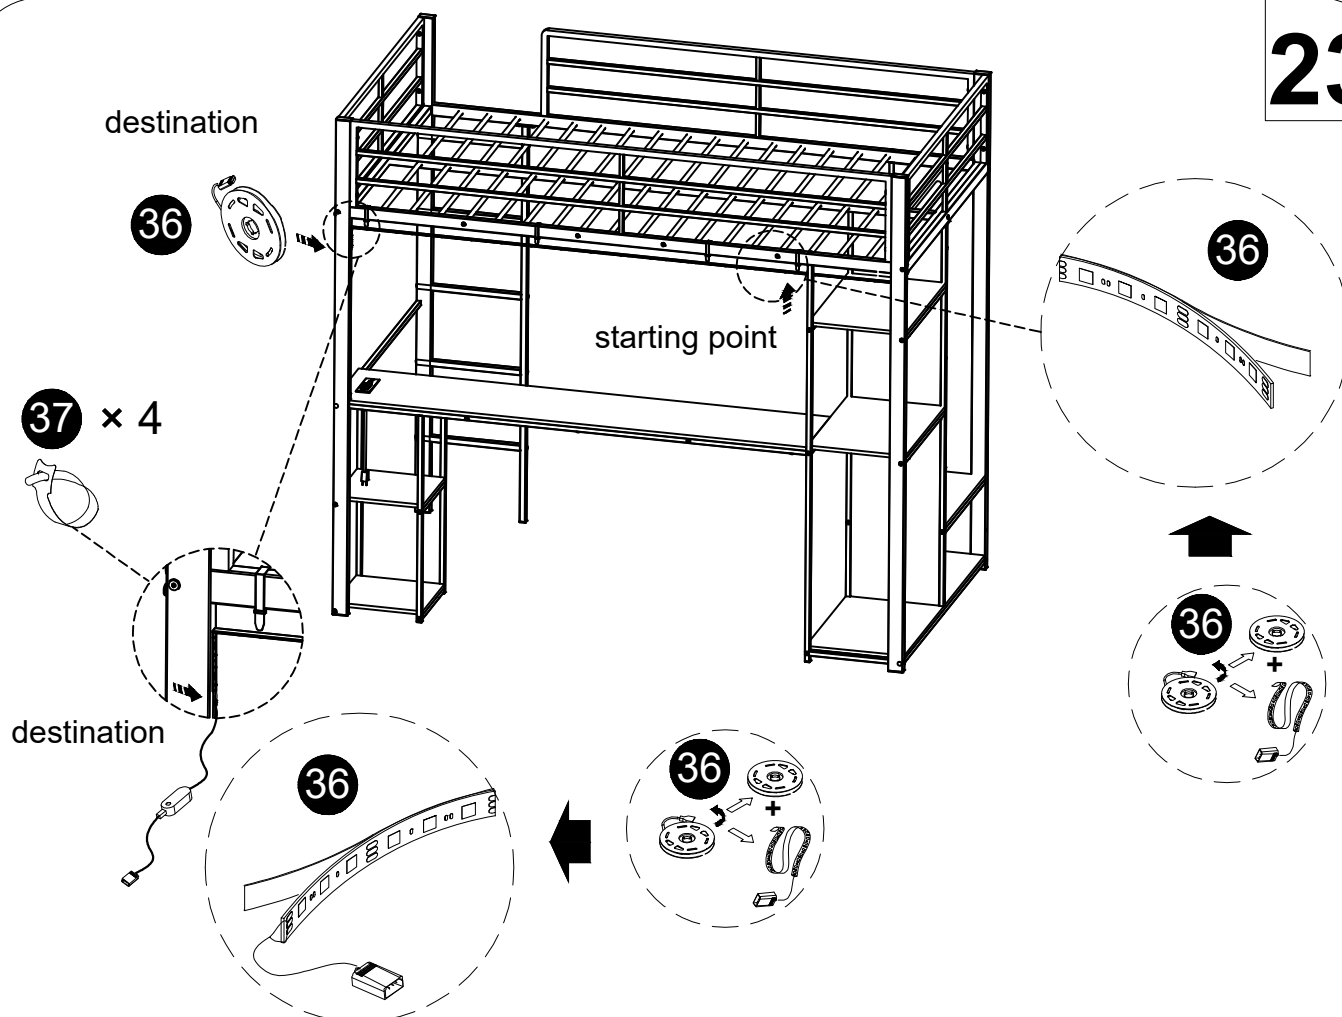

24



Unscrew E ,then pass E through J and tighten it.

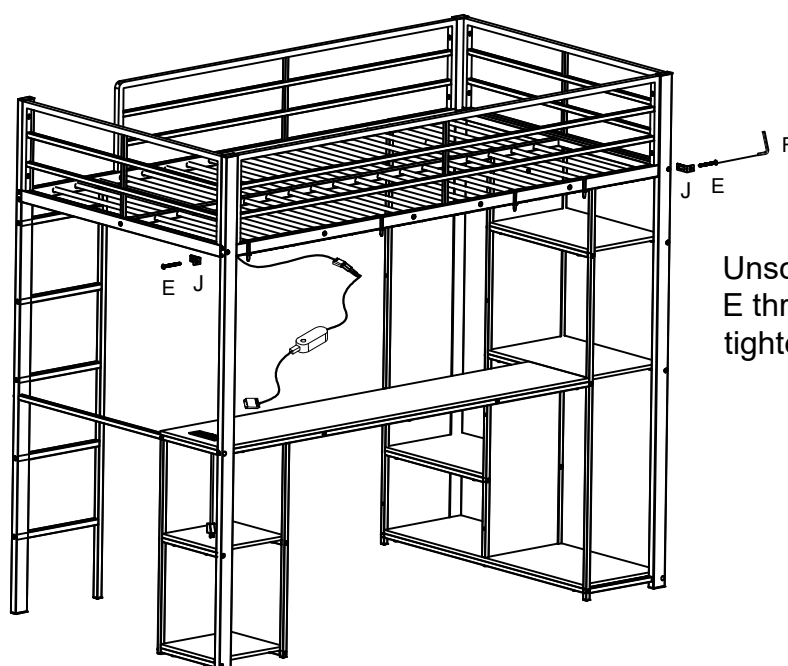

Unscrew E ,then pass E through J and tighten it.


J			2PCS
F		4# Spanner	

Drilling

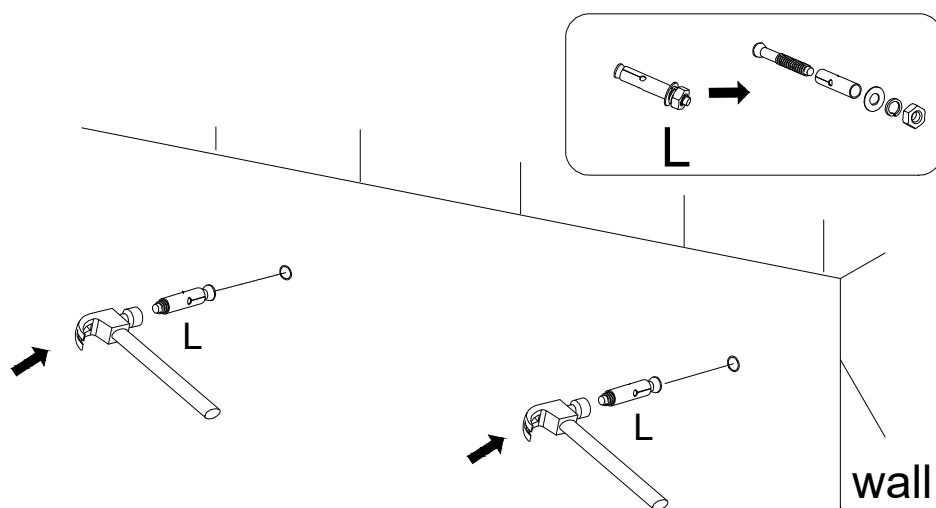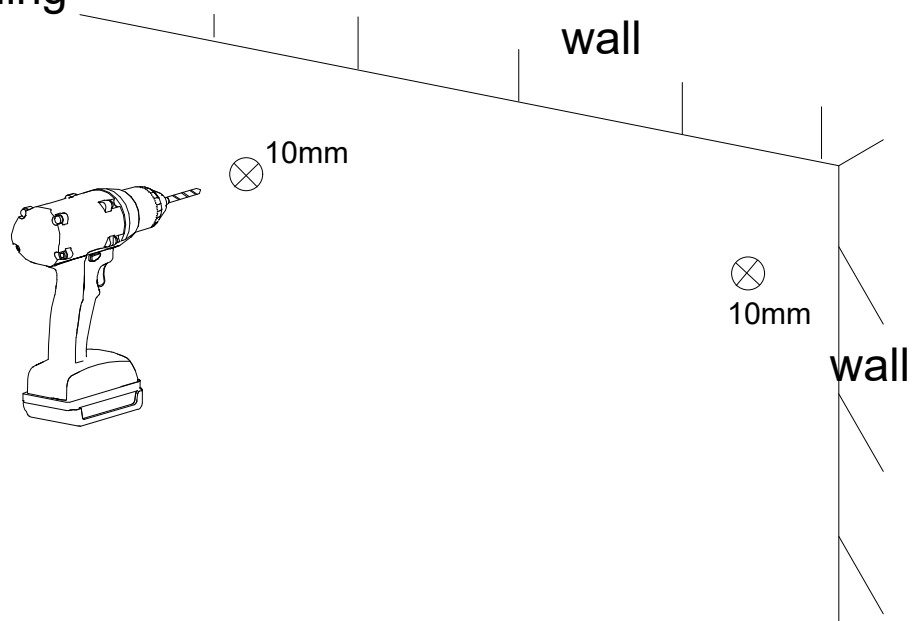



Please lock the expansion screw onto the wall.

27

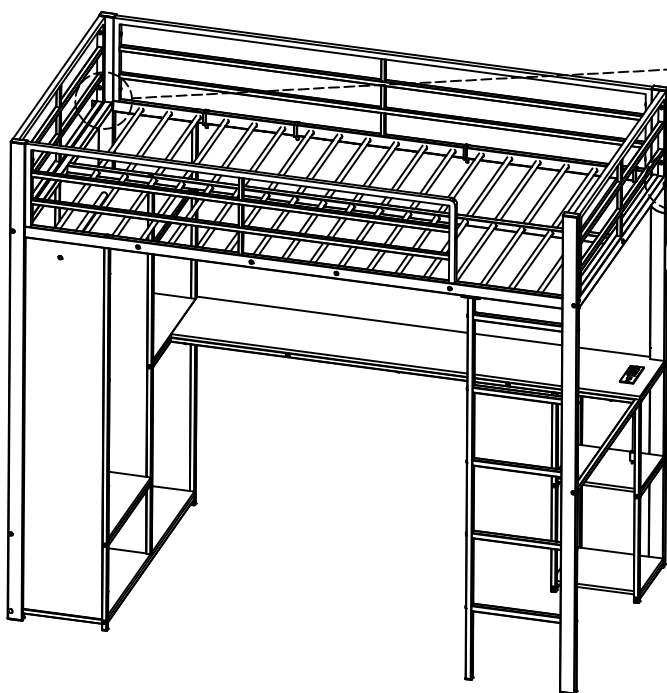

M		M6*80mm	
L		M6*80mm	2PCS

28

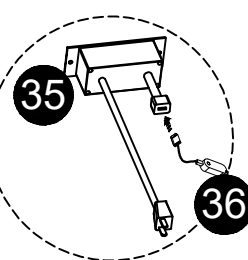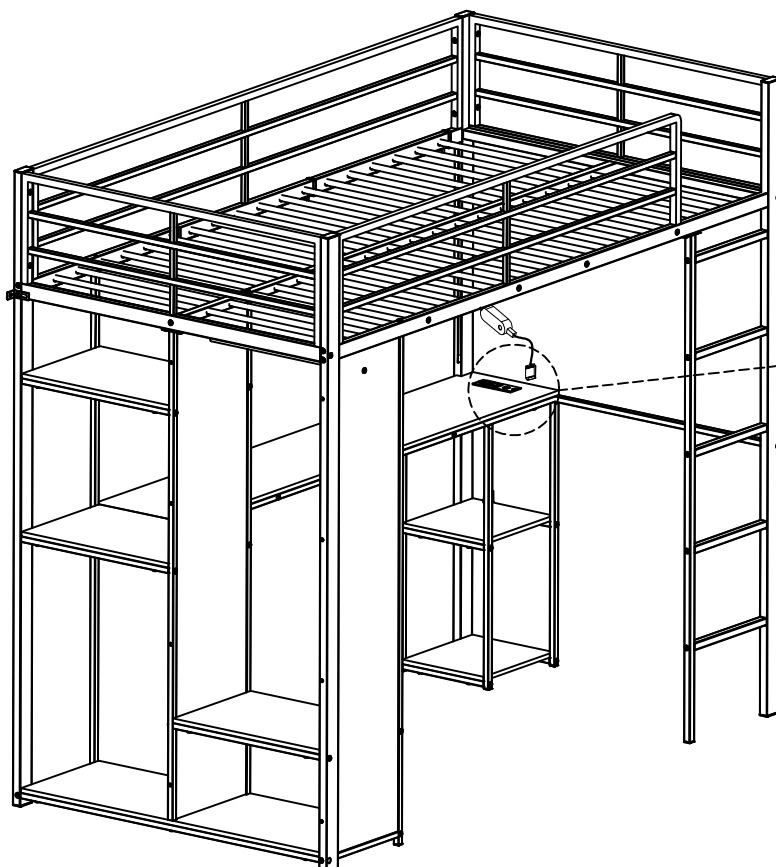

The connection between 35 and 36 is as shown in the diagram

Assembled, tighten all the screws